

X1	SHIPPING TIE DOWN BRACKET
	REUSE WATER INLET, $1-1/2$ " NPT, OPTIONAL, SEE NOTE 9.
	THIRD WATER INLET, $1-1/2$ " NPT, OPTIONAL, SEE NOTE 9.
W2	COLD WATER INLET,1-1/2" NPT
W1	HOT WATER INLET, 1-1/2" NPT
S1	STEAM INLET 1-1/4" NPT
L2	DRY SUPPLY
L1	PERISTALTIC INLETS, 8 PORTS, STANDARD
F4	1-1/16" DIAMETER ANCHOR BOLT HOLES, USE 3/4" X 6"
	BOLTS MINIMUM. IF F3 HOLES ARE NOT USED, YOU MUST
	ANCHOR THE (2) F4 HOLES NEAREST TO F3, BOTH SIDES.
	ALTERNATE F4 HOLES ARE AVAILABLE TO ACCOMODATE DRAIN
	TROUGHS.
F3	1-1/16" DIAMETER ANCHOR BOLT HOLES, USE 3/4" X 6"
	BOLTS. YOU MUST ANCHOR THESE (2) F3 HOLES OR (4) F4
	HOLES.
F2	1-1/16" DIAMETER ANCHOR BOLT HOLES, USE 3/4" X 6"
	BOLTS MINIMUM. ANCHOR ONE OF THE 3 HOLES IN EACH
	BOXED AREA.
F1	BASEPADS, SEE NOTE 7.
E8	SAFETY LIGHT SCREEN, DASHED
E7	SAFETY LIGHT SCREEN MIRROR
E6	SAFETY LIGHT SCREEN RECEIVER
E5	SAFETY LIGHT SCREEN EMITTER
E4	LOW VOLTAGE BOX
E3	HIGH VOLTAGE & INVERTER BOX
E2	MilTouch-EX ™ TOUCH SCREEN CONTROLLER
E1	MAIN ELECTRICAL CONNECTION
D3	HYDRAULIC TANK, MANUAL DRAIN, 1" NPT
D1	DRAIN VALVE, 4-1/2" DIAMETER
В1	DOOR
A1	MAIN AIR INLET, 1/4" NPT
ITEM	LEGEND

- NOTES
 SAFETY LIGHT SCREEN MUST BE INSTALLED BEFORE OPERATING MACHINE
- SOFTWARE CAN ONLY USE 3 WATERS, YOU MAY HAVE OPTIONAL THIRD OR OPTIONAL REUSE. INLETS AS SHOWN.

 SHIM TO LEVEL THE MACHINE AND ALLOW FOR 1" [25] MINIMUM GROUT. ANCHOR WITH ONE ANCHOR BOLT FOR BASEPAD (F1), MINIMUM. USE 3/4" % 6" BOLTS, MINIMUM. SEE INSTALLATION MAINTENANCE MANUAL FOR FURTHER INSTRUCTIONS.
- SHADED AREAS ARE BASE PLATES WHICH MUST BE CONTINUOUSLY SUPPORTED ON $1\,{}^{\prime\prime}[25]$ THICK GROUT.


- 7 SHADED AREAS ARE BASE PLATES WHICH MUST BE CONTINUOUSLY SUPPORTED ON 1726] THICK GROUT.
 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC COOPS, FROM ELECTRIC BOX TO ANY OBJECT IS:
 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
 42 [1067] IF OBJECT IS ANY LIVE PART.
 CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 4 BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONAL AND ALL COMPONENTS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONAL AND ALL COMPONENTS REQUIRED TO INSURE THAT BASELINE "X". S", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME INCONTACT WITH E MSTALLATON, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FURNISH CONTACT WITH INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ANDIFACTUREN OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT
STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT
"REQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE
NCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCE'SENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE
DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

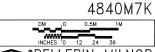

BD4840M7KAE 2016326D

PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA Phone 504/467-9591,
FAX 504/469-1849, Email: milnorinfo@milnor.com