



16 [406] MINIMUM DISTANCE TO WALL.

SEE NOTE 7.

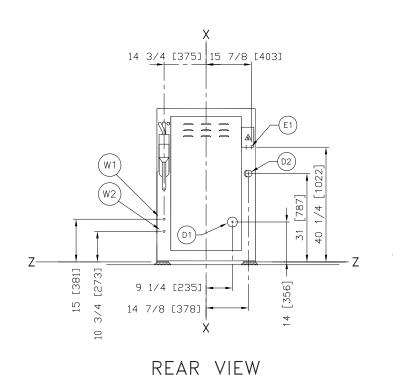

LEFT SIDE VIEW

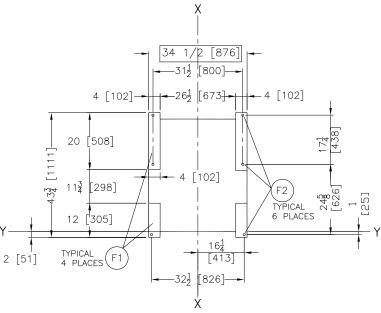


FOUNDATION VIEW


FRONT VIEW

OVERFLOW PIPE MUST BE VENTED AS SHOWN REFERENCE LINE "Y" CENTERLINE "X" 26 [660] (REFERENCE FOR FRONT/REAR (REFERENCE FOR RIGHT/LEFT DIMENSIONS). SEE NOTE 3. DIMENSIONS). SEE NOTE 3. 17 1/4 6 [152] [438] DOOR OPENING 15 1/2 [394] 40 5/8 [1032] 44 3/4 [1137] FINISHED FLOOR **-** 39 5/8 [1007] **-**BASELINE "Z" (REFERENCE 45 5/8 [1159]— FOR VERTICAL DIMENSIONS)

CORRESPONDS TO TOP OF GROUT. SEE NOTES 3 AND 4.

51 5/8 [1311] **- 46 1/4 [1175]** – 45 3/4 [1162] — 5 3/8 [136]

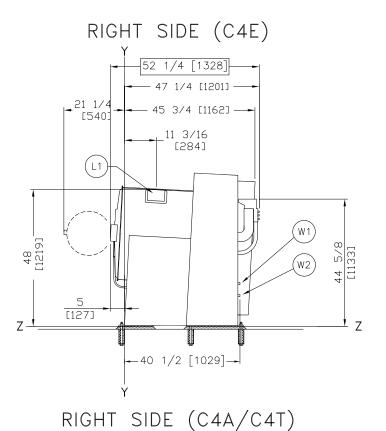

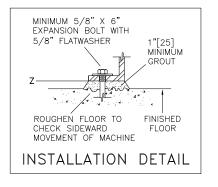

W2	COLD WATER INLET, 3/4" GARDEN HOSE, MALE THREAD.
W1	HOT WATER INLET, 3/4" GARDEN HOSE, MALE THREAD.
L1	STANDARD SOAP CHUTE
F2	(6) 13/16" DIAMETER ANCHOR BOLTS HOLES, USE
	5/8" X 6" BOLTS MINIMUM.
F1	FOUNDATION BASE PADS, 4 PLACES.
E1	ELECTRICAL CONNECTION
D2	SUDS OVERFLOW CONNECTION, 2" NPT.
D1	DRAIN TO SEWER, 3" PIPE SOCKET JOINT.
C1	REAR COVER, C4E
A1	VENT, C4E
ITEM	LEGEND

- 9 DO NOT PRE-PIPE ANY CLOSER THAN 60 [1524].

 8 SHIM TO LEVEL THE MACHINE AND ALLOW FOR 1" [25] MINIMUM GROUT. ANCHOR ALL (6) ANCHOR BOLT HOLES, OR THE WARRANTY WILL BE DECLARED INVALID. USE 5/8" X 6" BOLTS, MINIMUM. SEE INSTALLATION MAINTENANCE MANUAL FOR FURTHER INSTRUCTIONS.
- ABSOLUTE MINIMUM DISTANCE TO WALL IS 16 [406], 24 [609] TO 36 [914] RECOMMENDED FOR SERVICING.

- 7 ABSOLUTE MINIMUM DISTANCE TO WALL IS 16 [406], 24 [609] TO 36 [914] RECOMMENDED FOR SERVICING.
 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
 36 [914] IF OBJECT IS AN UNREQUINDED (INSULATED) WALL.
 42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.)
 48 [1219] IF OBJECT IS AN TUVE PART.
 CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 4 BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELURE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION MACHINE, FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPPENIONS.

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST REGOCNIZE ALL PORESEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FROMES, RESTRANTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCE GENERATED DURING ITS OPERATION. WITH THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

