




Manual Number: MCCCUB01
Edition (ECN): 2020194

Controller Reference

Milnor® Coin-Operated Washer-Extractor Controller

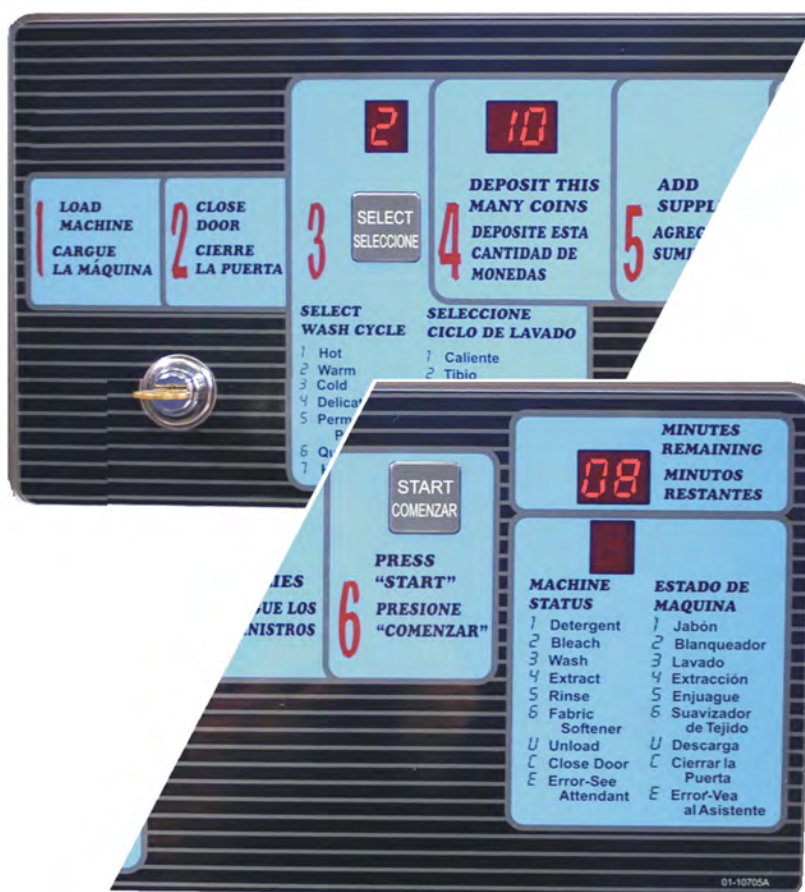

Contents

Preface	1
1 About This Manual.....	1
1.1 Scope	1
1.2 If this Manual Does Not Have the Necessary Data	1
1.3 Trademarks	1
2 General Safety Requirements—Vital Information for Coin Laundry Owners/Manag- ers and Employees	2
2.1 Laundry Facility	3
2.2 Maintenance	3
2.2.1 The Danger from Operating a Damaged Machine	3
2.2.2 The Danger of Exposing Normally Guarded Hazards	4
2.3 Disposal	5
2.4 Customer Awareness	5
3 The Customer Safety Placard—Vital Information for Coin Laundry Customers, Own- ers/Managers and Employees	6
3.1 The Danger of Child Entrapment and Scalding	6
3.2 The Danger of Amputation Related to a Rotating Cylinder.....	7
3.3 The Danger from Flammable Materials	8
4 Daily Test of Door Interlock.....	8
5 How to Contact Milnor®.....	9
1 Commissioning.....	10
1.1 Important Owner/User Information	10
1.1.1 Ensure Safety of All Personnel.....	10
1.1.2 Customize the Machine Controller.....	10
1.2 Vital Information About the Forces Imparted to Supporting Structures by Launder- ing Machines	10
1.2.1 Disclaimer of Responsibility	11
1.2.2 Major Design Considerations	11
1.2.3 Primary Information Sources	12
2 Configuring.....	13
2.1 Selecting the Formula Set and Setting the Coin Counts	13
2.1.1 Selecting the Formula Set.....	13
2.1.2 Setting the Default Wash Formula	14
2.1.3 Coin Count Error Signal.....	15
2.1.4 Setting the Coin Counts.....	15
3 Operating	18
3.1 Control Panel	18
3.1.1 Control Functions During Normal Operation.....	18
3.1.2 Control Functions in Attendant Mode.....	19
3.2 Determining Load Size	21
3.3 Using the Machine	21
3.3.1 Normal Operation (Coins Required)	22
3.3.1.1 The Integral Flushing Supply Injector.....	24
3.3.2 Attendant Operation (Attendant Key Required).....	24
3.3.3 Viewing and Clearing the Accumulator	25
3.3.3.1 Viewing the Accumulator.....	26

3.3.3.2 Clearing the Accumulator.....	26
3.3.4 Error Recovery	26
3.3.4.1 Recycle Sequence to Reduce Vibration During Extract.....	27
3.4 Standard and GreenTurn™ Wash Cycles	27
4 Testing and Troubleshooting	30
4.1 Error Codes	30
4.1.1 How to Clear Error Conditions.....	30
4.1.2 Explanations of Error Codes	31
4.1.3 Test to Prove Door is Properly Latched (Part A)	35
4.1.4 Part B.....	35
4.1.5 Part C.....	35
4.1.6 Part D.....	35
4.2 Controller Inputs and Outputs	36
4.2.1 Resuming Normal Operation.....	36
4.2.2 Viewing Inputs.....	36
4.2.3 Actuating Outputs and Functional Tests.....	38
4.2.4 Functional Tests.....	39
4.2.4.1 Functional Test 12	39
4.2.4.2 Functional Test 13	40

Figures

Figure 1	Warning Placard for Owners, Managers, and Employees	2
Figure 2	Customer Safety Placard.....	6
Figure 3	How Rotating Forces Act On the Foundation	12
Figure 4	Formula Set Switch.....	14
Figure 5	98CMCR0904 Processor Board.....	16
Figure 6	Example Coin Count Settings.....	16
Figure 7	MCR_ & MCT_ Control Panel.....	18
Figure 8	Supply Injector.....	23
Figure 9	Wash Cycle Accumulator	26
Figure 10	Error Code Display	30
Figure 11	Normal Position of Attendant Switch	31
Figure 12	Attendant Position of Attendant Switch.....	31
Figure 13	Viewing Inputs in Attendant Mode	37

Tables

Table 1	Trademarks	1
Table 2	Pellerin Milnor® Corporation Contact Information	9
Table 3	DIP Switch Settings for Coin Count Offset	16
Table 4	DIP Switch Settings for Coin Counts	17
Table 5	Standard Wash Cycles	28
Table 6	GreenTurn™ Wash Cycles (available in WUMCR1A/200013 and later, and WUC4E1A/20010 and later)	28
Table 7	Standard Coast and Delay Times (in seconds)	29
Table 8	Quick Reference for Error Codes	31
Table 9	Input Signals for MCR_ & MCT_ Coin Models	37

Table 10 Output Signals38

Draft Comments

This page intentionally blank

Preface

BNCCUB01 / 2018484

BNCCUB01 0000212845 A.4 1/2/20 12:09 PM Released

1 About This Manual

1.1 Scope

BNCCUB01.C02 0000212843 A.2 A.4 A.3 1/2/20 12:09 PM Released

This manual provides commissioning, operating, and troubleshooting instructions for washer-extractors in the Milnor® MCR_ and MCT_ line. These machines are equipped with the electronic seven formula coin washer-extractor control. See the installation manual for information on machine installation procedures and mechanical requirements. See the service manual for preventive maintenance, service procedures, and mechanical parts identification. See the schematic manual for electrical parts identification and electrical troubleshooting instructions.

1.2 If this Manual Does Not Have the Necessary Data

BNUUUU03.C01 0000188801 A.2 A.4 B.4 1/2/20 2:14 PM Released

This manual has the best data that was available when your machine was made. If you cannot find the necessary data:

- **Are you looking for data about a component not made by Milnor® but used on your machine—for example, a motor or a brake caliper?** We usually do not put the instructions of component manufacturers in Milnor® manuals. You can find some of these instructions in the part of the Milnor® website that gives maintenance data (<http://milnortechnicalsupport.force.com/pkbmilnor/>). You can also find instructions for many components on the manufacturers' websites.
- **Are you looking for data about a Milnor® component on your machine that this manual does not give?** If we get better data or more data after the manual is available, we will add it to a newer version of the manual. Speak with the Milnor® Customer Support group. They can give you newer instructions if they are available or help you if not.

1.3 Trademarks

BNUUUU02.R01 0000158093 A.2 A.4 D.2 4/6/20 2:44 PM Released

These words are trademarks of Pellerin Milnor® Corporation and other entities:

Table 1. Trademarks

AutoSpot™	GreenFlex™	MilMetrix®	PulseFlow®
CBW®	GreenTurn™	MilTouch™	Ram Command™
Drynet™	Hydro-cushion™	MilTouch-EX™	RecircONE®
E-P Express®	Mentor®	MILRAIL™	RinSave®

Table 1 Trademarks (cont'd.)

E-P OneTouch®	Mildata®	Miltrac™	SmoothCoil™
E-P Plus®	Milnor®	PBW™	Staph Guard®
Gear Guardian®			

BNCCUS01 / 2018485

BNCCUS01 0000212842 A.5 1/2/20 12:09 PM Released

2 General Safety Requirements—Vital Information for Coin Laundry Owners/Managers and Employees



NOTICE: Important Safety Instructions—Read and save all instructions

The placard shown in [Figure 1](#) instructs laundry owners, their managers and employees about installing, maintaining, testing, and providing instructions to users for safe operation of the machine. The instructions on this placard and other general safety requirements are described in more detail following the figure.

Figure 1. Warning Placard for Owners, Managers, and Employees

 ADVERTENCIA	 WARNING
<p>Una máquina instalada incorrectamente, con fallo o en condiciones inseguras puede causar la muerte o lesiones graves.</p> <ul style="list-style-type: none"> • El propietario/administrador debe leer y comprender esta etiqueta y los manuales de la máquina antes de instalar, usar o dar servicio a esta máquina. • La máquina debe instalarse de acuerdo con el código eléctrico nacional que incluye la colocación de una caja de desconexión eléctrica a la vista desde la máquina. • Nunca permita el uso de esta máquina si ocurre alguna de las siguientes situaciones: <ul style="list-style-type: none"> — entrecierre inoperante de la puerta, — existe evidencia de un fallo. • Diariamente debe probar el contador de monedas y el entrecierre de la puerta. Vea las instrucciones en el manual. • Asegúrese de que los usuarios cumplan con todas las precauciones en las etiquetas de la máquina. • Si hace falta el manual comuníquese con Pellerin Milnor Corporation, Kenner, Louisiana. 	<p>An incorrectly installed, malfunctioning, or otherwise unsafe machine can result in death or serious injury.</p> <ul style="list-style-type: none"> • Owner/manager must read and understand this label and machine manuals before installing, using, or servicing this machine. • Machine must be installed in accordance with the National Electric Code, which includes locating an electrical disconnect box in sight of machine. • Never permit use of this machine with: <ul style="list-style-type: none"> — an inoperative door interlock, — any evidence of malfunction. • Test coin counter and door interlock daily. See manual for instructions. • Be sure users follow precautions on all machine labels. • Contact Pellerin Milnor Corporation, Kenner, Louisiana, if manual is missing.

01-10708A

Incorrect installation, neglected preventive maintenance, abuse, and/or improper repairs or changes to the machine can cause unsafe operation and personal injuries, such as multiple fractures, amputations, or death. The owner/manager is responsible for understanding and ensuring the proper operation and maintenance of the machine. The owner/manager must be familiar with the contents of all machine instruction manuals, and verify that the machine is operated as described in this manual and all other manuals pertaining to this machine. The owner/manager

should direct any questions about these instructions to a Milnor® dealer or the Milnor® Customer Service department.

2.1 Laundry Facility

BNCCUS01.C02 0000212839 A.2 A.5 A.3 1/2/20 12:09 PM Released



WARNING: Fire Hazard — To reduce the risk of fire, machine must be fastened or otherwise secured to an uncovered concrete floor.



Provide a supporting floor that is strong and rigid enough to support—with a reasonable safety factor and without undue or objectionable deflection—the weight of the fully loaded machine and the forces transmitted by it during operation. See [Section 1.2 : Vital Information About the Forces Imparted to Supporting Structures by Laundering Machines, page 10](#) more details. Provide sufficient clearance for machine movement.

The laundry facility must provide protection from the elements. **Do not install the machine where it will be exposed to the weather.**

As of this writing, the National Electrical Code requires a clearly marked electric disconnect switch within sight of the machine and no farther away from the machine than 50 feet. Local codes may have additional requirements.

You are urged to consult your licensed electrician and take immediate steps to comply if your installation does not meet the National Electrical Code requirement and/or local codes.

Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **Hydrogen gas is explosive.** If the hot water system has not been used for such a period, before using a washing machine, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.

2.2 Maintenance

BNCCUS01.C03 0000212838 A.2 A.5 A.3 1/2/20 12:09 PM Released

Ensure the machine is inspected and serviced in accordance with good practice and the preventive maintenance schedule. Replace belts, pulleys, bearing seals, etc. before they are severely worn. Do not permit inspection, service or maintenance by unqualified personnel.

2.2.1 The Danger from Operating a Damaged Machine

BNCCUS01.C04 0000212837 A.2 A.5 A.4 1/2/20 12:09 PM Released

The door interlock must permit the door to be opened for a short time after the start of the cycle then prevent it from being opened for the remainder of the cycle. **Test this mechanism daily**, as explained in [Section 4 : Daily Test of Door Interlock, page 8](#).

Immediately investigate any evidence of impending failure and make needed repairs. Conditions indicating that service is required include, among others, leaking seals, valves, and hoses, motor

or bearings making whining or grinding noises or becoming abnormally hot, and cracks or bends in the cylinder, shell, or frame.



WARNING: Multiple Hazards — Operating a damaged machine can kill or injure personnel, further damage or destroy the machine, damage property, and/or void the warranty.

- ▶ Do not permit the machine to be operated with any evidence of damage or malfunction.
- ▶ Do not disable any safety device or permit the machine to be operated with a malfunctioning safety device.



WARNING: Explosion Hazards — A damaged cylinder can rip apart during extraction, puncturing the shell and discharging metal fragments at high speed.



- ▶ Do not permit the machine to be operated with any evidence of damage or malfunction.

2.2.2 The Danger of Exposing Normally Guarded Hazards

BNCCUS01.C05 0000213523 A.2 A.5 A.3 1/2/20 12:09 PM Released

Every guard and access panel on the machine exists to isolate energized or moving parts from machine users and bystanders and must be securely in place for safe operation.



WARNING: Electrocution and Electrical Burn Hazards — Contact with high voltage will electrocute or burn you. High voltage is present at the machine unless the main machine power disconnect is off.



- ▶ Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- ▶ Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.
- ▶ Replace guards and covers before returning the machine to service and do not permit the machine to be operated with guards or covers removed.



WARNING: Entangle and Crush Hazards — Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.



- ▶ Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- ▶ Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.
- ▶ Replace guards and covers before returning the machine to service and do not permit the machine to be operated with guards or covers removed.



CAUTION: Burn Hazards — Contact with hot goods or machine components can burn you.



- ▶ Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- ▶ Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.
- ▶ Replace guards and covers before returning the machine to service and do not permit the machine to be operated with guards or covers removed.

An attendant key is provided with the machine. This key permits an attendant to bypass the coin acceptor and start a wash program without coins. The key also provides access to the testing and maintenance functions described in “Testing and Troubleshooting” in the reference manual.



WARNING: Multiple Hazards — Only knowledgeable service personnel can safely perform the testing and maintenance functions provided by the attendant key. Unauthorized or unknowledgeable users can be seriously injured or killed.

- ▶ Never leave key in lock.
- ▶ Understand the consequences of using the testing and maintenance functions.

2.3 Disposal

BNCCUS01.C06 0000213522 A.2 A.5 A.3 1/2/20 12:09 PM Released

The discarded machine must not pose an entrapment hazard. **Before disposal, remove the cylinder door.**

2.4 Customer Awareness

BNCCUS01.C07 0000213521 A.2 A.5 A.3 1/2/20 12:09 PM Released

A customer safety placard on the machine alerts the customer to immediate hazards from misuse. The placard is illustrated and described in the related section in [Section 3 : The Customer Safety Placard—Vital Information for Coin Laundry Customers, Owners/Managers and Employees, page 6](#) . **Keep the safety placards clean so that the pictures and words are plainly visible. Replace placards immediately if lost or damaged.** See the “Safety Placard Use and Placement” page in the service manual to identify the placards and properly locate them on the machine.

Use whatever effective means are available, such as monitoring customer activity and posting signs prominently in the facility, to ensure a safe environment. Customers must understand:

1. the nature of the potential hazards,
2. how to avoid the hazards, and
3. what to do in the event of an emergency.


3 The Customer Safety Placard—Vital Information for Coin Laundry Customers, Owners/Managers and Employees



NOTICE: Important Safety Instructions—Read and save all instructions.

The customer safety placard shown in [Figure 2](#) was affixed to your machine in a location that is easily visible to customers. This placard warns customers who are about to use the machine of hazards that can result from improper use. Safety placards help to ensure a safe work environment and, as with any other machine part, must be properly maintained. **Placards must be kept clean so that the pictures and words are plainly visible.** Placards must be replaced immediately if lost or damaged. See the “Safety Placard Use and Placement” page in the service manual to identify the placards and properly locate them on the machine.

Figure 2. Customer Safety Placard

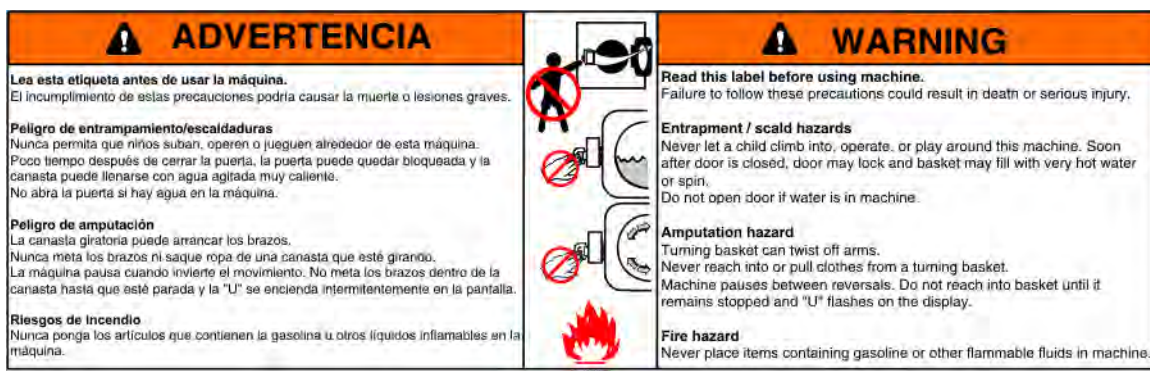

Laundry owners, managers and employees must familiarize themselves with these hazards and actively prevent any condition in their facility which might make accidents from these hazards more likely. These hazards are described in more detail below.

3.1 The Danger of Child Entrapment and Scalding

BNCCUS02.C02 0000213517 A.2 A.5 A.4 1/2/20 12:09 PM Released

There have been child entrapment incidents with machines from various manufacturers. In each instance, a small child was placed, climbed, or was helped to climb into a front loaded coin machine and the door was closed behind him. The door locked, the machine started running, and in one instance, the child was scalded to death.



WARNING: Entrapment/Scald Hazards — Soon after door is closed, door may lock and basket may fill with very hot water or spin.



- ▶ Never let a child climb into, operate, or play around this machine.
- ▶ Do not open door if water is in machine.

Milnor® MCR_ & MCT_ coin operated washer-extractors have a door interlock which, to protect against entrapment, permits opening the door during the first 60 seconds after closing the door and starting the wash program. **As additional protection against entrapment, once the door locks, it may be unlocked by removing power at the wall-mounted disconnect switch or circuit breaker, which must be part of the installation.** The owner/manager must determine, based on laundry operation, how to best address such an entrapment emergency. For example, the owner/manager may wish to post clearly visible signs alerting customers to this, or, if an attendant is always on duty, to make the attendant responsible for responding to such an emergency.

3.2 The Danger of Amputation Related to a Rotating Cylinder

BNCCUS02.C03 0000213516 A.2 A.5 A.4 1/2/20 12:09 PM Released

A tremendous amount of energy exists in the rotating cylinder of any washer-extractor, even at slow speeds. If someone tries to pull goods from a turning basket, the goods can wrap around his/her arm, entangling the arm and twisting it off.



WARNING: Amputation Hazard — Turning basket can twist off arms.



- ▶ Never reach into or pull clothes from a turning basket.
- ▶ Machine pauses between reversals. Do not reach into basket until it remains stopped and “U” flashes on display.

To protect against child entrapment, the controller used on MCR_ & MCT_ coin models permits opening the door during the first 60 seconds after closing the door and starting a wash program. The door locks after 60 seconds (see following note).



NOTE: During the first 60 seconds of the cycle, the door may be opened. If this occurs, the wash program halts, the drain valve opens immediately, and the motor stops driving the basket. If the machine did not lose power, closing the door will cause the wash program to resume where it was interrupted and the door lock delay time to be reset so that the door can again be opened for 60 seconds from when the door was subsequently closed.

Once the door locks, it remains locked until one of the following conditions occurs:

- **the wash cycle ends normally**—When the wash cycle runs to completion without interruption, the door unlocks after the cycle ends and the safety delay time expires. The safety delay allows time for the machine to coast to a complete stop before allowing the user to open the door and retrieve the goods inside.
- **the machine loses power**—If power is lost during the wash cycle, the door unlocks to allow the user to open the door and retrieve the goods (see following note).
- **level is not achieved**—If the desired level is not achieved within 20 minutes, the wash cycle terminates. The door remains locked for 25 seconds to allow the basket to stop and any water to drain out, then unlocks.



NOTE: A wash program interrupted by a power loss cannot be restarted. When power is restored and the door is closed, the customer can start the wash cycle from the beginning by inserting more coins, or the attendant can turn the **Attendant** switch to the horizontal position to allow starting the machine without coins.

3.3 The Danger from Flammable Materials

BNCCUS02.C04 0000213515 A.2 A.5 A.4 1/2/20 12:09 PM Released



WARNING: Fire Hazard — Never place items containing gasoline or other flammable fluids in machine.



Washer-extractors are **not** designed to handle flammable materials. This includes goods containing flammable substances as well as flammable cleaning materials such as solvents. In either case, highly flammable vapors can be given off, especially when the material is heated. Any source of spark or flame, such as the machine's motor, can then ignite the vapors, resulting in fire or explosion. Additionally, washing with water and detergent may not fully remove flammable materials from the goods, posing a severe risk of fire when those goods are placed in a dryer.

BNCCUS03 / Pending

BNCCUS03 0000213890 A.5 1/2/20 12:09 PM Released

4 Daily Test of Door Interlock

The door interlock on MCR_ & MCT_ models is designed to lock the door after the machine runs for approximately 60 seconds with the door closed. Test this vital safety mechanism daily to verify that it is functioning properly.



CAUTION: Scald Hazards — Contact with hot bath liquor can scald you.



► During the following test, hold the door firmly closed to prevent the door from springing open if the latch retracts during this test.

Use this procedure to verify that the door lock is working correctly:

1. Permit the wash program to progress for 90 seconds, but not much longer.
2. Holding the door closed, turn the door latch handle counter-clockwise.



NOTE: The door handle **will** turn in the next step, but **should not** operate the door latch mechanism.

- a. If the latch rotates (if the door unlocks), **remove the machine from service until the problem is identified and corrected.**
- b. If the latch does **not** rotate (if the door remains locked), and assuming no other evidence of safety problems exists, return the machine to normal operation

BNUUUT01 / 2018466

BNUUUT01

B.3

5 How to Contact Milnor®

Your authorized Milnor® dealer can assist you with your Milnor® machine and knows about the local conditions that may be pertinent to the installation, use, or maintenance of the machine. Contact your dealer first. For assistance from the Milnor® factory, refer to [Table 2](#) for contact information.

Table 2. Pellerin Milnor® Corporation Contact Information

Purpose	Department	Telephone	FAX	E-mail/Web site
Order or ask about replacement parts	Parts	504-712-7775 or 800-299-1500	504-469-9777	parts@milnor.com
Get advice on installing, servicing, or using	Customer Service/ Technical Support	504-712-7780	504-469-9777	service@milnor.com www.milnor.com (Customer Service)
Learn about, request, or enroll in Milnor® service seminars	Training	504-712-7716	504-469-9777	training@milnor.com
Determine warranty eligibility or claim status	Warranty Administration	504-712-7735	504-469-9777	service@milnor.com (Attention: Warranty)
Ask about, comment on, or report an error in equipment manuals	Technical Publications	504-712-7636	504-469-1849	techpub@milnor.com
European contacts	Milnor® International	+ 32 2 720 5822	—	milnor@milnor.be
Ask about the shipping weight of your machine before it arrives at your facility	Logistics Department	504-712-7686	504-471-0273	—

Pellerin Milnor Corporation
Post Office Box 400
Kenner, LA 70063-0400

Telephone: 504-467-9591
<http://www.milnor.com>

1 Commissioning

BNCCUB02 / 2018492

BNCCUB02 0000214008 A.6 1/2/20 12:09 PM Released

1.1 Important Owner/User Information

BNCCUB02.C01 0000214009 A.2 A.6 A.3 1/2/20 12:09 PM Released

The following two procedures must be completed before this machine is placed in service:

1. Ensure the safety of all customers and laundry personnel.
2. Customize the machine controller for the desired number of coins per wash cycle.

1.1.1 Ensure Safety of All Personnel

BNCCUB02.C02 0000214007 A.2 A.6 A.3 1/2/20 12:09 PM Released

Ensure that all personnel who will maintain this machine or oversee its operation read the safety documents in this manual before permitting them to access the machine. Ensure that all user manuals are available to the appropriate personnel and that all precautions explained in all applicable manuals are observed.

1.1.2 Customize the Machine Controller

BNCCUB02.C03 0000214006 A.2 A.6 A.5 1/2/20 12:09 PM Released

Customizing the controller in this machine consists of setting the seven banks of DIP switches on the micro-controller board for the desired coin count for each formula, as described in [Section 2.1 : Selecting the Formula Set and Setting the Coin Counts, page 13](#) . Always verify the coin count settings when the machine is first placed in service and any time the micro-controller board is replaced.

BNUUUI01 / 2019392

BNUUUI01 0000189337 C.3 1/2/20 2:14 PM Released

1.2 Vital Information About the Forces Imparted to Supporting Structures by Laundering Machines

BNUUUI01.C01 0000189336 A.2 C.3 A.5 1/2/20 2:14 PM Released

This document replaces Milnor® document BIWUUI02.

All laundering machines impart static and dynamic forces to the supporting structures (foundation and soil, floor, and building). Static forces include the machine weight plus the weight of the goods and water. Dynamic forces are those imparted by various machine movements as explained in [Section 1.2.2 : Major Design Considerations, page 11](#) . The dynamic forces imparted to supporting structures can cause vibration and noise outside of the laundry room if supporting structures are inadequate.

1.2.1 Disclaimer of Responsibility

BNUUUUI01.C02 0000189359 A.2 C.3 B.3 1/2/20 2:14 PM Released

Pellerin Milnor Corporation accepts no responsibility for damage or loss as a result of:

- inadequate supporting structures
- interference with the use of the facility caused by machine operation

The facility owner/operator is solely responsible to ensure that:

- supporting structures are strong enough, with a reasonable safety factor, to safely support the operating machine or group of machines
- supporting structures are rigid enough to isolate vibrations and noise to the laundry room


If the owner/operator does not possess the necessary expertise to ensure that the facility can safely and functionally accommodate the equipment, it will be necessary to consult the appropriate expert(s), such as a structural engineer, soils engineer, and/or architect.

1.2.2 Major Design Considerations

BNUUUUI01.C03 0000189358 A.2 C.3 A.5 1/2/20 2:14 PM Released

- Vibration and/or noise can be felt or heard outside of the laundry room as a result of the following, if supporting structures are not sufficiently rigid:
 - Extraction (the spinning cylinder) in washer-extractors and centrifugal extractors, imparts sinusoidal forces to supporting structures as shown in [Figure 3: How Rotating Forces Act On the Foundation, page 12](#) . In rigid washer-extractors, these forces are up to 30 times that of suspended washer-extractors of the same capacity.
 - Extraction forces can be magnified many times if the rotation frequency matches the resonant frequency of supporting structures. To avoid this, supporting structures must have a natural resonant frequency many times greater than any possible rotation speed of the machine or combination of rotation speeds of all machines.
 - Each time goods fall in the rotating cylinder of a washer, washer-extractor, centrifugal extractor, or dryer, this can impart a force to the supporting structures.
 - The intermittent start and stop actions of large components inside the machine, particularly in a tilting washer-extractor, press-extractor, or centrifugal extractor, can impart intermittent forces to the supporting structures.
- The possibility of adverse consequences is significantly greater for upper floor installations than for installations at grade. Always consult a structural engineer for such an installation.
- The possibility of adverse consequences is significantly greater for installations at grade if subsidence causes a void between the foundation and the soil or if the soil itself does not provide adequate strength and rigidity. Some possible remedies are the addition of pilings or a deeper foundation, installed as to be monolithic with the existing foundation.
- Machine forces can cause damage to the machine or the floor without the correct anchorage.
- Applicable building codes, even when met, do not guarantee sufficient structural support and isolation of machine forces to the laundry room.

Figure 3. How Rotating Forces Act On the Foundation

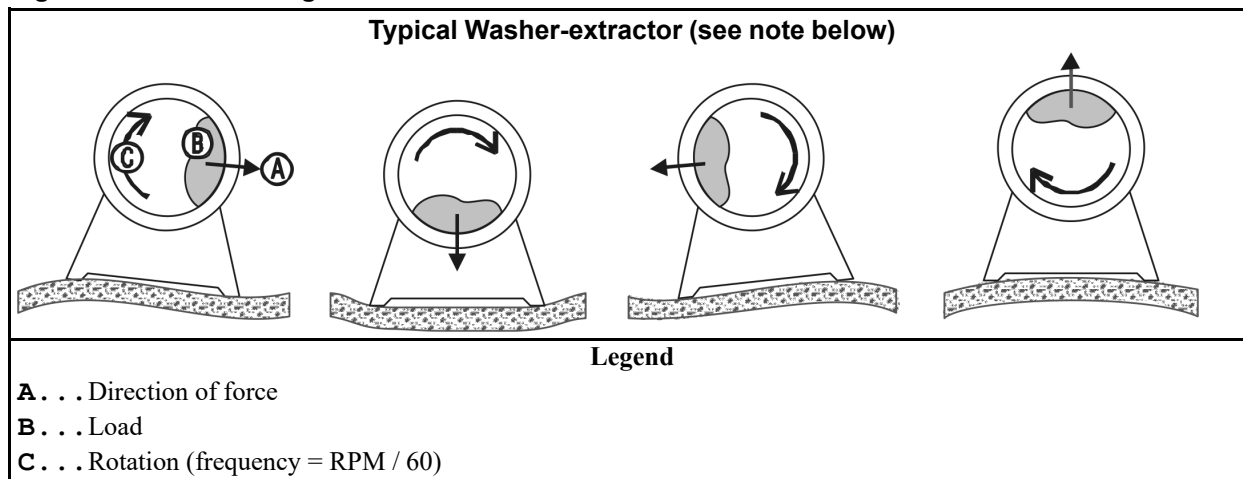

NOTE: This figure applies to both rigid and suspended washer-extractors and to both at-grade and upper floor installations.

1.2.3 Primary Information Sources

BNUUUI01.C04 0000189357 A.2 C.3 A.5 1/2/20 2:14 PM Released

Milnor® provides, or can provide the following information of use to engineers and architects, for the given machine model:

- The machine dimensional drawing, found in the installation manual, specifies the machine's required anchorage.
- The Milnor® Service Department can provide static and dynamic load values and frequency (extract speed) values on request.



NOTICE: All data is subject to change without notice and may have changed since last printed. It is the responsibility of the potential owner/operator to obtain written confirmation that any data furnished by Milnor® applies for the model number(s) and serial number(s) of the purchased machine(s).

2 Configuring

BNCCUP01 / 2018504

BNCCUP01

0000214005

A.8

1/2/20 12:09 PM

Released

2.1 Selecting the Formula Set and Setting the Coin Counts

BNCCUP01.C01 0000214004 A.2 A.8 A.3 1/2/20 12:09 PM Released

Coin-operated washer-extractor models in the MCR_ & MCT_ model line with software versions 20014 and later provide 2 sets of 7 formulas each. The machine owner configures the machine for either the standard or alternate formula set, and the customer selects the desired formula from the configured set. DIP switch settings on the machine processor board (see [Figure 5: 98CMCR0904 Processor Board, page 16](#)) determine the set of formulas from which the user can choose and the number of quarters required for each wash cycle.



TIP: Machines in this model line may be equipped with an optional coin counter mechanism which accepts both quarters and other denominations, including bills. All machines display the number of **quarters** required for the selected wash cycle, so the required coin (quarter) count decreases by four when a customer deposits a dollar coin or bill in the appropriate slot.

2.1.1 Selecting the Formula Set

BNCCUP01.T01 0000214002 A.2 A.8 A.6 1/2/20 12:09 PM Released

Software versions 20014 and later provide 2 sets of wash formulas: a set of 7 standard formulas and a set of 7 alternate formulas. Only one set can be enabled at any time, and customers choose from the enabled formula set.



WARNING: Electrocuting and Electrical Burn Hazards — Contact with high voltage will electrocute or burn you. High voltage is present at the machine unless the main machine power disconnect is off.



WARNING: Entangle and Sever Hazards — Guards, covers, and panels—Operating the machine with any guard, cover, or panel removed exposes moving components.




1. **Turn off power to the machine.** Because the micro-controller checks the DIP switch positions only during power-up, any changes made with power applied to the machine will not take effect until machine power is cycled off and on.
2. Referring to [Section 3.4 : Standard and GreenTurn™ Wash Cycles, page 27](#) , determine which set of formulas will be available to customers.
3. Set position 6 of DIP switch 1 ON to use the standard formulas, or set the switch OFF to use the alternate formula set.



TIP: The standard formulas are detailed in [Table 5: Standard Wash Cycles, page 28](#) , and the GreenTurn™ formulas are detailed in the related table in [Table 6: GreenTurn™ Wash Cycles \(available in WUMCR1A/200013 and later, and WUC4E1A/20010 and later\), page 28](#) .

Figure 4. Formula Set Switch

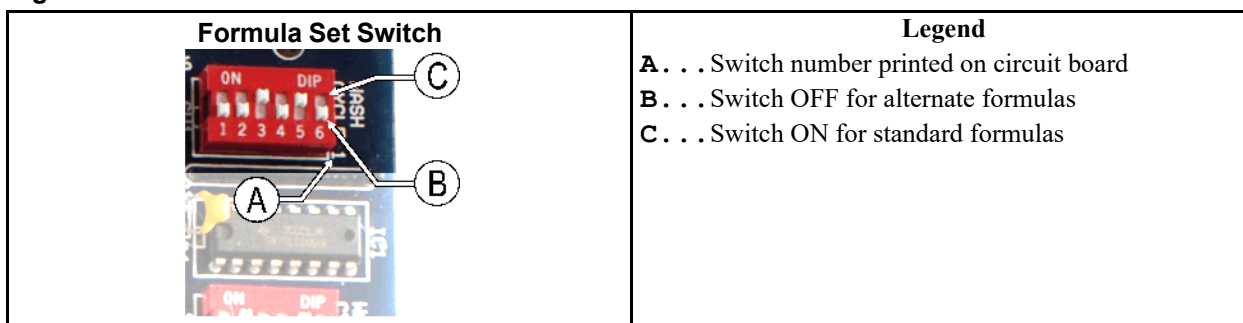

2.1.2 Setting the Default Wash Formula

BNCCUP01.T02 0000214001 A.2 A.8 A.4 1/2/20 12:09 PM Released

The **default wash formula** is the formula that is pre-selected to run if the user does not select a formula before pressing the **Start** button. For example, machine owners may set the default formula to Formula 3 (Cold Wash) to reduce utilities costs or to Formula 6 (Quick Wash) to increase the number of cycles per day. The customer can always select another formula with the **Select** button.

You can set the default wash formula with the **Select** button during the power-up delay.

1. Remove and restore machine power. The default wash formula can only be set during the power-up delay.
2. The control displays the software version for seven seconds, then displays the seconds remaining in the power-up delay.
3. While the power-up delay countdown is active, press the **Select** button to display the desired default wash formula.

The default wash formula resets to Formula 1 (Hot Wash) when machine power is interrupted.

2.1.3 Coin Count Error Signal

BNCCUP01.C02 0000214000 A.2 A.8 A.3 1/2/20 12:09 PM Released

Machines equipped with a coin slot mechanism signal an error if a coin is detected in the coin chute for too long. This would be a nuisance on machines with a coin slide mechanism instead of a coin slot. To disable the coin count error signal, set DIP switch SW2-6 to the OFF position.

2.1.4 Setting the Coin Counts

BNCCUP01.T03 0000214103 A.2 A.8 A.6 1/2/20 12:09 PM Released

Use this procedure to set the number of quarters required for each wash cycle:



WARNING: Electrocution and Electrical Burn Hazards — Contact with high voltage will electrocute or burn you. High voltage is present at the machine unless the main machine power disconnect is off.



WARNING: Entangle and Sever Hazards — Guards, covers, and panels—Operating the machine with any guard, cover, or panel removed exposes moving components.




1. **Turn off power to the machine.** Because the micro-controller checks the DIP switch positions only during power-up, any changes made with power applied to the machine will not take effect until machine power is cycled off and on.
2. Referring to [Section 3.4 : Standard and GreenTurn™ Wash Cycles, page 27](#) , determine the number of quarters desired to run each wash cycle.
3. Referring to [Table 3: DIP Switch Settings for Coin Count Offset, page 16](#) , set the coin count offset.



TIP: The coin count offset is the number of coins added to the configured price for each wash cycle. The offset sets the minimum number of coins required for any wash cycle. For example, if you set the coin count offset for 8 coins and the coin count for a wash cycle to 6 coins, the vend price for that wash cycle is 14 coins. The maximum range between the price of the lowest priced wash cycle and the highest priced wash cycle is 31 coins (\$7.75 in US quarters).

4. In [Table 4: DIP Switch Settings for Coin Counts, page 17](#) , look up the DIP switch settings which correspond to the desired quarter count for each wash cycle. In the table, “0” represents a switch position that is **OFF** and “1” represents a switch position that is **ON**.

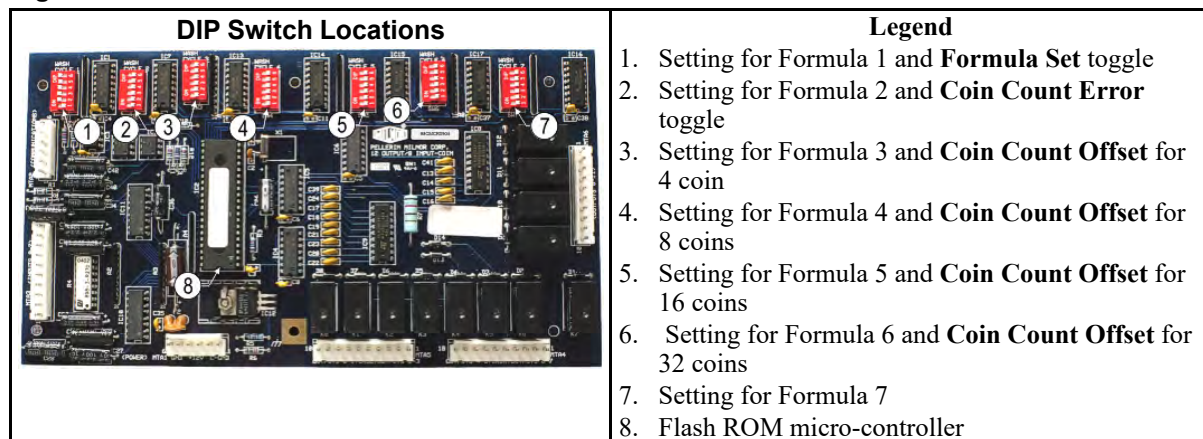
Figure 5. 98CMCR0904 Processor Board

5. On the machine processor board, set the DIP switch for Formula 1 to the value established from [Table 4: DIP Switch Settings for Coin Counts, page 17](#).



TIP: As shown in [Figure 6](#), to set a switch position **OFF**, slide the switch toward the switch number until it clicks. To turn a switch position **ON**, slide the switch toward the word “ON.” Note the DIP switch labels on the processor board and the position numbers on the DIP switches.

6. Set the desired coin (quarter) count values for the remaining wash cycles. This value is added to the **Coin Count Offset**.
7. Apply power to the machine to resume service.
8. Press the **Select Wash Cycle** button to select each wash cycle while observing the value displayed in the **coin count** window to verify each value.

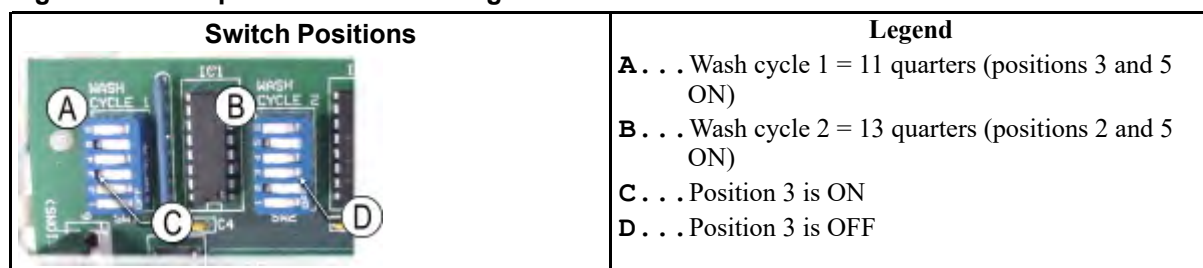Figure 6. Example Coin Count Settings**Table 3. DIP Switch Settings for Coin Count Offset**

Offset	SW3–6	SW4–6	SW5–6	SW6–6
0	1	1	1	1
4	0	1	1	1
8	1	0	1	1
12	0	0	1	1
16	1	1	0	1
20	0	1	0	1
24	1	0	0	1
28	0	0	0	1

Table 3 DIP Switch Settings for Coin Count Offset (cont'd.)

Offset	SW3–6	SW4–6	SW5–6	SW6–6
32	1	1	1	0
36	0	1	1	0
40	1	0	1	0
44	0	0	1	0
48	1	1	0	0
52	0	1	0	0
56	1	0	0	0
60	0	0	0	0
Note: 0 = Switch is OFF. 1 = Switch is ON.				

Table 4. DIP Switch Settings for Coin Counts

Counts	Switch					Counts	Switch					Counts	Switch					Counts	Switch				
	1	2	3	4	5		1	2	3	4	5		1	2	3	4	5		1	2	3	4	5
0	1	1	1	1	1	8	1	1	1	0	1	16	1	1	1	1	0	24	1	1	1	0	0
1	0	1	1	1	1	9	0	1	1	0	1	17	0	1	1	1	0	25	0	1	1	0	0
2	1	0	1	1	1	10	1	0	1	0	1	18	1	0	1	1	0	26	1	0	1	0	0
3	0	0	1	1	1	11	0	0	1	0	1	19	0	0	1	1	0	27	0	0	1	0	0
4	1	1	0	1	1	12	1	1	0	0	1	20	1	1	0	1	0	28	1	1	0	0	0
5	0	1	0	1	1	13	0	1	0	0	1	21	0	1	0	1	0	29	0	1	0	0	0
6	1	0	0	1	1	14	1	0	0	0	1	22	1	0	0	1	0	30	1	0	0	0	0
7	0	0	0	1	1	15	0	0	0	0	1	23	0	0	0	1	0	31	0	0	0	0	0
Note: 0 = Switch is OFF. 1 = Switch is ON.																							


3 Operating

3.1 Control Panel

BNCCUO01.C01 0000214131 A.2 A.6 A.3 1/2/20 12:09 PM Released

All operator and attendant functions of the MCR_ & MCT_ electronic coin washer-extractor controller are accessible from the front control panel. The function of the various controls vary according to the position of the **Attendant** switch, as described in this document

Figure 7. MCR_ & MCT_ Control Panel

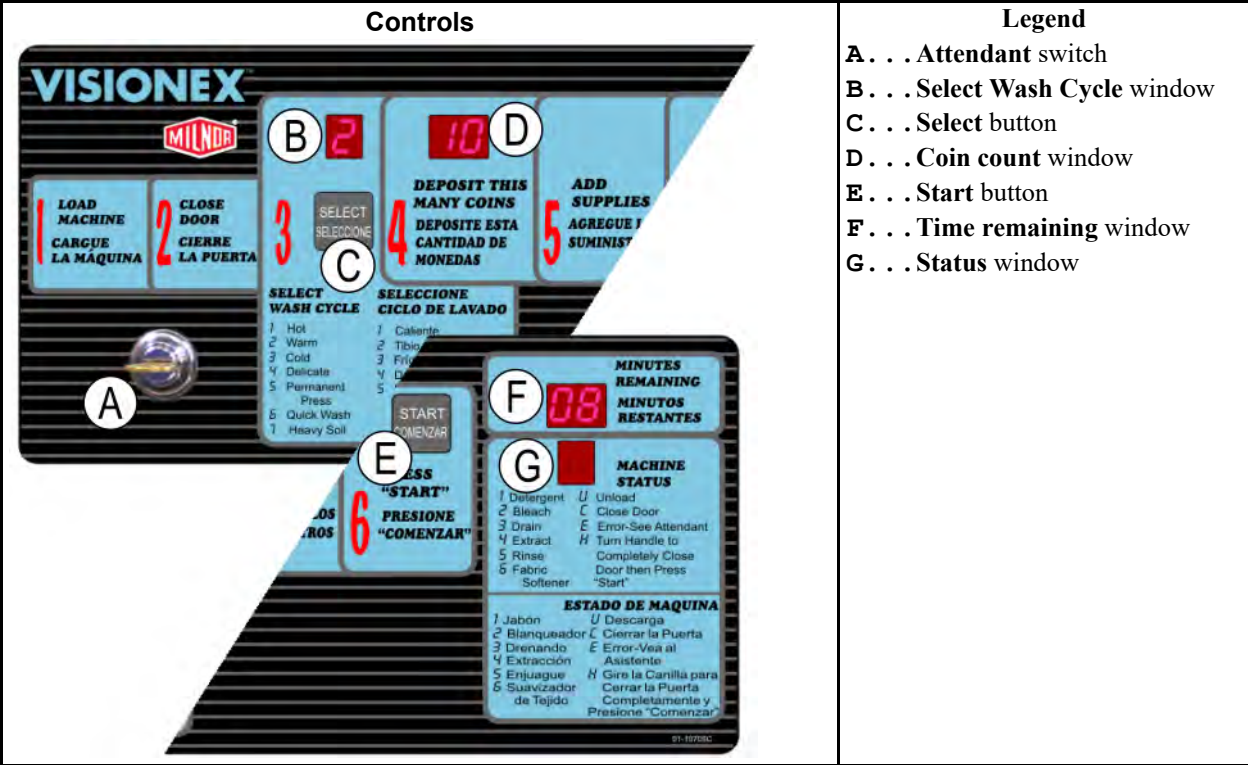

3.1.1 Control Functions During Normal Operation

BNCCUO01.R01 0000214191 A.2 A.6 A.3 1/2/20 12:09 PM Released

Normal operation is the state of the machine when the machine control circuit is energized and the **Attendant** switch is in the vertical position. The machine may be either idle (waiting to run a wash cycle) or running. If the machine is idle, the display shows the time and required number of quarters for the selected wash cycle, as well as whether the door is open or closed.

A. Attendant switch must be kept in the normal (vertical) position with the key removed unless the attendant or a qualified technician is present and operating the machine. Cycle this

switch to the horizontal position and back to the vertical position to clear controller errors, or turn this switch to the horizontal position (key cannot be removed) to access the control functions defined in [Section 3.1.2 : Control Functions in Attendant Mode, page 19](#).

- B. Select Wash Cycle window** if the door is closed, displays the wash cycle that will run when the correct number of quarters or dollar coins are inserted and the **Start** button is pressed.
- C. Select button** scrolls through the seven available wash cycles listed on the machine control panel. The current selected wash cycle is displayed in the **Select Wash Cycle** window. This button is ignored if the door is open.
- D. Coin count window** displays the number of quarters required to start the selected wash cycle if the door is closed. The quarters required value counts down toward 0 as each quarter is accepted, and decrements by four quarters when a dollar coin is accepted. When no more quarters are required, press the **Start** button to begin the selected wash cycle.
- E. Start button** begins the wash cycle displayed in the **Select Wash Cycle** window after the required number of quarters are accepted. This button is ignored if the door is open.
- F. Minutes Remaining window** displays the number of whole minutes remaining in the selected wash cycle if the door is closed. If the **Select Wash Cycle** button is pressed before the **Start** button, the number in this display changes to reflect the duration of each wash cycle.
- G. Machine Status window** displays the current step or status of the selected wash cycle when the machine door is closed. If the machine door is open, this window displays “C” to prompt the customer to close the door. If the door is closed, this window flashes 0. The decimal in the lower right corner of this window flashes any time a safety delay timer is counting, including power-up and coast times.

3.1.2 Control Functions in Attendant Mode

BNCCU001.R02 0000214350 A.2 A.6 A.5 1/2/20 12:09 PM Released

Attendant mode is the state of the machine when the machine control circuit is energized and the **Attendant** switch is in the horizontal position (as shown in [Figure 7: MCR_ & MCT_ Control Panel, page 18](#)). The machine may be idle or running. If the machine is idle, the status of the door determines the options available and the appearance of the display.

- A. Attendant switch** must be kept in the normal (vertical) position and the key removed unless the attendant or a qualified technician is present and operating the machine. In the **Attendant** (horizontal) position, this switch allows viewing the software date code, status of microcontroller inputs, and actuation of microcontroller outputs for testing (see [Section 4.2 : Controller Inputs and Outputs, page 36](#)). Cycle this switch to the horizontal position and back to the vertical position to clear controller errors (see [Section 4.1 : Error Codes, page 30](#)) and to start the machine without requiring coins, or turn this switch to the vertical position and remove the key for normal operation (See [Section 3.3 : Using the Machine, page 21](#)).
- B. Select Wash Cycle window** displays various information according to the test or operation in progress:
 1. If the door is closed and the **Attendant** key is turned to the horizontal position, this window displays the formula that will execute when the **Start** button is pressed.
 2. This window displays the first digit in the software date code.
 3. During the display test, this digit and all others on the display count through all the numbers consecutively in reverse order.

4. This window is not illuminated when viewing the status of the inputs or when outputs are being tested.

C. Select button cycles through the available functions available in **Attendant** mode:

1. run formula without coins
2. display software date code
3. test display segments
4. view input status
5. test outputs and execute functional tests

If the door is open, press this button four times to clear the wash cycle accumulator (see [Section 3.3.3 : Viewing and Clearing the Accumulator, page 25](#))

D. Coin count window displays various information according to the test or operation in progress:

1. If the door is closed when the **Attendant** switch is turned to the horizontal position, this window displays “St” to indicate that pressing the **Start** button will start the wash cycle that was selected when **Attendant** mode was accessed.
2. When viewing the software date code, the two digits in this window show the second and third digits of the date code.
3. This display duplicates the scrolling numbers in all other displays while the display test is active.
4. This display is not illuminated when the controller is set to display input status.
5. When the controller is set to allow manual operation of outputs, “00” **flashes** in this window unless a safety delay timer is counting down, in which case this display is not illuminated.

E. Start button starts the formula that was previously selected after the **Attendant** switch is turned to the horizontal position. This button also performs other functions if the door is closed and the **Select** button is pressed before the **Start** button:

1. When viewing the status of the inputs, the upper right segment of the ones digit in the **Minutes Remaining** window represents the **Start** button. This segment illuminates when the button is pressed.
2. During the test of outputs and the functional tests, the **Start** button toggles the selected output or functional test on and off each time it's pressed.

F. Minutes Remaining window displays various information according to the test or operation in progress:

1. When the software date code is displayed, this window contains the last two digits of the code.
2. This display duplicates the scrolling numbers in all other displays while the display test is active.
3. When the input test is active, the left (tens) digit of this window represents the micro-controller inputs to the processor board. The right (ones) digit of this window represents the inputs to

the display board. See [Section 4.2 : Controller Inputs and Outputs, page 36](#) for more details about the input test.

4. When the output test is active, this window displays the output or functional test currently selected.

G. Machine Status window displays the current step or status of the selected wash cycle that will run if the **Start** button is pressed before the **Select** button. This window also displays other information according to the current test or operation:

1. This window is not illuminated when the software date code is displayed or when the inputs test is selected.
2. During the display test, this window duplicates the characters in all other display windows.
3. When the output test is selected, this window displays whether the selected output or functional test is on (represented by a “1”) or off (represented by a “0”). When a safety delay timer is counting down—as occurs when the extract speed output is turned off—the decimal in the lower right corner of this display flashes.

BNWUUO01 / 2018153A

BNWUUO01 0000181431 A.3 1/2/20 2:19 PM Released

3.2 Determining Load Size

BNWUUO01.C01 0000181430 A.2 A.3 B.3 1/2/20 2:19 PM Released

You will not do damage to the machine with a large load if you follow these rules:

1. The goods are made of common cotton or synthetic materials.
2. The load can balance in the cylinder before the extract step.
3. The extract speed has not been increased above the designed maximum.
4. You do not program so many extract steps that you do damage to the motor.

For common goods, the size of the machine sets the quantity you can put in the machine.

These items determine the maximum load weight of soiled goods:

- the volume of the machine's cylinder, and
- the material and weight of the goods.

Do not try to load the machine to its maximum weight capacity with bulky fabrics.

Use the size of the machine, the type of the goods, the amount of soil, and the wash quality when you load the machine.

BNCCUO02 / 2018512

BNCCUO02 0000214255 A.8 1/2/20 12:09 PM Released

3.3 Using the Machine

BNCCUO02.C01 0000214254 A.2 A.8 A.6 1/2/20 12:09 PM Released

Milnor® electronic coin washer-extractor controllers allow wash cycles to be started in two ways:

- [Section 3.3.1 : Normal Operation \(Coins Required\), page 22](#) describes how a paying customer operates the machine, including loading the machine, selecting the desired wash cycle, and

starting the machine by inserting coins (quarters or dollar coins) and pressing the **Start** button.

- [Section 3.3.2 : Attendant Operation \(Attendant Key Required\), page 24](#) describes how laundry personnel can operate the machine without using coins by setting the **Attendant** switch to the **Attendant** (horizontal) position.

[Section 3.3.4 : Error Recovery, page 26](#) includes a brief overview of the error recovery process. Refer to [Section 4.1 : Error Codes, page 30](#) for more details on error recovery. Refer to [Section 3.3.4.1 : Recycle Sequence to Reduce Vibration During Extract, page 27](#) for the sequence of automatic actions if the vibration safety switch trips because of excessive vibration during an extract step.



TIP: If the machine is in a bath step, the attendant can terminate the formula by enabling the **Attendant** keyswitch and pressing the **Start** button and the **Select** button simultaneously.

3.3.1 Normal Operation (Coins Required)

BNCCUO02.T01 0000214253 A.2 A.8 A.4 1/2/20 12:09 PM Released

1. Open door and load machine.

Load the machine at or near its rated capacity, as described in [Section 3.2 : Determining Load Size, page 21](#). Processing small loads in any washer-extractor increases the possibility of excessive vibration.

2. Close door.

Securely close and latch the loading door. Safety features on this machine are designed to notify the customer if the door is open. If this machine is in proper working order with all safety devices in place, it will not operate unless the door is completely closed. To prevent the customer from accidentally opening the door while the machine is operating, the door latch is locked in the closed position about 60 seconds after the wash cycle starts.



NOTICE: The door latch lock delay timer locks the door latch about 60 seconds after the wash cycle starts. This timer resets to the full 60 seconds each time the door is opened and subsequently closed.

3. Select desired wash cycle.



Press the **Select** button repeatedly to scroll through the seven available wash cycles shown on the machine control panel. Each time the customer presses the **Select** button, the number in the **Select Wash Cycle** window increases by one count and the values in the **Minutes Remaining** and **coin count** windows change to reflect the duration of the selected cycle and the number of coins required.

4. Deposit the required amount of money.


For any wash cycle displayed in the **Select Wash Cycle** window, the **coin count** window displays the number of quarters required to run the cycle. The value in the **coin count** window decreases by one unit for each quarter, or by four units for each dollar accepted and counted

by the machine controller. The coin count is satisfied when the value in the **coin count** window is “00”. Coins can not be deposited in the coin slot until the door is closed.

5. Add supplies.

Add the desired amount of detergent, bleach, and softener to the appropriate supply dispenser pockets on top of the machine. The chemicals will be automatically flushed into the machine cylinder at the best time in the wash cycle. See [Section 3.3.1.1 : The Integral Flushing Supply Injector](#), page 24 for details.

Figure 8. Supply Injector

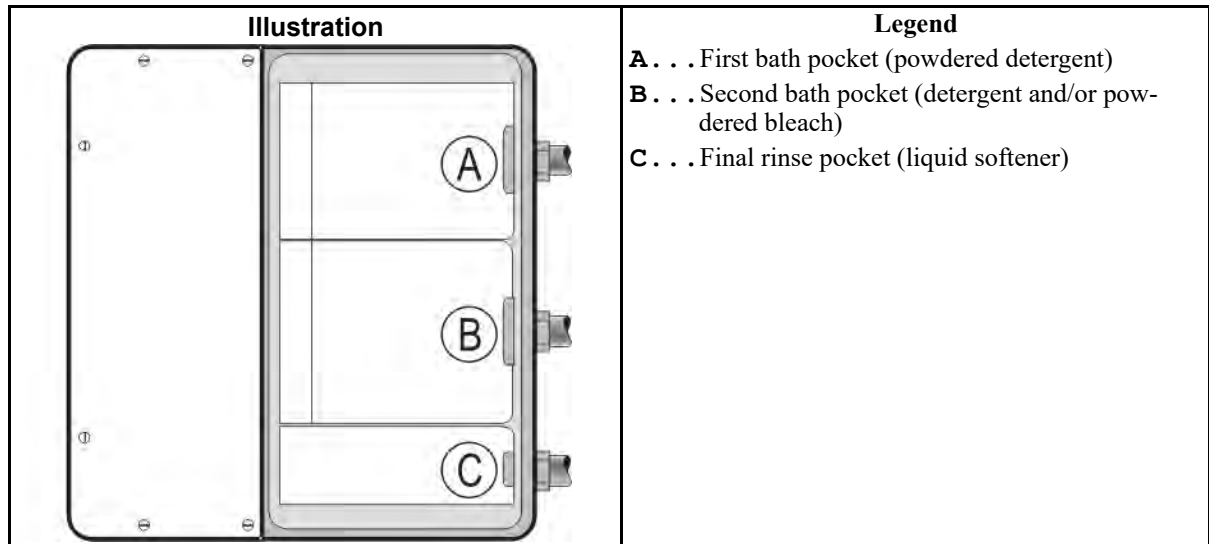

6. Press Start.



Press the **Start** button to begin the wash cycle. When the wash cycle terminates, open the door and unload the machine.



NOTICE: A different wash cycle can be selected any time before the **Start** button is pressed by pressing the **Select** button. If the wash cycle is changed to one requiring more money, the **coin count** window will prompt for the desired number of quarters, and the controller will prevent starting the machine. If the wash cycle is changed to one requiring fewer coins, the **coin count** window displays “00” and the machine can be started.

During operation, the right decimal in the **Minutes Remaining** window flashes when the timer is counting. The decimal is dark when the timer is not counting, as while the machine is filling with water for the first time in any bath step.

The **Machine Status** window displays a flashing decimal during the safety delay period before the controller unlocks the door latch. The decimal also flashes any time the basket is coasting, as after an intermediate extract step.

When the wash cycle is finished, the **Machine Status** window flashes “U” to indicate that the safety delay timer has expired and the door latch is unlocked. The decimal point on the right

side of the **Minutes Remaining** window flashes to indicate that the door has not been opened since the wash cycle ended. Open the door and remove the goods.

When the customer opens the machine door after a wash cycle ends, the **Machine Status** window immediately flashes “C” to prompt the customer to close the door. When the door is closed, the **Machine Status** window flashes 0.

3.3.1.1 The Integral Flushing Supply Injector

BNCCUO02.C02 0000214252 A.2 A.8 A.3 1/2/20 12:09 PM Released

MCR_ & MCT_ model washer-extractors are equipped with a three-compartment flushing supply injector to flush pre-measured quantities of chemicals into the machine at the appropriate time in the wash cycle.

Machines with software **other than** WUMCR1A/2007 flush each pocket for the duration of the fill operation for the appropriate step in the wash cycle. The flush time is 75 seconds for machines with software WUMCR1A/2007.

- The large compartment nearest the rear of the machine is for powdered detergent and is flushed into the machine when the **Machine Status** displays “1.”
- The large middle compartment of the supply injector is for powdered bleach and/or detergent. This compartment and the detergent pocket are flushed into the machine when the **Machine Status** displays “2.” If the selected wash cycle does not include a bleach step (Wash Cycles 3, 4, 5, and 6), these compartments are flushed at **Machine Status** “1.”
- The small compartment near the front of the machine is for liquid softener. This compartment and the other two compartments are flushed into the machine when the **Machine Status** displays “6,” during the last rinse of each wash cycle.

3.3.2 Attendant Operation (Attendant Key Required)

BNCCUO02.T02 0000214268 A.2 A.8 A.6 1/2/20 12:09 PM Released

Two situations call for this method of operation: recurring attendant operation as when customers drop off laundry for later pickup, and restarting a terminated wash cycle without requiring additional coins.

1. Open door and load machine.

Load the machine at or near its rated capacity, as described in [Section 3.2 : Determining Load Size, page 21](#) . Processing small loads in any washer-extractor increases the possibility of excessive vibration.

2. Close door.

Securely close the loading door. Safety features on this machine are designed to notify the user if the door is open. If this machine is in proper working order with all safety devices in place, it will not operate unless the door is completely closed. To prevent the user from accidentally opening the door while the machine is operating, the door latch is locked in the closed position 60 seconds after the wash cycle starts for the first time, or when the wash cycle resumes after the door is opened and subsequently closed.

3. Select desired wash cycle.

Press the **Select** button to scroll through the available wash cycles shown on the machine control panel. Each time the attendant presses the **Select** button, the number in the **Select Wash Cycle** window of the control panel increases and the value in the **Minutes Remaining** window changes to display the duration of the selected cycle.



NOTICE: Always select the desired wash cycle before turning the **Attendant** switch to the horizontal position. When the **Attendant** switch is in the horizontal position, the **Select** button scrolls from the selected program to the various testing modes described in [Section 4.2 : Controller Inputs and Outputs, page 36](#) . To exit the testing modes, turn the **Attendant** switch to the vertical position.

4. **Set the Attendant switch to the Attendant (horizontal) position.**

Insert the attendant key and turn the switch clockwise one quarter turn to access **Attendant** mode. The **coin count** window displays “St” to prompt the attendant to press the **Start** button.

5. **Add supplies.**

Add the desired amount of detergent, bleach, and softener to the appropriate supply dispenser pockets on top of the machine. The chemicals will be automatically flushed into the machine cylinder at the appropriate times in the wash cycle.

During operation, the right decimal in the **Minutes Remaining** window flashes when the timer is counting. The decimal is dark when the timer is not counting, as while the machine is filling with water for the first time in any bath step.

6. **Press Start.**

Press the **Start** button to begin the wash cycle.

7. **Set the Attendant switch to the normal operating position.** Remove the key.

8. **Unload the machine when the wash cycle ends.**

When the wash cycle is finished, the **Machine Status** window displays “U” to indicate that the safety delay timer has expired and the door latch is unlocked. The decimal point on the right side of the **Minutes Remaining** window flashes to indicate that the door has not been opened since the wash cycle ended. Open the door and remove the goods.

When the attendant opens the machine door after a wash cycle ends, the display immediately goes dark except for the **Machine Status** window. The **Machine Status** window flashes “C” to prompt the attendant to close the door. When the door is closed, the **Machine Status** window flashes 0.

3.3.3 Viewing and Clearing the Accumulator

BNCCUO02.C03 0000214306 A.2 A.8 A.3 1/2/20 12:09 PM Released


The controller maintains a wash cycle counter for each formula—called an accumulator—which increments when a wash cycle is started. The procedure for viewing the accumulator is described in [Section 3.3.3.1 : Viewing the Accumulator, page 26](#) . The accumulator resets when power is removed from the machine, or it can be manually reset by following the steps in [Section 3.3.3.2 : Clearing the Accumulator, page 26](#)

3.3.3.1 Viewing the Accumulator

BNCCUO02.C04 0000214304 A.2 A.8 A.3 1/2/20 12:09 PM Released

Each accumulator contains a value from 000 to 999, representing the total number of times the wash cycle was performed since the last time the machine was powered off or the accumulator was cleared. To view the contents of an accumulator, select the desired formula, then open the door and turn the **Attendant** switch to the **Attendant** (horizontal) position. Press the **Select** button to view the next accumulator.

Figure 9. Wash Cycle Accumulator

Typical Display	Legend
	<p>A . . . Hundreds and tens digits</p> <p>B . . . Units digit</p>

As shown in [Figure 9](#), the **Minutes Remaining** window displays the first two digits of the accumulator value, while the **Machine Status** window displays the third digit. In the example shown here, the machine has completed 37 wash cycles since the accumulator was reset. The **Select Wash Cycle** and **coin count** windows display normal operating values not included in the accumulator count.

3.3.3.2 Clearing the Accumulator

BNCCUO02.C05 0000214303 A.2 A.8 A.3 1/2/20 12:09 PM Released

Clear the accumulators by turning off power to the machine at the wall disconnect, or by pressing the **Start** button three times while any accumulator is visible. The values for **all** accumulators immediately reset to “000.”

3.3.4 Error Recovery

BNCCUO02.C06 0000214302 A.2 A.8 A.4 1/2/20 12:09 PM Released

An error condition occurs if the machine controller detects a condition which might be unsafe or cause machine damage. See [Section 4.1 : Error Codes, page 30](#) for a detailed description of possible errors and corrective actions.

Some errors, such as the error that occurs if the machine does not fill to level within the allotted time, are caused by transient conditions and require no immediate corrective actions other than clearing the error. When an error of this type occurs, use the following procedure to return the machine to service:

1. If possible, resolve the cause of the error.
2. Turn the **Attendant** switch to the horizontal position.
3. Return the **Attendant** switch to the vertical position and remove the key.



TIP: To restart the selected wash cycle at the beginning, press the **Start** button while the switch is in the horizontal position, then turn the switch to the vertical position and remove the key.

3.3.4.1 Recycle Sequence to Reduce Vibration During Extract

BNCCU002.C07 0000214301 A.2 A.8 A.5 1/2/20 12:09 PM Released

If this machine—or any washer-extractor—is severely underloaded, the possibility exists for excessive vibration when the machine tries to extract the goods. The vibration safety switch within the machine cabinet detects this excessive vibration and provides an input to the micro-controller if the controller is commanding an extract step. The software in the micro-controller instructs the machine to follow one of the following two procedures, depending on the type of extract in progress when the vibration switch tripped.

- If the vibration switch trips during an **intermediate** extract (an extract between two bath steps), the basket coasts for the remaining extract time then resumes normal operation at the beginning of the next bath step.
- If the vibration switch trips during the final extract of a wash cycle, the machine goes through an extract recycle sequence to try to reduce the degree of imbalance and complete the wash cycle. The recycle sequence described below repeats until the machine successfully completes the wash cycle or three recycle attempts have failed to complete the extract step.
 1. The wash cycle timer stops. The **Select Wash Cycle** window and the **coin count** window maintain their current contents. The **Minutes Remaining** window retains the time remaining in the wash cycle, but the decimal point at the right side of this window—which usually flashes to indicate that the cycle timer is running—does not flash.
 2. The basket coasts for 100 seconds. During this time, the **Machine Status** window flashes 4 (extract).
 3. The basket turns counter-clockwise at wash speed for 15 seconds.
 4. The basket dwells for 3 seconds with no motor power.
 5. The basket turns clockwise at wash speed for 15 seconds.
 6. The basket turns clockwise at distribution speed for 25 seconds.
 7. The wash cycle timer starts and the basket accelerates immediately to extract speed after the 25-second distribution period expires. The rightmost decimal in the **Minutes Remaining** window resumes flashing to indicate that the wash cycle timer is running.

BNCCUP02 / 2018506

BNCCUP02 0000214405 A.7 1/2/20 12:09 PM Released

3.4 Standard and GreenTurn™ Wash Cycles

BNCCUP02.C01 0000214404 A.2 A.7 A.5 1/2/20 12:09 PM Released

This document describes the seven wash cycles provided in your coin washer-extractor controller. Refer to [Section 3.3 : Using the Machine, page 21](#) for instructions on starting a wash cycle with coins or the **Attendant** switch.



NOTE: Because the incoming water pressure and other factors influence the time required for the machine to fill, the run times stated below do not include machine fill times. For all flush, bath, and rinse steps, the timer starts after level is achieved.



NOTE: The display shows **01 Minutes Remaining** until the safety delay period expires and the controller unlocks the door latch.

The standard wash cycles shown in [Table 5](#) are available in all MCR_ & MCT_ model machines. The GreenTurn™ wash cycles shown in [Table 6](#) are available in MCR_ & MCT_ models running software WUMCR1A/20013 and later. See [Section 2.1 : Selecting the Formula Set and Setting the Coin Counts, page 13](#) for instructions on how to configure the machine to use either set of wash cycles.

Table 5. Standard Wash Cycles

	Hot	Warm	Cold	Delicate	Perma- nent Press	Quick Wash	Heavy Soil
Flush							2:00 Cold
Drain							1:15
Detergent	5:00 Hot	5:00 Split	5:00 Cold	4:00 Split	5:00 Split	3:00 Split	7:00 Split
Drain	1:15	1:15	1:15	1:15	1:15	1:15	1:15
Bleach	4:00 Hot	4:00 Split					4:00 Hot
Rinse			2:00 Cold	2:00 Cold	2:00 Split	2:00 Cold	
Drain	1:15	1:15	1:15	1:15	1:15	1:15	1:15
Extract			0:45	0:45	0:45	0:45	
Rinse	2:00 Split	2:00 Cold	2:00 Cold		2:00 Cold		2:00 Split
Drain	1:15	1:15	1:15		1:15		1:15
Extract	0:45	0:45					0:45
Softener	3:45 Cold	3:45 Cold	3:45 Cold	3:45 Cold	3:45 Cold	3:45 Cold	3:45 Cold
Drain	1:15	1:15	1:15	1:15	1:15	1:15	1:15
Extract	6:00	6:00	6:00	5:00	6:00	5:00	6:00
Total (in- cludes costs)	29:00	29:00	26:00	21:45	26:00	20:45	36:15
Displayed Time	29	29	26	21	26	20	36

Table 6. GreenTurn™ Wash Cycles (available in WUMCR1A/200013 and later, and WUC4E1A/20010 and later)

	Hot	Warm	Cold	Delicate	Perma- nent Press	Quick Wash	Heavy Soil
Flush							2:00
Drain							1:15
Detergent	4:00 Hot	4:00 Split	4:00 Cold	3:00 Split	4:00 Split	2:00 Split	5:00 Split
Drain	1:15	1:15	1:15	1:15	1:15	1:15	1:15
Bleach	3:00 Hot	3:00 Split					3:00 Hot
Rinse			2:00 Cold	2:00 Cold	2:00 Split	2:00 Cold	
Drain	1:15	1:15	1:15	1:15	1:15	1:15	1:15
Extract			0:45	0:45	0:45	0:45	
Extract	0:45	0:45					0:45

Table 6 GreenTurn™ Wash Cycles (available in WUMCR1A/200013 and later, and WUC4E1A/20010 and later) (cont'd.)

	Hot	Warm	Cold	Delicate	Perma- nent Press	Quick Wash	Heavy Soil
Softener	3:00 Cold	3:00 Cold	3:00 Cold	3:00 Cold	3:00 Cold	2:00 Cold	3:00 Cold
Drain	1:15	1:15	1:15	1:15	1:15	1:15	1:15
Extract	6:00	6:00	6:00	5:00	6:00	5:00	6:00
Total (in- cludes costs)	23:00	23:00	21:00	20:00	21:00	18:00	28:30
Displayed Time	23	23	21	20	21	18	29



NOTE: Drain and coast times listed in [Table 7: Standard Coast and Delay Times \(in seconds\), page 29](#) are subject to change without notice. Coast time occurs after each extract step.

Table 7. Standard Coast and Delay Times (in seconds)


Software Version and Date Code	Power-up Delay	Door Lock Delay	Intermediate Extract Coast	Final Extract Coast
WUMCR1A/21000 and later	100	60	25	100

4 Testing and Troubleshooting

4.1 Error Codes


BNCCUT01.C01 0000214463 A.2 A.10 A.6 1/2/20 12:09 PM Released

If the machine control detects an error, the **Minutes Remaining** window flashes an error code corresponding to the condition, and the **Machine Status** window may flash **E**, **H**, or a number to notify the customer that an error occurred, or **U** to signal the customer to unload the machine. [Figure 10](#) illustrates the two display windows important in troubleshooting error codes. The displays in [Section 4.1.2 : Explanations of Error Codes, page 31](#) show only the contents of the **Minutes Remaining** window.



TIP: All error codes result from micro-controller inputs being present or absent under certain conditions. Refer to [Section 4.2 : Controller Inputs and Outputs, page 36](#) and the appropriate schematics and service manuals for this machine when diagnosing errors.

Figure 10. Error Code Display

Example Error		Legend
		A . . . Minutes Remaining window
		B . . . Machine Status window

4.1.1 How to Clear Error Conditions

BNCCUT01.C02 0000214519 A.2 A.10 A.4 1/2/20 12:09 PM Released

Some error conditions, such as **E4 (Too Long to Fill)** clear automatically when the conditions which caused the error are rectified. These errors require no intervention to return the machine to normal operation.

Other errors require that the attendant clear the error before the machine can resume normal operation. To clear these errors, the authorized personnel must turn the **Attendant** keyswitch from the normal (vertical) position shown in [Figure 11](#) to the **Attendant** (horizontal) position shown in [Figure 12](#) , then back to the normal position. **The attendant should never leave the key in the switch or any place accessible to customers.**

Figure 11. Normal Position of Attendant Switch**Figure 12. Attendant Position of Attendant Switch****Table 8. Quick Reference for Error Codes**

Error Code	Error Name	Attendant Required?
E0	Door not closed error	No
E1	Door latch lock error	Yes
E2	Coin acceptor error	Yes
E3	Level switch error	Yes
E4	Too long to fill	No
E5	Too long to drain	Yes
E6	Inverter fault	Yes
E7 0	Attendant key input error	No
E7 3	Quarter count input error	No
E7 5	Dollar count input error	No
E7 6	Level input error	No
E7 7	Vibration switch error	No
E7 8	Select button input error	No
E7 9	Start button input error	No
E9 H	Door latch handle error	No

4.1.2 Explanations of Error Codes

BNCCUT01.R01 0000214557 A.2 A.10 A.7 1/2/20 12:09 PM Released

Display or Action	Explanation
E0	Door Not Closed Error: The door closed input was lost after the controller commanded the door latch locked. The controller terminates the formula. The user can open the door after 25 seconds if the error occurred during a wash or drain step, or after 100 seconds if the error occurred during an extract step.
E1	<p>Door Latch Lock Error: The door latch lock safety circuit is not responding properly. This error usually indicates that three conditions exist simultaneously:</p> <ul style="list-style-type: none"> • The door is closed. • The controller enabled the specific output which locks the door latch to prevent opening the door.

Display or Action**Explanation**

- After 5 seconds, the controller sees the input which indicates that the door latch is **not** locked.

Rarely, the error can occur when the machine is idle or in the first 60 seconds of running a wash formula (while the door is unlocked), and the input that says “door unlocked” is not present.

This error condition can occur any time the machine has power after the power-up delay expires. The attendant must clear this error (see [Section 4.1.1 : How to Clear Error Conditions, page 30](#)), then the formula is terminated.



NOTE: The door latch lock is normally activated 60 seconds after the customer or attendant starts a wash cycle. The timer resets to 60 seconds each time the door is opened and subsequently closed. The door latch remains locked for 100 seconds after the wash cycle terminates normally, to allow the basket to coast to a complete stop.

E2

Coin Acceptor Error: The coin switch is not responding properly. Specifically, the controller expects the coin acceptor device to represent each coin with an input pulse of less than 200ms, and for each input pulse to be separated from the previous pulse by at least 200ms. This error requires the attention of the attendant



NOTE: For machines equipped with a dual-coin acceptor for both quarters and dollar coins, the pulse duration and separation must be maintained without regard to which slot is used. For example, a coin dropped in the dollar slot must follow at least 200ms behind a coin dropped in the quarter slot, or vice versa.

If the pulse duration differs from the duration specified in the controller software or if the pulses are separated by less than 200ms, the attendant must clear the error (See [Section 4.1.1 : How to Clear Error Conditions, page 30](#)).



This error, if it occurs immediately after the power-up delay expires, may indicate that incompatible software is installed. MCR_ & MCT_ models require machine software with part number WUMCR1A/_. Software intended for Milnor C_E models (part number WUC4E1A/_) will not operate an MCR_ & MCT_ machine, nor vice versa. If the machine has the wrong software installed, the controller will not allow the user to enter **manual** mode or start a formula.

E3

Level Switch Error: The level switch input is made when the controller expects it to be absent before the wash cycle begins. The attendant must clear this error (see [Section 4.1.1 : How to Clear Error Conditions, page 30](#)), which is usually caused by a malfunctioning level switch.

E4

Too Long to Fill: The level switch indicates that the machine did not achieve level within the 10 minutes allowed after the beginning of a bath


Display or Action	Explanation
E5	<p data-bbox="542 285 1463 495">step. When this error occurs, the timer stops until level is achieved, then restarts. The error clears without intervention when level is achieved. If level is not achieved after 20 minutes, the controller terminates the wash cycle and advances to the door unlock delay (25 seconds). The delay allows time for the basket to stop and for any water to drain before the door can be opened</p> <div data-bbox="542 527 618 611">  </div> <p data-bbox="638 527 1463 621">TIP: To prevent recurrence of this error, verify that water inlet pressure is within the range specified in the service manual and that the debris screens at the water inlet valves are clean.</p> <p data-bbox="542 632 1463 978">Too Long to Drain: When the machine starts draining, a 40 second timer is set. During this drain time the decimal blinks to indicate that the cycle timer is running. If level is still made after the 40 seconds expires, the machine goes into drain halt mode. In drain halt mode the basket runs at drain speed with the drain open, but the decimal stops blinking and the timer stops counting. The machine continues in this state for 1800 seconds or until level is lost. If level is lost the machine continues to the next step with no error. If the 1800-second timer expires, the controller terminates the cycle and signals an error. The attendant may clear this error (see Section 4.1.1 : How to Clear Error Conditions, page 30).</p>
E6	<p data-bbox="542 989 1463 1167">Inverter Fault: The inverter signalled an internal fault while the machine was running. Any time the basket is being powered by the motor, the controller monitors an input from the inverter. This error occurs if the controller does not see the input at all times when the motor should be turning the basket.</p> <p data-bbox="542 1178 1463 1377">The controller terminates the wash cycle and immediately turns off all machine outputs except Inverter enable and Door lock (see Table 10: Output Signals, page 38). The attendant must clear this error as described in Section 4.1.1 : How to Clear Error Conditions, page 30 . After a safety delay of 100 seconds, the door latch unlocks, eliminating all power to the inverter.</p> <div data-bbox="542 1409 618 1493">  </div> <p data-bbox="638 1409 1463 1545">TIP: The inverter retains a list of the latest inverter fault codes encountered even when power is not present. Refer to the documentation for the inverter installed in your machine to view these fault codes and diagnose the underlying conditions.</p>


When power is applied to the machine, the micro-controller checks for inputs which should not be present. When one is found, the **Minutes Remaining** window flashes **E7** to indicate an input error. The **Machine Status** window flashes the number of the offending input. The input error clears automatically when the input is no longer present, and the micro-controller displays the normal idle prompt.

Display or Action	Explanation
E7 0	Attendant switch Input Error: The keyswitch was in the Attendant (horizontal) position when power was applied to the machine, or a wire in the switch circuit is grounded. When operating the machine in Attendant mode, always remove the key when the wash cycle begins.
E7 3	Quarter Count Input Error: input was present at power-up, possibly indicating a malfunction with the coin acceptor.
E7 5	Dollar Count Input Error: see previous error
E7 6	Level Input Error: input was present, indicating that the machine still contains water.
E7 7	Vibration Switch Input Error: The vibration switch is checked at power-up and during extract. This error at power-up prevents machine operation and usually occurs when the service technician responsible for installing the machine doesn't untie the vibration switch actuator. The machine recycles if this error occurs during an extract step.
E7 8	Select button Input Error: input was present, indicating that the button may be malfunctioning.
E7 9	Start button Input Error: input was present, indicating that the button may be malfunctioning.

Vibration Error: If the vibration switch trips, it makes an input to the controller. If this input appears during an intermediate extract, the controller ends the current intermediate extract and begins the next step. If the error occurs during the final extract in a formula, the **Machine Status** window flashes **4** (extract) for 100 seconds plus the time required to perform an extract recycle. The controller ends the formula after three recycle attempts.

See [Section 3.3.4.1 : Recycle Sequence to Reduce Vibration During Extract, page 27](#) for a more detailed description of the extract recycle sequence.

E9 H	<p>Door Latch Handle Error: The controller detected that the door latch was not fully in the closed position when the user started the formula. In normal operation, the Door not Locked input is removed from the controller when the door locks (60 seconds after the formula begins). When the user presses  to start a formula, the controller uses the procedure shown in Section 4.1.3 : Test to Prove Door is Properly Latched (Part A), page 35 to verify that the door latch is completely closed and functioning before starting the formula.</p>
------	--

The error prompts the user to close the door latch, then press . The machine starts the formula if the controller detects that the door is properly closed, or displays the error again if the test fails.



NOTE: This error occurs on machines with software WUM-CR1A/20008 and later.

4.1.3 Test to Prove Door is Properly Latched (Part A)

BNCCUT01.T01 0000214331 A.2 A.10 A.3 1/2/20 12:09 PM Released

1. User loads machine and closes door
2. User turns knob to latch door closed
3. User presses **Start**
4. Controller locks door

The machine controller conducts this test before allowing any formula to start. The controller attempts to lock the door and monitors the **Door Unlocked** input for a maximum of five seconds.

5. Controller sees **Door Unlocked** input?
 - YES: Continue to [1.: step 1, Part B, page 35](#)
 - NO: Skip to [1.: step 1, Part C, page 35](#)

4.1.4 Part B

BNCCUT01.T02 0000214608 A.2 A.10 A.6 1/2/20 12:09 PM Released

1. Test failed

The test fails if the controller sees the **Door Unlocked** input when the door is locked, or does not see the input when the door is unlocked.

2. Controller displays error

Error code 9 indicates that the door was not properly latched when the user pressed **Start**. The **Machine Status** window prompts the user to turn the handle clockwise to completely latch the door.

3. Return to [2.: step 2, Part A, page 35](#)

4.1.5 Part C

BNCCUT01.T03 0000214607 A.2 A.10 A.5 1/2/20 12:09 PM Released

1. Controller unlocks door

The controller commands the door to unlock and monitors the **Door Unlocked** input for a maximum of five seconds.

2. **Door Unlocked** input present at controller?
 - YES: Continue to [1.: step 1, Part D, page 35](#)
 - NO: Return to [1.: step 1, Part B, page 35](#)

4.1.6 Part D

BNCCUT01.T04 0000214606 A.2 A.10 A.4 1/2/20 12:09 PM Released

1. Test passed
2. Controller starts formula

Only when the controller is satisfied that the door is properly closed and latched will it allow a formula to start. The door remains unlocked for the first 60 seconds of the formula, then locks until the final coast time expires.

BNCCUT02 / 2018504

BNCCUT02 0000214585 A.7 1/2/20 12:09 PM Released

4.2 Controller Inputs and Outputs

BNCCUT02.C01 0000214584 A.2 A.7 A.4 1/2/20 12:09 PM Released

Microprocessor **inputs** are received at the processor board from other machine components. Inputs that are **present** at the processor board usually indicate that a device is actuated. For example, **Level made** input originates from the water level switch and tells the processor board the machine has filled with water to the desired level. With the **Attendant** switch enabled, the status of each input can be determined by viewing the display as described in [Section 4.2.2 : Viewing Inputs, page 36](#).

Outputs are signals from the micro-controller which cause machine components to operate (e.g., water valves open, drain valve closes). With the **Attendant** switch enabled, the front panel controls allow a qualified technician to operate certain functions individually and to simulate machine operation for testing. These procedures are detailed in [Section 4.2.3 : Actuating Outputs and Functional Tests, page 38](#).

4.2.1 Resuming Normal Operation

BNCCUT02.C02 0000214583 A.2 A.7 A.3 1/2/20 12:09 PM Released

To resume normal operation from the **attended run** mode or when displaying the software date code, the display test, or the input status test, turn the **Attendant** switch to the normal (vertical) position. The normal run display appears immediately. The wash cycle that was selected before the **Attendant** switch was turned is restored to the display.


From the **output and functional test** mode, turn the **Attendant** switch to the normal (vertical) position. If no outputs are enabled and the safety delay timer is not counting when the **Attendant** switch is returned to the normal mode, the normal run display appears immediately. The wash cycle that was selected before the **Attendant** switch was turned is restored to the display.

If the **Attendant** switch is turned to the normal (vertical) position while the basket is turning at drain or extract speed or if the safety delay timer is counting down, the status of the **Attendant** switch is checked after the safety delay timer expires.

4.2.2 Viewing Inputs

BNCCUT02.C03 0000214582 A.2 A.7 A.3 1/2/20 12:09 PM Released

Use the procedure detailed below to view the status of all inputs to the micro-controller. Each input is mapped to a specific segment of the **Minutes Remaining** display, as shown in [Figure 13](#). [Table 9: Input Signals for MCR_ & MCT_ Coin Models, page 37](#) contains the names and functions of all inputs, as well as the connector and pin on the processor board that conveys the signal.

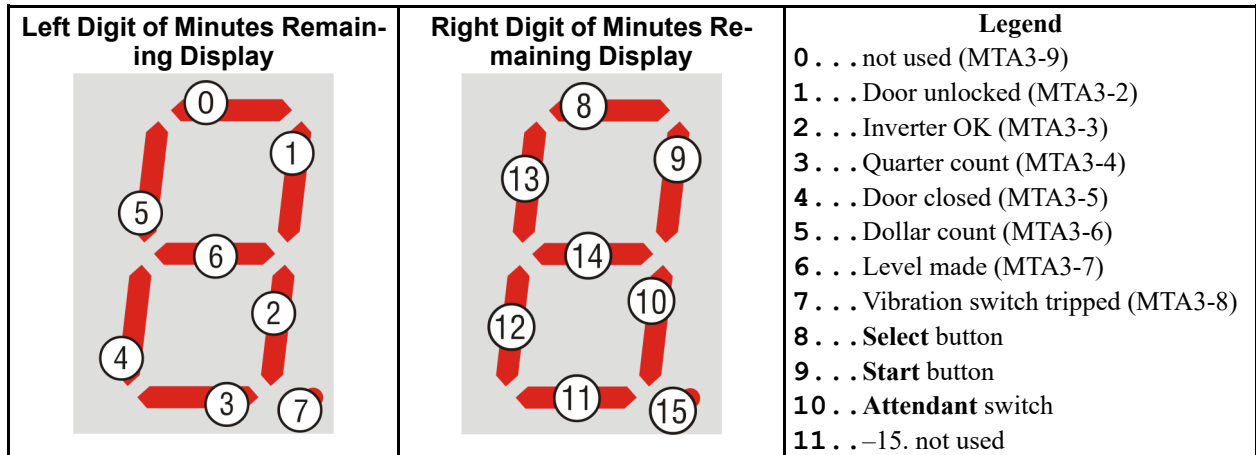Figure 13. Viewing Inputs in Attendant Mode**Table 9. Input Signals for MCR_ & MCT_ Coin Models**

Signal Name	Connector	Pin	Function
not used	MTA3	9	not used
Door unlocked		2	door latch is unlocked
Inverter OK		3	inverter reports normal operation
Quarter count		4	quarter coin drop activated
Door closed		5	door is closed
Dollar count		6	dollar coin drop activated
Level made		7	level is achieved
Vibration		8	vibration switch tripped
Attendant switch	MTA2	serial	control panel switch closed
Select button		serial	Select button pressed
Start button		serial	Start button pressed

The status of micro-controller inputs can only be viewed if the machine is idle (not running a formula) and the door is closed.

Display or Action**Explanation**

With power present at the machine, insert the key in the **Attendant** switch and turn the switch from the vertical to the horizontal position.



NOTE: The key cannot be removed from the **Attendant** switch while the switch is in the **Attendant** (horizontal) position. Turn the switch to the **normal** (vertical) position to release the key.



starts the formula that was selected before the **Attendant** switch was turned to the horizontal position.



displays the date code of the software in the machine. This key-stroke also advances the controller beyond the point at which a formula can be started without inserting coins. If the intent was to start a formula without requiring coins, turn the **Attendant** switch to the vertical position and return it to the horizontal position, then immediately press the **Start** button.



The software date code for this example machine is 20001.



from the software date code display, displays the machine inputs status. For each input made, one segment of the **Minutes Remaining** window illuminates. Refer to [Figure 13: Viewing Inputs in Attendant Mode](#), page 37 for which segment corresponds to each input.



TIP: Because the **Select** button advances the control from displaying inputs to testing outputs, it is not practical to view the status of the **Select** button input on the display. The **Select** button can be assumed to be working properly if the control advanced from displaying the software date code to the display inputs test.

4.2.3 Actuating Outputs and Functional Tests

BNCCUT02.C04 0000214615 A.2 A.7 A.4 1/2/20 12:09 PM Released

Table 10. Output Signals


Output Name	Connector	Pins	Function	Test
Door lock	MTA5	9, 10	door locks	0
Drain speed		7, 8	inverter drives motor at drain speed; inverter enabled output also engaged	1
Drain closed		3, 4	drain closes	2
Hot water		1, 2	hot water valve opens	3
Cold water	MTA4	9, 10	cold water valve opens	4
Clockwise wash		7, 8	inverter drives motor clockwise at wash speed; inverter enabled output also engaged	5
Counter-clockwise wash		3, 4	inverter drives motor counter-clockwise at wash speed; inverter enabled output also engaged	6
Extract speed		1, 2	inverter drives motor at extract speed; inverter enabled output also engaged	7
Inverter enable	MTA6	1, 2	inverter is enabled for operation	8
Chemical 1		3, 4	30-second signal for chemical 1 (detergent)	9
Chemical 2		7, 8	30-second signal for chemical 2 (bleach)	10
Chemical 3		9, 10	30-second signal for chemical 3 (finish)	11

Display or Action**Explanation**

from the input status display begins the output test.



 TIP: In the output test, the **coin count** window flashes 00 unless the controller is counting down a safety delay. During the delay period of up to 100 seconds, the **coin count** window is dark and the decimal point in the **Machine Status** window flashes to indicate that the controller is working. When the safety delay time expires, the **Coin Count** window again flashes 00.



normal display immediately upon entering the output test. The **Minutes Remaining** window displays the number of the selected output or functional test, and the **Machine Status** window displays the status of the selected item.

0 in the **Machine Status** window indicates that the selected output or functional test is in the inactive state (off).

1 in the **Machine Status** window indicates that the selected output or functional test is active (on).



turns off the selected output or functional test if it is on, then advances to the next output.



toggles the on/off status of the selected output or functional test.

4.2.4 Functional Tests

BNCCUT02.C05 0000214611 A.2 A.7 A.3 1/2/20 12:09 PM Released

In the output testing mode, the controller provides two functional tests. These tests are addressed in the same manner as the output tests, but also check the status of several inputs by simulating certain elements of a wash cycle. Functional test 12 (see [Section 4.2.4.1 : Functional Test 12, page 39](#)) verifies the fill and bath operations, while functional test 13 (see [Section 4.2.4.2 : Functional Test 13, page 40](#)) checks the function of the inverter through all basket speeds.

4.2.4.1 Functional Test 12

BNCCUT02.C06 0000214610 A.2 A.7 A.4 1/2/20 12:09 PM Released

This test is useful for checking the water valves, drain valves, door lock, and wash speeds. The test executes as described below:

Display or Action



Explanation

from output test 11 (chemical 3), turns off output 11 and advances to functional test 12

initiates the test.

1. Door locks, drain closes, inverter enabled, hot and cold water valves open.
2. After four seconds of dwell time, the basket turns clockwise for 15 seconds.
3. The water valves close when level is achieved.
4. The basket dwells for four seconds, then turns counter-clockwise for 15 seconds. This cycle continues indefinitely.

Display or Action



or



Explanation

terminates the test. The drain opens, the inverter is disabled, the water valves close, and the door unlocks.

terminates the test and advances the control to functional test 13.

4.2.4.2 Functional Test 13

BNCCUT02.C07 0000214689 A.2 A.7 A.4 1/2/20 12:09 PM Released

This test checks the door lock, inverter speeds, and vibration switch. The test executes as described below:

Display or Action

 


Explanation

from functional test 12, turns off test 12 and advances to functional test 13.

initiates the test.

1. The door locks, the inverter is enabled, and the basket turns clockwise at wash speed for 25 seconds.
2. The basket accelerates to drain speed for 25 seconds.
3. The basket accelerates to extract speed and maintains this speed indefinitely.
4. If the vibration switch is momentarily tripped, the inverter is disabled and the safety delay timer begins counting down.

Display or Action**Explanation**

display in output test 13 while the safety delay timer is counting down, after the vibration switch is manually tripped or the test is otherwise terminated. The decimal point in the **Machine Status** window flashes during the safety delay.



 
terminates the test. The inverter is disabled and the basket coasts with the door latch locked for the duration of the safety delay timer (100 seconds).



display after safety delay timer expires if the **Start** button is pressed to terminate the test.



terminates the test. The inverter is disabled and the basket coasts with the door latch locked for the duration of the safety delay timer (100 seconds).



display after safety delay timer expires if the test is terminated by tripping the vibration switch or pressing the **Select** button.