




Manual Number: MCCXGB01
Edition (ECN): 2020185

Controller Reference

E-P Express® Gear Guardian® Controls

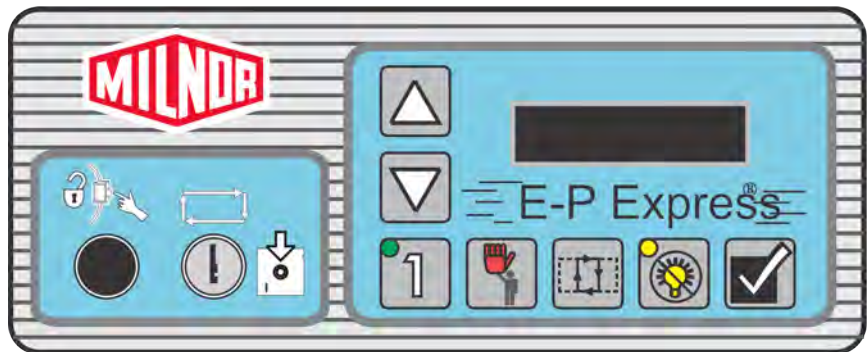

Gear Guardian®

Contents

Preface	1
1 About this Manual	1
1.1 Scope	1
1.2 The Normal Display at Start-up	1
1.3 If this Manual Does Not Have the Necessary Data	1
1.4 Trademarks	1
1 Commissioning.....	3
1.1 Important Data About this Machine	3
1.1.1 Make Sure That All Laundry Personnel are Safe	3
1.1.2 Change the Data	3
1.1.2.1 When to Change Data.....	3
1.1.2.2 Steps that are Necessary When You Change Data	4
1.1.2.3 Data Accessibility.....	4
1.1.2.4 Replace Incorrect Data	4
1.2 Determining Load Size	4
1.3 Vital Information About the Forces Imparted to Supporting Structures by Launder- ing Machines	5
1.3.1 Disclaimer of Responsibility	5
1.3.2 Major Design Considerations	5
1.3.3 Primary Information Sources	6
1.4 Prevent Damage from Chemical Supplies and Chemical Systems	7
1.4.1 How Chemical Supplies Can Cause Damage.....	7
• Dangerous Chemical Supplies and Wash Formulas.....	7
• Incorrect Configuration or Connection of Equipment	7
1.4.2 Equipment and Procedures That Can Prevent Damage.....	9
• Use the chemical manifold supplied.	9
• Close the line.....	10
• Do not let a vacuum occur.....	10
• Flush the chemical tube with water.....	10
• Put the chemical tube fully below the inlet.	10
• Prevent leaks.	10
1.5 Connecting Chemical Systems	10
1.5.1 Maximizing Chemical Injection Precision	11
1.5.2 Available Chemical Injection Methods	12
1.5.2.1 Chemical Injection Output Signals.....	12
1.5.2.2 Optional Five-Compartment Flushing Chemical Injector	12
1.5.2.3 Liquid Chemical Tube Connectors	12
1.5.3 Considerations for Pumped Chemical Systems	12
1.5.4 Connecting Devices to Receive Injection Signals	13
1.5.5 Connecting Chemicals to 30-inch T5_ Models	13
2 Programming	14
2.1 Controls on E-P Express® Washer-extractors	14
2.1.1 Control Functions During Normal Operation.....	14
2.1.2 Control Functions During Manual Operation.....	16
2.1.3 Control Functions During Programming.....	16
2.2 Selecting an Industry Formula Set	17

2.3 Programming the E-P Express® Gear Guardian® Controller	19
2.3.1 How to Avoid Data Loss	20
2.3.2 How to Return to Run Mode (Option 0)	20
2.3.3 How to Add or Change a Formula (Option 1).....	21
2.3.3.1 What are Formulas, Steps, and Decisions?	21
2.3.3.2 About the Help Screens	21
2.3.3.3 Moving Forward and Backward through Steps and Decisions	21
2.3.3.3.1 Actions when the Cursor is at the Step Number.....	22
2.3.3.3.2 Actions when the Cursor is at a Decision within a Step.....	22
2.3.3.4 Create a New Formula.....	23
2.3.3.5 Delete an Existing Formula	23
2.3.3.6 Change an Existing Formula	23
2.3.3.6.1 How to Insert or Delete a Step in an Existing Formula.....	23
2.3.3.6.1.1 Inserting a Step.....	24
2.3.3.6.1.2 Deleting a Step	24
2.3.3.6.2 The Step Decisions	24
2.3.3.6.3 How to Select the Bath Level.....	25
2.3.3.6.4 Injecting Chemicals.....	26
2.3.3.6.5 Concluding Decisions.....	27
2.3.3.6.6 How to Save or Discard Changes	31
2.3.4 Configure the Control (Option 2).....	31
2.3.4.1 Moving Forward and Backward in Configure	32
2.3.4.2 The Configure Decisions	32
2.3.5 Restoring the Standard Formulas	33
2.3.5.1 Chart 1: Restore Standard Formulas (Part A).....	34
2.3.5.2 Part B	35
2.3.5.3 Part C	35
2.3.5.4 Restoring the Standard Formulas on Models Employing the Milnor® E-P Plus® and E-P Express® Controller	35
2.3.6 Data Transfer (Option 4)	36
2.3.6.1 Establishing the Required Connections.....	38
2.3.6.2 Saving Data from the Machine to the Storage Device or a Second Machine	39
2.3.6.3 Restoring Saved Data to the Machine from the Storage Device or An- other Machine.....	41
2.4 E-P Express® Gear Guardian® Formulas	43
2.4.1 How to Use the Formula Tables	43
2.4.1.1 T = Type of Step.....	44
2.4.1.2 MMQ = Step Duration	44
2.4.1.3 H = Hot Water Valve	44
2.4.1.4 C = Cold Water Valve.....	44
2.4.1.5 L = Bath Level.....	44
2.4.1.6 C = Chemicals	45
2.4.1.7 W = When to Inject Chemical	45
2.4.1.8 SS = Chemical Injection Duration.....	45
2.4.1.9 * = Signal with Chemical Injection	45
2.4.1.10 D = Drain Action	45
2.4.1.11 E = How to End Formula.....	46

2.4.2 Formula Programming Worksheet	47
2.4.3 Gear Guardian® Formula Charts	48
3 Operating	52
3.1 Running a Formula	52
3.1.1 Applying Power.....	52
3.1.2 Selecting and Starting the Formula	52
3.1.2.1 Load Machine and Close Door.....	52
3.1.2.2 Selecting a Formula.....	53
3.1.3 Unloading the Machine	53
3.1.4 The Display During Automatic Operation	53
3.1.5 How to Shorten, Terminate, or Suspend a Running Formula.....	54
3.1.6 How to Restart after Power Loss.....	54
3.1.7 How the Flush Valve Works	55
3.2 How to Use and Erase the Formula Counter	55
4 Troubleshooting.....	57
4.1 Error Messages	57
4.1.1 Error Messages at Power Up	57
4.1.2 Error Messages during Normal Operation	58
4.2 The E-P Express® Manual Menu	59
4.2.1 The Manual Menu	59
4.2.1.1 Components	59
4.2.1.2 How to Access the Manual Menu	60
4.2.1.3 How to Return to the Run Mode from the Manual Menu	60
4.2.2 Determining the Software Version	61
4.2.3 Viewing Microprocessor Inputs	61
4.2.4 Actuating Microprocessor Outputs.....	62
4.2.5 Testing and Verifying the DIP Switch Settings	64
4.2.6 Viewing Inputs and Outputs During Operation.....	67
4.2.7 Viewing Water Level and Temperature Data During Operation	67
5 Supplemental Information.....	68
5.1 The E-P Plus® and E-P Express® Hardware	68
5.1.1 Keyswitches.....	68
5.1.1.1 Run/Program Keyswitch	68
5.1.1.2 Automatic/Test Keyswitch (E-P Plus® Models Only).....	68
5.1.2 Display.....	68
5.1.3 Power Supply.....	68
5.1.4 CPU Processor Board	69
5.1.5 Outputs	69
5.1.6 Option Outputs (E-P Plus® Models Only).....	70
5.1.7 Temperature Probe (E-P Plus® Models Only).....	70
5.1.8 Pressure Sensor (E-P Plus® Models Only).....	70
5.2 Serial Memory Storage Device Applications	70
5.3 Construction of External Serial Link Cables	72
5.3.1 Pin Identification	73
5.3.2 How to Wire the Cables.....	74
5.3.2.1 Cable Specifications	74
5.3.2.2 Connecting Two or More Machines for Machine-to-machine Transfer.....	74

5.3.2.3 Connecting a Machine to a Serial Memory Storage Device	75
5.4 Printer Requirements and Settings	76
5.4.1 Cable Requirements.....	76
5.4.2 Configuring the Citizen GSX-190 Printer.....	77
5.4.3 Configuring the Epson LX300 Printer	77
5.4.4 Previous Printer Models	78

Figures

Figure 1	How Rotating Forces Act On the Foundation	6
Figure 2	Incorrect Configurations That Let the Chemical Supply Go In the Machine by a Siphon.....	8
Figure 3	Incorrect Configurations That Let the Chemical Supply Go In the Machine by Gravity.....	9
Figure 4	Examples of Manifolds for Chemical Tubes. Your equipment can look different.....	9
Figure 5	A Configuration that Prevents Flow in the Machine When the Pump is Off (if the chemical tube and tank have no pressure)	10
Figure 6	Terminal Strip TBS in T-style Machine.....	13
Figure 7	E-P Express® Control Panel.....	14
Figure 8	Location of DIP Switches	18
Figure 9	Controls Identification on Serial Memory Storage Device	38
Figure 10	Worksheet	47
Figure 11	Processor Board	64
Figure 12	Serial Memory Storage Device.....	71
Figure 13	Rear View of Circuit Board	71
Figure 14	9-Pin DIN Connector Pin Identification (from wire entry side of connectors).....	73
Figure 15	Wiring Diagram for Cable to Connect Two or More Machines	75
Figure 16	Wiring Diagram for Cable to Connect a Machine to a Serial Memory Storage Device.....	76

Tables

Table 1	Trademarks	2
Table 2	How to Read and Change Data	4
Table 3	DIP Switch Settings for Industry Configurations	19
Table 4	Codes for Inject Times of 100 Seconds and Longer	26
Table 5	Summary of Drain Type Choices	28
Table 6	Controllers Capable of Transferring Memory	36
Table 7	Sample Formula	44
Table 8	Codes for Inject Times of 100 Seconds and Longer	45
Table 9	Formula 01 - Light Soil Turnouts	48
Table 10	Formula 02 - Heavy Soil Turnouts	48
Table 11	Formula 03 - Light Soil Moisture Barriers	48
Table 12	Formula 04 - Heavy Soil Moisture Barriers	49
Table 13	Formula 05 - Oil-contaminated Gear	49
Table 14	Formula 06 - Brush Gear	49

Table 15	Formula 07 - Hoods and Suspenders	49
Table 16	Formula 08 - Truck Towels	50
Table 17	Formula 09 - Stationwear	50
Table 18	Formula 10 - Sheets and Pillowcases	50
Table 19	E-P Express® Inputs	62
Table 20	E-P Express® Outputs	63
Table 21	Interpretation of Test DIP Switch Display	65
Table 22	DIP Switch Positions for E-P Plus® and E-P Express® Machines (External transmit button required)	72
Table 23	External Serial Link Pin Assignments	73
Table 24	Milnor Printer Cables	76
Table 25	Required Settings for Citizen GSX-190 Printer	77
Table 26	Required Settings for Epson LX300 Printer	77

This page intentionally blank

Preface

BNCXUD02 / 2018452

BNCXUD02 0000206240 B.3 1/2/20 1:35 PM Released

1 About this Manual

1.1 Scope

BNCXUD02.C02 0000206238 A.4 B.3 1/2/20 1:35 PM Released

This manual provides commissioning, programming, operating, and troubleshooting instructions for Milnor® washer-extractors using the E-P Express® or E-P Express® Gear Guardian® micro-processor control system. See the installation manual for information on machine installation procedures and mechanical requirements. See the service manual for preventive maintenance, service procedures, and mechanical parts identification. See the schematic manual for electrical parts identification and electrical troubleshooting instructions.

1.2 The Normal Display at Start-up

BNCXUD02.C03 0000206237 A.4 B.3 1/2/20 1:35 PM Released

The start-up display sequence for E-P Express® or E-P Express® Gear Guardian® machines is described in document [Section 3.1 : Running a Formula, page 52](#)

1.3 If this Manual Does Not Have the Necessary Data

BNUUUU03.C01 0000188801 A.4 B.3 B.4 1/2/20 2:14 PM Released

This manual has the best data that was available when your machine was made. If you cannot find the necessary data:

- **Are you looking for data about a component not made by Milnor® but used on your machine—for example, a motor or a brake caliper?** We usually do not put the instructions of component manufacturers in Milnor® manuals. You can find some of these instructions in the part of the Milnor® website that gives maintenance data (<http://milnortechnicalsupport.force.com/pkbmilnor/>). You can also find instructions for many components on the manufacturers' websites.
- **Are you looking for data about a Milnor® component on your machine that this manual does not give?** If we get better data or more data after the manual is available, we will add it to a newer version of the manual. Speak with the Milnor® Customer Support group. They can give you newer instructions if they are available or help you if not.

1.4 Trademarks

BNUUUU02.R01 0000158093 A.4 B.3 D.2 4/6/20 2:44 PM Released

These words are trademarks of Pellerin Milnor® Corporation and other entities:

Table 1. Trademarks

AutoSpot™	GreenFlex™	MilMetrix®	PulseFlow®
CBW®	GreenTurn™	MilTouch™	Ram Command™
Drynet™	Hydro-cushion™	MilTouch-EX™	RecircONE®
E-P Express®	Mentor®	MILRAIL™	RinSave®
E-P OneTouch®	Mildata®	Miltrac™	SmoothCoil™
E-P Plus®	Milnor®	PBW™	Staph Guard®
Gear Guardian®			

1 Commissioning

BNWCUD03 / 2018256

BNWCUD03 0000189806 A.6 1/2/20 2:19 PM Released

1.1 Important Data About this Machine

BNWCUD03.T01 0000189805 A.4 A.6 1/2/20 2:19 PM Released

Complete these two procedures before you use this machine:

1. Make sure that all laundry personnel are safe.
2. Change and make a check of the data contained in the memory of the machine (configuration, formulas, and formula accumulator data).

1.1.1 Make Sure That All Laundry Personnel are Safe

BNWCUD03.C01 0000189804 A.4 A.6 1/2/20 2:19 PM Released

Personnel who will use or do maintenance on this machine must read the safety manual first. Make all user manuals available to the correct personnel. Be sure that all personnel obey all precautions in the applicable manuals.

1.1.2 Change the Data

BNWCUD03.C02 0000189803 A.4 A.6 1/2/20 2:19 PM Released

1. Make sure that the controller configuration is correct for how you will use the machine.
2. Change the wash formulas if necessary for better results.
3. Make sure that you erased the formula count accumulator to make the formula count accurate.

1.1.2.1 When to Change Data

BNWCUD03.C03 0000189802 A.4 A.6 1/2/20 2:19 PM Released

Make a check of the data:

- when commissioning the machine
- when required by error message
- after replacing the microprocessor board
- after upgrading the software
- after adding or removing optional equipment

Make the necessary changes.

1.1.2.2 Steps that are Necessary When You Change Data

BNWCUD03.T02 0000189801 A.4 A.6 1/2/20 2:19 PM Released

1. Make a check of the machine configuration.
2. Write wash formulas.
3. Erase the formula accumulator data, if applicable. See the applicable sections in this manual for instructions.

1.1.2.3 Data Accessibility

BNWCUD03.C04 0000189816 A.4 A.6 B.3 1/2/20 2:19 PM Released

The key switch must be in the **Program** position to change configuration and formula data. The microprocessor controller changes the formula accumulator data while the machine operates. Thus, the key switch can not prevent changes to the accumulator data. You can use the data as given in [Table 2](#).

Table 2. How to Read and Change Data

Data Type	How to Change Data
Configuration Data	You can read and change data.
Formula Data	You can read, change, and erase data.
Accumulator Data	You can read and erase data.

1.1.2.4 Replace Incorrect Data

BNWCUD03.C05 0000189826 A.4 A.6 1/2/20 2:19 PM Released

If the microprocessor finds incorrect data, the display will show an error message, usually when the machine first gets power. The error can prevent machine operation. The troubleshooting instructions tell about each error and how to repair it. Obey these instructions to make sure that incorrect data is replaced with correct data. You can cause dangerous operation or damage to the machine if you do not obey these instructions.

BNWUJ001 / 2018153A

BNWUJ001 0000181431 A.3 1/2/20 2:19 PM Released

1.2 Determining Load Size

BNWUJ001.C01 0000181430 A.4 A.3 B.3 1/2/20 2:19 PM Released

You will not do damage to the machine with a large load if you follow these rules:

1. The goods are made of common cotton or synthetic materials.
2. The load can balance in the cylinder before the extract step.
3. The extract speed has not been increased above the designed maximum.
4. You do not program so many extract steps that you do damage to the motor.

For common goods, the size of the machine sets the quantity you can put in the machine.

These items determine the maximum load weight of soiled goods:

- the volume of the machine's cylinder, and
- the material and weight of the goods.

Do not try to load the machine to its maximum weight capacity with bulky fabrics.

Use the size of the machine, the type of the goods, the amount of soil, and the wash quality when you load the machine.

BNUUUI01 / 2019392

BNUUUI01 0000189337 C.3 1/2/20 2:14 PM Released

1.3 Vital Information About the Forces Imparted to Supporting Structures by Laundering Machines

BNUUUI01.C01 0000189336 A.4 C.3 A.5 1/2/20 2:14 PM Released

This document replaces Milnor® document BIWUUI02.

All laundering machines impart static and dynamic forces to the supporting structures (foundation and soil, floor, and building). Static forces include the machine weight plus the weight of the goods and water. Dynamic forces are those imparted by various machine movements as explained in [Section 1.3.2 : Major Design Considerations, page 5](#) . The dynamic forces imparted to supporting structures can cause vibration and noise outside of the laundry room if supporting structures are inadequate.

1.3.1 Disclaimer of Responsibility

BNUUUI01.C02 0000189359 A.4 C.3 B.3 1/2/20 2:14 PM Released

Pellerin Milnor Corporation accepts no responsibility for damage or loss as a result of:

- inadequate supporting structures
- interference with the use of the facility caused by machine operation

The facility owner/operator is solely responsible to ensure that:

- supporting structures are strong enough, with a reasonable safety factor, to safely support the operating machine or group of machines
- supporting structures are rigid enough to isolate vibrations and noise to the laundry room

If the owner/operator does not possess the necessary expertise to ensure that the facility can safely and functionally accommodate the equipment, it will be necessary to consult the appropriate expert(s), such as a structural engineer, soils engineer, and/or architect.

1.3.2 Major Design Considerations


BNUUUI01.C03 0000189358 A.4 C.3 A.5 1/2/20 2:14 PM Released

- Vibration and/or noise can be felt or heard outside of the laundry room as a result of the following, if supporting structures are not sufficiently rigid:
 - Extraction (the spinning cylinder) in washer-extractors and centrifugal extractors, imparts sinusoidal forces to supporting structures as shown in [Figure 1: How Rotating Forces Act On the Foundation, page 6](#) . In rigid washer-extractors, these forces are up to 30 times that of suspended washer-extractors of the same capacity.
 - Extraction forces can be magnified many times if the rotation frequency matches the resonant frequency of supporting structures. To avoid this, supporting structures must have a

natural resonant frequency many times greater than any possible rotation speed of the machine or combination of rotation speeds of all machines.

- Each time goods fall in the rotating cylinder of a washer, washer-extractor, centrifugal extractor, or dryer, this can impart a force to the supporting structures.
- The intermittent start and stop actions of large components inside the machine, particularly in a tilting washer-extractor, press-extractor, or centrifugal extractor, can impart intermittent forces to the supporting structures.
- The possibility of adverse consequences is significantly greater for upper floor installations than for installations at grade. Always consult a structural engineer for such an installation.
- The possibility of adverse consequences is significantly greater for installations at grade if subsidence causes a void between the foundation and the soil or if the soil itself does not provide adequate strength and rigidity. Some possible remedies are the addition of pilings or a deeper foundation, installed as to be monolithic with the existing foundation.
- Machine forces can cause damage to the machine or the floor without the correct anchorage.
- Applicable building codes, even when met, do not guarantee sufficient structural support and isolation of machine forces to the laundry room.

Figure 1. How Rotating Forces Act On the Foundation

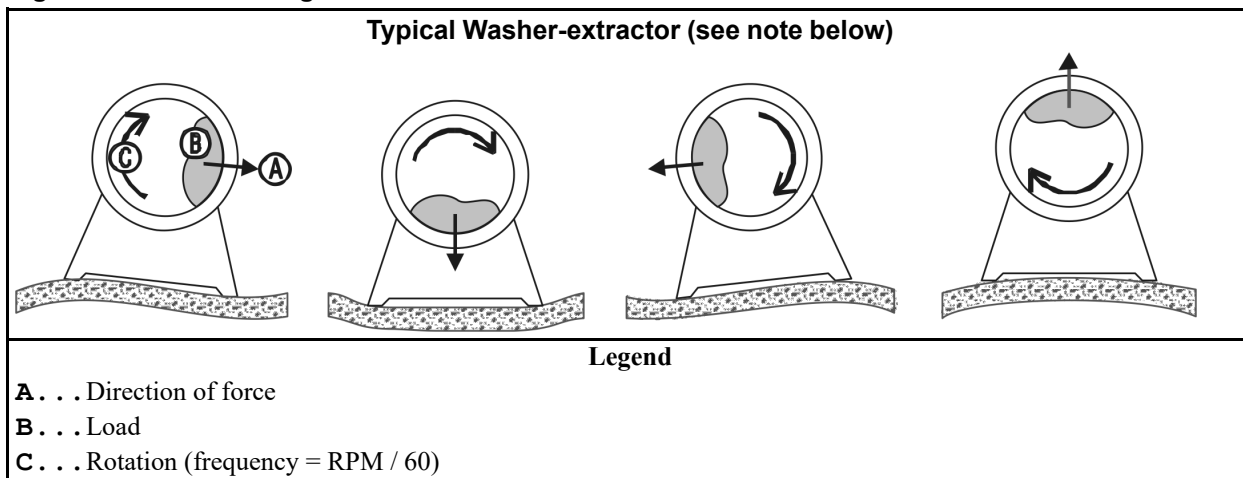

NOTE: This figure applies to both rigid and suspended washer-extractors and to both at-grade and upper floor installations.

1.3.3 Primary Information Sources

BNUUUUI01.C04 0000189357 A.4 C.3 A.5 1/2/20 2:14 PM Released

Milnor® provides, or can provide the following information of use to engineers and architects, for the given machine model:

- The machine dimensional drawing, found in the installation manual, specifies the machine's required anchorage.
- The Milnor® Service Department can provide static and dynamic load values and frequency (extract speed) values on request.



NOTICE: All data is subject to change without notice and may have changed since last printed. It is the responsibility of the potential owner/operator to obtain written confirmation that any data furnished by Milnor® applies for the model number(s) and serial number(s) of the purchased machine(s).

BIWUUI03 / 2019296

BNUUUR02 0000160550 E.3 1/2/20 2:14 PM Released

1.4 Prevent Damage from Chemical Supplies and Chemical Systems

BNUUUR02.C01 0000160549 A.4 E.3 B.3 1/2/20 2:14 PM Released

All Milnor® washer-extractors and CBW® tunnel washers use stainless steel with the ANSI 304 specification. This material gives good performance when chemical supplies are correctly applied. If chemical supplies are incorrectly applied, this material can be damaged. The damage can be very bad and it can occur quickly.

Chemical supply companies usually:

- supply chemical pump systems that put the supplies in the machine,
- connect the chemical pump system to the machine,
- write wash formulas that control the chemical concentrations.

The company that does these procedures must make sure that these procedures do not cause damage. **Pellerin Milnor Corporation accepts no responsibility for chemical damage to the machines it makes or to the goods in a machine.**

1.4.1 How Chemical Supplies Can Cause Damage

BNUUUR02.R01 0000160548 A.4 E.3 B.4 1/2/20 2:14 PM Released

Dangerous Chemical Supplies and Wash Formulas — Some examples that can cause damage are:

- a very high concentration of chlorine bleach,
- a mixture of acid sour and hypo chlorite,
- chemical supplies (examples: chlorine bleach, hydrofluosilicic acid) that stay on the stainless steel because they are not quickly flushed with water.

The book “Textile Laundering Technology” by Charles L. Riggs gives data about correct chemical supplies and formulas.

Incorrect Configuration or Connection of Equipment — Many chemical systems:

- do not prevent a vacuum in the chemical tube (for example, with a vacuum breaker) when the pump is off,
- do not prevent flow (for example, with a valve) where the chemical tube goes in the machine.

Damage will occur if a chemical supply can go in the machine when the chemical system is off. Some configurations of components can let the chemical supplies go in the machine by a siphon

(Figure 2: Incorrect Configurations That Let the Chemical Supply Go In the Machine by a Siphon, page 8). Some can let chemical supplies go in the machine by gravity (Figure 3: Incorrect Configurations That Let the Chemical Supply Go In the Machine by Gravity, page 9).

Figure 2. Incorrect Configurations That Let the Chemical Supply Go In the Machine by a Siphon

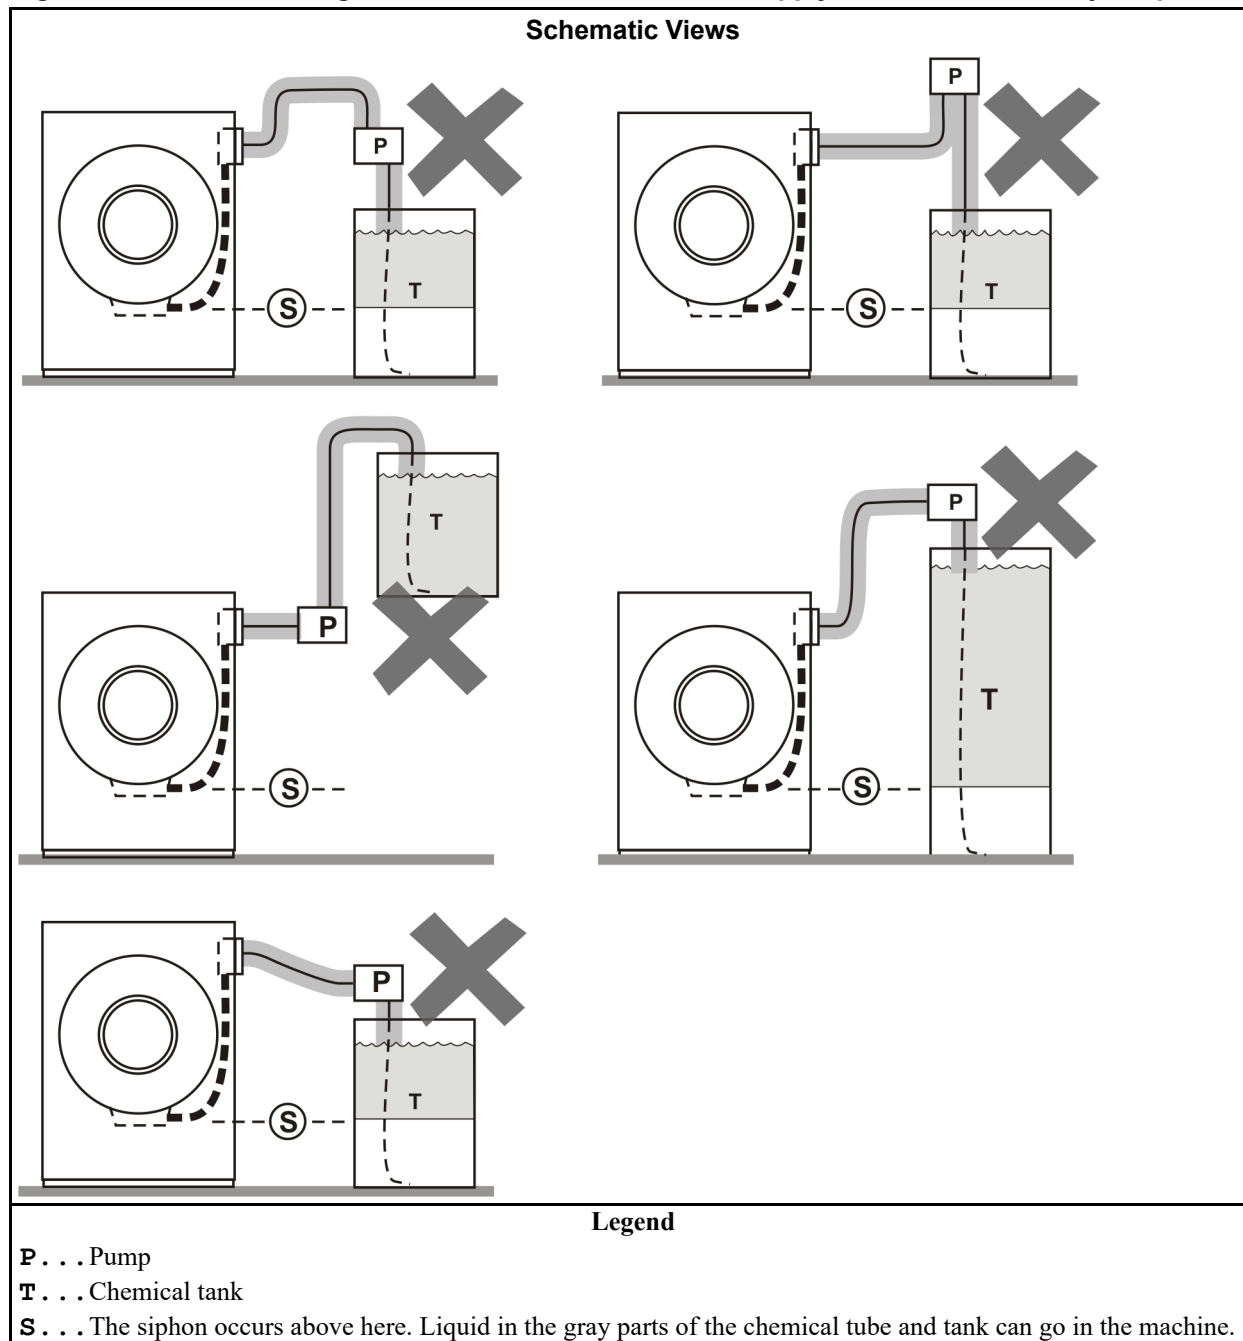
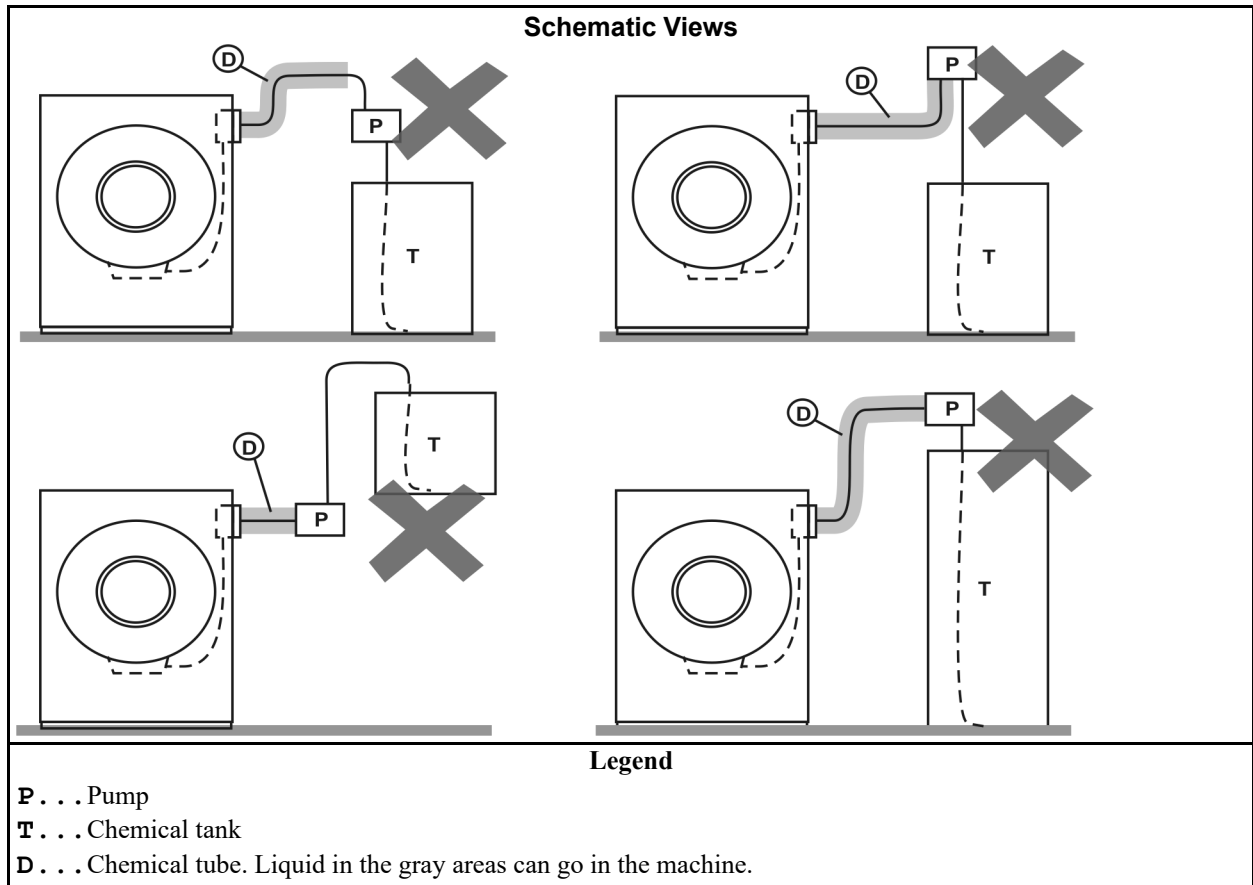
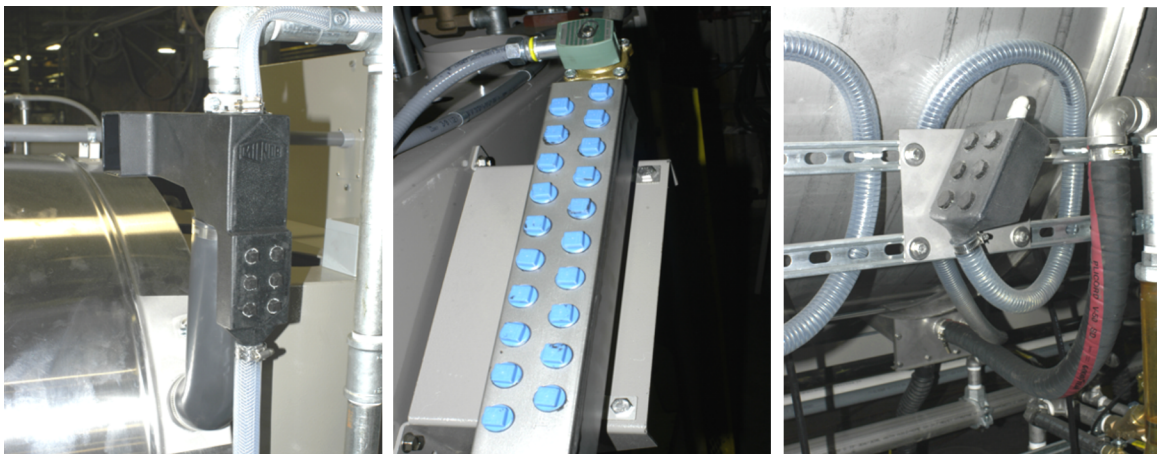


Figure 3. Incorrect Configurations That Let the Chemical Supply Go In the Machine by Gravity

1.4.2 Equipment and Procedures That Can Prevent Damage

BNUUUR02.R02 0000160545 A.4 E.3 B.3 1/2/20 2:14 PM Released

Use the chemical manifold supplied. — There is a manifold on the machine to attach chemical tubes from a chemical pump system. The manifold has a source of water to flush the chemical supplies with water.

Figure 4. Examples of Manifolds for Chemical Tubes. Your equipment can look different.


Close the line. — If the pump does not always close the line when it is off, use a shutoff valve to do this.

Do not let a vacuum occur. — Supply a vacuum breaker in the chemical line that is higher than the full level of the tank.

Flush the chemical tube with water. — If the liquid that stays in the tube between the pump and the machine can flow in the machine, flush the tube with water after the pump stops.

Put the chemical tube fully below the inlet. — It is also necessary that there is no pressure in the chemical tube or tank when the system is off.

Figure 5. A Configuration that Prevents Flow in the Machine When the Pump is Off (if the chemical tube and tank have no pressure)

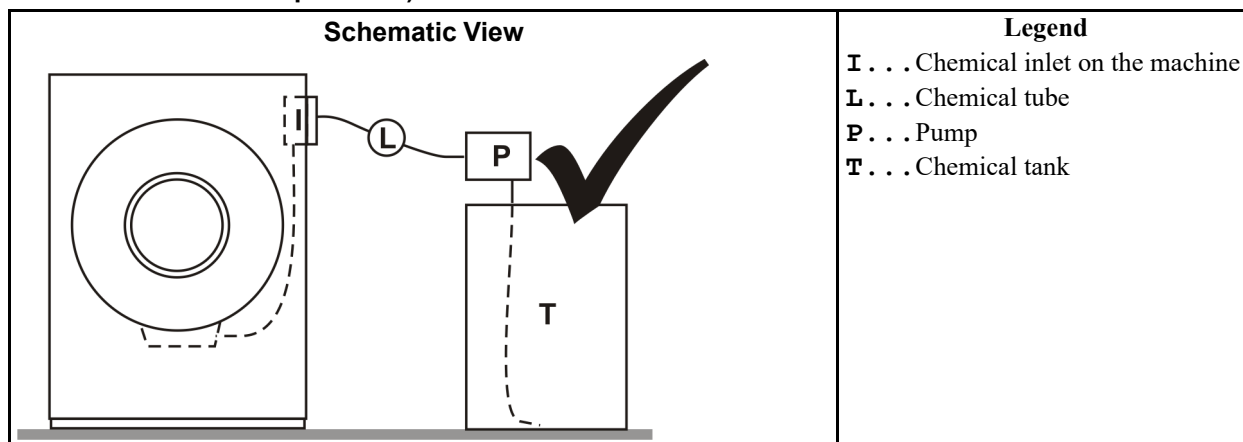

Prevent leaks. — When you do maintenance on the chemical pump system:

- Use the correct components.
- Make sure that all connections are the correct fit.
- Make sure that all connections are tight.

BNCJUI01 / 2018456

BNCJUI01 0000210895 A.5 1/2/20 1:16 PM Released

1.5 Connecting Chemical Systems

BNCJUI01.C01 0000210894 A.4 A.5 A.3 1/2/20 1:16 PM Released

Multiple methods are available on E-P Express® Gear Guardian® washer-extractors to accommodate chemical systems. Use this section to help determine the best method of chemical injection and how to connect the chemical system. Always consult the schematic manual for this machine before connecting chemical systems to the machine.



DANGER: **Electric Shock Hazard** — Contact with high voltage electricity will kill or seriously injure you. Even with the **Master Switch off** and/or any **Emergency Stop switches off**, three-phase power and control circuit power are still present at several locations within electric boxes and electrical components.



DANGER: **Injury and Damage Hazards** — Improper wiring can cause the machine to malfunction, risking injury to personnel, damage to machine components, and damage to goods.



- ▶ Electrical and piping connections described in this section must be made only by qualified, authorized personnel.
- ▶ Lock off and tag out power at the external disconnect switches for the washer-extractor and for any chemical devices that provide power to the interpret relay box (if furnished) before proceeding.
- ▶ Do not rely merely on the information in this section when wiring. Consult all applicable electrical schematics.
- ▶ Do not reroute or rearrange any wires not specifically permitted by this instruction.
- ▶ Do not connect a common wire to ground. Use the common terminal furnished.



CAUTION: **Risk of Poor or Inconsistent Wash Quality** — Injection times of less than 10 seconds are discouraged because fine adjustments are not possible and factors such as pump lag time may cause significant variations in the amount of chemical delivered.



- ▶ Size pumps or valves small enough for adequate control (i.e., for longer injection times).
- ▶ Use two pumps or valves to inject a small or large quantity of the same chemical, if required.

1.5.1 Maximizing Chemical Injection Precision

BNCJVI01.R01 0000181451 A.4 A.5 B.3 1/2/20 1:16 PM Released

Injection of a consistent amount of chemical is important in controlling wash quality and using chemicals economically. When chemicals are injected by units of time, as is done with most washer-extractors, injections of short duration can be imprecise because of two reasons:

- Fine adjustments to the delivered quantity are not possible. For example, if an injection of three seconds is extended by one second, the quantity delivered is theoretically increased by more than 30 percent. However, if an injection of 20 seconds is increased by one second, the theoretical quantity is increased by only five percent.
- Variations in the time between the start of the chemical signal and the start of the chemical delivery into the machine can cause significant differences in the quantity of chemical injected. In this case, if a pump starts more slowly some times than others, or if the delivery tubes are partially empty at the start of the inject period, the quantity of chemical delivered may vary significantly. As an example, assume a peristaltic pump moves chemical along the delivery tube at a rate of three feet per second. If the delivery tube is empty for three feet along its

length, then one second of the injection time is spent injecting air rather than chemical. If the programmed injection time is only three seconds, then one third of the desired chemical is not being delivered. However, if the programmed injection time is 20 seconds, the chemical delivery is only five percent less than desired.

- Increasing the programmed injection time makes any variation less significant. Use pumps and/or valves sized to allow inject times of at least 10 seconds. If injection times for a specific chemical vary widely from one formula to another, consider using two pumps or valves for the same chemical. Actuate one pump for injecting small quantities, and use both pumps or valves for larger quantities.

1.5.2 Available Chemical Injection Methods

BNCJVI01.C02 0000181450 A.4 A.5 B.3 1/2/20 1:16 PM Released

All machine models are equipped with a chemical chute for the introduction of dry chemical supplies directly into the bath liquor. Automatic or manual flushing is provided on most models to reduce the risk of corrosion. One or more other chemical injection devices, described below, are available according to machine model.

1.5.2.1 Chemical Injection Output Signals

BNCJUI01.C02 0000210893 A.4 A.5 A.3 1/2/20 1:16 PM Released

Five discrete signals (for chemicals 1 through 5) are furnished standard on all washer extractors. These signals are available at a terminal strip on all E-P Express® Gear Guardian® machines. Check the nameplate on the machine to verify the model.

1.5.2.2 Optional Five-Compartment Flushing Chemical Injector

BNCJVI01.C03 0000181448 A.4 A.5 B.3 1/2/20 1:16 PM Released

An externally mounted five-compartment dry supply injector is offered as an option on some models. The five electrically operated flush valves are wired to chemical injection output signals at a terminal strip on the machine (usually terminal strip TBA).

1.5.2.3 Liquid Chemical Tube Connectors

BNCJVI01.R03 0000181447 A.4 A.5 B.3 1/2/20 1:16 PM Released

A five or six port liquid chemical inlet manifold is standard equipment on most models. Use these valveless inlets to connect tubes from remote chemical supply injection systems that are not continuously pressurized and that deliver chemicals only when an injection is commanded.

1.5.3 Considerations for Pumped Chemical Systems

BNCJVI01.C04 0000181446 A.4 A.5 C.3 1/2/20 1:16 PM Released

Pumped chemical systems deliver chemicals to the machine intermittently usually via peristaltic pumps. Inlets on the machine must be unrestricted at all times (valveless). The supplied pumped chemical inlets meet this requirement.

An inherent risk of this method of chemical injection is that concentrated chemicals can dribble into the machine after it is shut down for the evening, causing machine and/or linen damage. Because Milnor® has no control over the design or installation of pumped chemical systems, Pellerin Milnor Corporation accepts absolutely no responsibility for damage to its equipment or textiles

therein caused in this way. Much more information on this subject is provided in [Section 1.4 : Prevent Damage from Chemical Supplies and Chemical Systems, page 7](#) . Consult this document before connecting a pumped chemical system.


1.5.4 Connecting Devices to Receive Injection Signals

BNCJVI01.R04 0000181445 A.4 A.5 B.3 1/2/20 1:16 PM Released

For 36-inch and 42-inch V_J models, injection signals provide either 110VAC/50Hz or 120VAC/60Hz potential. For 30-inch V_J and all F_J/F_B, H_J, and X_J models, injection signals provide either 220VAC/50Hz or 240VAC/60Hz potential. Each signal can accommodate one apparatus not exceeding 37 milliamperes. Inject signals cannot be made potential-free.



CAUTION: **Avoid Component Damage** — Board components will burn out and require board replacement if devices driven by inject signals do not meet the electrical specifications. Pumps generally draw a higher current and will burn out board components.

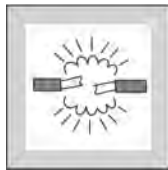

1.5.5 Connecting Chemicals to 30-inch T5_ Models

BNCJUI01.C03 0000210891 A.4 A.5 1/2/20 1:16 PM Released

Acquire signals at terminal strip TBS in the incoming power box ([Figure 6](#)). Pins 1 through 5 are for chemicals 1 through 5 respectively, and pin 8 is common. The specified voltage is enabled between the appropriate pin and common whenever an injection is commanded.

Figure 6. Terminal Strip TBS in T-style Machine



2 Programming

BNCJHP05 / 2018445


BNCJHP05 0000206320 B.3 1/2/20 1:16 PM Released

2.1 Controls on E-P Express® Washer-extractors

BNCJHP05.C01 0000206318 A.4 B.3 A.3 1/2/20 1:16 PM Released

The controls on these Milnor® washer-extractors include push-buttons, some of which include indicator lights. Other controls include a mechanical button to open the door and a key-switch. Some of these controls operate differently in the three machine modes. This document gives the function of each control in the different machine modes.

Figure 7. E-P Express® Control Panel

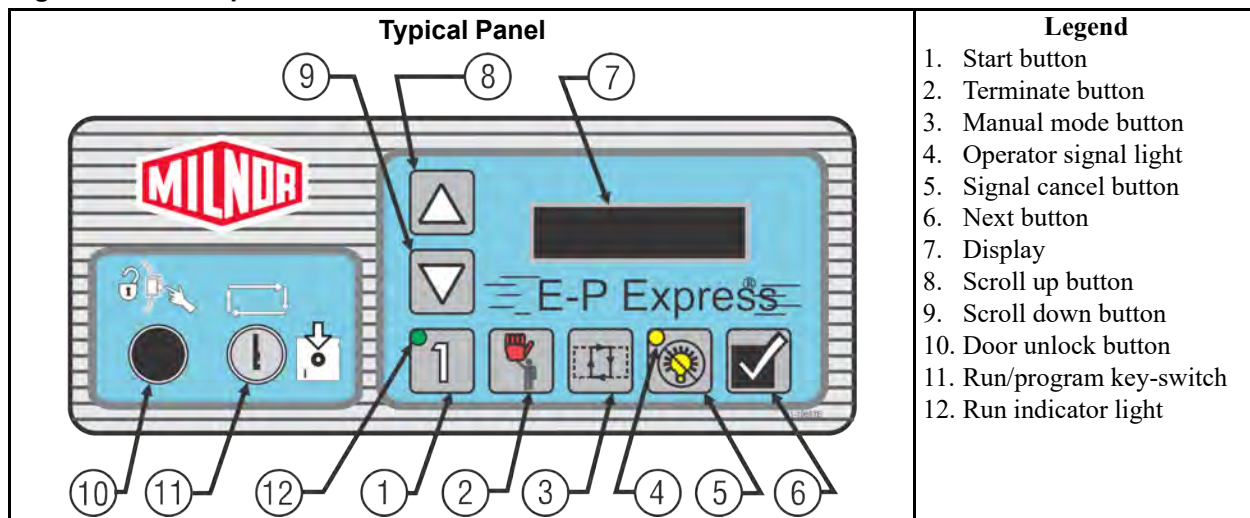


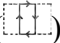










2.1.1 Control Functions During Normal Operation

BNCJHP05.C02 0000206317 A.4 B.3 1/2/20 1:16 PM Released

The machine operates correctly when the control circuit has power and the key-switches are at the **Run** and **Automatic** positions.

Normal operation is the state of the machine when the machine control circuit is energized. The machine may be either idle (waiting to run a formula) or running. If the machine is idle, the message on the display will begin with "Run Formula" and include a formula number on the second line.









1. Push the **Start** button (1) to start the set formula. The formula starts if the machine has power and the door is closed. To see the microprocessor inputs, hold the **Start** button (1) while you push the **Scroll Up** button (▲).

2. The **Terminate** button () cancels all remaining steps in the formula and starts the shut-down procedure for the machine. You cannot continue a formula after you use the **Terminate Program** button.
3. The **Manual mode** button () has no effect while a formula is running. Push this button when the display says “Run Formula xx” to start manual mode, where the controls operate as specified in [Section 2.1.2 : Control Functions During Manual Operation, page 16](#).
4. The **Operator signal** light, in the upper left corner of the **Signal cancel** button () is a visual indicator that operator attention is required. This light is illuminated simultaneously with the sounding of the operator signal buzzer.
5. Push the **Signal cancel** button () to silence the operator signal buzzer which sounds when a formula completes normally. Also, if a signal is programmed with a chemical injection in any formula, push this button to indicate that the chemical has been added and to continue operation.
6. The **Next** button () is not used during normal operation.
7. The display on these machines is a vacuum fluorescent type displaying two lines of twenty characters each.
8. The **Scroll up** button () functions in much the same manner as the **Scroll down** button described above. Push this button to display the next higher numbered formula in memory. For troubleshooting, hold the **Manual** button and press the **Scroll up** button to view the status of the first 12 outputs. Hold the **Start** button and press the **Scroll up** button to view the status of the microprocessor inputs.
9. When selecting a specific formula to run, press the **Scroll Down** button () to display the next lower numbered formula in memory. Push this button with the lowest formula displayed (Formula 01) to select the highest numbered available formula (maximum of 30 formulas). For troubleshooting, hold the **Manual** button and press the **Scroll Down** button to view the status of the second 12 outputs.
10. The **Door unlock** button () releases the door lock, allowing the latch on the door to operate. Hold this button depressed and press firmly on the door latch lever to open the door for load and unloading.
11. The **Run/program** keyswitch must be in the **Run** position () unless the machine is being configured or programmed. All control descriptions listed under [Section 2.1.1 : Control Functions During Normal Operation, page 14](#) are based on the keyswitch being in the **Run** position. Refer to [Section 2.1.3 : Control Functions During Programming, page 16](#) for descriptions of how the controls operate with the keyswitch in the **Program** position ()
12. The **Run Indicator** light, in the upper left corner of the **Start** button, is illuminated when a formula is started by pressing . If the operator terminates the formula before it runs to completion (with ) the light goes off when any coast time expires and the door is unlocked. If the formula runs to completion, the light goes off when the coast time following the final extract step expires.

2.1.2 Control Functions During Manual Operation

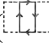BNCJHP05.C03 0000206316 A.4 B.3 1/2/20 1:16 PM Released





Manual operation is used primarily for troubleshooting the machine by activating outputs and viewing inputs.







1. The **Start** button () , when pressed while the **Manual** button is held down, activates the selected menu function. Depress the **Start** and **Manual** buttons simultaneously to view the software date code. For other manual menus, release the **Start** button when the menu appears on the display
2. The **Terminate** button () cancels manual mode and returns the controller to the normal operation or programming mode, depending on the setting of the **Run/Program** keyswitch. Any outputs that were manually actuated while in manual mode are turned off.
3. Use the **Manual** button () to enter manual mode when the machine is idle.
4. The **Operator Signal** light does not operate when the controller is in manual mode.
5. The **Signal Cancel** button () has no function in manual mode.
6. The **Next** button () has no function in manual mode.
7. In the **Manual menu**, the display presents user prompts and selected information. The software date code and machine configuration are displayed; inputs and outputs and their respective statuses are shown in those modes. Other menu selections display DIP switch settings, as well as temperature and level testing information.
8. The **Scroll Up** button () displays the next higher numbered mode in the manual menu. For example, pressing this button once will scroll from the **Software Date Code** mode to the **Test Inputs** mode.
9. At the manual menu, the **Scroll Down** button () displays the available menu items in reverse numeric order.
10. The **Door unlock** button () unlocks the door latch. The function of this button is the same whether the machine is in normal operating mode or manual mode.
11. The **Run/Program** keyswitch has no effect on how the manual mode operates. However, the status of the switch (either + or -) is displayed in field F in the **Test Inputs** menu.
12. The **Run Indicator** light is not activated during manual operation.

2.1.3 Control Functions During Programming

BNCJHP05.C04 0000206364 A.4 B.3 A.3 1/2/20 1:16 PM Released

The programming mode is used to modify the actions performed in a wash formula or to create new wash formulas.

1. The **Start** button () is used in combination with the **Next** button () or the **Terminate** button () to delete or insert a step in a wash formula, respectively.
2. The **Terminate** button () returns the user to the main programming menu (top line of display reads "Program X Menu") from the **Add/Change Formula** and the **Standard Formulas**

- menus. The **Terminate** button has no effect after the **Configure menu** has been accessed, or after any parameter of any formula has been accessed in the **Add/Change Formula menu**.
3. The **Manual** button is not used in the programming mode.
 4. The **Operator Signal** light is not used in the programming mode.
 5. The **Signal Cancel** button is not used in programming.
 6. Use the **Next** button () to confirm any choice and move to the next decision in the sequence.
 7. The display presents the programming menus and choices within those menus, including all configuration and formula parameters.
 8. The **Scroll Up** button () scrolls the available choices upward from the lowest available number.
 9. Use the **Scroll Down** button () to change the selected programming parameter to the next lower-numbered choice.
 10. The **Door unlock** button () has no function in programming mode.
 11. The **Run/Program** keyswitch allows programming when set to . The **Program** menu includes selections for adding and changing wash formulas, configuring the controller, and restoring the standard formulas provided with the machine. The keyswitch must be set to the **Run** position () for normal machine operation, as described in [Section 2.1.1 : Control Functions During Normal Operation, page 14](#).
 12. The **Run Indicator** light is not actuated during programming.

BNCJVC01 / 2018382

BNCJVC01 0000181472 C.3 1/2/20 1:16 PM Released

2.2 Selecting an Industry Formula Set

BNCJVC01.C01 0000181471 A.4 C.3 1/2/20 1:16 PM Released

This document gives data about all current Milnor® E-P Express® controlled washer-extractors and Milnor® E-P Plus® controlled washer-extractors with one type of processor board. You can identify this board by “P/N 08BH18EP_” near the Milnor® symbol on the processor board.

The Milnor® factory sets each washer-extractor controller for the specified operation. You can change the DIP switches on the processor board to change the machine configuration for a different operation. This document describes how to set the DIP switches. A different operation nameplate is necessary on some models. Get operation nameplates from your dealer or the Milnor® parts department.

To change industry configuration, turn the machine **off**. Then lock off and tag out power to the machine at the wall disconnect before accessing the processor board.



WARNING: Electrified parts inside — can shock or electrocute you.



- Turn off and lockout/tagout electric power before you open an electrical cabinet.

The microprocessor board holds the DIP switches as shown in the following figure also shows the **on** and **off** positions. Set the switches to the desired positions according to the following table. Turn the machine **on**; the display will show the current configuration.



CAUTION: Risk of improper configuration — On some machines, the processor board is installed in the control box so that the labels printed on the DIP switch appear inverted.



- Do not assume that the switch is right side up. Always reference the labels (**OFF**, **ON**, **1**, **2**, etc.) **printed on the switch** when setting DIP switches.

Figure 8. Location of DIP Switches

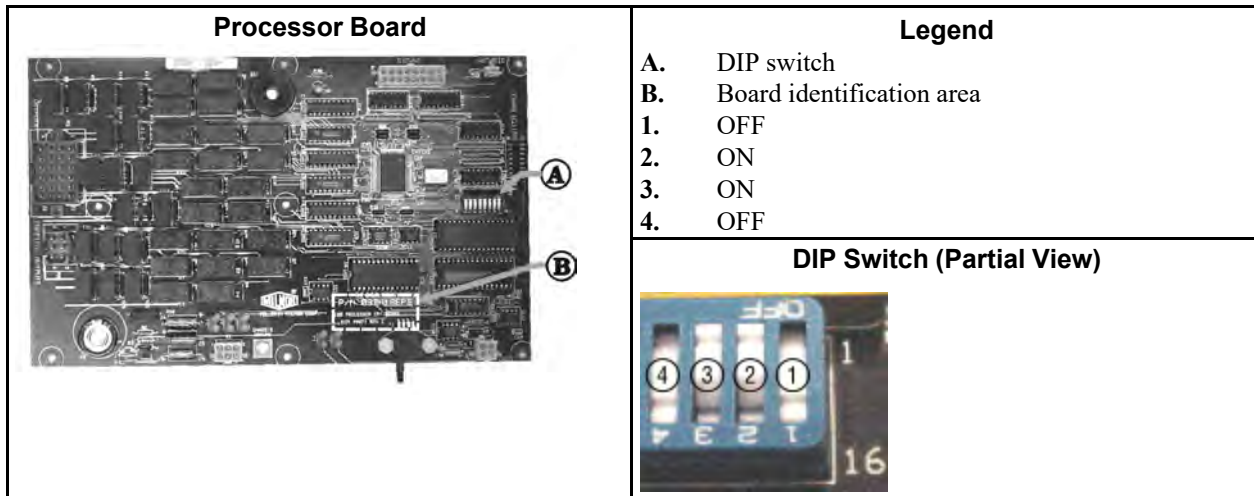


Table 3. DIP Switch Settings for Industry Configurations

Industry Configuration	Switch Settings							
	S1	S2	S3	S4	S5	S6	S7	S8
Correctional Facilities	ON	ON	ON	ON	This switch is not used on V_J and F_J models.	On pre-vents/Off allows skipping steps.*	These switches are not used in these models.	
Hotels and Motels	OFF	ON	ON	ON				
Athletic Laundries	ON	OFF	ON	ON				
Healthcare Facilities	OFF	OFF	ON	ON				
Restaurants	ON	ON	OFF	ON				
Commercial Laundries	OFF	ON	OFF	ON				
Shirt Laundries	ON	OFF	OFF	ON				
Offshore Laundries	OFF	OFF	OFF	ON				
Gear Guardian®	ON	ON	ON	OFF				

* Setting S6 off enables the operator to cancel any step in progress except a drain before an extract.



NOTE: The Gear Guardian® configuration is available with machine software WUT5XGGA or WUMWRXGG only.

BNCXGP01 / 2018466

BNCXGP01 0000211044 A.8 1/2/20 1:35 PM Released

2.3 Programming the E-P Express® Gear Guardian® Controller

BNCXGP01.C01 0000211196 A.4 A.8 A.5 1/2/20 1:35 PM Released

The microprocessor controller used in this washer extractor operates in three modes, depending on whether the machine is being used to process goods (the **Run mode** or **Formula menu**) or is being programmed with operating characteristics to be used when a wash formula is started (the **Program** mode) or being tested (the **Manual** or **Test mode**). This document describes the available operator actions and display feedback in the **Program** mode.

The **Program** mode is accessible only when the **Run/Program keyswitch** is set to the **Program** position (), as described below. From the **Program** menu, there are four options available:

- Option 0: OK TURN KEY TO RUN (detailed in [Section 2.3.2 : How to Return to Run Mode \(Option 0\)](#), page 20)
- Option 1: ADD/CHANGE FORMULA (detailed in [Section 2.3.3 : How to Add or Change a Formula \(Option 1\)](#), page 21)
- Option 2: CONFIGURE (detailed in [Section 2.3.4 : Configure the Control \(Option 2\)](#), page 31)
- Option 3: STANDARD FORMULAS
- Option 4: DATA TRANSFER

Each of these options is described in detail in this document. For information on how to start the machine and run a formula, see the appropriate section listed in the table of contents of this manual.

2.3.1 How to Avoid Data Loss

BNCXUP12.C02 0000206727 A.4 A.8 B.3 1/2/20 1:35 PM Released



CAUTION: **Avoid Corrupting Formula Data** — Never turn the **Run/Program key-switch** from the **Program** position to the **Run** position unless the display says **OK Turn Key to Run**.



- ▶ Failure to follow this direction will result in the loss of all formula modifications entered during the current programming session. Formulas not modified during this session will not be affected.



CAUTION: **Avoid Corrupting Configuration Data** — Never shut off machine power, turn off the **Master switch**, or press the **Emergency Stop button** to exit the **Program** mode.



- ▶ Once the **Configure** menu has been accessed, all configure decisions must be confirmed by pressing the **Next button** before another action can be taken.

- ▶ Failure to follow this direction will result in corruption of machine memory.

Use the following procedures to clear corrupted formula and configuration memory and restore valid data.

Display or Action

CHECKSUM ERROR
TURN KEY TO PROGRAM

Explanation

This display indicates that all memory will be cleared. **The machine controller must be reconfigured and any new formulas or modifications to standard formulas must be re-programmed.**



Clears all memory and accesses the first configuration decision.

LANGUAGE ?
0=ENGLISH 0

First configure decision.

2.3.2 How to Return to Run Mode (Option 0)

BNCXUP12.C03 0000206726 A.4 A.8 B.3 1/2/20 1:35 PM Released

Option 0 allows for a safe return from the **Program** mode to the **Formula** menu, preserving any changes that were made during the programming session and maintaining the integrity of programming and configuration data.

Display or Action

PROGRAM 0 MENU
OK TURN KEY TO RUN

Explanation

This is **Option 0** of the **Program** menu. From this display, return to the **Formula** menu or select another available menu option.



Returns to **Run mode (Formula menu)**

or



Scrolls the available choices in the **Program** menu.

2.3.3 How to Add or Change a Formula (Option 1)

BNCXGP02.C01 0000211195 A.4 A.8 A.3 1/2/20 1:35 PM Released

Milnor® E-P Express® Gear Guardian washer-extractors have the capacity for a maximum of 30 formulas.

2.3.3.1 What are Formulas, Steps, and Decisions?

BNCXGP02.C02 0000211194 A.4 A.8 A.5 1/2/20 1:35 PM Released

A formula includes all the procedures that the machine does automatically. These procedures start when you put a load in the machine. The procedures stop when the machine completes all operations. In some models, there is an alarm at the end of a formula.

Different types of steps make formulas. You set values for each step when you write the formula.

1. Set a bath step or an extract step.
2. Set the values in the step.

Bath steps can turn the basket, open the water valves, and put chemicals in the machine. When the machine completes all the necessary procedures in a step, the subsequent step starts. The formula stops and the alarm comes on when the last step stops.

Each step includes several **programming decisions**. You must answer the questions to build the wash formula. You must usually choose one answer from a list. For example, the water level decision in a bath step can be answered with either “1” for low level or “2” for high level. Other programming decisions, such as step time and bath temperature, require you to enter a value within a range of values.

The user interface uses similar procedures to create a new formula and for changing an existing formula. Both procedures are detailed below, in [Section 2.3.3.4 : Create a New Formula, page 23](#) and [Section 2.3.3.6 : Change an Existing Formula, page 23](#). The control system tells you whether the selected formula exists.

2.3.3.2 About the Help Screens

BNCXGP02.C03 0000211193 A.4 A.8 1/2/20 1:35 PM Released

Display or Action

```
03 TMMQ HC L CWSS*
01 0000 -- - -----
```

```
03 T TYPE OF STEP
01 0 END FORMULA
```

Explanation

This example shows **Page A** of the programming menu, with the cursor at the first decision (T=Type of Step).

This is a typical programming **help screen**. The display will automatically show a help screen if you do not make a correct entry in four seconds or less.



Accepts the selected value for the current decision and advances the cursor to the next decision, regardless of the status of the help screen.

2.3.3.3 Moving Forward and Backward through Steps and Decisions

BNCXGP02.C04 0000211192 A.4 A.8 A.3 1/2/20 1:35 PM Released

Each step has two displays: **Page A** and **Page B**.

Display or Action

03	TMMQ	HC	L	CWSS*
01				

Explanation

This is **Page A**. In this example, the “03” at the left end of the display represents the formula number. The “01” below it represents the step number within that formula. The CWSS* decisions shown underlined repeat for each chemical programmed in this step.

03	D	E
01		

This is **Page B**. When the cursor is advanced past the last decision on **Page A**, **Page B** appears for the remaining decisions in this step. The decisions required on both pages vary according to machine model and options.

2.3.3.3.1 Actions when the Cursor is at the Step Number

BNCXGP02.C05 0000211191 A.4 A.8 1/2/20 1:35 PM Released

Display or Action

03	TMMQ	HC	L	CWSS*
02	xxxx	xx	x	xxxxx

Explanation

Typical display with cursor at **step number**



Indexes forward/backward through the step numbers in this formula.



Accesses the selected step and positions the cursor at decision **T**, or saves all changes and exits this formula if this is the last step of an existing formula.



Exits this formula, clearing the formula if it has not been saved, or discarding any changes to a previously existing formula.

2.3.3.3.2 Actions when the Cursor is at a Decision within a Step

BNCXGP02.C06 0000211400 A.4 A.8 1/2/20 1:35 PM Released

Display or Action

03	TMMQ	HC	L	CWSS*
02	xxxx	xx	x	xxxxx

Explanation

Typical display with cursor at a **decision** within a step



Indexes forward/backward through the valid choices for this decision.



Moves the cursor forward among **Pages A** and **B** through each valid decision in a specific step. This accepts the standard or default decision if another choice was not previously made.



Moves the cursor backward among the two pages, through each valid decision within a specific step, except in the following cases:

- If the cursor is at decision **T** on **Page A**, it will move to the step number.
- If the cursor is at the first decision on **Page B**, it will back up to the first valid decision (**C**) for the first chemical commanded in this bath.

2.3.3.4 Create a New Formula

BNCXGP02.C07 0000211399 A.4 A.8 1/2/20 1:35 PM Released

Creating a new formula with the E-P Express® Gear Guardian® controller entails adding and defining steps using one of the existing but blank formula numbers.

Display or Action

PROGRAM **1** MENU
ADD/CHANGE FORMULA

Explanation

This is **Option 1** of the **Program** menu. From this display, either access a formula by number to change or create, or select another available menu option.



Accesses the formula list for selection of a formula number to change or create.

ADD/CHANGE FORMULA
00 RETURN TO MENU

This is the **Add/Change Formula** display. From this display, either back up to the **Program** menu, or begin creating or changing a formula.



Scrolls the available formula numbers. These keystrokes select a formula for adding if the formula number hasn't already been programmed. The number is selected for **change** if it has already been programmed.

ADD/CHANGE FORMULA
23 FORMULA NUMBER 23

Formula 23 is available for **adding** because it does not currently exist.

ADD/CHANGE FORMULA
07 FORMULA NUMBER 07

Formula 07 is available for **changing** because it already exists.



Accesses the selected formula for programming. Valid formula numbers are 01 through 30.

07 TMMQ HC L CWSS*
01 2050 23 2 0----

Formula 07, Step 01 selected for programming. Refer to [Section 2.3.3.6.2 : The Step Decisions, page 24](#) for detailed programming instructions.

2.3.3.5 Delete an Existing Formula

BNCXGP02.C08 0000211398 A.4 A.8 A.3 1/2/20 1:35 PM Released

Display or Action

03 TMMQ HC L CWSS*
01 **0**000 -- - ----

Explanation

Delete an existing formula by making step 01 an **End** step. Accomplish this by setting the **T** value for step 01 of the formula to 0.

2.3.3.6 Change an Existing Formula

BNCXGP02.C09 0000211397 A.4 A.8 A.3 1/2/20 1:35 PM Released

2.3.3.6.1 How to Insert or Delete a Step in an Existing Formula

BNCXGP02.C10 0000211396 A.4 A.8 A.3 1/2/20 1:35 PM Released

Display or Action



Explanation

Provides a help screen for inserting and deleting steps, as shown below.



Advances the cursor without deleting or duplicating the selected step. This key accesses the next step and allows for modification of the values there.



Scrolls through the available choices for the decision indicated by the cursor.

2.3.3.6.1.1 Inserting a Step

BNCXGP02.C11 0000211395 A.4 A.8 A.3 1/2/20 1:35 PM Released

Display or Action



Explanation

Duplicates the selected step to the next numerical position. If this is Step 01, the duplicated step becomes the new Step 01 and all the following steps move to the next higher numerical position.

Duplication of **End Formula** or **Extract** steps is prevented by the controller.

2.3.3.6.1.2 Deleting a Step

BNCXGP02.C12 0000211394 A.4 A.8 A.3 1/2/20 1:35 PM Released

Display or Action



Explanation

Deletes the selected step. The next step becomes the current step by assuming the number of the step that was just deleted. All following steps move one number lower.


Deletion of **End Formula** is prevented in all cases. A **Bath** step cannot be deleted if it falls between two **Extract** steps.

2.3.3.6.2 The Step Decisions

BNCXGP02.C13 0000211393 A.4 A.8 1/2/20 1:35 PM Released

A maximum of 30 formulas may be programmed, with a maximum combined total of 225 steps in all formulas.

 Display or Action



Explanation

This is a typical **Type of Step** decision display. The actual format of the display varies according to the specific machine controller and certain configure decisions.

- 0 End formula: The last step of each formula must be of type 0. The basket moves or stops as directed by the **How to End** programming decision, described in [Section 2.3.3.6.5 : Concluding Decisions, page 27](#) . A formula may be ended without a final extract by setting the last step to type 0. If the last step before the **End Formula** step is a type other than final extract, the controller will ask “End Formula #xx?”.

Setting the first step of an existing formula to type 0 deletes the formula, as described in [Section 2.3.3.5 : Delete an Existing Formula, page 23](#) .

- 1 One-way wash: Washing routine which may increase mechanical action and reduce energy consumption to some degree. Use for smaller pieces where tangling and “roping” is not a consideration.

The basket rotates clockwise at the programmed wash speed for the duration of the step.

- 2 Two-way wash: Washing routine for items which tend to rope and tangle unless reversed. The basket rotates clockwise for some period of time, then pauses for a few seconds before rotating in the opposite direction.
- 3 Soak wash: The cylinder does not turn when this step type is programmed. Use this step type only when no mechanical action is required, as for especially delicate fabrics. Consider chemical concentrations, bath time, and liquor temperature when using this type of step.
- 4 Intermediate extract 1 (E1): This is low extract speed, used for extractions between baths or for final extract at low speed if machine has two-speed extract.

03	TMMQ	HC L CWSS*
01	1	

Duration of step in minutes, minutes, and quarter minutes.

- 000 Invalid entry. Controller defaults this entry to 001 (15 seconds).
- 001 00.25 minutes; 00:15 seconds is minimum programmable time for a bath step.
- 113 11.75 minutes; 11:45
- 633 63.75 minutes; 63:45 is the maximum programmable time for any single step. To achieve a bath time longer than 63:45, program two consecutive bath steps with the first ending with a **No Drain**. This effectively doubles the maximum allowable bath time.

The total time required for a formula to run to completion includes factors other than the total of the times of each step in the formula. For these machines, add 0:40 distribution time each time the machine enters an extract step from a bath step. Also, add 1:00 for each standard drain (drain speed), or 1:00 for each two-way wash drain.

Display or Action

Explanation

03	TMMQ	HC L CWSS*
01		

Control of hot water valve

- 0 Hot water valve off
- 1 Hot water valve on

03	TMMQ	HC L CWSS*
01		

Control of cold water valve

- 0 Cold water valve off
- 1 Cold water valve on

2.3.3.6.3 How to Select the Bath Level

BNCXGP02.C14 0000211392 A.4 A.8 1/2/20 1:35 PM Released

Display or Action

Explanation

03	TMMQ	HC L CWSS*
01		

The values of high and low bath levels are determined by hardware settings on the level switches.

- 1 Low bath level; usually used for baths with chemical injections.
- 2 High bath level; usually used for rinsing.

2.3.3.6.4 Injecting Chemicals

BNCXGP02.C15 0000211391 A.4 A.8 A.3 1/2/20 1:35 PM Released

Display or Action

```
03 TMMQ HC L CWSS*
01
```

Explanation

Chemicals can be added to any bath other than a cooldown bath. A standard chemical injection can be prevented by commanding C = 0 (no chemical in this bath) or by commanding SS = 00 (zero seconds of chemical inject time). No more than two chemicals can be programmed per bath.

- 0 No chemical in this bath
- 2 Inject chemical number 2
- 5 Inject chemical number 5 (five is maximum number of chemicals)

```
03 TMMQ HC L CWSS*
01 1
```

Select the option determining the point in the step at which this chemical will be injected.

- 1 Inject chemical when level satisfied. The chemical injection begins only after the commanded bath level has been achieved.

```
03 TMMQ HC L CWSS*
01 xx
```

Program the duration of the chemical injection in seconds. See [Table 4: Codes for Inject Times of 100 Seconds and Longer, page 26](#) for how to enter inject times greater than 99 seconds.

- 00 Zero seconds, prohibits this chemical injection.
- 0 0 seconds. If no specific time is entered, the control automatically inserts a value of 0. Any other value between 00 and 255 may be specified and will override the default duration
- B9 119 seconds (example)
- Q5 255 seconds (maximum duration)

Inject times longer than 99 seconds are programmed in the two-digit inject time field by using alphabetic characters to represent values greater than 99 in the first position. The letters “A” through “Q” are used, but not the letter “O.” The second position is always a number between 0 and 9. Values of the alphabetic characters are defined in [Table 4: Codes for Inject Times of 100 Seconds and Longer, page 26](#) below:

Table 4. Codes for Inject Times of 100 Seconds and Longer

Alphabetic Code	Value	Alphabetic Code	Value	Alphabetic Code	Value	Alphabetic Code	Value
A	100	E	140	I	180	M	220
B	110	F	150	J	190	N	230
C	120	G	160	K	200	P	240
D	130	H	170	L	210	Q	250



CAUTION: Risk of Poor or Inconsistent Wash Quality — If the duration of each chemical injection is determined by the machine controller, chemical

injections should always have a duration of at least 10 seconds. With shorter injection times, fine adjustments are not possible, and variations in response times have an exaggerated effect on the quantity delivered.

- ▶ Select pumps or valves of the appropriate size to provide for longer injection times.
- ▶ If quantities of one chemical must vary greatly among formulas, use two pumps or valves for that chemical.
- ▶ If the injection duration is controlled by the chemical supply system (from others), then the injection duration programmed at the washer-extractor controller need only be sufficient to ensure detection by the chemical system.

Display or Action

03	TMMQ	HC	L	CWSS*	0
01					

Explanation

Should the operator be signalled when the chemical is desired? The audible operator signal will not occur until the **When to start chemical injection** decision is satisfied. The commanded chemical injection will not begin until the operator manually cancels the signal.

- 0** No. A signal is not required with this chemical injection. Chemicals will inject without operator intervention.
- 1** Yes. A signal is required with this chemical injection. The signal will start when all conditions for the chemical (temperature and/or level) are satisfied. The actual injection will begin only after the signal is cancelled, as below.



During normal operation (formula running), this keystroke cancels the operator signal and allows chemical injection to begin if this decision is set to **1=Yes**.

03	TMMQ	HC	L	CWSS*	3
01					

After programming the first chemical, the controller returns to the first chemical decision to allow the programming of a second chemical.

- 0** No additional chemical in this bath. The cursor advances to the next decision.
- 3** Chemical 3 (or any other valid chemical number). Cursor advances to decision **W** for this chemical.

2.3.3.6.5 Concluding Decisions

BNCXGP02.C16 0000211821 A.4 A.8 A.5 1/2/20 1:35 PM Released

Display or Action

03		D	E
01		**	

Explanation

Select a drain type for this bath step. This decision controls whether the drain valve opens or remains closed when this bath step ends, and how the basket rotates (if at all) while the machine is filling and draining. Some of the selections below are valid only if the step following this bath is another bath step. For example, programming this decision as **1=Two way wash speed** is not allowed before an extract step because the goods would not be evenly distributed around the basket when the machine accelerated to extract speed.



NOTICE: Selected drain type may change automatically—The controller requires that the basket always accelerate to drain speed before advancing to extract speed, even if a stop or bath-speed drain type is programmed.

- **Standard** and **stop at fill** drain types are valid for bath steps followed by any other type of step.
- **Two-way wash speed**, **do not drain**, and **stop at drain** drain types will automatically change to a **standard** drain when an extract is programmed as the next step.
- A **stop at fill** and **drain** drain type will automatically change to a **stop at fill** drain type when an extract is programmed as the next step.

Table 5. Summary of Drain Type Choices

Drain Type	Help Screen Description	Basket Motion		Drain Valve
		During Fill Phase	During Drain Phase	
0	Standard	set by Type of Step decision for this step	standard drain speed	opens after distribution
1	2-way wash (see Note A below)	set by Type of Step decision for this step	reversing at wash speed	opens after programmed step time
2	Do not drain (see Note A below)	set by Type of Step decision for this step	none—following bath determines basket rotation	does not open
3	Stop at fill	stopped until desired level is achieved	rotates clockwise at standard drain speed	opens after distribution
4	Stop at drain (see Note A below)	set by Type of Step decision for this step	stopped	opens after programmed step time
5	Stop fill & dr (see Note A below)	stopped until desired level is achieved	stopped	opens after programmed step time
6	RinSave® (see Note B below)	set by Type of Step decision for this step	advanced drain sequence (described above)	opens 10-15 seconds after bath time ends
Note A:	This selection is not valid immediately before an extract step. Refer to the Notice above this table for specifics.			
Note B:	This selection is available only when the machine is equipped and configured for this option.			

Display or Action

Explanation

- 0 Standard drain speed**—Basket turns clockwise at drain (distribution) speed while draining. Standard drain speed varies by machine model, but is designed to impart about one G of acceleration to the goods. Basket movement while filling is determined by the **Type of step** decision and the specific design of the

machine). Standard drain speed is valid for all following step types and with any configuration of options.

- 1 **Two-way wash speed**—While draining, the basket reverses at wash speed to provide more mechanical action among the goods. Do not use this selection if the next step will be an extract. If a bath is programmed with this option, then an extract is programmed immediately following the bath step, the controller will change the drain code from **1=Two-way wash speed** to **0=Standard drain speed** (see previous notice).
- 2 **Do not drain**—Bath liquor is retained for later operations in this same bath. Chemicals may be added, and temperature or level may be raised without draining. Basket movement during the fill phase of this step is determined by the **Type of step** decision. The next step begins immediately when the time for this step expires. This selection is not available if the next step is an extract. As described in the previous Notice, if a bath is programmed with this option, then an extract is programmed immediately following the bath step, the controller will change the drain code from **2=Do not drain** to **0=Standard drain speed**.
- 3 **Stop with fill**—The basket is kept stationary during the fill phase of this step, but rotates at drain speed while draining. This selection minimizes friction among the goods before they are thoroughly wetted. Standard drain speed during the drain phase better distributes the goods around the basket, and fabric abrasion is less likely because the goods are thoroughly wet from the just-completed bath.
- 4 **Stop with drain**—The basket is kept stationary while draining to prevent abrasion from mechanical action. During the fill phase of this step, basket motion is controlled by the **Type of step** decision. This selection is not valid if the next step is an extract. If a bath is programmed with this option, then an extract is programmed immediately following the bath step, the controller will change the drain code from **4=Stop with drain** to **0=Standard drain speed**.
- 5 **Stop with fill and drain**—The basket is held stationary during both the fill and drain phases of this step. Basket rotation, as determined by the **Type of step** decision, begins only after the desired level is achieved. This selection is not valid if the next step is an extract. If a bath is programmed with this option, then an extract is programmed immediately following the bath step, the controller will change the drain code from **5=Stop with fill and drain** to **3=Stop with fill**.

The cursor returns to this display to program the next step unless the step just programmed is the last step of a formula or if the number of steps exceeds 50, in which case the cursor advances to decision E.

03	TMMQ	HC L CWSS*
02	x	

END FORMULA #03
0 NO


Appears if **T=0** in previous display and this is not the last available step in this formula.


0 No. Aborts the previous **T=0** selection. Display returns to the **T** (type of step) decision.


1 Yes. Accepts that the formula ends here.


03	D	E
02		X


Determine how this formula should end.


0 Stopped. The basket coasts to a stop. After the appropriate end-of-formula delay, the signal sounds. The signal continues to sound until the operator presses .


1 Reversing. After the last step, the basket coasts to a stop, then begins reversing at wash speed while the signal sounds. The basket continues reversing with the signal on until the operator presses  to silence the signal and end the formula.


2 Drain speed. After the last step, the basket coasts to a stop, then accelerates to drain speed while the signal sounds. The basket continues turning at drain speed with the signal on until the operator presses  to silence the signal and end the formula.

3 Tumble. After the last step, the basket coasts to a stop, then begins reversing at wash speed. After two minutes of tumbling, the signal sounds. The basket continues tumbling at wash speed with the signal sounding until the operator presses  to end the formula.

4 Stopped with 2-minute buzzer. This option is similar to the **0=Stopped** option, but the signal shuts off after two minutes. The door unlocks after a delay. The operator can end the formula before this time expires by pressing .

5 Reversing with 2-minute buzzer. This selection is similar to **1=Reversing**, but the signal shuts off and the basket stops after two minutes. The door unlocks after a delay. The operator can press  to end the formula before this time expires.

6 Drain speed with 2-minute buzzer. This option is similar to option **2=Drain speed**, except the signal shuts off after sounding for two minutes. The door unlocks after a delay. The operator can end the formula before this time expires by pressing .

7 Tumble with 2-minute buzzer. This option is similar to **3=Tumble**, except the signal starts when reversing stops and sounds for two minutes, then shuts off. The door unlocks after a delay. The operator can end the formula before this time expires by pressing .



Appears if step just previously programmed is the last step of the formula. The controller is prepared for adding or editing another formula, or returning to the **Programming menu**.



Returns to the **Program menu**.




This is the **Program menu**.




Saves changes and new formulas, then returns to the **Run mode**.




CAUTION:


Ensure programming changes are saved — If the program key is turned to  at this point, all programming changes will be lost when power to the machine is turned off.

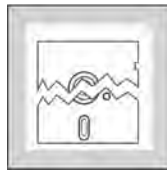

 Saves all formula modifications and returns the controller to the **Run mode**.



 This display indicates that the formula modifications are being saved in permanent memory.



This is the **Run Formula** display.

2.3.3.6.6 How to Save or Discard Changes

BNCJUP03.C20 0000192000 A.4 A.8 1/2/20 1:16 PM Released

Use the procedures detailed above to navigate in a formula and make changes. The following procedures should be used to return to the formula menu and either save or discard the changes made.

Display or Action

Explanation



Saves all changes if the cursor is on the **Step Number**. This key may need to be pressed more than one time to exit the formula.



Exits the formula and discards all changes made during this programming session.

2.3.4 Configure the Control (Option 2)

BNCXGP03.C01 0000211820 A.4 A.8 A.3 1/2/20 1:35 PM Released

Because the microprocessor control system used in this machine is capable of controlling several different models, each unit must be configured to match its specific model and type of washer-extractor. This configuration informs the microprocessor of the mechanical characteristics of this machine, specifically the number of seconds the machine should drain before accelerating to extract speed. This decision is discrete to the specific machine model and must never be changed except under instruction from the Milnor® factory. In addition to hardware-specific decisions, certain configuration choices, such as the display of English or alternate-language prompts, are left to the discretion of the owner/operator.



TIP: The Milnor® E-P Plus® Programmer software for Microsoft Windows allows the user to configure the machine and program formulas on a personal computer, then download the data to each machine through a special cable (Milnor part number KXMDSWBS1). With the E-P Plus Programmer, descriptive names for each formula can be created and downloaded. When a machine is configured by using the front panel controls instead of the programmer software, all descriptive formula names will be replaced with “Formula XX,” where XX is the formula number.



NOTE: The Milnor® E-P Plus® Programmer software also works with E-P Express® models if the machine is equipped with the Gear Guardian® software.



CAUTION: **Configure Data may be Lost** — If the controller loses power either accidentally or intentionally while in the **Configure mode**, all configuration data may be corrupted. Reconfigure the controller at installation and any time a memory error is detected. Although certain codes are discretionary and are so indicated below, most configure codes must match those shown on the metal configuration nameplate unless optional equipment has been added to or removed from the machine.



2.3.4.1 Moving Forward and Backward in Configure

BNCXGP03.R01 0000211819 A.4 A.8 A.3 1/2/20 1:35 PM Released

Display or Action

PROGRAM **2** MENU
CONFIGURE



LANGUAGE ?
0=ENGLISH **0**



Explanation

This display indicates that the controller is in **Program mode** with the **Configure menu** selected for access.

Access the **Configure menu** and displays the first configuration decision.

The language option that appears here may vary according to how the controller was last configured.

Accepts the displayed selection and automatically advances to the next configure decision.

Accepts the displayed selection and reverts to the previous configure decision. In certain cases earlier decisions will affect later ones.

2.3.4.2 The Configure Decisions

BNCXGP03.R02 0000211818 A.4 A.8 A.3 1/2/20 1:35 PM Released

Display or Action

LANGUAGE ?
0=ENGLISH **0**



Explanation

Display of **Language** configuration decision. The language chosen here controls all programming and operational prompts on the machine display.

Scrolls the available languages, listed below.

0 = English

1 = Spanish

2 = French

3 = German

4 = Dutch

5 = Italian

6 = Portuguese



Accepts the selected value for the current decision and advances the cursor to the next decision, regardless of the status of the help screen. This action is required for each configuration decision.

DRAIN TIME SECONDS
?060 SECONDS

Select the appropriate time for the machine to drain between two adjacent bath steps or between a bath and an extract. This value is determined by the capacity of the machine, the size of the drain valve, and any restrictions in the drain system which cannot be eliminated.

The minimum time available here is 60 seconds; the maximum time is 255 seconds.

Fill Error Time:MM
Min=00, Max=15 00

This decision appears only on machine models with software WUV7J1B/2300K and later.

If this value is set to **00**, the machine will wait 10 minutes for level to be achieved. If level is not achieved in 10 minutes, the operator signal sounds. The water valves remain open during the signal.

If this value is set within the valid range (**01** through **15**), then the machine will wait the set time for level to be achieved. If level is not achieved in the set time, the water valves close. The operator must terminate the formula or reset the error timer. If the error timer is reset, the machine will try again to fill.

RinSave?
0=NO 1=YES 0

RinSave® is an option available on certain rigid-mount machine models with software WUV7J1B/2300K and later. When this option is enabled, a value of 6 can be programmed into decision D (drain type).

2.3.5 Restoring the Standard Formulas

BNCXUP13.C01 0000209293 A.4 A.8 A.3 1/2/20 1:35 PM Released

Programming mode 3 allows the owner/operator with access to a programming key to perform either of these two actions:

1. **Option 0** replaces all existing formulas with the factory default formulas for the selected industry configuration. This selection replaces formulas 1 through 10 with the standard industry formulas and removes all data from formulas 11 through 30.
2. **Option 1** replaces only formulas 1 through 10 with the standard industry formulas. This leaves any user-programmed data in formulas 11 through 30 intact.



CAUTION: **Avoid Data Loss** — Other than the two methods described above, it is not possible to selectively delete field-modified or field-programmed formulas with this programming mode. This mode erases all field-programmed formulas 1 through 10 or 1 through 30 as specified. For selective deletions and modifications, use **Program mode 1** (Add/Change Formula).



CAUTION: **Avoid Chemical Damage to Goods** — The injection time for Chemical 1 is 30 seconds for all default formulas. This may prevent certain supply systems from properly detecting which formula is running, or cause the injection time for chemical 1 to be longer than intended.



► Always verify the Chemical 1 injection time for each formula after restoring the standard formulas

2.3.5.1 Chart 1: Restore Standard Formulas (Part A)

BNCJUP02.T01 0000191350 A.4 A.8 A.6 1/2/20 1:16 PM Released

1. Start
2. Restore standard formulas?
This procedure replaces field-modified wash formulas with the standard formulas provided by Milnor®.
 - YES: Continue to step 3
 - NO: Skip to [1.: step 1, Part C, page 35](#)
3. Enable **Program** menu
Turn the **Run/Program** keyswitch to set the controller to the **Program** mode.
4. Select and Enable **Standard Formulas**
Scroll to **Standard Formulas** (item 3 of the **Program Menu**), then confirm the selection.
5. Clear formulas 11 - 30?
Do you want to **keep** or **clear** formulas 11 through 30?
 - YES: Continue to step 6
 - NO: Skip to [1.: step 1, Part B, page 35](#)
6. Select and Confirm **Default 30 Formulas**
Continue with this procedure to replace formulas 1 through 10 with the standard formulas and erase formulas 11 through 30.
7. Standard formulas written to memory
The controller will pause for a few seconds while the standard formulas are written to the controller memory.
8. Return to **Run** mode
When the display becomes active again, turn the **Run/Program** keyswitch to the **Run** position.

9. End

2.3.5.2 Part B

BNCJUP02.T02 0000191349 A.4 A.8 A.5 1/2/20 1:16 PM Released

1. Abandon operation?

Abandon this operation to retain all current formulas.

- YES: Skip to [1.: step 1, Part C, page 35](#)
- NO: Continue to step 2

2. Select and Confirm **Default 10 Formulas**

Continue with this procedure to replace formulas 1 through 10 with the standard formulas, but keep all programmed formulas from 11 through 30.

3. Return to [7.: step 7, Part A., page 34](#)

2.3.5.3 Part C

BNCJUP02.T04 0000191850 A.4 A.8 1/2/20 1:16 PM Released

1. Terminate process

Press the **Terminate** button to exit this procedure without changing any formulas.

2. Return to [8.: step 8, Part A., page 34](#)

2.3.5.4 Restoring the Standard Formulas on Models Employing the Milnor® E-P Plus® and E-P Express® Controller

BNCJUP02.T03 0000191347 A.4 A.8 B.3 1/2/20 1:16 PM Released

Display or Action

Explanation



This is **Option 0** of the **Program menu**. From this display, either return to **Run mode** or select another menu item.



Scrolls available choices (0 through 3) in the **Program menu**.



This is **Option 3** of the **Program menu**.



Accesses the **Standard Formulas** option of the **Program menu**.



Option 0 (Default 30 Formulas) of the **Standard Formula menu** effectively deletes all 30 formulas, then replaces formulas 1 through 10 with the factory-supplied standard formulas for the configured industry. Formulas 11 through 30 are replaced with blank formulas.



Option 1 (Default 10 Formulas) deletes only formulas 1 through 10 and replaces them with the factory-supplied standard formulas

for the configured industry. Formulas 11 through 30 are not modified with this selection.



Scrolls the available choices (**0 Default 30 Formulas** or **1 Default 10 Formulas**).



 
Cancels this procedure without changing or deleting any formulas.



If the procedure is cancelled, the display returns to **Option 3** of the **Program menu**.



From either option **0** or option **1**, defaults the selected set of formulas: 1 through 30, or 1 through 10.



Appears for approximately five seconds as the standard formulas are written to memory.



Replaces the previous display when the process is completed.



 
Scroll to **Program menu** item **0** before exiting **Program mode**.



This is **Program menu** item **0**. It's now safe to turn the **Run/Program keyswitch** to the **Run** position.



Returns to **Formula menu**.



Formula menu; run a formula or shut down the machine.

2.3.6 Data Transfer (Option 4)

BNCJUP05.C01 0000195299 A.4 A.8 A.6 1/2/20 1:16 PM Released

Certain Milnor® controllers described in this manual can transfer memory between the machine and a Milnor *serial memory storage device* or between two machines. Refer to [Table 6: Controllers Capable of Transferring Memory, page 36](#) to determine the hardware and software requirements for memory transfer. See [Section 5.3 : Construction of External Serial Link Cables, page 72](#) for inter-machine cable specifications and assembly instructions.

Table 6. Controllers Capable of Transferring Memory


Machine Controller	Typical Machine Models	Controller Software Later Than	Processor Board Later Than
E-P Express®	30015T_X, 30022T_X	WUEPXPRSA/22004	08BH18EPYT REV. K
E-P Express® Gear Guardian®		WUT5XGGA/22GGF	

Table 6 Controllers Capable of Transferring Memory (cont'd.)

Machine Controller	Typical Machine Models	Controller Software Later Than	Processor Board Later Than
E-P Plus®	30015V_J, 36026V_J, 42026V_J	WUV7J1B/2200K	08BH18EPDT REV. K
	30015H_J, 30022H_J	WUH7J1A/2200E	
	30022X_J	all versions	



CAUTION: **Configuration data will be overwritten.** — When transferring data from one machine to another, the formulas and configuration data of the **Master** machine will be written to the **Slave** machine. Partial memory transfer is not possible.

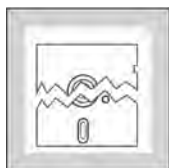

► Record all configure data from the **Slave** machine before beginning the download, especially “Offset Height.” Restore this value to the **Slave** machine after the download is finished.


► For best results both machines in a machine-to-machine transfer must be identical models with identical options and controller software, and industry configuration (e.g., 36026V6J with steam, hot and cold water; software version WUV7J1B/2200K; and configured for Commercial Laundry facilities).



NOTICE: For data transfer to succeed, the processor boards on all included washer-extractors must have the Milnor part number specified in [Table 6: Controllers Capable of Transferring Memory, page 36](#) with the specified software installed.

- The Milnor part number for the processor board appears on a white sticker near the Milnor logo on the processor board.
- The revision level of the processor board is white lettering stamped directly on the green circuit board, located below the part number sticker. Look for “REV. K.”
- The processor board software version appears on a white label affixed to one of the large integrated circuit components on the processor board.

Figure 9. Controls Identification on Serial Memory Storage Device

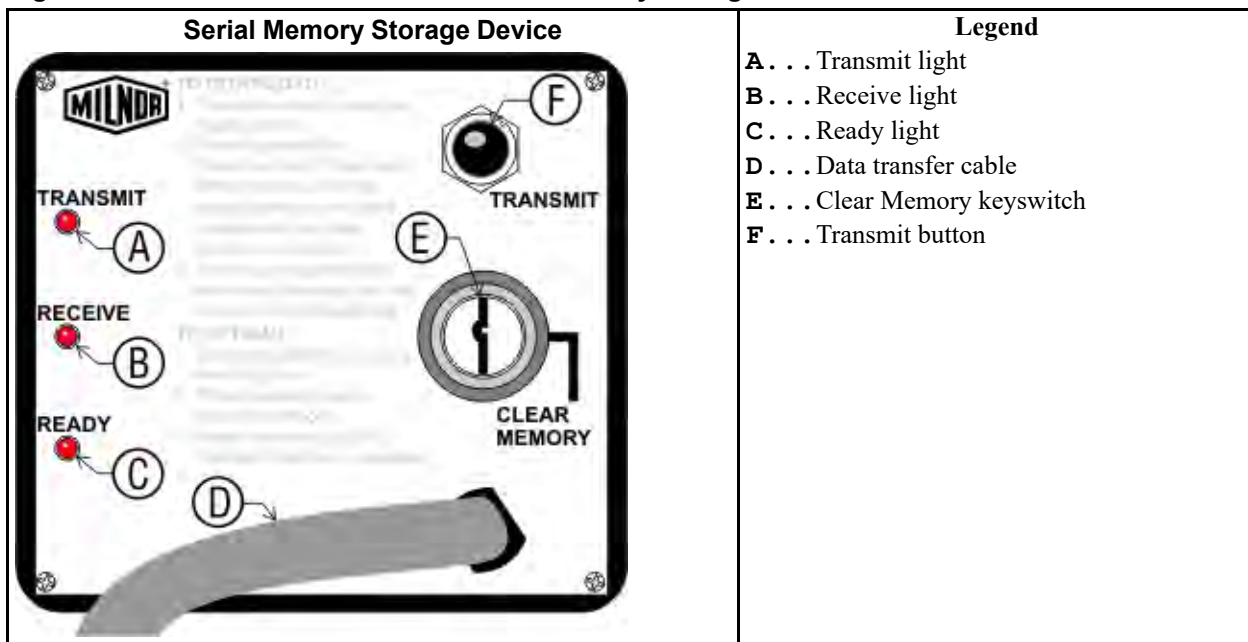

2.3.6.1 Establishing the Required Connections

BNCJUP05.R01 0000195291 A.4 A.8 A.6 1/2/20 1:16 PM Released

Display or Action

Explanation



Turn off power to the machine before connecting the serial memory storage device or connecting the two machines together.

Connect the storage device to the machine, or the two machines together, using the 9-pin round connector.

Apply power to the machine(s). The storage device receives power through the connector from the power supply in the machine.


Turn the key on the storage device to **Clear Memory**, then return the key to the normal vertical position. This process is handled automatically when transferring from one machine to another.

The **Ready** light on the storage device will remain off until the clearing process is complete. The clearing process is fully automatic and requires no user action beyond turning the key to **Clear Memory** and returning it to the normal position.

When the **Ready** light comes on again (after about 45 seconds), the storage device is ready to accept data from the machine controller.



CAUTION: **Ensure Data Integrity** — Clear the memory storage device before saving data to it.

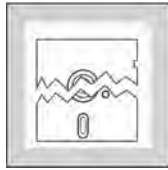

- ▶ The memory storage device will hold all programming and configuration data for one machine, and can be re-used many times. However, this device will only accept new data when it's empty.
- ▶ Attempts to save data to a storage device that has not been cleared will fail, **even if the procedure appears successful.**

Display or Action

RUN PROGRAM00 OK TO
POWER OFF



PROGRAM 0 MENU OK
TURN KEY TO RUN



PROGRAM 4 MENU
DATA TRANSFER

Explanation

When the **Run Program** display appears, switch from **Run** mode to **Program** mode.

Turn the **Run/Program** keyswitch on the machine controller(s) from the **Run** position to the **Program** position.

Controller display when the **Run/Program** keyswitch is set to  (**Program** position).

Scroll down in the **Program** menu to **Data Transfer**. If two machines are connected together, this is required at both machines.

This is the **Data Transfer** menu selection. Follow the procedure in [Section 2.3.6.2 : Saving Data from the Machine to the Storage Device or a Second Machine, page 39](#) for making a copy of good data from the machine controller. Refer to [Section 2.3.6.3 : Restoring Saved Data to the Machine from the Storage Device or Another Machine, page 41](#) for instructions on restoring previously saved data from the storage device (or another machine) to the machine controller, as might be required after changing the processor board.

2.3.6.2 Saving Data from the Machine to the Storage Device or a Second Machine

BNCJUP05.R02 0000195354 A.4 A.8 A.6 1/2/20 1:16 PM Released

Display or Action



DOWN LOAD DEVICES0
MACHINE<==>MACHINE

DATA TRANSFER0
SLAVE



DATA TRANSFER1
MASTER

Explanation

Confirms selection and advances to the **Data Transfer** menu.

This is the **Data Download** sub-menu. Select the desired type of data transfer here.

There are two selections available in the **Data Transfer** menu: **0=Slave** and **1=Master**.

For saving information **to** the data storage device or another machine, select **1=Master** at the machine controller. If two machines are connected, establish the one which will **receive** the data as the slave, and the **sending** machine as the master.

The machine controller is set as the Master device, making the storage device the slave.



NOTE: The **Master** device is always the **sender** and controls when the data transfer starts. The **Slave** device is always the **receiver** and should be established and waiting for data before the **Master** device is confirmed.



NOTICE: Do not send data to the memory storage device until the storage device is cleared and ready to receive. The **Ready** light must be **on** when transfer begins or the stored data will not be valid.



Confirms selection of the machine controller as the **Master** and immediately begins the transfer. **All receiving (slave) machines must be established before the master machine is designated.**

PLEASE WAIT AC35
TRANSFERRING DATA



While the data transfer is occurring, the four digits at the top right of the display scroll rapidly as the machine controller sends data.

The **Receive** light on the storage device illuminates when the data transfer begins, indicating that it is receiving data. The display on the slave machine scrolls quickly as data is accepted.



NOTE: Transfer times may vary somewhat, but the average is about 75 seconds.

COMPLETED 0000
TRANSFERRING DATA



This display indicates that the machine controller delivered the data to the storage device.

The **Receive** light on the storage device goes off when the transfer successfully ends. If all three lights on the storage device begin blinking at any time during the transfer, the data being received by the storage device is invalid. Clear the memory in the storage device and perform the transfer again.



CAUTION: Data Corruption Hazard — If the machine controller indicates that the data transfer is complete but the **Receive** light on the data storage device is still illuminated, invalid data is stored in the storage device.



► Do not rely on the data in the storage device unless the machine controller indicated that the transfer completed, **AND** the **Receive** light on the storage device turned off automatically.

► Do not restore data from the storage device to the machine if the data is invalid. Restoring invalid data from the storage device to the machine controller will overwrite any formulas that have been changed or created since the data was last stored. These formulas can not be recovered.

Display or Action



PROGRAM 4 MENU
DATA TRANSFER

Explanation

Acknowledges that the data transfer is complete and returns to the **Program** menu.

Data Transfer menu display. Scroll to **Program** menu item **0**, then turn the **Run/Program** keyswitch to the **Run** position.



Scroll the **Program** menu selections.

From item **0** of the **Program** menu, return to normal operating mode.

Return to normal operating mode. Press if necessary to confirm that the key is at **Run**.

The **Run Program** display appears to indicate that it is safe to turn the machine off.

Turn off power to the machine(s).

Disconnect the memory storage device, remove the key, and put both in secure locations. For two machines, remove the connecting cable.

2.3.6.3 Restoring Saved Data to the Machine from the Storage Device or Another Machine

BNCJUP05.R03 0000195423 A.4 A.8 A.6 1/2/20 1:16 PM Released



Explanation

Turn off power to the machine(s) before connecting the serial memory storage device.

Connect the storage device to the machine using the 9-pin round connector. For two machines, use a serial cable constructed as described in [Section 5.3 : Construction of External Serial Link Cables, page 72](#).

Apply power to the machine(s). The storage device receives power through the connector from the power supply in the machine.

When the **Run Program** display appears, switch from **Run** mode to **Program** mode.

Turn the **Run/Program** keyswitch on the machine controller(s) from the **Run** position to the **Program** position.

Controller display when the **Run/Program** keyswitch is set to (**Program** position).

Scroll down in the **Program** menu to **Data Transfer**.

This is the **Data Transfer** menu selection. Follow the procedure in [Section 2.3.6.2 : Saving Data from the Machine to the Storage Device or a Second Machine, page 39](#) for making a copy of good data from the machine controller.

Confirms selection and advances to the **Data Transfer** menu.

The machine controller is set as the **Slave** device, making the storage device the **Master**. The **Master** device always controls when the data transfer starts and **sends** the data to the slave device. If



DATA TRANSFER **
PLEASE WAIT **

PLEASE WAIT 0000
RECEIVING DATA



E-PXPRESS/TxX
SYSTEMCORRECTIONAL
LAUNDRY

CONFIG CHKSUM
1234FORMULA CHKSUM
4321

COMPLETED 0000



PROGRAM 4 MENU
DATA TRANSFER



PROGRAM 0 MENU OK
TURN KEY TO RUN



RUN PROGRAM00 OK TO
POWER OFF


transferring data from one machine to another, **the slave machine will receive the data sent from the master.**

Confirms the selection of the machine controller as the **Slave** device.

Appears for three seconds as the machine controller prepares machine memory to accept data from the storage device. When this display appears, all memory in the machine controller is cleared.

This display indicates that the machine controller is polling the data storage device for incoming data. The four characters at the right end of the top line show the memory location currently being written. These characters remain at “0000” until the transfer begins.

Press the **Transmit** button on the data storage device or confirm the **Master** setting on the sending machine to begin the transfer.

As soon as the **Transmit** button on the data storage device is pressed (or  on the master machine), the storage device begins sending a continuous data stream to the slave machine controller. The machine display shows the progress of this display in the four characters on the top line. The transfer is complete when the display shows “FFFF.”

The **Transmit** light on the data storage device turns off when the transfer completes.

Appears for about one half second as the machine controller updates all memory.

Appears briefly (about one half second) as the machine controller verifies that the checksums calculated for the downloaded data match the checksums sent by the data storage device.


This display indicates that the data received by the machine controller matches exactly the data sent by the storage device. The data transfer was successful.

Acknowledge that the data transfer is complete and returns to the **Program** menu.


Data Transfer menu display. Scroll to **Program** menu item **0**, then turn the **Run/Program** keyswitch to the **Run** position.

Scroll the **Program** menu selections.

From item **0** of the **Program** menu, return to normal operating mode.

Return to normal operating mode. Press  if necessary to confirm that the key is at **Run**.

The **Run Program** display appears to indicate that it is safe to turn the machine off.

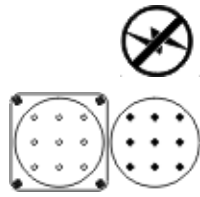

Turn off power to the machine(s).

Disconnect the memory storage device, remove the key, and put both in secure locations.

BNCXUP24 / 2018456

BNCXUP24 0000210921 A.6 1/2/20 1:35 PM Released

2.4 E-P Express® Gear Guardian® Formulas

BNCXUP24.C01 0000210991 A.4 A.6 1/2/20 1:35 PM Released

The Milnor® factory programs E-P Express® Gear Guardian® washer-extractors with default formulas which are always available in the machine. These default formulas can be loaded into the machine's memory, modified, and deleted according to procedures described in the related section in [Section 2.3 : Programming the E-P Express® Gear Guardian® Controller, page 19](#) . However, a copy of the default formula set is always retained and available for replacing the modified formulas if necessary.

In addition to the Gear Guardian formula set, this software also contains default formulas for eight other industries, listed below. These formula sets are available through DIP switch settings ([Table 3: DIP Switch Settings for Industry Configurations, page 19](#)).

1. Athletic laundry
2. Correctional laundry
3. Hotel-motel laundry
4. Healthcare laundry
5. Restaurant laundry
6. Shirt laundry
7. Commercial laundry
8. Offshore laundry

Contact your authorized Milnor® dealer or the Milnor® factory for the formula charts for these additional industry configurations.

2.4.1 How to Use the Formula Tables

BNCXUP24.C02 0000211001 A.4 A.6 1/2/20 1:35 PM Released

Each standard Gear Guardian® formula is described in tabular form in this document. Formulas are made up of steps, which are programmed through a series of decisions. In the formula tables in this manual, each step decision is represented by a column, and each step is described by one row of the table.

Part of a typical formula chart is shown in [Table 7](#) below, and a brief description of each step decision follows the table. For more complete explanations of each decision, see [Section 2.3.3 : How to Add or Change a Formula \(Option 1\), page 21](#) .

Table 7. Sample Formula

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	7	0	1	0	1	1	0	4	0	0	3		
2	2	0	2	0	1	1	2	0					3		
3	4	0	1	0											

2.4.1.1 T = Type of Step

BNCXUP24.C03 0000211000 A.4 A.6 A.3 1/2/20 1:35 PM Released

0 = End Formula always the **last step** in a formula; signifies that there are no further steps and prompts the programmer for step decision **E = How to End Formula**

1 = One-way Wash basket rotates in one direction only throughout this step; used for small goods

2 = Two-way Wash basket reverses rotation periodically throughout this step; used for goods which might tangle

3 = Soak Wash basket is stationary throughout this step; drastically reduces mechanical action

4 = Extract basket rotates at maximum speed to eliminate as much water as possible from the goods

2.4.1.2 MMQ = Step Duration

BNCXUP24.C04 0000210999 A.4 A.6 A.3 1/2/20 1:35 PM Released

Enter the duration of the step in minutes, minutes, and quarter-minutes.

001 step duration of 15 seconds (minimum allowable step duration)

072 step duration of 7:30 (7 minutes and 2 quarter-minutes)

633 step duration of 63:45 (maximum allowable step duration)



NOTE: The total time for a wash formula will be greater than the sum of the individual step times because of drain times and coast times, which may vary among machine models.

2.4.1.3 H = Hot Water Valve

BNCXUP24.C05 0000210998 A.4 A.6 A.3 1/2/20 1:35 PM Released

0 hot water valve off for this step

1 hot water valve on for this step

2.4.1.4 C = Cold Water Valve

BNCXUP24.C06 0000210997 A.4 A.6 A.3 1/2/20 1:35 PM Released

0 cold water valve off for this step

1 cold water valve on for this step

2.4.1.5 L = Bath Level

BNCXUP24.C07 0000210996 A.4 A.6 A.3 1/2/20 1:35 PM Released

1 low bath level

2 high bath level

2.4.1.6 C = Chemicals

BNCXUP24.C08 0000210995 A.4 A.6 A.3 1/2/20 1:35 PM Released

There may be more than one chemical decision per step because up to two chemicals may be added to a single bath.

- 0 no chemical injection commanded
- 1 inject chemical 1, usually detergent
- 2 inject chemical 2, usually alkali
- 3 inject chemical 3, usually bleach
- 4 inject chemical 4, usually softener
- 5 inject chemical 5, usually starch

2.4.1.7 W = When to Inject Chemical

BNCXUP24.C09 0000210994 A.4 A.6 A.3 1/2/20 1:35 PM Released

At what point in the step is this chemical to be injected?

- 0 begin injecting the chemical when the water valve(s) open.
- 1 begin injecting the chemical when the commanded bath level is achieved

2.4.1.8 SS = Chemical Injection Duration

BNCXUP24.C10 0000210993 A.4 A.6 1/2/20 1:35 PM Released

How long should the chemical injection continue?

- 00 0 seconds; chemical injection prohibited
- 40 40 seconds; default value
- B9 119 seconds (see [Table 8](#))
- Q5 255 seconds; maximum value

Table 8. Codes for Inject Times of 100 Seconds and Longer

Alphabetic Code	Value	Alphabetic Code	Value	Alphabetic Code	Value	Alphabetic Code	Value
A	100	E	140	I	180	M	220
B	110	F	150	J	190	N	230
C	120	G	160	K	200	P	240
D	130	H	170	L	210	Q	250

2.4.1.9 * = Signal with Chemical Injection

BNCXUP24.C11 0000210992 A.4 A.6 A.3 1/2/20 1:35 PM Released

Should the machine operator be notified when this chemical injection is desired?

- 0 No. The chemical injection occurs automatically without operator notification or intervention.
- 1 Yes. The machine will signal the operator when this chemical injection is desired. The operator must cancel the signal by pressing ☒ before the injection will begin.

2.4.1.10 D = Drain Action

BNCXUP24.C12 0000211021 A.4 A.6 A.3 1/2/20 1:35 PM Released

What type of drain action is desired for this step?

- 0 Standard drain speed; basket turns clockwise at drain speed

- 1 Two-way wash speed; basket reverses at wash speed for additional mechanical action during draining
- 2 Do not drain; bath liquor is retained, as for the injection of additional chemicals or for baths longer than the control allows in a single step.
- 3 Stop with fill. The basket does not turn while filling prior to this drain, but turns at standard drain speed during draining.
- 4 Stop with drain. The basket does not turn while draining.
- 5 Stop with fill and drain. The basket is held stationary during both fill and drain for this step.

2.4.1.11 E = How to End Formula

BNCXUP24.C13 0000211020 A.4 A.6 A.3 1/2/20 1:35 PM Released

How should this formula end?

- 0 Stop and require operator to cancel signal
- 1 Reversing at wash speed and require operator to end formula
- 2 Rotating at wash speed and require operator to end formula
- 3 Tumble at wash speed for two minutes, then sound operator signal
- 4 Stop and sound operator signal for two minutes, then shut off
- 5 Reverse at wash speed with signal sounding for two minutes, then shut off
- 6 Rotate at drain speed for two minutes with signal, then shut off
- 7 Tumble for two minutes, then tumble with signal for two minutes, then shut off

Figure 10. Worksheet

Formula Worksheet for Milnor[®] E-P Express[®] Gear Guardian[®] Washer-extractors

[illegible]

2.4.3 Gear Guardian® Formula Charts

BNCXUP24.R01 0000211017 A.4 A.6 1/2/20 1:35 PM Released

Table 9. Formula 01 - Light Soil Turnouts

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	7	0	1	0	1	1	0	4	0	0	3		
2	2	0	2	0	1	1	2	0					3		
3	4	0	1	0											
4	2	0	1	0	1	1	2	0					3		
5	4	0	1	0											
6	2	0	1	0	0	1	2	0					3		
7	5	0	6	0										0	
8	0	0													

Table 10. Formula 02 - Heavy Soil Turnouts

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	7	0	1	0	1	1	0	4	0	0	3		
2	2	0	2	0	1	0	2	0					3		
3	2	0	7	0	1	0	1	2	0	4	0	0	3		
4	2	0	1	0	1	1	2	0					3		
5	4	0	1	0											
6	2	0	1	0	1	1	2	0					3		
7	4	0	1	0											
8	2	0	1	0	0	2	2	0					3		
9	5	0	6	0										0	
10	0														

Table 11. Formula 03 - Light Soil Moisture Barriers

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	5	0	1	0	1	1	0	4	0	0	3		
2	2	0	1	0	1	1	2	0					3		
3	4	0	1	0											
4	2	0	1	0	0	1	2	0					3		
5	5	0	4	0										0	
6	0														

Table 12. Formula 04 - Heavy Soil Moisture Barriers

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	5	0	1	0	1	1	0	4	0	0	3		
2	2	0	1	0	1	1	2	0					3		
3	4	0	1	0											
4	2	0	1	0	1	1	2	0					3		
5	5	0	5	0										0	
6	0														

Table 13. Formula 05 - Oil-contaminated Gear

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	1	0	1	0	1	1	0	4	0	0	3		
2	3	1	5	0	1	0	1	0					3		
3	2	0	3	0	1	0	2	0					3		
4	2	0	7	0	1	1	1	2	0	4	0	0	3		
5	2	0	2	0	1	1	2	0					3		
6	4	0	2	0											
7	2	0	2	0	1	1	2	0					3		
8	4	0	2	0											
9	2	0	2	0	1	1	2	0					3		
10	5	0	6	0										0	
11	0														

Table 14. Formula 06 - Brush Gear

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	8	0	1	0	1	1	0	4	0	0	3		
2	2	0	2	0	1	1	2	0					3		
3	4	0	1	0											
4	2	0	1	0	1	1	2	0					3		
5	4	0	1	0											
6	2	0	1	0	0	1	2	0					3		
7	5	0	6	0										0	
8	0														

Table 15. Formula 07 - Hoods and Suspenders

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	6	0	1	0	1	1	0	4	0	0	3		
2	2	0	1	0	1	1	2	0					3		

Table 15 Formula 07 - Hoods and Suspenders (cont'd.)

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
3	4	0	1	0											
4	2	0	1	0	1	1	2	0					3		
5	4	0	1	0											
6	2	0	1	0	0	1	2	0					3		
7	5	0	5	0										0	
8	0														

Table 16. Formula 08 - Truck Towels

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	7	0	1	0	1	1	0	4	0	0	3		
2	2	0	1	0	1	1	1	0					3		
3	4	0	1	0											
4	2	0	1	0	1	1	2	0					3		
5	4	0	1	0											
6	2	0	1	0	0	1	2	0					3		
7	5	0	6	0										0	
8	0														

Table 17. Formula 09 - Stationwear

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	8	0	1	0	1	1	0	4	0	0	3		
2	2	0	4	0	1	1	1	0					3		
3	4	0	1	0											
4	2	0	1	0	1	1	2	0					3		
5	4	0	1	0											
6	2	0	1	0	0	1	2	0					3		
7	5	0	6	0										0	
8	0														

Table 18. Formula 10 - Sheets and Pillowcases

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
1	2	0	7	0	1	0	1	1	0	4	0	0	3		
2	2	0	1	0	1	0	2	0					3		
3	4	0	1	0											
4	2	0	1	0	1	1	2	0					3		
5	4	0	1	0											

Table 18 Formula 10 - Sheets and Pillowcases (cont'd.)

Decision															
Step Number	T	M	M	Q	H	C	L	C	W	S	S	*	D	E	Chemical Dose
6	2	0	1	0	1	1	2	0					3		
7	5	0	6	0										0	
8	0														

3 Operating

3.1 Running a Formula

BNCJHO03.C01 0000208871 A.4 A.3 1/2/20 1:16 PM Released

3.1.1 Applying Power

BNCJHO03.C02 0000208870 A.4 A.3 1/2/20 1:16 PM Released

Display or Action



Explanation

The **Run/Program keyswitch** must be set to the **Run** position before the main wall disconnect (fuse or circuit breaker) is closed to provide power to the machine.

When power is first applied to the machine, the display shows the software copyright information, machine name, and the checksum number. The checksum number changes with any programming change. To detect unauthorized programming, record the checksum at the end of each authorized programming session and compare it to the checksum displayed at each power up.

Milnor® washer extractors with E-P Express® controls do not use a speed sensing device to verify that the basket has stopped rotating. Therefore, when power is first applied to the machine, at least 80 seconds must elapse before any further operations can be attempted. This provides sufficient time for the basket to coast to a complete stop if power was lost while the machine was in high speed extract and restored before the basket stopped.



DANGER:



Entanglement Hazard — The linen inside or hanging partially outside a turning cylinder can suddenly wrap around your hand, arm, or body. The inertia of the spinning cylinder can cause the entangled linen to twist off or sever body parts. You can be killed or seriously injured.

- ▶ Never put any part of your body inside this machine or touch the linen while the machine is turning.

3.1.2 Selecting and Starting the Formula

BNCJHO03.C03 0000208869 A.4 A.3 1/2/20 1:16 PM Released

3.1.2.1 Load Machine and Close Door

BNCJHO03.C04 0000208868 A.4 A.3 1/2/20 1:16 PM Released

Load the machine to the rated capacity and securely close the loading door. Review [Section 1.2 : Determining Load Size, page 4](#) for guidelines on loading machines.

3.1.2.2 Selecting a Formula

BNCJHO03.C05 0000208867 A.4 A.3 1/2/20 1:16 PM Released

Display or Action

```
RUN FORMULA
00 OK TO POWER OFF
```



```
RUN FORMULA
07 FORMULA NUMBER 07
```



```
RUN FORMULA
DOES NOT EXIST
```

Explanation

This is the **Run Formula display**. From this display, the operator can disconnect power from the machine without risking damage to electronic parts, or he can select a formula to run, as described below.

indexes **forward** through the 30 formulas.

indexes **backward** through the 30 formulas.

Example display: Formula 07 selected for running.

starts the machine with the selected formula.

indicates that the formula selected for running has not been programmed or is not available. This display appears for three seconds.

3.1.3 Unloading the Machine

BNCJHO03.C06 0000208866 A.4 A.3 1/2/20 1:16 PM Released

How a formula ends may depend on whether the formula finishes without interruption or is terminated manually.



DANGER:



Entanglement Hazard — The linen inside or hanging partially outside a turning cylinder can suddenly wrap around your hand, arm, or body. The inertia of the spinning cylinder can cause the entangled linen to twist off or sever body parts. You can be killed or seriously injured.

- ▶ Never put any part of your body inside this machine or touch the linen while the machine is turning.

When a formula ends normally or is terminated, the door remains locked while the cylinder coasts to a stop. The door unlocks 80 seconds after the formula ends.

Display or Action

```
UNLOCKING THE DOOR
** PLEASE WAIT **
```

```
WAITING TO UNLOAD
U
```



Explanation

display during the coast period when a formula ends.

At the end of the coast time, the operator alarm sounds.

Silences the operator alarm. The door unlocks, and the machine may be unloaded.

3.1.4 The Display During Automatic Operation

BNCJHO03.C07 0000208865 A.4 A.3 1/2/20 1:16 PM Released

Display or Action

```
23:04 F02S01 02:37
L=A1/D1 Hot Wash
```

Explanation

These two displays alternate during normal operation while any chemical injection signal is enabled. The number on the right end

23:04 STEP# 01 02:37
CHEM 1+2 025

23:04 F02S01 02:37

23:04 EXTRACT 02:37

L=A0/D2 Hot Rinse

of the bottom line indicates the number of seconds remaining in the longest programmed injection.

23:04 is the time remaining in the formula.

F02S01 indicates that the current formula is 02 (F02) and the current step is 01 (S01).

02:37 is the time remaining in this step.

EXTRACT indicates that the machine is currently executing an extract.

TIMEHALT indicates that the timer is stopped while a chemical is being injected. The chemical supplier must connect equipment for this option.

L=A0/D2 indicates that level 1 (low level) has not been achieved, and level 2 is desired. A1/D2 indicates that level 1 is achieved, but level 2 (high level) is desired.

The programmed step type appears to the right of the level indicator. The step type includes the temperature range, indicating which water valves are used to fill the machine.

3.1.5 How to Shorten, Terminate, or Suspend a Running Formula

BNCJHO03.C08 0000208864 A.4 A.3 1/2/20 1:16 PM Released

Display or Action



Explanation

Cancels a step. Advances the step timer to zero for any bath, a drain not followed by an extract, or any extract in progress. The next step begins automatically.

This operation is possible only if DIP switch 6 on the processor board is in the **off** position, allowing the cancelling of steps.



Cancels the current formula and returns the machine to the **Run Formula** display.

RUN FORMULA
00 OK TO POWER OFF

This is the **Run Formula** display. The door interlock delay, described in [Section 3.1.3 : Unloading the Machine, page 53](#), must expire before the door can be opened.

3.1.6 How to Restart after Power Loss

BNCJHO03.C09 0000209064 A.4 A.3 1/2/20 1:16 PM Released

The E-P Express® control remembers the formula and step it was executing if power fails or if the wall disconnect is turned off while the machine is operating in automatic mode.

Display or Action

PRESS START TO RUN
STEP xx - FORMULA yy

Explanation

On most machine models, this display appears when power is restored. The formula and step which were in progress when power was interrupted are shown.

1

Resumes the formula at the displayed formula and step. If the outage occurred in a bath step, level must again be satisfied, even if it was already satisfied before power was lost. Any commanded chemicals will be injected again.

If the outage occurred during a drain, that step will be repeated, then followed by the next commanded step.

If the outage occurred during an extract step, the previous bath will be repeated before the extract step begins.



Terminates the formula in progress.

3.1.7 How the Flush Valve Works

BNCJHO03.C10 0000209063 A.4 A.3 1/2/20 1:16 PM Released

The E-P Express® controller provides an output signal that activates the flush valve for 20 to 30 seconds 15 seconds after the last chemical injection for each bath ends. If a bath is shortened or terminated before or while this valve is energized, the flush valve will be turned off. Shortening or terminating a bath may prevent the flush valve from activating.

BNCJUP01 / 2018385

BNCJUP01 0000181486 C.3 1/2/20 1:16 PM Released

3.2 How to Use and Erase the Formula Counter

BNCJUP01.C01 0000181485 A.4 C.3 1/2/20 1:16 PM Released

The microprocessor controller adds one count to a discrete counter for each formula near the end of each formula. The counter holds this value until you set the value to 0. Each formula counter has a maximum value of 999. A counter at the maximum value holds the maximum value until you set it to 0. You can only see or erase the count for each formula when the machine can operate correctly.



CAUTION: **Prevent Incorrect Data** — You can cause damage to the collected data if the machine does not have power for extended periods of time. An electrical surge can also cause damage to the collected data.



► Apply power to the machine for 15 seconds in each 48-hour interval to keep the correct formula count. See [Section 1.1 : Important Data About this Machine, page 3](#) for more data.

- Make sure that the count is accurate. Record the value in each counter. Set the value in each counter equal to 0 before it increases to 999 counts.
- If the display shows an **accumulator error**, set the values in all formula counters to 0. Detailed error messages can be found elsewhere in the manual. See table of contents.

Display or Action

RUN FORMULA
00 OK TO POWER OFF



Explanation

This is the correct display when the machine first gets power.

Move through the formula numbers (01–30) in one of the two directions to find a formula.

For each formula:



RUN FORMULA	038
05 FORMULA NUMBER	05

Shows the count in the top right corner of the display.

This machine cleaned 38 cycles with formula 05.



Sets the count in the formula counter equal to 0.

4 Troubleshooting

BNCJHT07 / 2018466

BNCJHT07 0000211835 A.6 1/2/20 1:16 PM Released

4.1 Error Messages

BNCJHT05.C01 0000209199 A.4 A.6 A.3 1/2/20 1:16 PM Released

4.1.1 Error Messages at Power Up

BNCJHT07.T01 0000211834 A.4 A.6 1/2/20 1:16 PM Released

If an error message appears during power up, the error must be cleared before the machine can be run or programmed.

Display or Action

ACCUMULATOR ERROR
TERMINATE TO CLEAR

Explanation

The microprocessor performs a memory check each time the machine is turned on. This error message appears if the microprocessor detects that the accumulator data is corrupt, in which case all accumulators must be reset to zero.



Resets all accumulators and clears the error message. See [Section 3.2 : How to Use and Erase the Formula Counter, page 55](#) for more information.

Display or Action

CHECKSUM ERROR, TURN
KEY TO PROGRAM

Explanation

Appears if there is illegal data in the configuration, formula, or industry memory areas. Use the following procedure to clear this error.

1. Reconfigure the machine according to the configuration information in [Section 2.3 : Programming the E-P Express® Gear Guardian® Controller, page 19](#) .
2. Reinstall the standard (default) formulas according to the default formula loading procedure in [Section 2.3 : Programming the E-P Express® Gear Guardian® Controller, page 19](#) .
3. Reprogram any lost wash formulas according to [Section 2.3 : Programming the E-P Express® Gear Guardian® Controller, page 19](#) .

Display or Action

MEMORY: FLASH IS NOT
TALKING

Explanation

This message appears when the microprocessor cannot read from the flash memory.

1. Lock off and tag out power to the machine.
2. Replace flash memory. Contact the Milnor® factory to ensure that the replacement memory is the most current version for your machine.
3. Restore power to machine.

4. Reconfigure the machine according to the configuration information in [Section 2.3 : Programming the E-P Express® Gear Guardian® Controller, page 19](#) .
5. Reinstall the standard (default) formulas according to the default formula loading procedure in [Section 2.3 : Programming the E-P Express® Gear Guardian® Controller, page 19](#) .
6. Reprogram lost wash formulas according to [Section 2.3 : Programming the E-P Express® Gear Guardian® Controller, page 19](#) .

4.1.2 Error Messages during Normal Operation

BNCJHT05.R01 0000209197 A.4 A.6 B.3 1/2/20 1:16 PM Released

If an error message appears on the bottom line of the display while the machine is running, the timer shown on the top line will stop counting. When the error is corrected, the timer resumes counting down. To troubleshoot most errors, suspend the formula in progress and turn power off. Do not terminate the formula if it is to be resumed after the error is corrected. See [Section 3.1.5 : How to Shorten, Terminate, or Suspend a Running Formula, page 54](#) for more information.

Display or Action

DOOR NOT CLOSED

Explanation

This error message indicates that the door input is not made while the machine is running. Verify that the door is closed, then check the door switch and its connection to the microprocessor. Press **1** if necessary to resume operation after the error is corrected. **Never operate this machine while this message is present.**

CHECK LEVEL SWITCH

The level switch may be faulty, perhaps reporting that level 2 was achieved before level 1. Check the pressure transducer, or the level switch and its input connection to the microprocessor.

LEVELS STILL MADE




The microprocessor is still receiving information that a level is made just before or during an extract step, or immediately before the fill for a bath step. This error is self-clearing when level is lost.

TOO LONG TO FILL

For software WUH7JA, this error indicates that the time to fill to level exceeded 10 minutes. Check the water valves, strainers, supply lines, and water pressure. The machine will continue to fill until level is reached, at which time the error will automatically clear and normal operation will resume. This software is used on 30022X8J machine models.

For software WUV7J1B with version 2300K and later, you can configure the time before this error appears. This software is used on all machines with V_J in the model number, as well as 36026X8J and 420__X7J machine models.

- If configure decision **Fill Error Time** is set to **00**, then the machine will continue to fill until the programmed level is reached.
- If configure decision **Fill Error Time** is set to a value greater than 00, the machine will signal the error and turn off the

	water valves. The operator can choose to reset the error timer and try to fill again or to cancel the formula.
	Cancel the formula.
	Reset the fill error timer and try to fill again.
TOO LONG TO DRAIN	The machine did not drain properly in the allotted drain time. This self-correcting error will clear when the water level in the basket is low enough to begin the next operation. The drain time before this message appears is controlled by a configure decision. Detailed information can be found elsewhere in the manual. See table of contents.
EXTERNAL FAULT	On most machines, this error indicates that the programmed chemical injection failed, usually because the chemical supply system is empty. When chemicals are added and can be injected, this error clears automatically, allowing operation to resume.
THREE WIRE DISABLED	The three-wire relay de-energized. This relay provides control circuit power to the machine. Once energized by momentarily depressing the Start button, it is held energized by its own normally open contacts, along with motor overloads, door interlocks, etc. Should any of these contacts open even momentarily, the machine stops and this display appears. This error can only be cleared by depressing the Start button, and only then if the error has been cleared.
INVERTER FAULT	This error message appears if the microprocessor does not receive an input from the inverter within 14 seconds of the beginning of the formula. After 14 seconds without an inverter input, the timer stops, the basket is stationary, and the drain valve opens. To recover, press the Next key ().
VIBRATION SW TRIPPED RECOVERY SEQUENCE	When the vibration switch closes, the timer stops. After 45 to 85 seconds, the basket reverses at wash speed as the cylinder fills with water. When low level is achieved, the cylinder reverses for one additional minute at wash speed, then accelerates to extract speed.

BNCJHT06 / 2018443

BNCJHT06 0000209292 B.3 1/2/20 1:16 PM Released

4.2 The E-P Express® Manual Menu

BNCJHT06.C01 0000209291 A.4 B.3 A.3 1/2/20 1:16 PM Released

4.2.1 The Manual Menu

BNCJHT01.C02 0000190167 A.4 B.3 A.9 1/2/20 1:16 PM Released

4.2.1.1 Components

BNCJHT06.C02 0000209290 A.4 B.3 1/2/20 1:16 PM Released

The **Manual menu** contains these selections:

1. **Software Date Code**—a display of the software type and date code, both of which are fixed in the software; and the industry type, which is determined by setting the DIP switches on the processor board.
2. **Test Inputs**—allows viewing of microprocessor inputs for testing when a formula is not running. Devices, including the door latch and the level transducer, provide signals to the microprocessor by grounding certain inputs. The status of these inputs can be monitored in this mode, and changes to the input status will appear instantaneously. Refer to [Section 4.2.6 : Viewing Inputs and Outputs During Operation, page 67](#) to view the status of inputs while the machine is operating.
3. **Test Outputs**—allows the actuation of outputs for testing when a formula is not running. Outputs are signals from the microprocessor to other devices, such as chemical pumps and motor contactors. Refer to [Section 4.2.6 : Viewing Inputs and Outputs During Operation, page 67](#) to view the status of outputs while the machine is operating.
4. **Test DIP Switch**—displays a hexadecimal number which is unique for each possible setting of the DIP switch. This number can be used with the appropriate tables to determine the industry configuration of the machine, as well as whether the machine is configured to allow the operator to skip certain steps during automatic operation.


4.2.1.2 How to Access the Manual Menu

BNCJHT01.R01 0000190191 A.4 B.3 A.9 1/2/20 1:16 PM Released

Display or Action

Explanation

RUN FORMULA
00 OK TO POWER OFF

The machine must be idle (power on, but not running a formula) before the **Manual menu** can be accessed. Also, the **Run/Program keyswitch** must be at the **Run** position (.



Accesses the **Manual menu**.

MANUAL MENU
1 SOFTWARE DATE CODE

Reverse type indicates blinking cursor position. Select one of the **Manual menu** modes or return to the **Run mode**, as described below.



Scrolls forward/backward through the available modes of the **Manual menu**.



Returns to the **Run mode**.

RUN FORMULA
00 OK TO POWER OFF

Run mode selected; control is awaiting selection of a valid formula number. The formula number that was selected when the **Manual menu** was accessed appears on the display.

4.2.1.3 How to Return to the Run Mode from the Manual Menu


BNCJHT01.R02 0000190749 A.4 B.3 A.9 1/2/20 1:16 PM Released

Display or Action

Explanation



 Enters the **Manual menu** from **Run mode**.



This is the **Manual menu** display.



Exits the **Manual menu** to the **Run mode**.



This is the **Run mode** display. Select a formula to run, or turn off machine power.

4.2.2 Determining the Software Version

BNCJHT06.R01 0000209289 A.4 B.3 A.3 1/2/20 1:16 PM Released

Display or Action

Explanation



 
Accesses the **Manual menu**.




Manual menu accessed and **Software date code mode** selected.




Hold both buttons depressed to view the software date code and machine configuration information, as shown below.



 Machine style (/T = T_X), software date code (21001), and configuration (Healthcare Laundry).



Run mode display is restored when the  button combination is released.

4.2.3 Viewing Microprocessor Inputs

BNCJHT06.R02 0000209288 A.4 B.3 A.3 1/2/20 1:16 PM Released

The on/off state of each input to the microprocessor can be displayed by using the **Test Inputs** selection of the **Manual menu**. The machine must be idle (not running a formula).

Display or Action

Explanation



 
Accesses the **Manual menu**.



Manual menu accessed and **Test Inputs** mode selected.



Accesses the **Test Inputs** mode.



The input display code on the top row corresponds to a display code in the table of inputs in this section. The status of the input is displayed beneath each code. If the input is grounded, a “+” appears. Non-grounded inputs are represented by “-”.



Restores the controller to the **Run mode**.



This is the **Run mode** display. Select a formula to run, or shut down the machine.

Table 19. E-P Express® Inputs

Display Code	Input Name	Connector-Pin
A	Door closed	M6-1
B	Low Water Level	M6-9
C	Vibration switch tripped	M6-2
D	Input from Inverter	M6-10
E	High water level	M6-3
F	Keyswitch in Program position	M6-11
G	not used	M6-4
H	Halt—external fault	M6-12
I	Halt—bath time	M6-5
J	not used (Door open desired on MWR models with WUMWRXGG software)	M6-13
J	Door open desired	M6-13
K	not used	M6-6
L	not used	M6-14

4.2.4 Actuating Microprocessor Outputs

BNCJHT06.R03 0000209520 A.4 B.3 A.5 1/2/20 1:16 PM Released

Machine functions may be tested individually or in groups by using the **Test Outputs** component of the **Manual menu**. The machine must be idle (not running a formula).



DANGER: Crushing and Entanglement Hazard — Bare manual outputs actuate washer-extractor mechanisms. Keep all personnel clear.



Display or Action



MANUAL MENU
3 TEST OUTPUTS



TEST OUTPUTS
01 INJECT CHEMICAL 5



TEST OUTPUTS
07 COLD WATER VALVE



Explanation

Accesses the **Manual menu**.

This is the **Manual menu** display with the **Test Outputs** component selected.


Accesses the output testing selection.

This is the **Output testing** display.

Indexes forward and backward through the output names, as shown in the table of outputs in this section.

Example display with output in place to be selected and subsequently actuated.


Accesses the selected output for actuation. All outputs are initially disabled when accessed.

COLD WATER VALVE
0=OFF 1=ON 

Example display with output accessed and disabled.




Enables the output (turns the output on).

COLD WATER VALVE
0=OFF 1=ON 

Example display with output enabled. The cold water valve is open.




If the output was already on, this keystroke turns it off.


COLD WATER VALVE
0=OFF 1=ON 

Example display with output disabled. The cold water valve is closed.



Disables (turns off) the output if it was previously enabled, and advances to the next output.

HOT WATER VALVE
0=OFF 1=ON 

Display after pressing  to advance to the next output.



Disables the output if it was enabled, then returns to the **Run mode**.

RUN FORMULA
 OK TO POWER OFF

Display of **Run mode**.

Table 20. E-P Express® Outputs

Output Number	Page-Column	Description	Device	MTA	Consequences of Actuation
1	0-a	Inject chemical 5	K1	5-2/5-11	Operates inject device for chemical 5
2	0-b	Inject chemical 1	K2	5-3/5-1	Operates inject device for chemical 1
3	0-c	Inject chemical 4	K3	5-4/5-1	Operates inject device for chemical 4
4	0-d	Inject chemical 3	K4	5-5/5-1	Operates inject device for chemical 3
5	0-e	Inject chemical 2	K5	5-6/5-1	Operates inject device for chemical 2
6	0-f	Hot water valve	K6	3-2/3-1	Opens valve
7	0-g	Cold water valve	K7	3-3/3-1	Opens valve
8	0-h	Drain solenoid	K8	3-4/3-1	Closes drain
9	0-i	Flush valve	K9	3-5/3-1	Opens flush valve
10	0-j	not used	K10	3-6/3-1	
11	0-k	not used	K11	3-7/3-1	
12	1-a	not used	K12	3-8/3-1	
13	1-b	not used	K13	3-9/3-1	
14	1-c	not used	K14	3-10/3-1	
15	1-d	not used	K15	3-11/3-1	
16	1-e	not used (Door open desired on MWR_ models with WUMWRXGG software)	K16	3-13/3-14	
16	1-e	Door lock	K16	3-13/3-14	
17	1-f	Unlock door	K17	3-15/3-16	Energizes door latch to unlocked position
18	1-g	not used	K18	3-18/3-17	
19	1-h	Extract speed (use only with empty cylinder)	K19	3-19/3-17	Locks door and turns cylinder at extract speed

Table 20 E-P Express® Outputs (cont'd.)


Output Number	Page-Column	Description	Device	MTA	Consequences of Actuation
20	1-i	Distribution (drain) speed (Door must be closed)	K20	3-20/3-17	Locks door and turns cylinder at drain speed.
21	1-j	Clockwise wash speed (Door must be closed)	K21	3-21/3-17	Locks door and turns cylinder clockwise at wash speed.
22	1-k	Counter-clockwise wash speed (Door must be closed)	K22	3-22/3-17	Locks door and turns cylinder counter-clockwise at wash speed.
23	0	Buzz signal	Signal on board	none	Sounds operator alarm
24	0	Run Light	Light on board	none	Turns on light in Start button (\\)
25	0	Reversing wash speed	Functional test	none	Locks door and reverses cylinder at wash speed.
26	0	High extract speed	Functional test	none	Locks door and turns cylinder clockwise at wash speed, then high extract speed.
27	0	Fill to level 1	Functional test	none	Locks door, closes drain, fills to level 1 with cold water.
28	0	Fill to level 2	Functional test	none	Locks door, closes drain, fills to level 2 with cold water.

4.2.5 Testing and Verifying the DIP Switch Settings

BNC/JHT06.C03 0000209519 A.4 B.3 1/2/20 1:16 PM Released

For all E-P Express® models, the set of default formulas is determined by how the DIP switches on the processor board are set. The bank of DIP switches is identified in [Figure 11: Processor Board, page 64](#).

Figure 11. Processor Board

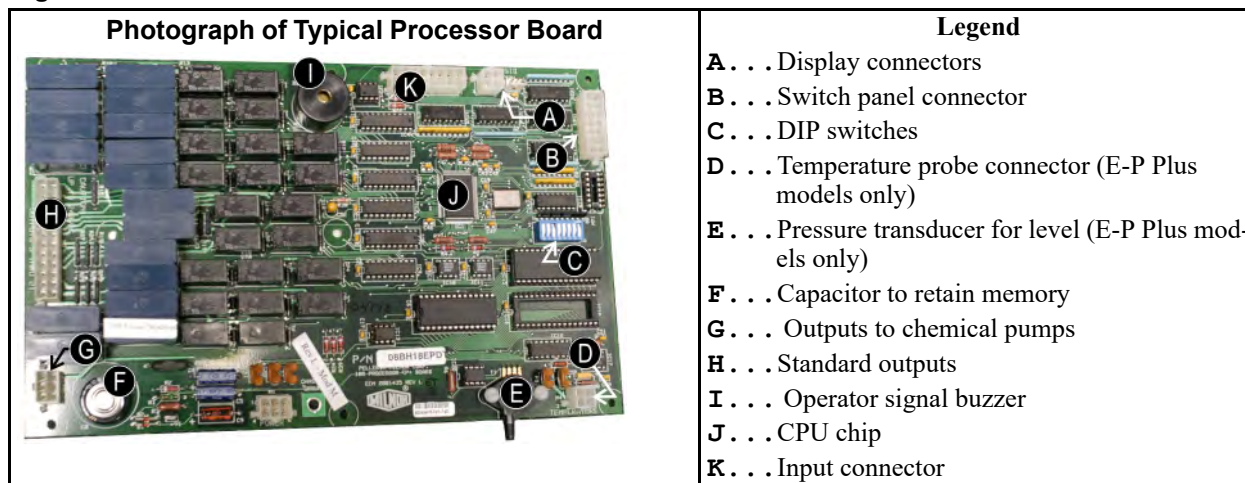

There is one unique number which identifies each possible combination of on/off settings at the DIP switch. While the industry configuration (switch 1 through switch 4) is readily available from the **Software version mode** (described in [Section 4.2.2 : Determining the Software Version](#),

page 61), the settings of other switch positions are only apparent from this display or by looking at the processor board.

Display or Action

Explanation



 
Enters the **Manual menu** from the **Run mode**.



This is the first item of the **Manual menu**.



Scrolls down to the **Test DIP Switch** item.



This is the **Test DIP Switch** item of the **Manual menu**.



Accesses the **Test DIP Switch** function and displays the DIP switch setting.



This is an example of the DIP switch display. Referencing this number in [Table 21: Interpretation of Test DIP Switch Display, page 65](#) shows that the sample machine is configured for Correctional Laundries, and that switch position 5 is OFF and 6 is ON.



Terminates the **Manual menu** and returns controller to **Run mode**.



NOTICE: If the value that appears on the display is not shown in [Table 21: Interpretation of Test DIP Switch Display, page 65](#) , add 64, 128, and 192 (the individual values of switch positions 7 and 8, respectively, and the total of 64 plus 128) to the value on the display, then check [Table 21: Interpretation of Test DIP Switch Display, page 65](#) for the new value.

- The values in the "Displayed Value" column of [Table 21: Interpretation of Test DIP Switch Display, page 65](#) appear on the display only when DIP switch positions 7 and 8 are OFF. Switch positions 7 and 8 do not affect how the washer-extractor operates.
- If the total of the displayed value plus 64 equals a value in the table, then switch position 7 is ON.
- If the total of the displayed value plus 128 equals a value in the table, then switch position 8 is ON.
- If the total of the displayed value plus 192 equals a value in the table, then switch positions 7 and 8 are ON.

Table 21. Interpretation of Test DIP Switch Display

Displayed Value	Switch Settings								Industry
	1	2	3	4	5	6	7	8	
192	1	1	1	1	1	1	0	0	Correctional
193	0	1	1	1	1	1	0	0	Hotel/Motel
194	1	0	1	1	1	1	0	0	Athletic

Table 21 Interpretation of Test DIP Switch Display (cont'd.)

Displayed Value	Switch Settings								Industry
	1	2	3	4	5	6	7	8	
195	0	0	1	1	1	1	0	0	Healthcare Facilities
196	1	1	0	1	1	1	0	0	Restaurants
197	0	1	0	1	1	1	0	0	Commercial Laundries
198	1	0	0	1	1	1	0	0	Shirt Laundries
199	0	0	0	1	1	1	0	0	Offshore Laundries
200	1	1	1	0	1	1	0	0	Gear Guardian
208	1	1	1	1	0	1	0	0	Correctional
209	0	1	1	1	0	1	0	0	Hotel/Motel
210	1	0	1	1	0	1	0	0	Athletic
211	0	0	1	1	0	1	0	0	Healthcare Facilities
212	1	1	0	1	0	1	0	0	Restaurants
213	0	1	0	1	0	1	0	0	Commercial Laundries
214	1	0	0	1	0	1	0	0	Shirt Laundries
215	0	0	0	1	0	1	0	0	Offshore Laundries
216	1	1	1	0	0	1	0	0	Gear Guardian
224	1	1	1	1	1	0	0	0	Correctional
225	0	1	1	1	1	0	0	0	Hotel/Motel
226	1	0	1	1	1	0	0	0	Athletic
227	0	0	1	1	1	0	0	0	Healthcare Facilities
228	1	1	0	1	1	0	0	0	Restaurants
229	0	1	0	1	1	0	0	0	Commercial Laundries
230	1	0	0	1	1	0	0	0	Shirt Laundries
231	0	0	0	1	1	0	0	0	Offshore Laundries
232	1	1	1	0	1	0	0	0	Gear Guardian
240	1	1	1	1	0	0	0	0	Correctional
241	0	1	1	1	0	0	0	0	Hotel/Motel
242	1	0	1	1	0	0	0	0	Athletic
243	0	0	1	1	0	0	0	0	Healthcare Facilities
244	1	1	0	1	0	0	0	0	Restaurants
245	0	1	0	1	0	0	0	0	Commercial Laundries
246	1	0	0	1	0	0	0	0	Shirt Laundries
247	0	0	0	1	0	0	0	0	Offshore Laundries
248	1	1	1	0	0	0	0	0	Gear Guardian



NOTE: The Gear Guardian® configuration is valid for E-P Express® models only if such machines are equipped with software WUT5XGGA (300—X models) or WUMWRXGG (MWR—X- models), available from Milnor®.

4.2.6 Viewing Inputs and Outputs During Operation

BNCJHT06.R04 0000209622 A.4 B.3 B.2 4/28/20 3:07 PM Released

While the machine must be idle to actuate outputs, inputs and outputs can be viewed (but not turned on or off) while the machine is operating.

Display or Action

23:04 F02S01 02:37
L=A1/D1 Hot Wash

Explanation

This is a typical display while the machine is running a formula.

 + 

displays the inputs. A plus sign (+) indicates the input is grounded, while a minus sign (–) indicates the input is not grounded.

ABCDEFGHIJK
+++-----

typical display of input status while the machine is running. Refer to [Table 20: E-P Express® Outputs, page 63](#) to determine which input is represented by each character on the display.

 + 

displays the first 11 outputs (Page 0). A plus sign (+) indicates the output is actuated, while a minus sign (–) indicates the output is turned off.

 + 

displays the last 11 outputs (Page 1).

PAGE abcdefghijk
0 -+-----

typical display of first page of outputs (Page 0) while the machine is running. Refer to [Table 20: E-P Express® Outputs, page 63](#) to determine the component represented by each character on Page 0 and Page 1.

4.2.7 Viewing Water Level and Temperature Data During Operation

BNCJHT06.R05 0000209621 A.4 B.3 A.3 1/2/20 1:16 PM Released

Display or Action

 +  + 

Explanation

displays pressure transducer raw data and actual water level in tenths

03:45 STEP #01 05:36
08240 081 080 LEV 2

From left to right, the bottom line displays the pressure transducer raw data, the actual water level and the filtered water level in tenths, and the desired level.

 + 

displays the calculated level, the desired level, and the temperature

03:48 STEP #01 05:36
LC07/LD07/T103 LEV 2

From left to right, the bottom line displays the calculate water level, the desired water level, and the water temperature. The level values on this display take into account any configured **offset height**.

5 Supplemental Information

BNCJUF01 / 2018385

BNCJUF01 0000190120 C.3 1/2/20 1:16 PM Released

5.1 The E-P Plus® and E-P Express® Hardware

BNCJUF01.C01 0000190133 A.4 C.3 B.3 1/2/20 1:16 PM Released



The Milnor® E-P Plus® and E-P Express® microprocessor controls are designed specifically for Milnor® washer-extractors. Along with certain external electromechanical relay logic and sensing devices, they control all machine and system functions. Not every Milnor® microprocessor system includes all the following components.

5.1.1 Keyswitches

BNCJUF01.C02 0000190132 A.4 C.3 A.6 1/2/20 1:16 PM Released



5.1.1.1 Run/Program Keyswitch

BNCJUF01.C03 0000190131 A.4 C.3 A.6 1/2/20 1:16 PM Released

This keyswitch allows controlling who has the necessary access to modify wash formulas. Formulas can be modified only when this switch is turned from the **Run** position () to the **Program** position (). To safeguard wash formulas, keep this key in a secure place with restricted personnel access.

5.1.1.2 Automatic/Test Keyswitch (E-P Plus® Models Only)

BNCJUF01.C04 0000190130 A.4 C.3 B.3 1/2/20 1:16 PM Released

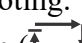This keyswitch allows only employees with access to the appropriate key to operate the machine in **Test mode** for troubleshooting. **Test mode** can be accessed only when this switch is turned from the **Automatic** position () to the **Test** position (). To reduce the risk of personal injury and machine damage, keep this key in a secure place with restricted personnel access.

5.1.2 Display

BNCJUF01.C05 0000190129 A.4 C.3 A.6 1/2/20 1:16 PM Released

The display is a vacuum fluorescent display consisting of two lines of 20 characters each. This type of display is easily identified by green characters on a black background when operating, or a nearly black background when not operating.

5.1.3 Power Supply

BNCJUF01.C06 0000190128 A.4 C.3 A.6 1/2/20 1:16 PM Released

The power supply provides a regulated specific voltage to the processor board and certain auxiliary boards and devices. The power supply also converts control circuit alternating current voltage to +12 volts direct current, -12 volts direct current, and +5 volts direct current. The power supply is switchable between 120 volts and 240 volts alternating current input voltage.

Although the +12VDC and –12VDC are not adjustable, the +5VDC is rather sensitive and the power supply must be adjusted so **the actual voltage at the processor board is between 5.04VDC and 5.06VDC** as measured by an accurate digital voltmeter. If this voltage is not within the stated range, the machine may malfunction.

5.1.4 CPU Processor Board

BNCJUF01.C07 0000190127 A.4 C.3 B.3 1/2/20 1:16 PM Released

The central processing unit (CPU) processes data received from the various inputs, stores information, and responds to each push button entry with the appropriate action. Data is stored in one or more of the following types of memory chips on the CPU board, depending on the machine model.

SRAM Static Random Access Memory stores the accumulator (formula count) data as long as the machine has power, or via a capacitor for approximately 24 hours with power off. This type of component is also used to retain the last formula and step in progress when power is turned off at the machine while a formula is running. SRAM is used in all E-P Plus® and E-P Express® controllers.

Flash Memory Similar to EEPROM memory in function, **flash memory** can be electrically erased and reprogrammed, but is faster and can retain more data than EEPROM memory. Flash memory is used on processor boards for F_J, H_J, X_J, and V_J models, and all E-P Express® models. The two flash memory chips reside in sockets IC2 and IC12. The chip in socket IC12 contains operating instructions and the complete set of industry standard formulas. As software updates are made available, the owner/operator may choose to replace this chip. The chip in socket IC2 holds the industry formulas and user changes to those formulas, as well as machine configuration data. The chip in socket IC2 will not normally need replacing for software updates.


5.1.5 Outputs

BNCJUF01.C08 0000190126 A.4 C.3 B.3 1/2/20 1:16 PM Released

Depending on the processor board, output relays may be either socket-mounted to a separate output board, or permanently soldered to the processor board. H_J, F_J, V_J, and X_J models, as well as all E-P Express® models, use the 188 processor board with soldered relays. The SPST (single pole, single throw) relays have the same load parameters as those used in other models (25VA).



WARNING: **Avoid damage to electronic boards** — Although the relays on 188 processor boards are capable of handling higher loads, failure to restrict current loads to the values stated above may cause traces on the processor board to fail, thus destroying the board.

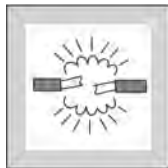

5.1.6 Option Outputs (E-P Plus® Models Only)

BNCJUF01.C09 0000190124 A.4 C.3 B.3 1/2/20 1:16 PM Released

The 188 E-P Plus® processor board used in F_J, H_J, X_J, and V_J models includes the option output relays as well as the standard output relays directly on the board. All 22 of the output relays on the 188 processor board are identical.

5.1.7 Temperature Probe (E-P Plus® Models Only)

BNCJUF01.C10 0000190171 A.4 C.3 B.3 1/2/20 1:16 PM Released

A thermistor temperature probe is provided in the machine sump if the machine is equipped for optional temperature control. This probe is a resistor that changes value according to temperature.

5.1.8 Pressure Sensor (E-P Plus® Models Only)

BNCJUF01.C11 0000190170 A.4 C.3 1/2/20 1:16 PM Released

The 188 E-P Plus® processor board contains a pressure transducer unit mounted directly to the board. This transducer produces a very small voltage (about 0.085 millivolt per inch of water) that increases as the water level in the basket rises. For E-P Plus® models, detailed information on the Pressure Transducer Circuit is provided. See table of contents.

BNUUUP01 / 2018302

BNUUUP01 0000196579 1/2/20 2:14 PM Released

5.2 Serial Memory Storage Device Applications

BNUUUP01.C01 0000196602 A.4 A.5 1/2/20 2:14 PM Released

A serial memory storage device similar to one shown below can be used to store machine configuration and formula data for most current models of Milnor® machines. DIP switches inside the storage device allow you to configure the device to accept data from several different machine types and software versions. Use this document to determine the proper DIP switch setting for your machine. After verifying the switch settings, label the storage device with the date, machine name, and serial number to avoid confusion when the device is needed to restore data to a machine.

Figure 12. Serial Memory Storage Device

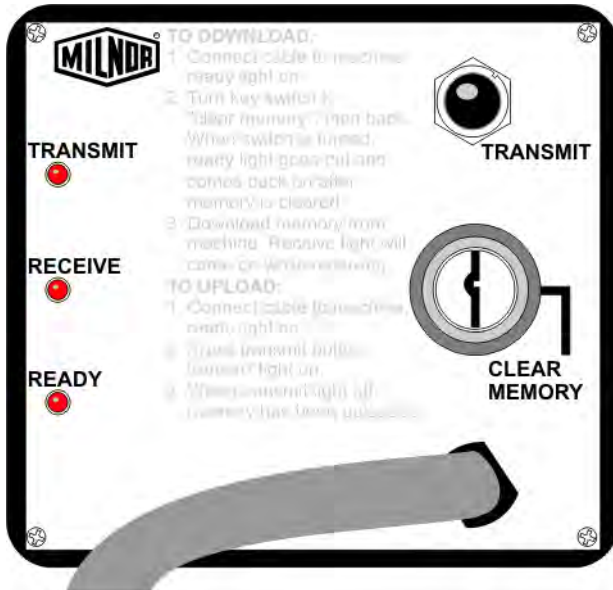


Figure 13. Rear View of Circuit Board

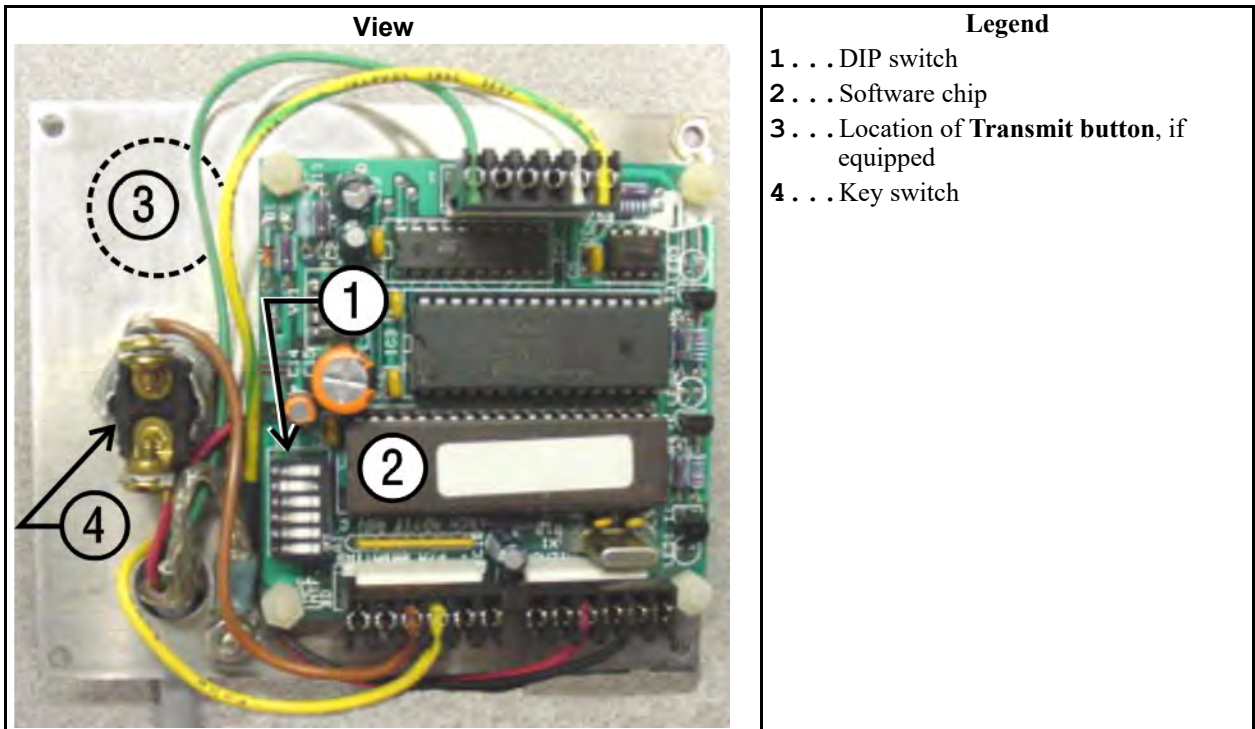


Table 22. DIP Switch Positions for E-P Plus® and E-P Express® Machines (External transmit button required)

Processor Board Part Number	Processor Board Revision Code	Machine Software and Revision	Storage Device Software and Revision	DIP Switch Setting
30015HxJ and 30022HxJ Models				
08BH18EPDT	K	WUH7JA/2200E	WUNTIA/00008	E
VxJ Models				
08BH18EPDT	K	WUV7J1B/2200K	WUNTIA/00008	E
30015T5X and 30022T5X Models				
08BH18EPYT	K	WUEPXRSA/22004	WUNTIA/00008	E
All E-P Express Gear Guardian Models				
08BH18EPYT	K	WUT5XGGA/22GGF	WUNTIA/00008	E
08BH18EPWT	K	WUMWRXGG/(any)	WUNTIA/00008	E
Key:				
A	All switch positions OFF			
B	Position 4 ON; all others OFF			
C	Position 5 ON; all others OFF			
D	Positions 1 and 5 ON; all others OFF			
E	Positions 4 and 5 ON; all others OFF			

BNCUUP02 / 2018303

BNCUUP02 0000196987 A.9 1/2/20 1:30 PM Released

5.3 Construction of External Serial Link Cables

BNCUUP02.C01 0000196986 A.4 A.9 1/2/20 1:30 PM Released

This document provides information for on-site fabrication of certain types of serial communication cables. Programmable data can be transferred between compatible machines or between a machine and a Milnor® *serial memory storage device* (see related note below), using the download cables described in [Section 5.3.2.2 : Connecting Two or More Machines for Machine-to-machine Transfer, page 74](#) and [Section 5.3.2.3 : Connecting a Machine to a Serial Memory Storage Device, page 75](#) respectively. These cable(s) connect to the cabinet-mounted 9-pin DIN type receptacle shown in [Figure 14: 9-Pin DIN Connector Pin Identification \(from wire entry side of connectors\), page 73](#) and may be installed temporarily or permanently, as appropriate.



NOTE: The currently approved printers and printer configuration settings are provided in [Section 5.4 : Printer Requirements and Settings, page 76](#). A pre-assembled machine-to-printer cable similar to the cable described here, is available from Milnor (P/N 10YMK2PNTR).



NOTE: The Milnor *serial memory storage device* (also known as a *download box*) contains nonvolatile memory to hold a back-up copy of the programming and configuration data for **one machine**. This data is transferred between the machine and the memory storage device via the DIN receptacle on the machine. Two models are currently available: KXMIC00507 and KXMIC00508. The already wired cable and DIN connector are included as part of the memory storage device. Consult the Milnor Service department to determine the correct device for a particular application.

5.3.1 Pin Identification

BNCUUP02.C02 0000196983 A.4 A.9 1/2/20 1:30 PM Released

Figure 14: 9-Pin DIN Connector Pin Identification (from wire entry side of connectors), page 73 illustrates the DIN receptacle (which uses male pins) and the mating plug (which uses female pin sockets), each viewed from the **wire entry** side. The receptacle is normally installed and wired at the Milnor factory. The plug and female pin sockets for customer use are provided in a bag inside the electric box. Table 23: External Serial Link Pin Assignments, page 73 shows the function of each pin.

Figure 14. 9-Pin DIN Connector Pin Identification (from wire entry side of connectors)

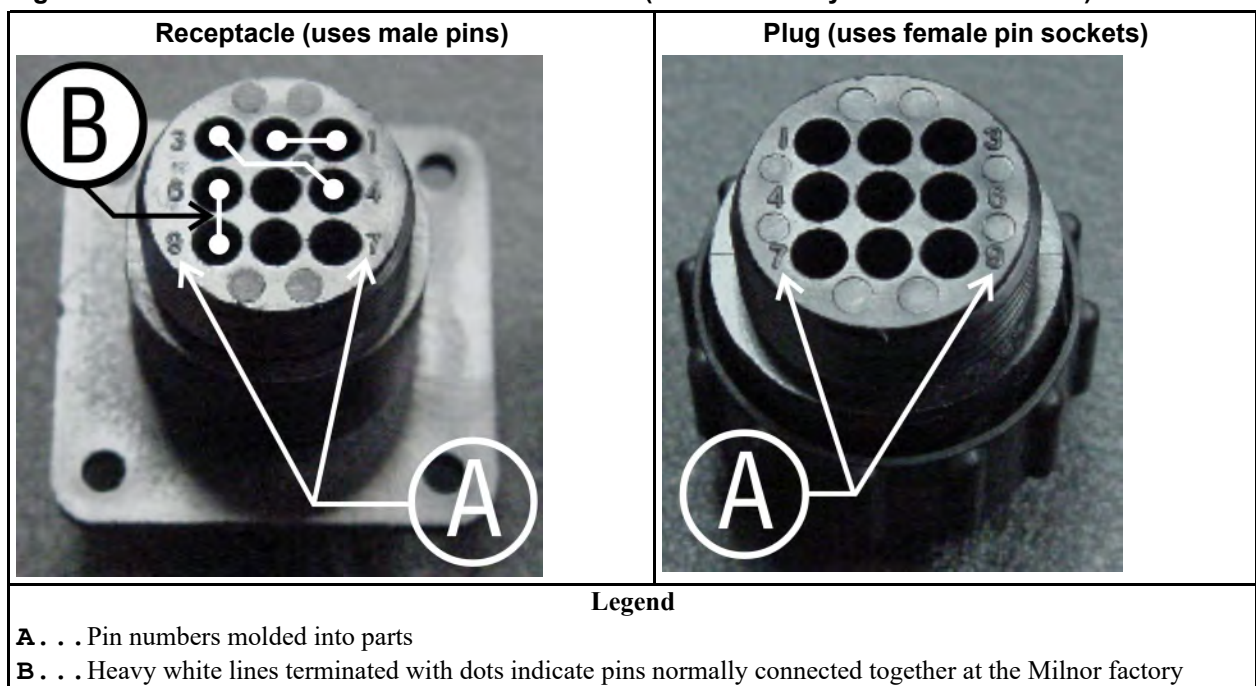


Table 23. External Serial Link Pin Assignments


Pin Number	Function	Receptacle Wiring (inside electrical enclosure)	
		Wire Number	Color Code
1	Serial low	DLL	Blue and black
2			
3	Serial high	DLH	Blue and red
4			

Table 23 External Serial Link Pin Assignments (cont'd.)

Pin Number	Function	Receptacle Wiring (inside electrical enclosure)	
		Wire Number	Color Code
5	Clear to send (not used on these models)	CTS	Blue and orange
6	Electronic ground	2G	Blue and white
9			
7	Transmit data (not used on these models)	TXD	Blue and orange
8	+5 volts DC (used for serial memory storage device only)	V1	Blue



CAUTION: **Risk of damage to electronic components** — Pin 8 is only used to supply +5VDC power to the download box and will damage components in both devices if not properly connected

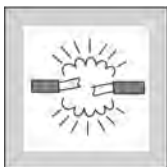

- ▶ Never connect pin 8 to any other pin in the connector, a printer, or another machine.

5.3.2 How to Wire the Cables

BNCUUP02.C03 0000196982 A.4 A.9 1/2/20 1:30 PM Released

Because the DIN receptacle is wired to support different functions and because the data transferred across these cables can be corrupted by electrical noise, follow these instructions carefully.

5.3.2.1 Cable Specifications

BNCUUP02.C04 0000196981 A.4 A.9 A.8 1/2/20 1:30 PM Released

Multi-conductor shielded cable that meets the following minimum requirements must be used in the applications covered herein. Conforming cable may be purchased from Milnor (P/N 09V300A04S) or purchased from another source:

- Jacket: 600VAC insulation
- Shielding: braided, tinned copper, minimum 85 percent coverage
- Four conductors with these specifications:
 - Conductive material: Tinned copper, 20 AWG
 - Insulation: 300VAC, color coded
 - Preferred colors: red, black, green and white


5.3.2.2 Connecting Two or More Machines for Machine-to-machine Transfer

BNCUUP02.C05 0000196980 A.4 A.9 1/2/20 1:30 PM Released

Figure 15: Wiring Diagram for Cable to Connect Two or More Machines, page 75 shows how to wire a cable to connect a bank of identical machines (the Figure 15: Wiring Diagram for Cable to Connect Two or More Machines, page 75 example shows connections for four machines) so that data programmed on one machine in the group can be downloaded to all other machines

simultaneously. This cable is referred to as a daisy chain because it runs in segments from machine to machine, connecting all machines in the group.

Figure 15. Wiring Diagram for Cable to Connect Two or More Machines

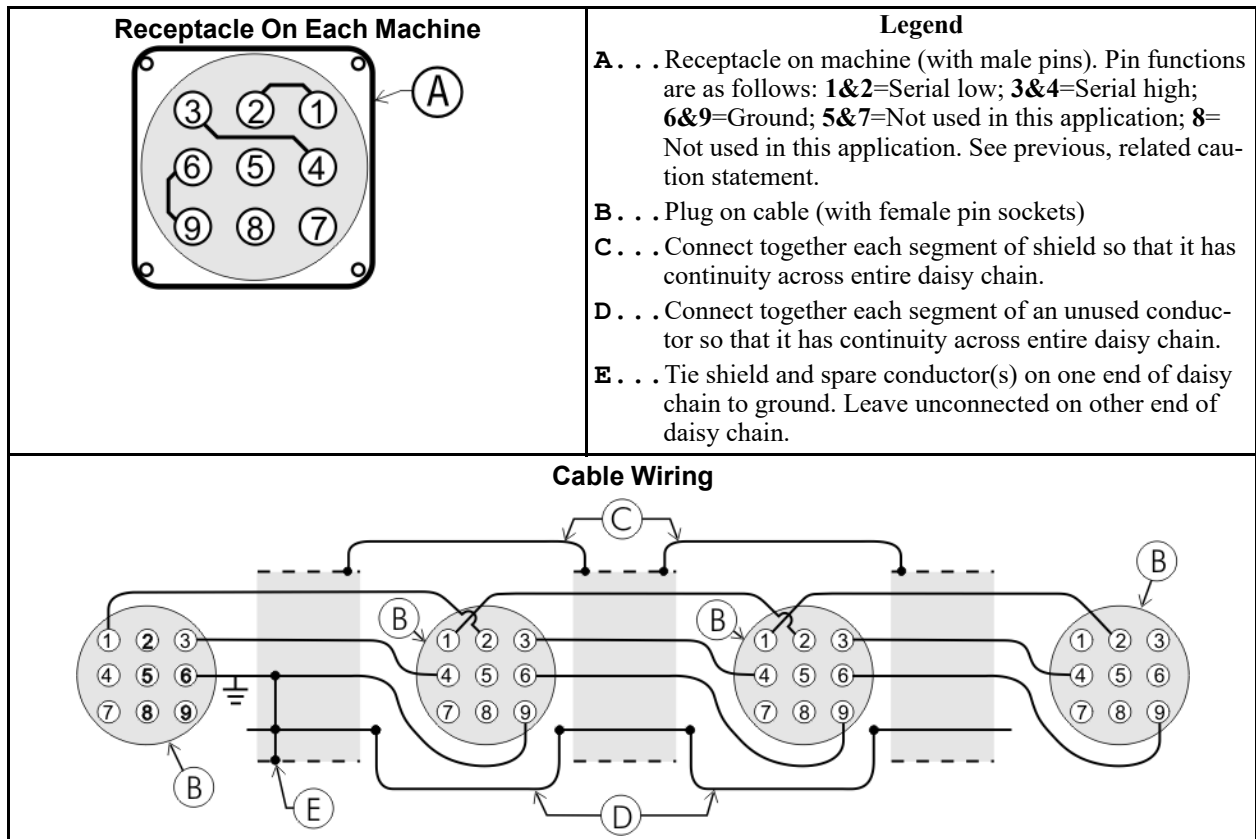

The internal connections on each receptacle (machine) between pins 1 and 2, 3 and 4, and 6 and 9 make it easier to wire the cable because it is not necessary to jumper these pins together on the cable. However, this also means that every plug on the daisy chain must be plugged into a receptacle. Otherwise, the serial low, serial high, and ground conductors will not have continuity across the entire daisy chain and some machines will not receive data.


Rules and details about downloading among machines are fully described in the programming section of the reference manual.

5.3.2.3 Connecting a Machine to a Serial Memory Storage Device

BNCUUP02.C06 0000197240 A.4 A.9 1/2/20 1:30 PM Released

The cable used with the serial memory storage device (download box) available from Milnor, see related note in [Section 5.3 : Construction of External Serial Link Cables, page 72](#), is permanently attached to the storage device. Cable fabrication, as shown in [Figure 16: Wiring Diagram for Cable to Connect a Machine to a Serial Memory Storage Device, page 76](#), is not required except for replacing a damaged cable. The memory storage device is the only application in which the power conductor (Pin 8) is used.

Figure 16. Wiring Diagram for Cable to Connect a Machine to a Serial Memory Storage Device

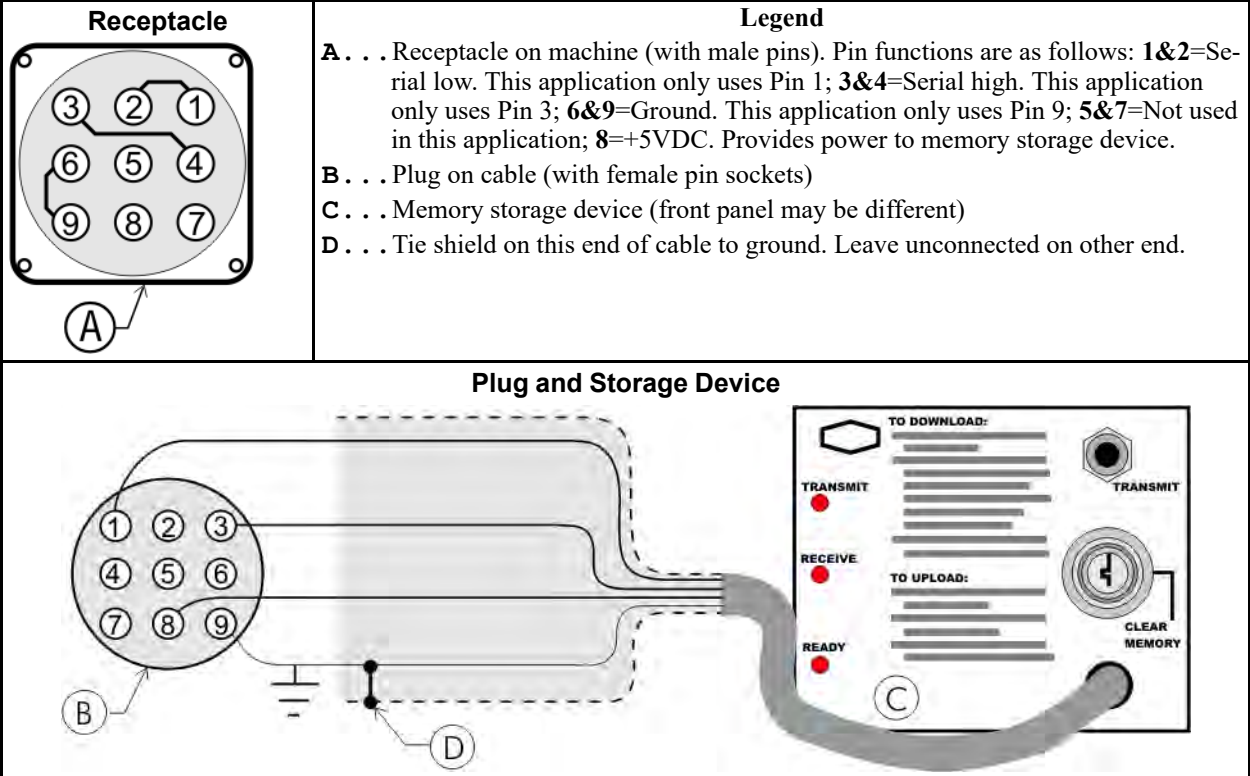

BNCUII01 / 2018303 BNCUII01 0000196633 A.6 1/2/20 1:30 PM Released

5.4 Printer Requirements and Settings

BNCUII01.C01 0000196632 A.4 A.6 1/2/20 1:30 PM Released

NOTICE: Because of the many differences among printer makes and models, Milnor® cannot ensure suitability or troubleshoot printers other than those described in this document (or certain older approved models), with the required interface cable.

5.4.1 Cable Requirements

BNCUII01.R01 0000196631 A.4 A.6 1/2/20 1:30 PM Released

The printer must be connected to the printer port on the machine using the appropriate one of the following Milnor interface cables:

Table 24. Milnor Printer Cables

Printer Cable Part Number	Description
10YMK2PNTR	100-formula washer-extractor, dryer, extractor, and Miltron (CBW®) controllers
10YCBWPNTNTR	Non-serial Miltron (CBW) controller
08MPSERCBL	Mentor® (CBW) and Mildata® controllers

5.4.2 Configuring the Citizen GSX-190 Printer

BNCUUI01.R02 0000196630 A.4 A.6 A.7 1/2/20 1:30 PM Released

Table 25: Required Settings for Citizen GSX-190 Printer, page 77 lists the required settings for this printer model to work properly with Milnor equipment. To print the current settings stored in your printer, move the **Menu** slide switch on the printer to the **VuePrint** position, then hold the **Print** button for three seconds. Hold the **Menu** button for three seconds to enter the **VuePrint** menu system to make changes.

Table 25. Required Settings for Citizen GSX-190 Printer

Menu	Data Field	Value	Menu	Data Field	Value
Install 1	Ribbon	Normal	Character	Slash zero	Off
	A.S.F.	Off		Character set	Graphics
	Emulation	Epson		Intl character set	U.S.A.
Print Style	Font	Draft		Code page	U.S.A.
	Emphasized	Off	Install 2	Tear off	Off
	Pitch	10 characters inch		Paper out	Enable
	Front lock	Off		Auto linefeed	Off
Page Layout	Line spacing	6 lines per inch		Copy mode	Off
	Form length	Letter		Envelope	Off
	Page skip	Off	Serial I/F	Baud rate	9600
Print Mode	NLQ Dir	Uni-directional		Parity	Even
	Graphic Dir	Uni-directional		Data bits	8 bits
				Stop bits	1 bit
				Protocol	DTR

5.4.3 Configuring the Epson LX300 Printer

BNCUUI01.R03 0000196629 A.4 A.6 1/2/20 1:30 PM Released

The Epson model LX300 printer was supplied by Milnor prior to March 2001 to print data from microprocessor controllers with printing functions. When shipped from Milnor, this printer was configured to operate correctly with Milnor equipment. If the printer is replaced or must be reconfigured for any reason, refer to the user's guide and the following table.

Table 26. Required Settings for Epson LX300 Printer

Data Field	Value	Data Field	Value
Character spacing	10 characters per inch	Tractor	Single
Shape of zero	0	Interface	Serial
Skip over perforation	Off	Bit rate	9600 bps
Character table	PC 437	Parity	Even
Auto line feed	Off	Data length	8 bits
Page length	11 inches	ETX/ACT	On
Auto tear off	Off		

5.4.4 Previous Printer Models

BNCUUI01.C02 0000196628 A.4 A.6 1/2/20 1:30 PM Released

The Epson LX300 printer replaced the Epson LX-810, which replaced the Epson LX-800. For information on these older printer models, request document MSSM0251AE from the Milnor factory.