

**48040F7N/F7W H7N/H7W H7K/H7R (LOW VOLTAGE)
A1000 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-00	0	E2-01	Note 1
A1-01	2	H1-01	40
A1-02	0	H1-02	41
A1-03	Note 2	H1-04	1A
B1-01	1	H1-05	3
B1-02	1	H1-06	7
B1-03	0	H1-07	A
B1-17	1	H2-01	E
C1-01	100	H2-02	16
C1-02	20	H2-03	F
C1-03	160	H3-13	.5
C1-04	160	L1-01	0
C2-01	1.0	L2-01	2
C6-01	0	L3-01	0
C6-02	3	L3-02	120
E1-01	230/208 Note 4	L3-03	100
E1-03	F	L3-04	0
E1-04	170	L3-05	0
E1-05	230/208 Note 4	L3-06	120
E1-06	60	L4-01	130
E1-07	3	L4-02	0
E1-08	15/13 Note 4	L8-05	0
E1-09	1.5	L8-07	0
E1-10	10/9 Note 4	L8-18	0

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0

Note 3: How to wire motor

200 – 208V wire motor for 208V

220 – 240V wire motor for 230V

Note 4: Motor wired for 230V / motor wired for 208V

Release Date: December 17, 2013

Revision C