

**5050, 6458, 6464 & 7676 DRYER BLOWER (LOW VOLTAGE)
A1000 INVERTER PROGRAMMABLE**

CONSTANT	VALUE	CONSTANT	VALUE
A1-01	2 Note 3	E1-06	Note 4
A1-02	0	E1-07	3
A1-03	Note 2	E1-08	13
B1-01	1	E1-09	1.5
B1-02	1	E1-10	10
B1-03	1	H2-01	E
B1-17	1	H3-12	.5
C1-01	3	L1-01	0
C2-01	1.0	L2-01	2
C6-01	1	L8-05	0
C6-02	2	L8-07	0
E1-01	220	H1-01	40
E1-03	F	H1-02	41
E1-04	Note 4	H3-03	200
E1-05	220		

- Note 2: 2220 is initialize - otherwise 0
- Note 3: Set to 0 after programming
- Note 4: Frequency of installation
- Note 5: Set overload to 85 amps