

**6836F5N (LOW VOLTAGE)
F7 INVERTER**

CONSTANT	VALUE	CONSTANT	VALUE
A1-00	0	E1-07	3
A1-01	2	E1-08	17
A1-02	0	E1-09	1.5
A1-03	Note 2	E1-10	10
B1-01	1	E2-01	Note 1
B1-02	1	H1-02	1A
B1-03	0	H1-04	7
C1-01	112.0	H1-05	B
C1-02	20	H2-01	E
C1-03	180	H3-12	.5
C1-04	120	L1-01	0
C1-05	80	L2-01	2
C1-06	120	L3-01	0
C2-01	1.0	L3-02	120
C6-01	1	L3-03	100
C6-02	3	L3-04	0
E1-01	230	L3-05	0
E1-03	F	L3-06	120
E1-04	170	L8-05	0
E1-05	240	L8-07	0
E1-06	60		

Note 1: Enter Ampere rating of inverter

Note 2: 2220 is initialize - otherwise 0