

**SHUTTLE
V1000 INVERTER (LOW VOLTAGE)**

V1000 CONSTANT	V1000 VALUE	V1000 CONSTANT	V1000 VALUE
A1-01	2 See Note 3	D1-01	60
A1-02	0	D1-02	20
A1-03	0 See Note 2	L1-01	0
B1-01	0	H1-01	40
B1-02	1	H1-02	41
B1-03	0	C6-01	1
E1-03	F	C6-02	2
E1-07	3	L2-01	2
E1-08	12		
E1-09	1.5		
E1-10	6		
C1-01	1		
C1-02	.3		

Note 2: 2220 is initialize – otherwise 0

Note 3: Set to 0 after programming

Release Date:

October 7, 2009

Rev. B