

**PREPARATIONS**

Understand and Avoid Safety Hazards

**DANGER:****ELECTROCUTION AND ELECTRICAL BURN HAZARDS**

Contact with high voltage will electrocute or burn you. Power switches on the machine and the control box do not eliminate these hazards. High voltage is present on the machine unless the main machine power disconnect is OFF.

- Do not service the machine unless qualified and authorized.
- Keep bystanders well clear of the machine.
- Lock off and tag out power at the main machine disconnect before servicing.

**Danger:****ENTANGLE, CRUSH, AND SEVER HAZARDS**

These operations require personnel to work in and around areas of the machine where there is a possibility of becoming entangled with electrical wiring, air tubing, or machine parts. Certain machine parts can move in such a way as to crush or sever limbs or cause serious injuries.

## **Dryer Bearing Housing Replacement Kit** **KWRBBA0004**

This kit replaces KWRBBA0002 and KWRBBA0003 by combining all the necessary hardware for all dryers and Dryvac models. The difference in the two kits is the length of the bearing house spacers and attaching bolts. See Figure 1.

When reassembling the new bearing housing discard the existing spacers and use the appropriate hardware specified for the machine type.

**PARTS LIST**

For 50050 and 58040 Dryers

A75BG004	BLOWER BEAING HOUSE ASSY
07 50179	BLOWER BEAING HOUSE SPACER=SHORT
07 50287	BLOWER SHAFT FELT SEAL
07 50288	BLOWER SHAFT TEFLON SEAL
15K198	HXCAPSCR 1/2-13UNC2AX3 G
15G230	HXNUT 1/2-13UNC2B SAE ZI
15U300	LOKWASHER REGULAR 1/2 ZI

For 58058, 58080, 72072 and Dryvacs

A75BG004	BLOWER BEAING HOUSE ASSY
07 50184	BLWR BRG HSE SPACE SH=LONG
07 50287	BLOWER SHAFT FELT SEAL
07 50288	BLOWER SHAFT TEFLON SEAL
15K191	HXCAPSCR 1/2-13UNC2AX2.5
15G230	HXNUT 1/2-13UNC2B SAE ZI
15U300	LOKWASHER REGULAR 1/2 ZI

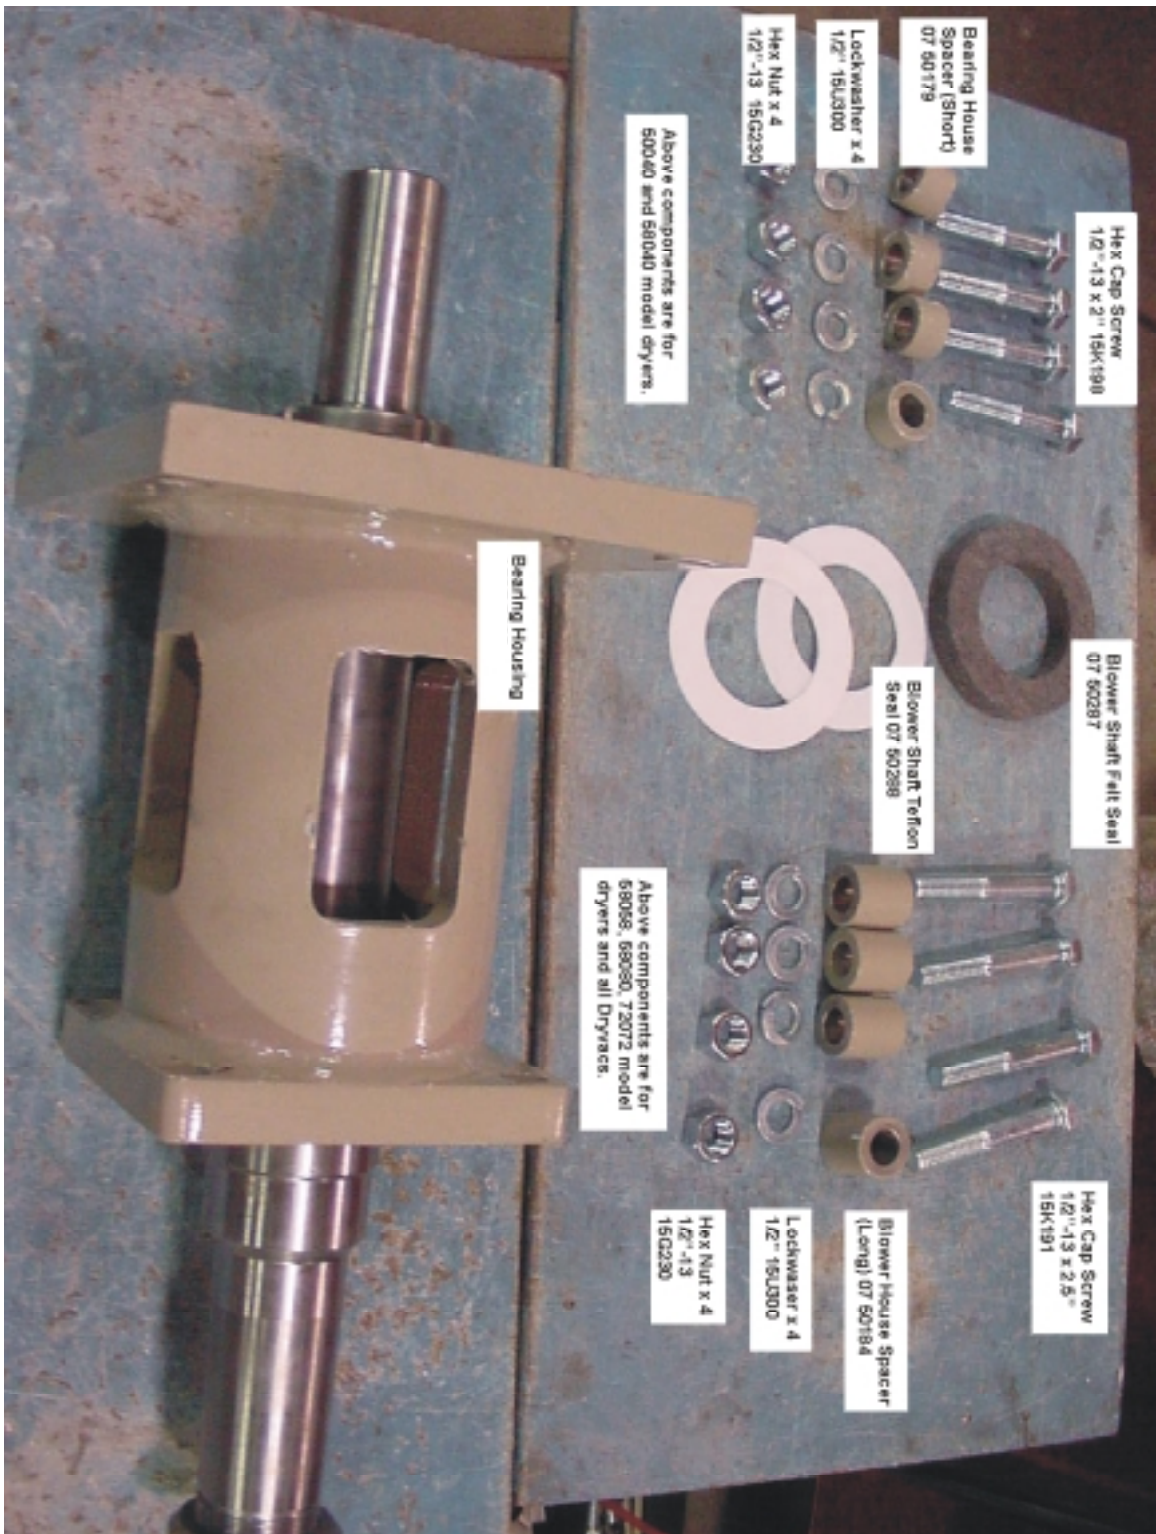


Figure 1