



Manual Number: MCDGEI01
Edition (ECN): 2025352

Installation

6464TG1L/R (AH)



Contents

1 Safety.....	5
Limited Standard Warranty	6
1.1 How to Get the Necessary Repair Components	7
1.2 Trademarks	7
1.3 Safety — Pass Through Dryer	8
1.3.1 Safety Alert Messages—Internal Electrical and Mechanical Hazards	8
1.3.2 Cylinder and Processing Hazards	9
1.3.3 Safety Alert Messages—Unsafe Conditions	9
1.3.3.1 Hazards Resulting from Inoperative Safety Devices	9
1.3.3.2 Hazards Resulting from Damaged Mechanical Devices	10
1.3.4 Careless Use Hazards	10
1.3.4.1 Careless Operation Hazards—Vital Information for Operator Personnel (see also operator hazards throughout manual)	10
1.3.4.2 Careless Servicing Hazards—Vital Information for Service Personnel (see also service hazards throughout manuals)	10
1.4 Installation Tag Guidelines	11
Guards and Covers 6450, 6458, 6464, 7676, 8282 Dryers.....	14
Unload Shrouds 6458TG1L/R,TS1L/R; 6464TG1L/R,TS1L/R; 7676TG1L/R; 8282TG1L/R	18
2 Installation	21
Dryer Shuttle Rail Installation	22
2.1 Dryer Assembly and Setting	23
2.1.1 Handling Precautions.....	23
2.1.2 Site Requirements.....	25
2.1.2.1 Dryer Environment.....	25
2.1.2.2 Clearances.....	25
2.1.2.3 Foundation.....	25
2.1.3 Assembly	25
2.1.3.1 Installing the Legs on the House	25
2.1.3.2 Anchoring	26
2.1.3.3 Leveling Procedures	26
2.1.3.4 Machine-to-Machine Brackets	26
2.1.3.5 Check Cylinder Interior	27
Lifting Brackets 5050, 6450, 6458, 6464, 7676, 8282 Dryers	28
Dryer to Dryer Mounting Parts 5050, 6450, 6458, 6464, 7676, 8282 Dryers	30
Pedestal Base Installation 5050, 6450, 6458, 6464, 7676, & 8282 Dryers	32
Pedestal Base 6458TG1L/R ,TS1L/R 6464TG1L/R ,TS1L/R	36
Unload Bridge Installation 5050, 6450, 6458, 6464, 7676, & 8282 Dryers.....	42
2.2 Air and Duct Requirements for Milnor® Pass-through Dryers	44
2.2.1 Air Requirements.....	44
2.2.1.1 Air Flow.....	44
2.2.1.2 Back Pressure	44
2.2.2 Duct Requirements	44
2.2.2.1 Is an Inlet Duct Necessary?	45
2.2.2.2 Duct Durability.....	45
2.2.2.3 Duct Functionality	46
2.2.2.3.1 Multiple Dryers and Lint Collection	46

2.2.2.3.2 Transitions and Elbows	46
2.2.2.3.3 Vents	47
2.2.3 Duct Layout and Pressure Drop Calculations	47
2.2.3.1 Units of Measure Used in the Calculations	47
2.2.3.2 Duct Components and Their Pressure Drops	48
2.2.3.3 Example Layout.....	49
2.2.3.4 Pressure Drop Equations and Examples.....	51
2.3 Utility Requirements For Gas, Steam and Thermal Oil Dryers	51
2.3.1 Plumbing and Other Mechanical Connections	52
2.3.1.1 Hazards and Precautions.....	52
2.3.1.1.1 All Models	52
2.3.1.1.2 Gas and Propane Models	53
2.3.1.1.3 Steam and Thermal Oil Models.....	53
2.3.1.2 Heating Fuel and Air Intake Requirements	54
2.3.1.3 Other Mechanical Requirements	56
2.3.2 Electrical Connections.....	56
2.3.2.1 Hazards and Precautions.....	56
2.3.2.2 Remove Blower Shipping Bracket and Reconnect Motor Contactor Coil	57
2.3.2.3 Electric Power Connection Capacities	58
2.3.2.4 Control Connections.....	58
2.3.3 Bumper Guard Installation	58
2.4 Set the Heating System—Air Heat Dryer	59
2.4.1 About the Procedure	59
2.4.2 Summary of Steps and Required Values (Air Heat).....	60
2.4.3 Component Locations.....	62
2.4.4 Setup Methods—Fireye or Landis + Gyr Flame Control.....	65
2.4.4.1 Setup Mode (Fireye flame control)	65
2.4.4.2 Manual method (Landis + Gyr flame control)	66
2.4.5 Adjustment Steps.....	67
2.4.5.1 Step 1: Static (incoming) gas pressure	67
2.4.5.2 Step 2: Combustion air pressure.....	67
2.4.5.3 Step 3: Main air pressure	68
2.4.5.4 Step 4A: Regulated pilot gas pressure.....	68
2.4.5.5 Step 4B: Pilot flame gas pressure.....	69
2.4.5.6 Step 5: Regulated main gas pressure	69
2.4.5.7 Step 6: Low fire temperature.....	69
2.4.5.8 Step 7: High gas pressure	70
2.4.5.9 Step 8: Low gas pressure.....	70
2.4.5.10 Step 9: Minimum burner box air pressure.....	71
2.4.5.11 Step 10: Maximum back (air) pressure.....	71
3 Dimensional Drawings	72
BD6464TG1LABE/2022086D — 6464TG1L AH	73
BD6464TG1LABB/2022086D — 6464TG1L AH Options	74
BD6464TG1LABC/2022086D — 6464TG1L AH with Recirculation	75
BD6464TG1LABD/2022086D — 6464TG1L AH & MLF1010	76
BD6464TG1LABF/2018111D — 6464TG1L AH Recirculation & MLF1010	77

BD6464TG1LABH/2018111D — 6464TG1L AH Up/Front Exhaust	78
BD6464TG1LABJ/2018111D — 6464TG1L/R AH Up/Front Exhaust & MLF1010	79
BD6464TG1LABL/2024452D — 6464TG1L AH Rear Controls & MLF1010	80
BD6464TG1LABM/2021173D — 6464TG1L AH Rear Controls, MLF1010, & Recirculation	81
BD6464TG1LABM4/2025222D — 6464TG1L AH Rear Controls, Vacuum Load, In- ternal Lint	82
BD6464TG1LABN/2022035D — 6464TG1L AH Vacuum Loading with MLF	83
BD6464TG1LABO/2022035D — 6464TG1L AH Vacuum Loading with MLF and Recirculation	84
BD6464TG1PABE/2022086D — 6464TG1L & TG1R AH Paired	85
BD6464TG1PABL/2022086D — 6464TG1L & TG1R AH Rear Controls & MLF Paired	86
BD6464TG1RABE/2022086D — 6464TG1R AH	87
BD6464TG1RABB/2022086D — 6464TG1R AH Options	88
BD6464TG1RABC/2022068D — 6464TG1R AH with Recirculation	89
BD6464TG1RABD/2022086D — 6464TG1R AH & MLF1010	90
BD6464TG1RABF/2018111D — 6464TG1R AH Recirculation & MLF1010	91
BD6464TG1RABH/2018111D — 6464TG1R AH Up/Front Exhaust	92
BD6464TG1RABL/2024452D — 6464TG1R AH Rear Controls & MLF1010	93
BD6464TG1RABM/2021173D — 6464TG1L AH Rear Controls, MLF1010, & Recirculation	94
BD6464TG1RABM4/2025222D — 6464TG1R AH Rear Controls, Vacuum Load, In- ternal Lint	95
BD6464TG1RABN/2022035D — 6464TG1R AH Vacuum Loading & MLF	96
BD6464TG1RABO/2022035D — 6464TG1R AH Vacuum Loading with MLF1010 & Recirculation	97
BD6458DLCPBE/2014453D — Recommended Lint Collector Piping	98

Figures

Figure 1	Front Lifting Bracket	24
Figure 2	Rear Lifting Bracket	24
Figure 3	Spreader Bar Between Front Lifting Plates	24
Figure 4	Apply sealing foam to left house before setting into position	24
Figure 5	Machine-to-Machine Brackets and Spacers	27
Figure 6	5050, 6450, 6458, 6464, 7676, and 8282 Dryers (7676 Shown)	28
Figure 7	8282 Dryers	28
Figure 8	Placement of Components with Regard to Pedestal Height	32
Figure 9	Pedestal Options and Hardware Connections	33
Figure 10	Anchoring	34
Figure 11	Round duct elbow fabrication	47
Figure 12	Vent Designs	47
Figure 13	Example Duct Layout for Model 6464TG1L Dryer	50
Figure 14	Blower Shipping Restraint	57
Figure 15	Reconnect Blower Contactor Coil Wires	58
Figure 16	Bumper Guard Installation	59

Figure 17	Gas Adjustment Components (5040TG2_ shown. Other models are similar.)	62
Figure 18	Air Adjustment Components (5040TG2_ shown. Other models are similar.)	64

Tables

Table 1	Trademarks	7
Table 2	Parts List—Guards and Covers 6450, 6458, 6464, 7676, 8282 Dryers.....	16
Table 3	Parts List—Unload Shrouds 6458TG1L/R,TS1L/R; 6464TG1L/R,TS1L/R; 7676TG1L/R; 8282TG1L/R	19
Table 4	Parts List—Lifting Brackets 5050, 6450, 6458, 6464, 7676, 8282 Dryers	29
Table 5	Parts List—Dryer to Dryer Mounting Parts 5050, 6450, 6458, 6464, 7676, 8282 Dryers	31
Table 6	Parts List—Pedestal Base Installation 5050, 6450, 6458, 6464, 7676, & 8282 Dryers	34
Table 7	Front Legs 6458TG1L/R ,TS1L/R 6464TG1L/R ,TS1L/R	39
Table 8	Rear Legs 6458TG1L/R ,TS1L/R 6464TG1L/R ,TS1L/R.....	40
Table 9	Parts List—Pedestal Base 6458TG1L/R ,TS1L/R 6464TG1L/R ,TS1L/R	41
Table 10	Parts List—Unload Bridge Installation 5050, 6450, 6458, 6464, 7676, & 8282 Dryers	43
Table 11	Units of Measure	47
Table 12	Duct Sizes and Pressure Drops for Dryer Models	48
Table 13	Gas, Steam, and Air Intake - Newer Dryer Models	54
Table 14	Gas, Steam, and Air Intake - Older Dryer Models	55
Table 15	Current Dryer Models and Burner Types	59
Table 16	Gas Train and Flame Control Options	60
Table 17	Applicable Models	61

1 Safety

BMP720097 / 25142

BRUUUM01.1 0000229985 C.2 E.2 3/31/25, 3:24 PM Released

PELLERIN MILNOR CORPORATION LIMITED STANDARD WARRANTY

We warrant to the original purchaser that MILNOR machines including electronic hardware/software (hereafter referred to as "equipment"), will be free from defects in material and workmanship for a period of one year from the date of shipment (unless the time period is specifically extended for certain parts pursuant to a specific MILNOR published extended warranty) from our factory with no operating hour limitation. This warranty is contingent upon the equipment being installed, operated and serviced as specified in the operating manual supplied with the equipment, and operated under normal conditions by competent operators.

Providing we receive written notification of a warranted defect within 30 days of its discovery, we will—at our option—repair or replace the defective part or parts, EX Factory (labor and freight specifically NOT included). We retain the right to require inspection of the parts claimed defective in our factory prior to repairing or replacing same. We will not be responsible, or in any way liable, for unauthorized repairs or service to our equipment, and this warranty shall be void if the equipment is tampered with, modified, or abused, used for purposes not intended in the design and construction of the machine, or is altered in any way without MILNOR's written consent.

Parts damaged by exposure to weather, to aggressive water, or to chemical attack are not covered by this warranty. For parts which require routine replacement due to normal wear—such as gaskets, contact points, brake and clutch linings, belts, hoses, and similar parts—the warranty time period is 90 days.

We reserve the right to make changes in the design and/or construction of our equipment (including purchased components) without obligation to change any equipment previously supplied.

ANY SALE OR FURNISHING OF ANY EQUIPMENT BY MILNOR IS MADE ONLY UPON THE EXPRESS UNDERSTANDING THAT MILNOR MAKES NO EXPRESSED OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE OR PURPOSE OR ANY OTHER WARRANTY IMPLIED BY LAW INCLUDING BUT NOT LIMITED TO REDHIBITION. MILNOR WILL NOT BE RESPONSIBLE FOR ANY COSTS OR DAMAGES ACTUALLY INCURRED OR REQUIRED AS A RESULT OF: THE FAILURE OF ANY OTHER PERSON OR ENTITY TO PERFORM ITS RESPONSIBILITIES, FIRE OR OTHER HAZARD, ACCIDENT, IMPROPER STORAGE, MIS-USE, NEGLIGENCE, POWER OR ENVIRONMENTAL CONTROL MALFUNCTIONS, DAMAGE FROM LIQUIDS, OR ANY OTHER CAUSE BEYOND THE NORMAL RANGE OF USE. REGARDLESS OF HOW CAUSED, IN NO EVENT SHALL MILNOR BE LIABLE FOR SPECIAL, INDIRECT, PUNITIVE, LIQUIDATED, OR CONSEQUENTIAL COSTS OR DAMAGES, OR ANY COSTS OR DAMAGES WHATSOEVER WHICH EXCEED THE PRICE PAID TO MILNOR FOR THE EQUIPMENT IT SELLS OR FURNISHES.

THE PROVISIONS ON THIS PAGE REPRESENT THE ONLY WARRANTY FROM MILNOR AND NO OTHER WARRANTY OR CONDITIONS, STATUTORY OR OTHERWISE, SHALL BE IMPLIED.

WE NEITHER ASSUME, NOR AUTHORIZE ANY EMPLOYEE OR OTHER PERSON TO ASSUME FOR US, ANY OTHER RESPONSIBILITY AND/OR LIABILITY IN CONNECTION WITH THE SALE OR FURNISHING OF OUR EQUIPMENT TO ANY BUYER.

BMP720097/25142

BNUUUM01 / 2019342

BNUUUM01 0000250121 B.3 1/2/20, 2:14 PM Released

1.1 How to Get the Necessary Repair Components

BNUUUM01.C01 0000250120 A.3 C.2 B.3 1/2/20, 2:14 PM Released

You can get components to repair your machine from the approved supplier where you got this machine. Your supplier will usually have the necessary components in stock. You can also get components from the Milnor® factory.

Tell the supplier the machine model and serial number and this data for each necessary component:

- The component number from this manual
- The component name if known
- The necessary quantity
- The necessary transportation requirements
- If the component is an electrical component, give the schematic number if known.
- If the component is a motor or an electrical control, give the nameplate data from the used component.

To write to the Milnor® factory:

Pellerin Milnor Corporation
Post Office Box 400
Kenner, LA 70063-0400
UNITED STATES

Telephone: 504-712-7775

Fax: 504-469-9777

Email: parts@milnor.com

BNUUUU02 / 2023296

BNUUUU02 0000158094 G.2 7/20/23, 10:58 AM Released

1.2 Trademarks

BNUUUU02.R01 0000158093 C.2 G.2 F.2 7/20/23, 10:57 AM Released

These words are trademarks of Pellerin Milnor® Corporation and other entities:

Table 1. Trademarks

AutoSpot™	GreenFlex™	MilMetrix®	PulseFlow®
CBW®	GearTrace™	MilTouch™	RAM Command™
Drynet™	GreenTurn™	MilTouch-EX™	RecircONE®
E-P Express®	Hydro-cushion™	MilRAIL®	RinSave®
E-P OneTouch®	Mentor®	Miltrac™	SmoothCoil™

Table 1 Trademarks (cont'd.)

E-P Plus®	Mildata®	MilVision™	Staph Guard®
Gear Guardian®	Milnor®	PBW™	

BNDUUS06 / 2021243

BNDUUS06 0000349888 C.2 6/8/21, 4:02 PM Released

1.3 Safety — Pass Through Dryer

BNDUUS06.C01 0000349887 A.2 C.2 6/8/21, 4:02 PM Released

1.3.1 Safety Alert Messages—Internal Electrical and Mechanical Hazards

BNDUUS01.C03 0000239033 A.2 A.3 C.2 1/2/20, 1:40 PM Released

The following are instructions about hazards inside the machine and in electrical enclosures.



WARNING: Electrocutation and Electrical Burn Hazards — Contact with electric power can kill or seriously injure you. Electric power is present inside the cabinetry unless the main machine power disconnect is off.

- ▶ Do not unlock or open electric box doors.
- ▶ Do not remove guards, covers, or panels.
- ▶ Do not reach into the machine housing or frame.
- ▶ Keep yourself and others off of machine.
- ▶ Know the location of the main machine disconnect and use it in an emergency to remove all electric power from the machine.



WARNING: Entangle and Crush Hazards — Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.

- ▶ Do not remove guards, covers, or panels.
- ▶ Do not reach into the machine housing or frame.
- ▶ Keep yourself and others off of machine.
- ▶ Know the location of all emergency stop switches, pull cords, and/or kick plates and use them in an emergency to stop machine motion.



CAUTION: Burn Hazards — Contact with hot goods or machine components can burn you.

- ▶ Do not remove guards, covers, or panels.
- ▶ Do not reach into the machine housing or frame.

1.3.2 Cylinder and Processing Hazards

BNDUUS02.C01 0000239083 A.2 C.2 1/2/20, 1:40 PM Released

1.3.3 Safety Alert Messages—Unsafe Conditions

BNDUUS03.C01 0000239106 A.2 C.2 1/2/20, 1:40 PM Released


1.3.3.1 Hazards Resulting from Inoperative Safety Devices

BNDUUS03.C03 0000239117 A.2 A.3 C.2 1/2/20, 1:40 PM Released



WARNING: Multiple Hazards — Operating the machine with an inoperative safety device can kill or injure personnel, damage or destroy the machine, damage property, and/or void the warranty.

- ▶ Do not tamper with or disable any safety device or operate the machine with a malfunctioning safety device. Request authorized service.

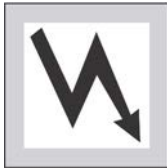

WARNING: Electrocution and Electrical Burn Hazards — Electric box doors—Operating the machine with any electric box door unlocked can expose high voltage conductors inside the box.

- ▶ Do not unlock or open electric box doors.



WARNING: Entangle and Crush Hazards — Guards, covers, and panels—Operating the machine with any guard, cover, or panel removed exposes moving components.

- ▶ Do not remove guards, covers, or panels.



WARNING: Fire Hazards — Sprinkler and overheat control—Failure to supply water to the sprinkler or to open the manual valve, or failure of the overheat control, eliminates the machine's internal fire protection. Normally the machine stops and water is sprayed into the cylinder if outlet temperature reaches 240 degrees Fahrenheit (116 degrees Celsius).

- ▶ Verify the overheat control system and plant fire extinguishers are functioning before operating the machine. Be sure to turn water supply on after testing.
- ▶ Keep the manual shut-off test valve open except when testing.
- ▶ Test or inspect the system after every automatic actuation, or monthly.



WARNING: Explosion and Fire Hazards — Gas train—Operating the machine with damaged or malfunctioning gas valves, safeties, controls, or piping can permit gas to escape into the fire box, cylinder, or laundry room. The enclosure will explode if gas comes in contact with any spark or flame.

- ▶ Do not operate the machine with any evidence of damage or malfunction.
- ▶ Stop the machine immediately and alert authorities if you smell gas.

1.3.3.2 Hazards Resulting from Damaged Mechanical Devices

BNDUUS03.C04 0000239116 A.2 A.3 C.2 1/2/20, 1:40 PM Released



WARNING: Multiple Hazards — Operating a damaged machine can kill or injure personnel, further damage or destroy the machine, damage property, and/or void the warranty.

- ▶ Do not operate a damaged or malfunctioning machine. Request authorized service.

1.3.4 Careless Use Hazards

BNDUUS03.C05 0000239115 A.2 C.2 1/2/20, 1:40 PM Released

1.3.4.1 Careless Operation Hazards—Vital Information for Operator Personnel (see also operator hazards throughout manual)

BNDUUS03.C06 0000239114 A.2 A.3 C.2 1/2/20, 1:40 PM Released



WARNING: Multiple Hazards — Careless operator actions can kill or injure personnel, damage or destroy the machine, damage property, and/or void the warranty.

- ▶ Do not tamper with or disable any safety device or operate the machine with a malfunctioning safety device. Request authorized service.
- ▶ Do not operate a damaged or malfunctioning machine. Request authorized service.
- ▶ Do not attempt unauthorized servicing, repairs, or modification.
- ▶ Do not use the machine in any manner contrary to the factory instructions.
- ▶ Use the machine only for its customary and intended purpose.
- ▶ Understand the consequences of operating manually.




CAUTION: Goods Damage and Wasted Resources — Entering incorrect cake data can cause improper processing, routing, and accounting of batches.

- ▶ Understand the consequences of entering cake data.

1.3.4.2 Careless Servicing Hazards—Vital Information for Service Personnel (see also service hazards throughout manuals)

BNDUUS03.C07 0000239113 A.2 A.3 C.2 1/2/20, 1:40 PM Released

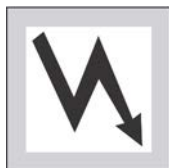

WARNING: Electrocution and Electrical Burn Hazards — Contact with electric power can kill or seriously injure you. Electric power is present inside the cabinetry unless the main machine power disconnect is off.

- ▶ Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.

- ▶ Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.



WARNING: Entangle and Crush Hazards — Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.

- ▶ Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- ▶ Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.



WARNING: Confined Space Hazards — Confinement in the cylinder can kill or injure you. Hazards include but are not limited to panic, burns, poisoning, suffocation, heat prostration, biological contamination, electrocution, and crushing.

- ▶ Do not enter the cylinder until it has been thoroughly purged, flushed, drained, cooled, and immobilized.

BNDGUI02 / 2025304

BNDGUI02 0000772390 C.2 7/23/25, 1:32 PM Released

1.4 Installation Tag Guidelines

BNDGUI02.R01 0000772389 A.3 C.2 A.4 7/23/25, 1:32 PM Released

5050TG1L 5050TG1R 6450TG1L 6450TG1R 6458TG1L 6458TG1R 6464TG1L
6464TG1R 7676TG1L 7676TG1R 8282TG1L 8282TG1R DRYVAC02 DRYVAC03






NOTICE: This information may apply to models in addition to those listed above. It applies to paper tags. It does not apply to the vinyl or metal safety placards, which must remain permanently affixed to the machine and replaced if no longer readable.

Paper tags on the machine provide installation guidelines and precautions. The tags can be tie-on or adhesive. You can remove tie-on tags and white, adhesive tags after installation. Yellow adhesive tags must remain on the machine.

The following entries explain the installation tags. Each entry includes: 1) the tag illustration, 2) the tag part number at the bottom of the tag, and 3) the meaning of the tag.

Symbol

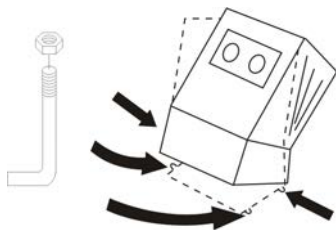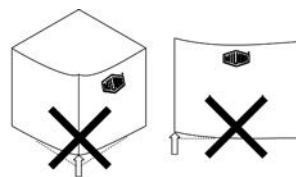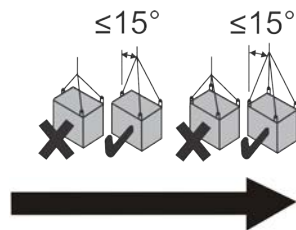

Explanation

Read the manuals before proceeding. This symbol appears on most tags. The machine ships with safety, operator, and routine maintenance guides for customer use. Milnor dealer manuals for installing, commissioning, and servicing the machine are also available from the Milnor Parts department.

B2TAG88005: This carefully built product was tested and inspected to meet Milnor performance and quality standards by (identification mark of tester).

B2TAG94078: Do not forklift here; do not jack here; do not step here—whichever applies.

B2TAG94079: Rig for crane lifting (either 3-point or 4-point, depending on the number of lifting eyes provided) using a steep angle on the chains (closer to vertical than horizontal).

B2TAG94081: Motor must rotate in this direction. On single motor washer-extractors and centrifugal extractors, the drive motor must turn in this direction during draining and extraction. This tag is usually wrapped around a motor housing. If the motor turns in the opposite direction when the machine is first tested, the electrical hookup is incorrect and must be reversed as explained in the schematic manual.

B2TAG94084: Do not lift from one corner of the machine, as this can cause the frame to rack, damaging it.


B2TAG94101: The dryer has a rearward center of gravity and must be firmly anchored to the floor at all four corners.

Symbol

Explanation



B2TAG94102 shown—others similar: Match up the components with this number. These tags are used to pair up electrical or hose connections between major components of a machine shipped disassembled.

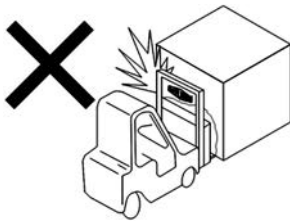


B2TAG94118: Do not strike shipping container during fork-lifting. Fragile components inside.



B2T2001017: Foam seal must be installed here before dryers are bolted together.



B2T2002013: Do not start the machine until shipping restraints are removed. This tag will appear on the outside of the machine to alert you to the presence of internal shipping restraints. A tag will also appear on the restraint to help identify it. Most, but not all shipping restraints display the color red. Some shipping restraints are also safety stands. Do not discard these.



B2T2007003: Install the shuttle rail in accordance with this instruction and the installation manual.



This Control Box is mounted here for shipping purposes only

B2T2014022: This control box is mounted here for shipping purposes only. (Only used on 64" and 76" gas and steam dryers with a blower inverter.)

BPDUUM07 / 2022484

BPDUUM07.1 0000538339 A.3 C.2 11/23/22, 9:26 AM Released

Guards and Covers

4 Sheets

6450, 6458, 6464, 7676, 8282 Dryers






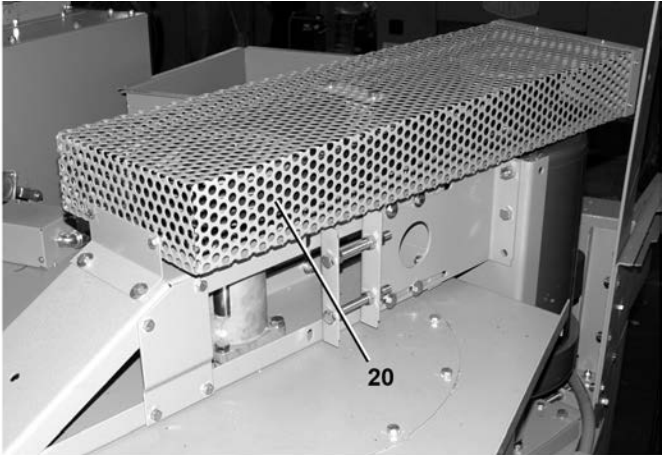

NOTE: Dryer side panels are only supplied on Stand-Alone Dryers and used on the side opposite the blower.


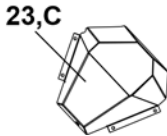
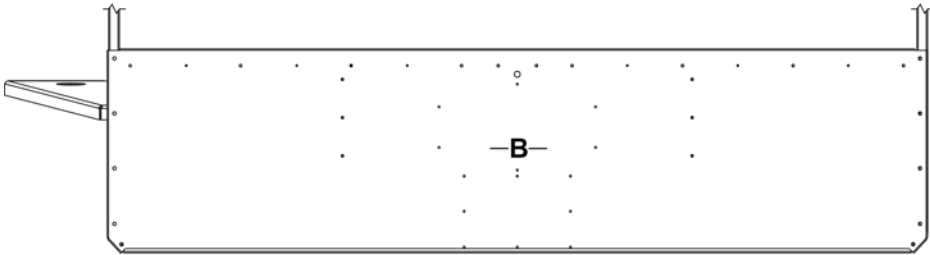


Guards and Covers

6450, 6458, 6464, 7676, 8282 Dryers

4 Sheets

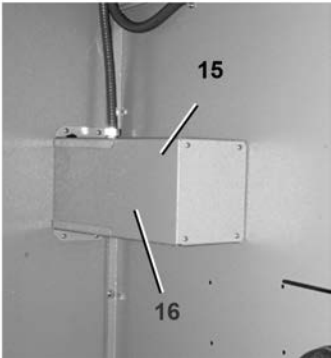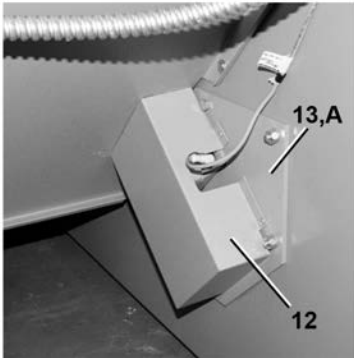



Legend

A . . . Standard shroud bearing cover

B . . . Short shroud

C . . . Short shroud bearing

Guards and Covers

6450, 6458, 6464, 7676, 8282 Dryers

4 Sheets

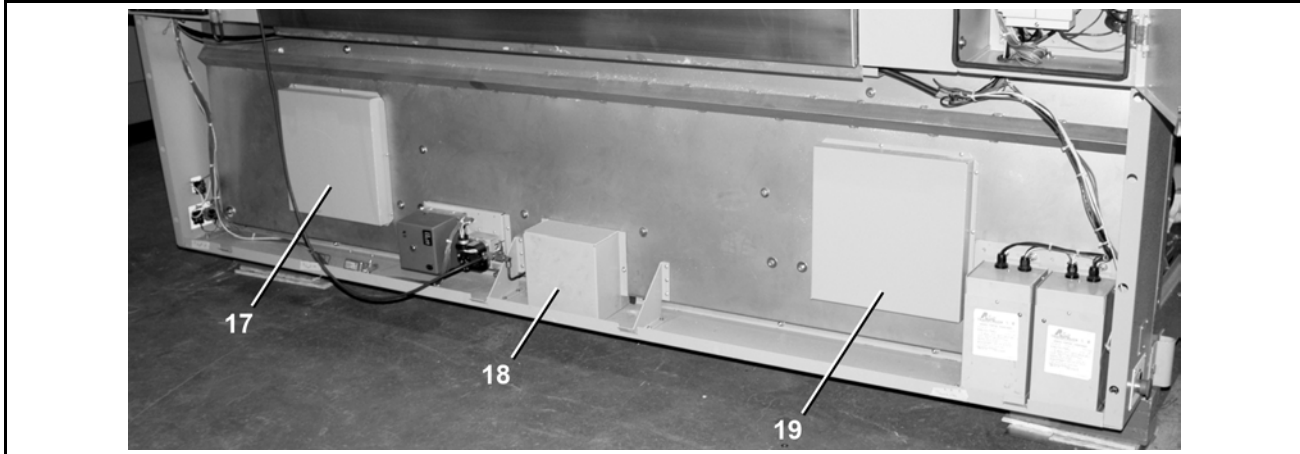


Table 2. Parts List—Guards and Covers

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.

Used In	Item	Part Number	Description/Nomenclature	Comments
Reference Assemblies				
	A			6450 Dryers
	B			6458 Dryers
	C			6464 Dryers
	E			7676 Dryers
	F			8282 Dryers
Components				
B	3	A77SC001	6458 LOWER SIDE COVER ASSY	
C	3	A77SC010	6464 LOWER SIDE COVER ASSY	
E	3	A79SC001	7272 LOW CVR BLOWER SIDE	
B	4	07 71397	6458 HOUSE SIDE PLATE UPPER	
AC	4	07 72029	6464 HOUSE SIDE PLATE UPPER	
E	4	07 85397	7676 HOUSE SIDE PLATE	
F	4	07 88073	8282 HOUSE SIDE PANEL	
B	5	07 71435	6458 LINT SIDE LOWER COVER	
AC	5	07 72028	6464 LOWER SIDE COVER	
E	5	07 85397	7676 HOUSE SIDE PLATE	
F	5	07 88073	8282 HOUSE PANEL	
ABC	6	W7 71205A	64" DRYER FRONT COSMETIC LOWER DOOR WELD	
E	6	W7 85205	7676 FRONT COSMETIC LOWER DOOR HINGED WLMT	
F	6	W7 88102	8282 FRONT COSMETIC LOWER DOOR HINGED WLMT	
all	7	W3 D1356L	WELD:DOOR 6458TG1 DRYER LF LV	

Guards and Covers

4 Sheets

6450, 6458, 6464, 7676, 8282 Dryers

Table 2 Parts List—Guards and Covers (cont'd.)

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
A	8	07 71201A	6464 FRONT COSM UPPER	
BC	8	07 71201W	6458 FRONT COSM UPPER	
E	8	07 85201	7676 COSMETIC UPPER MID COVER	
F	8	W7 88111	8282 FRONT COSMETIC UPPER MID COVER WLMT	
all	9	03 D1356R	DOOR: 6458TG1L DRYER HV	
ABC	10	07 71204W	6458 COSM LOWER THRESHOLD	
EF	10	07 81204	7272 FRONT COS THRESHOLD	
all	11	07 50428	SPRINKLER VALVE COVER DRYER	
ABC	12	07 71317	6458 REAR BEARING COVER	STANDARD SHROUD
E	12	07 81317	64,72,76" DRYER REAR BEARING COVER	STANDARD SHROUD
F	12	07 88125	8282 REAR BEARING COVER	STANDARD SHROUD
all	13	07 81280	64-76" DRYER SUPPORT BEAR MTG PLT	
all	15	07 71306	6458 TEMP PROBE BOX	
all	16	07 71307	6458 TEMP PROBE BOX COVER	
ABCE	17	07 71231	COVER BRG NO HOLE LF END	
F	17	07 88110	8282 FRONT BEARING COVER	
ABCE	18	W7 50129	64" DRYER GUIDE ROLLER COVER	
F	18	07 88117	8282 GUIDE ROLLER COVER	
all	19	07 71231A	COVER BRG NO HOLE RT END	
A	20	A7 50268C	6450 LF BLWR BELT GUARD ASMBLY - ANGLED	LEFT
A	20	A7 50268CA	5050 LF BLOWER BELT GUARD- ANGLED ASMBLY	RIGHT
BC	20	A77BA002	64" DRYER BLOWER BELT GUARD ASSY	
EF	20	A79BA002	72/76/82" DRYER BLOWER BELT GUARD ASSY	
all	21	27A108A	HINGE LIFTOFF LH EMKA#1056-U62 BLACK	
all	22	27A108B	HINGE LIFTOFF RH EMKA#1056-U63 BLACK	
E	23	W7 71317B	50-76" DRYER BRNG CVR SHORT-LEFT	SHORT SHROUD
F	23	A82BC001	8282 BRNG COVER SHORT ASSEMBLY	SHORT SHROUD
E	24	W7 71317D	50-76" DRYER BRNG CVR SHORT-RIGHT	SHORT SHROUD
F	24	A82BC001	8282 BRNG COVER SHORT ASSEMBLY	SHORT SHROUD
all	25	60A114	SELF-GRIP GASKET EMKA 1011-17	


BPDD6M01 / 2022502

BPDD6M01.1 0000544522 C.2 A.5 12/7/22, 8:03 AM Released

Unload Shrouds

3 Sheets

6458TG1L/R, TS1L/R; 6464TG1L/R, TS1L/R; 7676TG1L/R; 8282TG1L/R

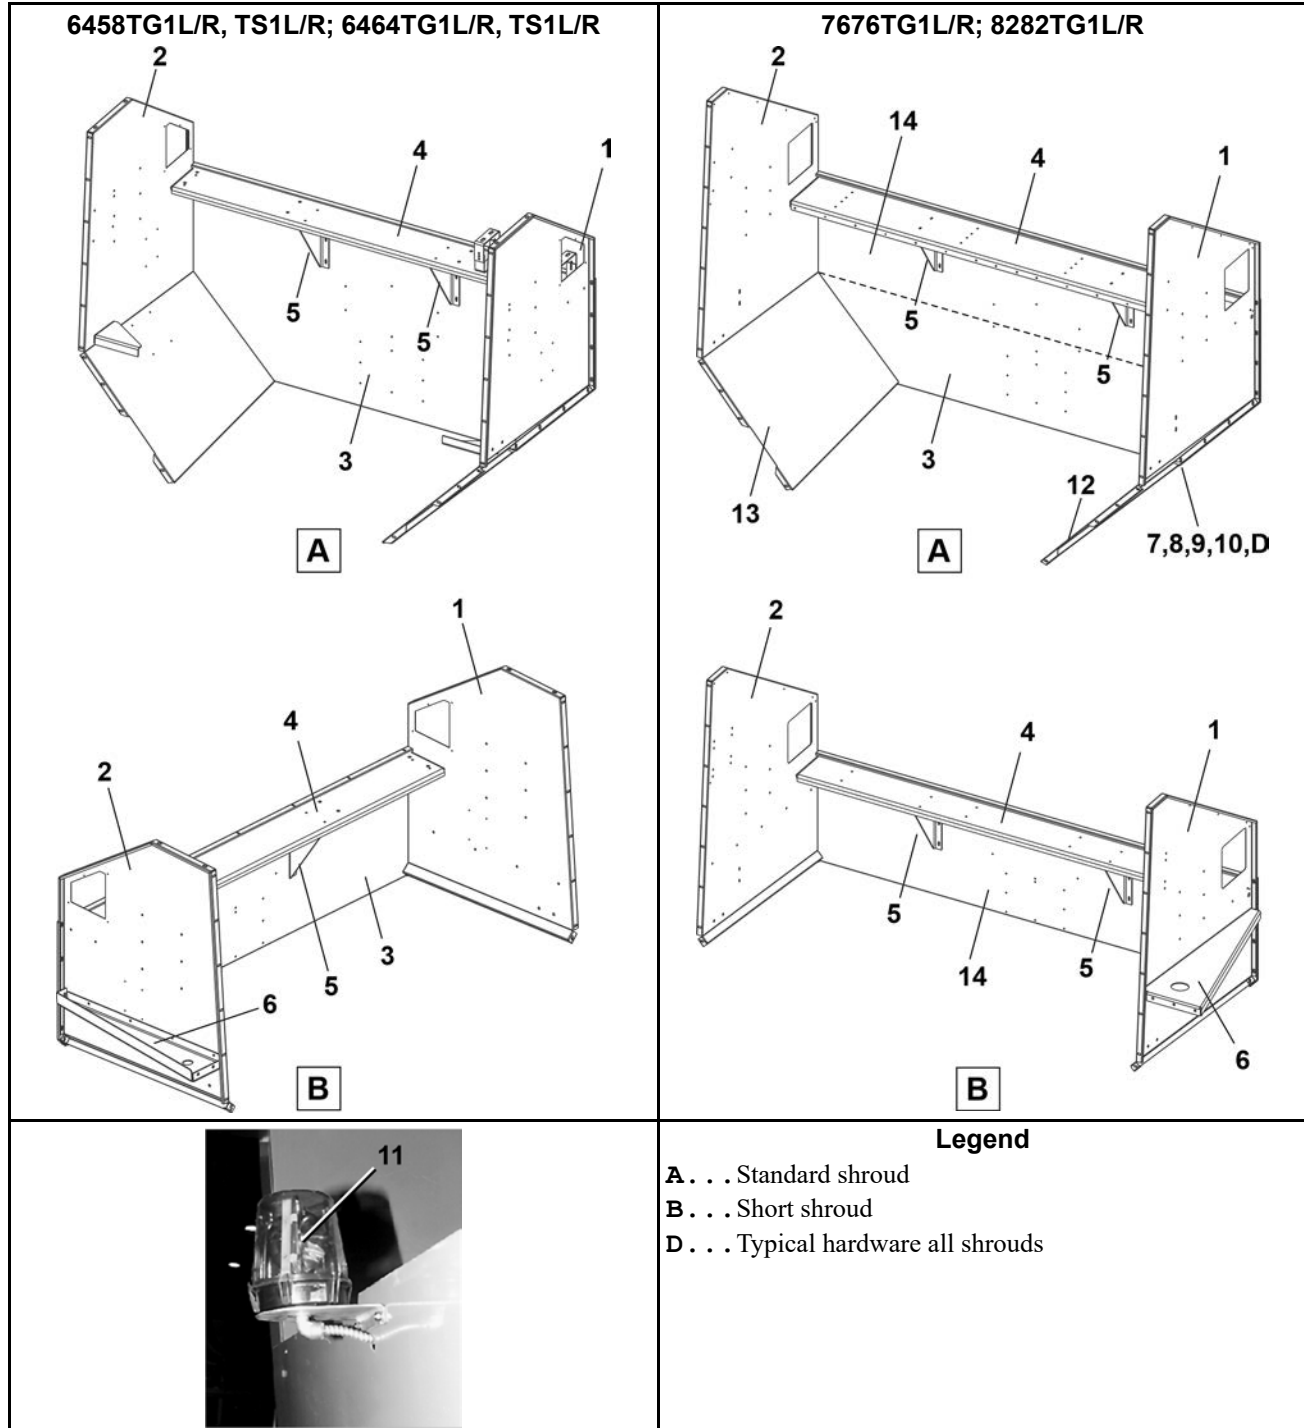

Unload Shrouds

3 Sheets

6458TG1L/R, TS1L/R; 6464TG1L/R, TS1L/R; 7676TG1L/R; 8282TG1L/R

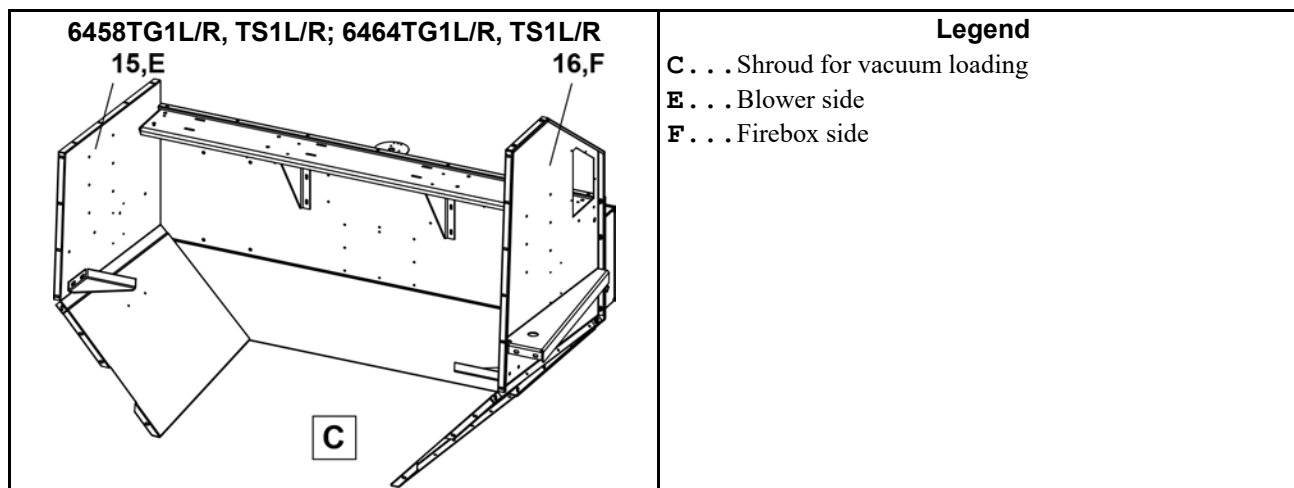


Table 3. Parts List—Unload Shrouds

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Reference Assemblies				
	A			6458/6464 STANDARD SHROUD
	B			7676 STANDARD SHROUD
	C			6458/6464 SHORT SHROUD
	D			7676 SHORT SHROUD
	E			8282 STANDARD SHROUD
	F			8282 SHORT SHROUD
	G			6458/6464 VACUUM LOADING SHROUD
Components				
A	1	07 71150A	6458 UNLOAD SHROUD RIGHT	
B	1	07 71505C	64" DRYER SHROUD SHORT CHAMFER - RT	
C	1	07 85150	7676 UNLOAD SHROUD RIGHT	
D	1	07 81505	7272 UNLOAD SHROUD RT SHORT	
EF	1	07 88123	8282 SHROUD SHORT CHAMFER-RT	
A	2	07 71150B	6458 UNLOAD SHROUD LEFT	
B	2	07 71505D	64" DRYER SHROUD SHORT CHAMFER-LF	
C	2	07 85151	7676 UNLOAD SHROUD LEFT	
D	2	07 81505A	7272 UNLOAD SHROUD LF SHORT	

Unload Shrouds

3 Sheets

6458TG1L/R, TS1L/R; 6464TG1L/R, TS1L/R; 7676TG1L/R; 8282TG1L/R

Table 3 Parts List—Unload Shrouds (cont'd.)

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
EF	2	07 88123A	8282 SHROUD SHORT CHAMFER-LT	
A	3	07 71152	6458 UNLOAD SHROUD BACK PLT	
B	3	07 71506	6458 UNLOAD SHROUD BACK =SHT	
C	3	07 85152	7676 UNLOAD SHROUD BACK PLT	
D	3	07 85152A	7676 UNLD SHROUD BACK-SHORT	
EF	3	07 88121	8282 UNLOAD SHROUD EXTENSION BACK	
AB	4	07 71154	64"DRYER GAS PIPE SUPP PLT	
CD	4	07 85154	7676 SHROUD GAS PIPE SUPPORT PLATE	
EF	4	07 88122	8282 GAS PIPE SUPP PLT	
all	5	07 71156	6458 PIPE SUPP GUSSET BKT	
AB	E6	W7 71507	6458 SHORT SHROUD GUSSET LFT	
CD	6	W7 81507	7272 SHORT SHROUD GUSSET LF	
EF	6F	07 88126	8282 SHORT SHROUD GUSSET	
all	7	15K037	HEXCAPSCR 1/4-20UNC2AX5/8 GR5	
all	8	15U180	LOCKWASHER MEDIUM 1/4 ZINCPL	
all	9	15U185	FLATWASHER(USS STD) 1/4" ZNC P	
all	10	15G165	HXNUT 1/4-20UNC2BSAE ZC GR2	
all	11	09H026V37	BEACON ROTARY 90MM AMBER CE	
E	12	07 88120	8282 UNLOAD SHROUD EXTENSION RIGHT	
E	13	07 88120A	8282 UNLOAD SHROUD EXTENSION LEFT	
EF	14	07 88124	8282 UNLOAD SHROUD BACK PLT	
G	15	07 71505E	6458 RT VAC LOADING SHROUD BLOWER SIDE	
G	16	07 71505H	6458 RT VAC LOADING SHROUD FB SIDE	


2 Installation

ATTENTION INSTALLERS!




FLOOR IS UNEVEN

- Establish System Zero Line or Z.
- Find highest point in factory floor where footpads will be located.
- System Zero Line or Z is 1" above highest point.

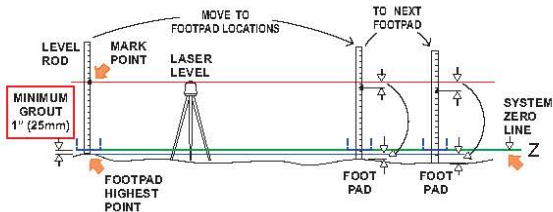


SHUTTLE RAIL BRACKETS MUST BE GROUTED TO Z

- Shim & level to System Zero Line or Z.
- Grout & anchor all brackets.

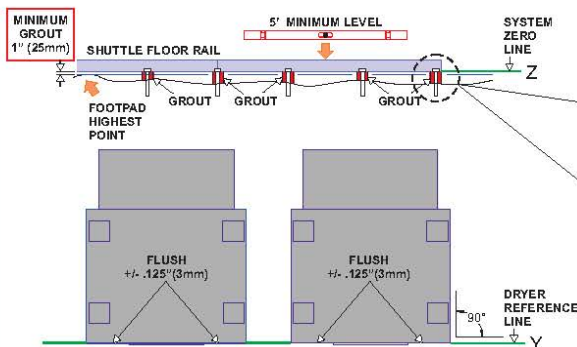

DRYER FACES MUST BE FLUSH

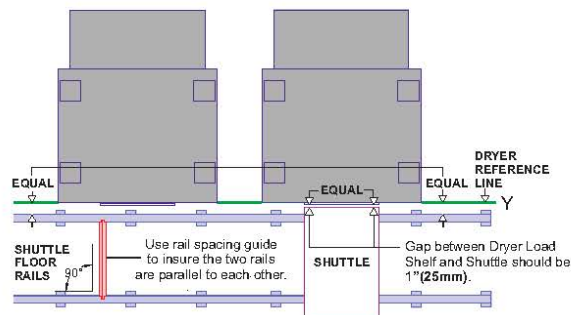


SHUTTLE RAILS MUST BE PERFECTLY PARALLEL TO DRYER FACES


- Floor rails must be parallel, level, and square along entire length of rail.

DRYER FEET MUST BE GROUTED

- Shim & level to System Zero Line or Z.
- Grout & anchor all brackets.

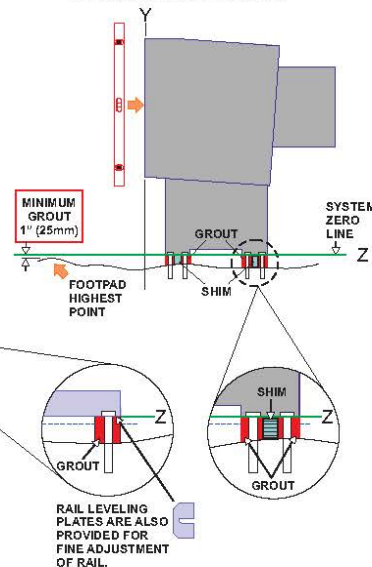

DRYER MUST BE LEVEL

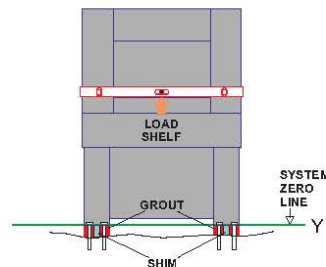

B2T2007003/2019193A

BNDUII02 / 2025226

BNDUII02 0000765280 C.2 5/30/25, 3:13 PM Released

2.1 Dryer Assembly and Setting

BNDUII02.C01 0000765279 A.2 C.2 5/30/25, 3:13 PM Released

This document gives general instructions for shippers and installers. Several other documents in the installation manual provide more detailed instructions on specific tasks related to installation. Review all of the installation-related documents before proceeding.

2.1.1 Handling Precautions

BNDUII02.T01 0000765278 A.2 C.2 5/30/25, 3:13 PM Released

The machine is disassembled at the Milnor® factory in two or more assemblies: the main dryer housing, the pedestal base, and if necessary, one or more other assemblies. The machine is shipped from the Milnor® factory in three or more containers. Major assemblies are palletized or skidded and there are one or more boxes containing loose parts such as connecting brackets.

1. Remove the protective coverings (leaving the machine on its shipping skids) and examine the components carefully for possible shipping damage. If the machine is damaged, notify the transportation company immediately.



NOTE: Once the machine is given to the **carrier** for delivery, it is the sole responsibility of the carrier to ensure that no damage occurs during transit. In addition to readily apparent damage, carriers are liable for concealed damage. **Do not hesitate to file a claim with the carrier if the machine has been damaged in any way during shipment.** Milnor® will be glad to assist you in filing your claim, but is not responsible for shipping damage to the machine once it has been delivered to the carrier in good condition.

2. Lifting brackets are provided on the top of the house and are tagged as such. Spreader bars are mounted between the lifting brackets. The lifting brackets must be used if lifting by crane.
3. Use the skids for fork lifting and, if possible, leave the machine on its shipping skids until it is about to be assembled and placed in its final position. Once the skids are removed, take care in placing forks under the machine. **Do not allow the forks to come in contact with valves, piping, etc., located on the machine.**
4. Never push, pull, or exert pressure on any components that protrude from the machine frame.
5. Consult the Milnor® factory if components such as the blower housing must be removed to fit machine through openings.

Some dryers are paired for installation immediately adjacent to each other. When installing these machines, the spreader bar mounting bolts ([Figure 3: Spreader Bar Between Front Lifting Plates, page 24](#)) are inaccessible once the machines are mounted side by side. Remove the spreader bar immediately after installing the legs, before setting or anchoring dryer. Do not remove the lift plates as they are used to tie machines together.

Figure 1. Front Lifting Bracket

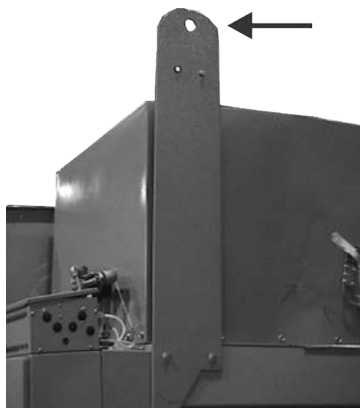


Figure 2. Rear Lifting Bracket


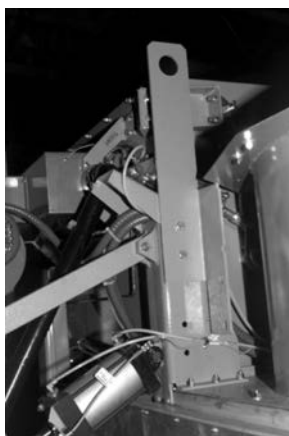


Figure 3. Spreader Bar Between Front Lifting Plates



Figure 4. Apply sealing foam to left house before setting into position

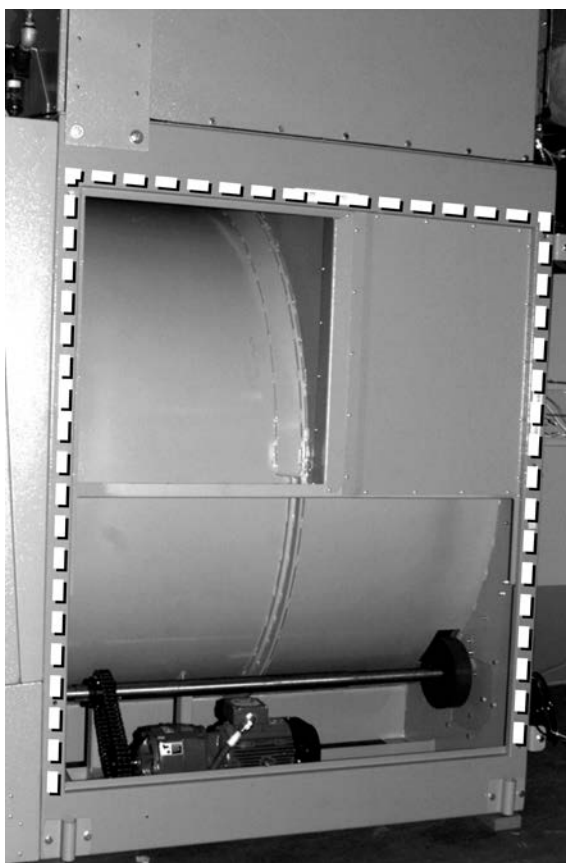

2.1.2 Site Requirements

BNDUII02.C02 0000765276 A.2 C.2 5/30/25, 3:13 PM Released

2.1.2.1 Dryer Environment

BNDUII02.C03 0000765275 A.2 C.2 5/30/25, 3:13 PM Released

The dryer must not be installed or stored in an area where it will be exposed to water and/or weather.

2.1.2.2 Clearances

BNDUII02.C04 0000765591 A.2 C.2 5/30/25, 3:13 PM Released

Observe the following:

- Sufficient clearances must exist to move the machine into the laundry. All openings and corridors through which equipment must pass must be of sufficient size to accommodate the sizes of the skidded assemblies (see the dimensional drawing). It is occasionally possible to reduce the overall dimensions by removing piping and by other special modifications. Consult the Milnor® factory for more information.
- Provide sufficient clearance around machine for normal operation and maintenance procedures.
- Ensure sufficient clearance between hot surfaces, such as the dryer exhaust vent, and any combustible building materials.
- Ensure sufficient ventilation exists for the heat and vapors of normal operation to dissipate.
- Provide adequate airflow for optimum machine performance. Normally, this means connecting the machine to an outside air source.

2.1.2.3 Foundation

BNDUII02.C05 0000765590 A.2 C.2 5/30/25, 3:13 PM Released

The machine must be anchored in accordance with the installation instructions. The floor and/or all other support components must have sufficient strength (and rigidity with due consideration for the natural or resonant frequency thereof) to withstand the fully loaded weight of the machine including the wet goods and any repeated sinusoidal (rotating) forces generated during its operation. Determining the suitability of floors, foundations, and other supporting structures normally requires analysis by a qualified structural engineer.

2.1.3 Assembly

BNDUII02.C06 0000765589 A.2 C.2 5/30/25, 3:13 PM Released

2.1.3.1 Installing the Legs on the House

BNDUII02.C07 0000765588 A.2 C.2 5/30/25, 3:13 PM Released

It is usually easiest to install the legs on the house then use a fork lift to set the machine in place.

1. Read all related tags prior to assembly.
2. Verify that the doors are closed and secured.
3. Unfasten house from the shipping skid. Once skids are removed, take care in placing forks under the machine. **Do not allow forks to come in contact with valves, piping, motors, etc., located under the machine.**

4. Install the provided foam seal along the path indicated by decals on the machine. This seal is only installed on the left side machine of a left and right pair ([Figure 4: Apply sealing foam to left house before setting into position, page 24](#)).
5. Raise the house using the three designated lifting plates located on the top of the machine.
6. Install the legs and filler plates on the house.
7. Remove the spreader bar ([Figure 3: Spreader Bar Between Front Lifting Plates, page 24](#)).
8. Carefully move the machine into place.
9. Repeat the assembly process as required for the adjacent machine (if paired).

2.1.3.2 Anchoring

BNDUUI02.C08 0000765587 A.2 C.2 5/30/25, 3:13 PM Released



WARNING: Crush and Machine Damage Hazards — This machine has a rearward center of mass.

- ▶ Install anchor bolts as soon as machine is in position and before making service connections. Install anchor bolts in accordance with the dimensional drawing.
- ▶ Keep bystanders clear of machine during installation.

Machines must be securely anchored to an adequate foundation. Anchor bolt locations and foundation specifications are provided on the dimensional drawing. However, do not install anchor bolts until the machine is on site so that the machine itself may be used to determine precise anchor bolt locations. Consult Milnor® if any obstruction prevents the installation of any anchor bolts. **Anchor bolts cannot be indiscriminately omitted.**

2.1.3.3 Leveling Procedures

BNDUUI02.C09 0000765586 A.2 C.2 5/30/25, 3:13 PM Released

1. Establish System Zero Line or Z. Find the highest point in the factory floor where footpads will be located. The system Zero Line or Z is 1"(25MM) above the highest point.
2. Install the anchor bolts.
3. Level with leveling bolts until the bottom of the pedestal feet are on System Zero Line or Z. **Level both left to right and front to back.**
4. Use a carpenter's level to verify that the machine is level.
5. Dryer feet must be grouted. Grout all footpads.
6. Tighten all foundation bolts until they contact the top of the base plates.
7. Tighten all the bolts evenly, **one-quarter of a turn each time on every bolt** until all bolts are uniformly tight. After tightening, check each fastener separately at least twice.


2.1.3.4 Machine-to-Machine Brackets

BNDUUI02.C10 0000765585 A.2 C.2 5/30/25, 3:13 PM Released

Machine to machine brackets hold paired dryers in place after each machine is anchored and leveled. Install these brackets as follows:

- Install the rear brackets ([Figure 5: Machine-to-Machine Brackets and Spacers, page 27](#)).
- Assemble front machine-to-machine leg bracket. Mark and drill mounting holes and install the leg bracket ([Figure 5, page 27](#)).
- Install bolts between the front lift plates of adjacent machine pairs. Do not tighten bolts at this time.
- Slide the lift plate spacers in between the front lift plates ([Figure 5, page 27](#)). Tighten bolts when done.

Figure 5. Machine-to-Machine Brackets and Spacers

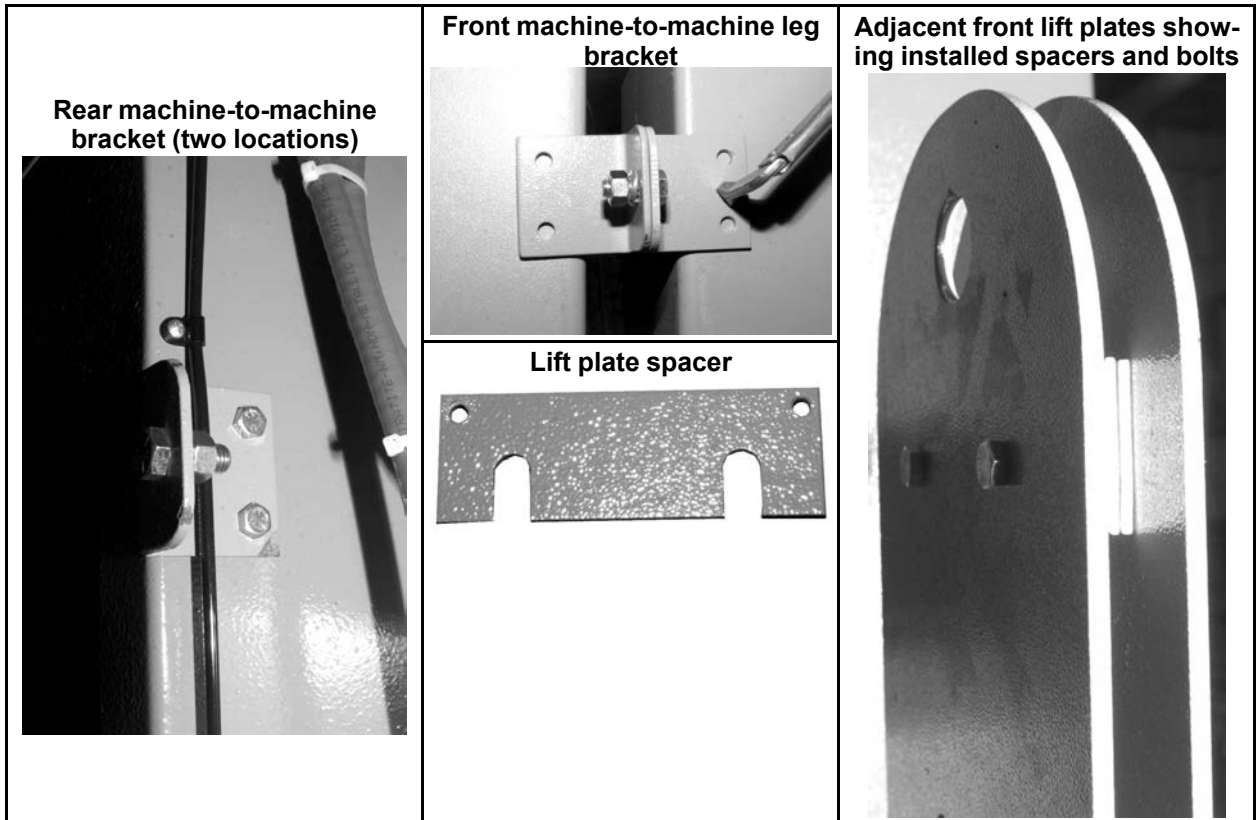

2.1.3.5 Check Cylinder Interior

BNDUUI02.C11 0000765584 A.2 C.2 5/30/25, 3:13 PM Released

Check the interior of the perforated cylinder for smoothness before placing the machine in service. Milnor® cannot accept claims for damage to the cylinder's smooth finish after the machine has been placed in service.

BPDUUK01 / 2022245

BPDUUK01.1 0000481017 B.2 C.2 6/5/25, 10:01 AM Released

Lifting Brackets

2 Sheets

5050, 6450, 6458, 6464, 7676, 8282 Dryers

Figure 6. 5050, 6450, 6458, 6464, 7676, and 8282 Dryers (7676 Shown)


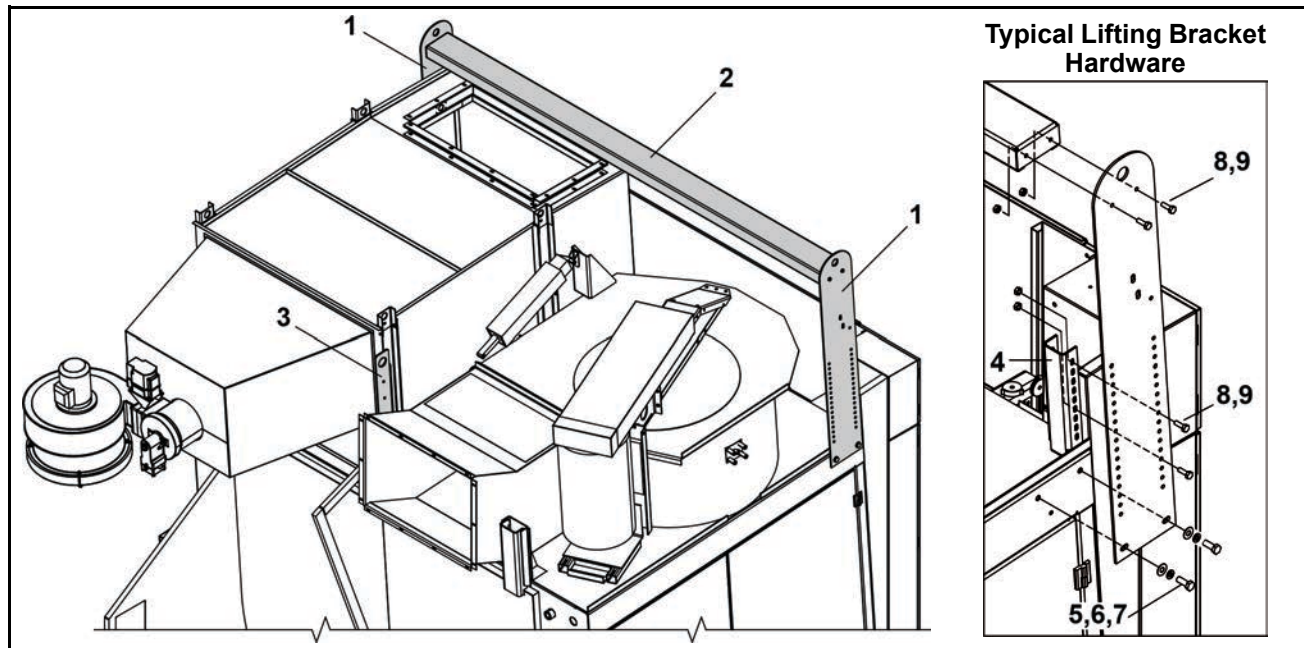


Figure 7. 8282 Dryers

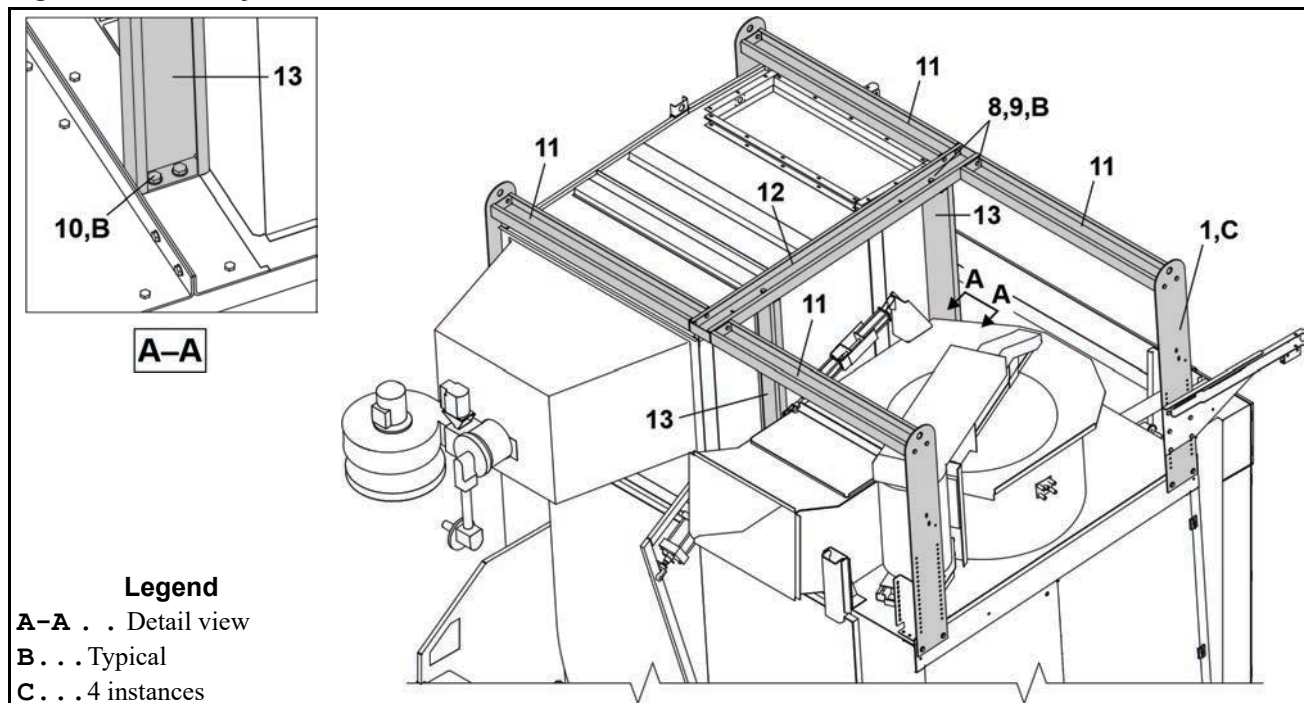

Lifting Brackets

2 Sheets

5050, 6450, 6458, 6464, 7676, 8282 Dryers

Table 4. Parts List—Lifting Brackets

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Reference Assemblies				
B			5050 DRYERS	
C			6450 DRYERS	
D			6458 DRYERS	
E			6464 DRYERS	
G			7676 DRYERS	
H			8282 DRYERS	
Components				
BDE	1	07 71315	DRYER LIFT BRKT STANDARD=41.50	
C	1	07 71315B	6450 DRYER LIFT BRKT=44.50	
G	1	07 85315A	DRYER LIFT BRKT TALL=51.50	
H	1	07 88092	8282 DRYER LIFT BRKT	
B	2	07 44075	5040 LIFT BRKT LONG SPREADER	
C	2	07 71316	6458 LIFT BRKT LONG SPREADER	
DE	2	07 81316	7272 LIFT BRKT LONG SPREADER	
H	2	07 88093	8282 SPREADER BAR CENTER STIFF	
B	3	07 44076	5040 REAR LIFTING BRACKET	
CDE	3	07 71183A	6458A REAR LIFTING BRACKET	
G	3	07 71183B	DRYER REAR CHANNEL LIFTING BRACKET	
H	3	07 88096	8282 VT LIFTING BRKT	
B-H	4	07 71439	6458 RAILSUPP CORNER BRKT	
all	5	15K173A	HXCAPSCR 1/2-13UNC2AX1.75 GR5	
all	6	15U280	FL+WASHER(USS STD)1/2 ZNC PL+D	
all	7	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	8	15K105	HXCAPSCR 3/8-16UNC2A1.25 GR5 P	
all	9	15G198	HXFLGNUT 3/8-16 ZINC	





BPDUUM03 / 2022252

BPDUUM03.1 0000481076 C.2 A.7 6/14/22, 11:03 AM Released

Dryer to Dryer Mounting Parts

2 Sheets

5050, 6450, 6458, 6464, 7676, 8282 Dryers

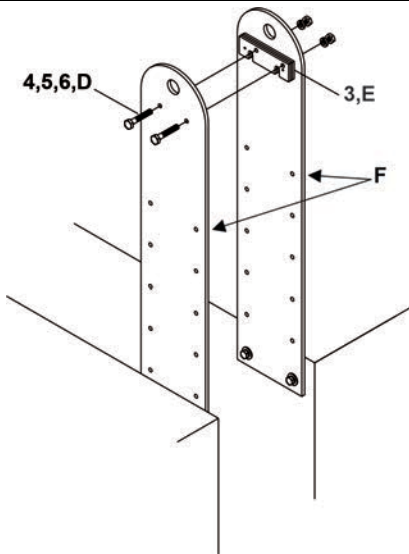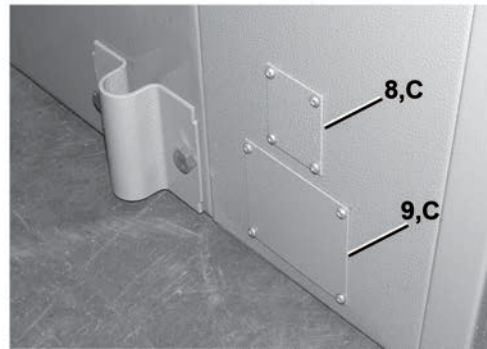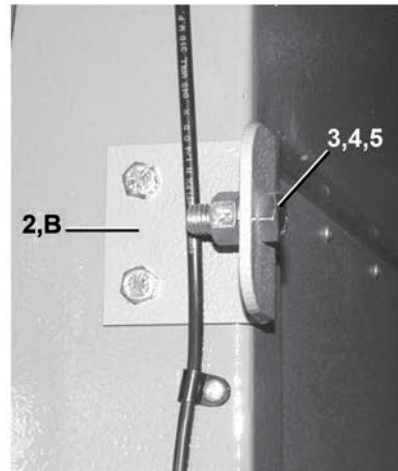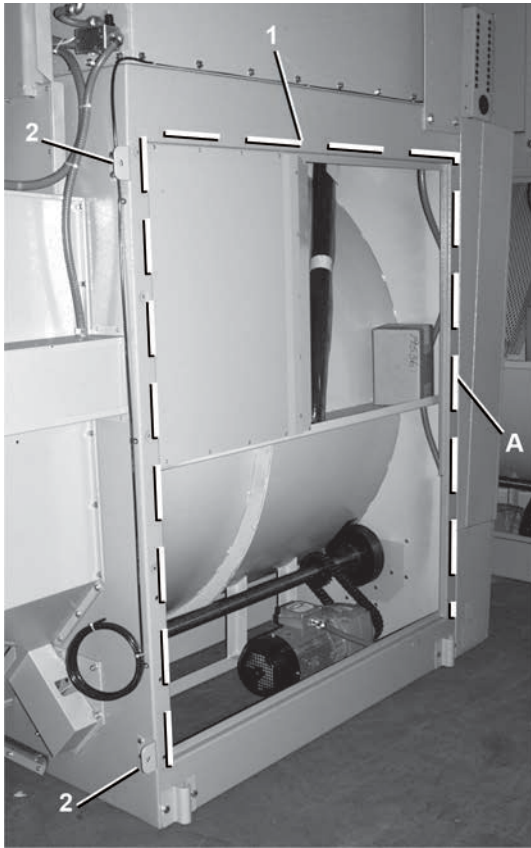

Legend

- A** . . . Sealing foam is applied to the right side of the left machine of the pair only. The dashed line shows where to apply the foam. ("right machine" shown in photo)
- B** . . . Mounting brackets are used to join left and right machines on the rear of the house and to join the pedestal legs.
- C** . . . Covers for nameplate and emergency stop replacement.
- D** . . . Typical
- E** . . . Shim
- F** . . . Lifting brackets on the left and right machines are joined using shims and bolts.

Dryer to Dryer Mounting Parts

2 Sheets

5050, 6450, 6458, 6464, 7676, 8282 Dryers

Table 5. Parts List—Dryer to Dryer Mounting Parts

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Components				
all	1	60A008A	1" X 1" CLOSED CELL NEO SPONGE W/ADH.STRIP	
all	2	07 71309	6458 DRYER TO DRYER MNT BKT	
all	3	15K105	HXCAPSCR 3/8-16UNC2A1.25 GR5 P	
all	4	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
all	5	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
all	6	15K125	HEXCAPSCR 3/8-16UNC2AX2.5 GR5-	
all	7	07 71310	6458 DRYER TO DRYER MNT SHIM	
all	8	03 CC2X2	COVER PLT:DRYER NPLT REPLCMNT	
all	9	03 CC3X4	COVER PLT:DRYER E-STOP RPLCMNT	


BPDDUL01 / 2022256A

BPDDUL01.1 0000322253 C.2 6/17/22, 11:39 AM Released

Pedestal Base Installation

4 Sheet

5050, 6450, 6458, 6464, 7676, & 8282 Dryers

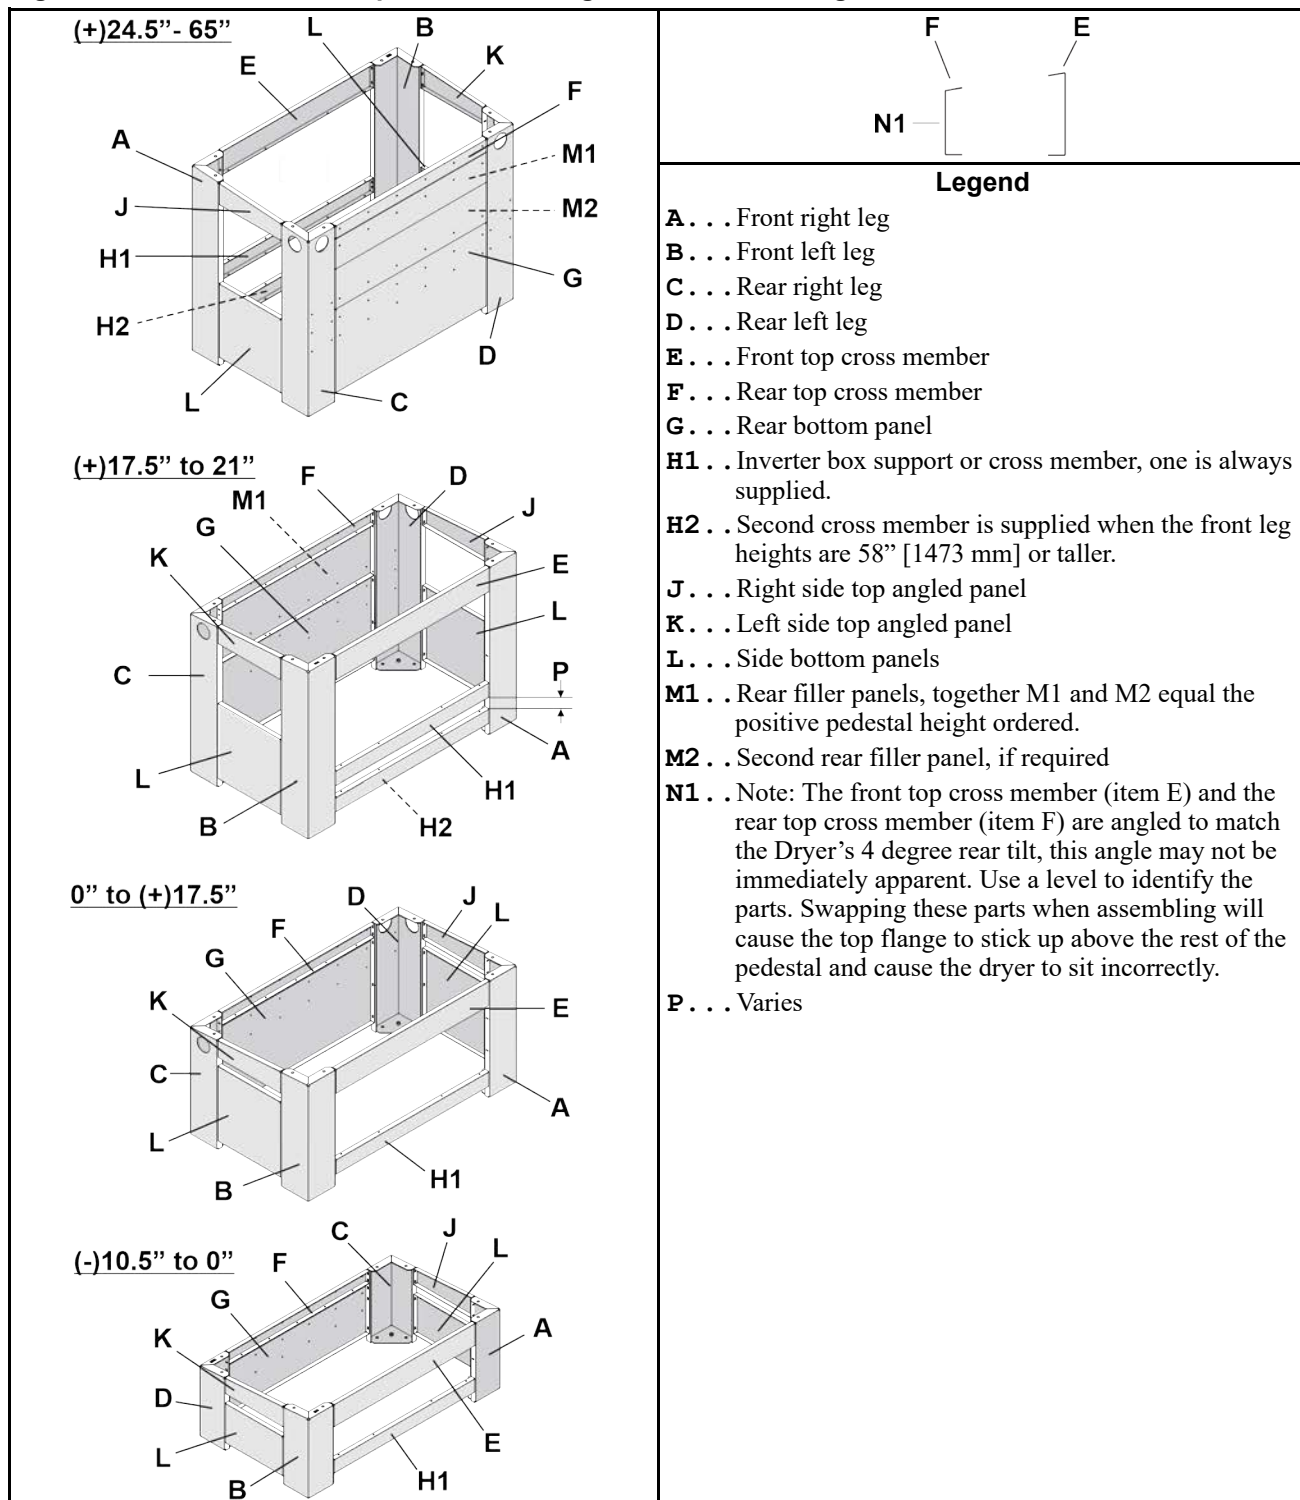
Figure 8. Placement of Components with Regard to Pedestal Height

Pedestal Base Installation

4 Sheet

5050, 6450, 6458, 6464, 7676, & 8282 Dryers

Figure 9. Pedestal Options and Hardware Connections

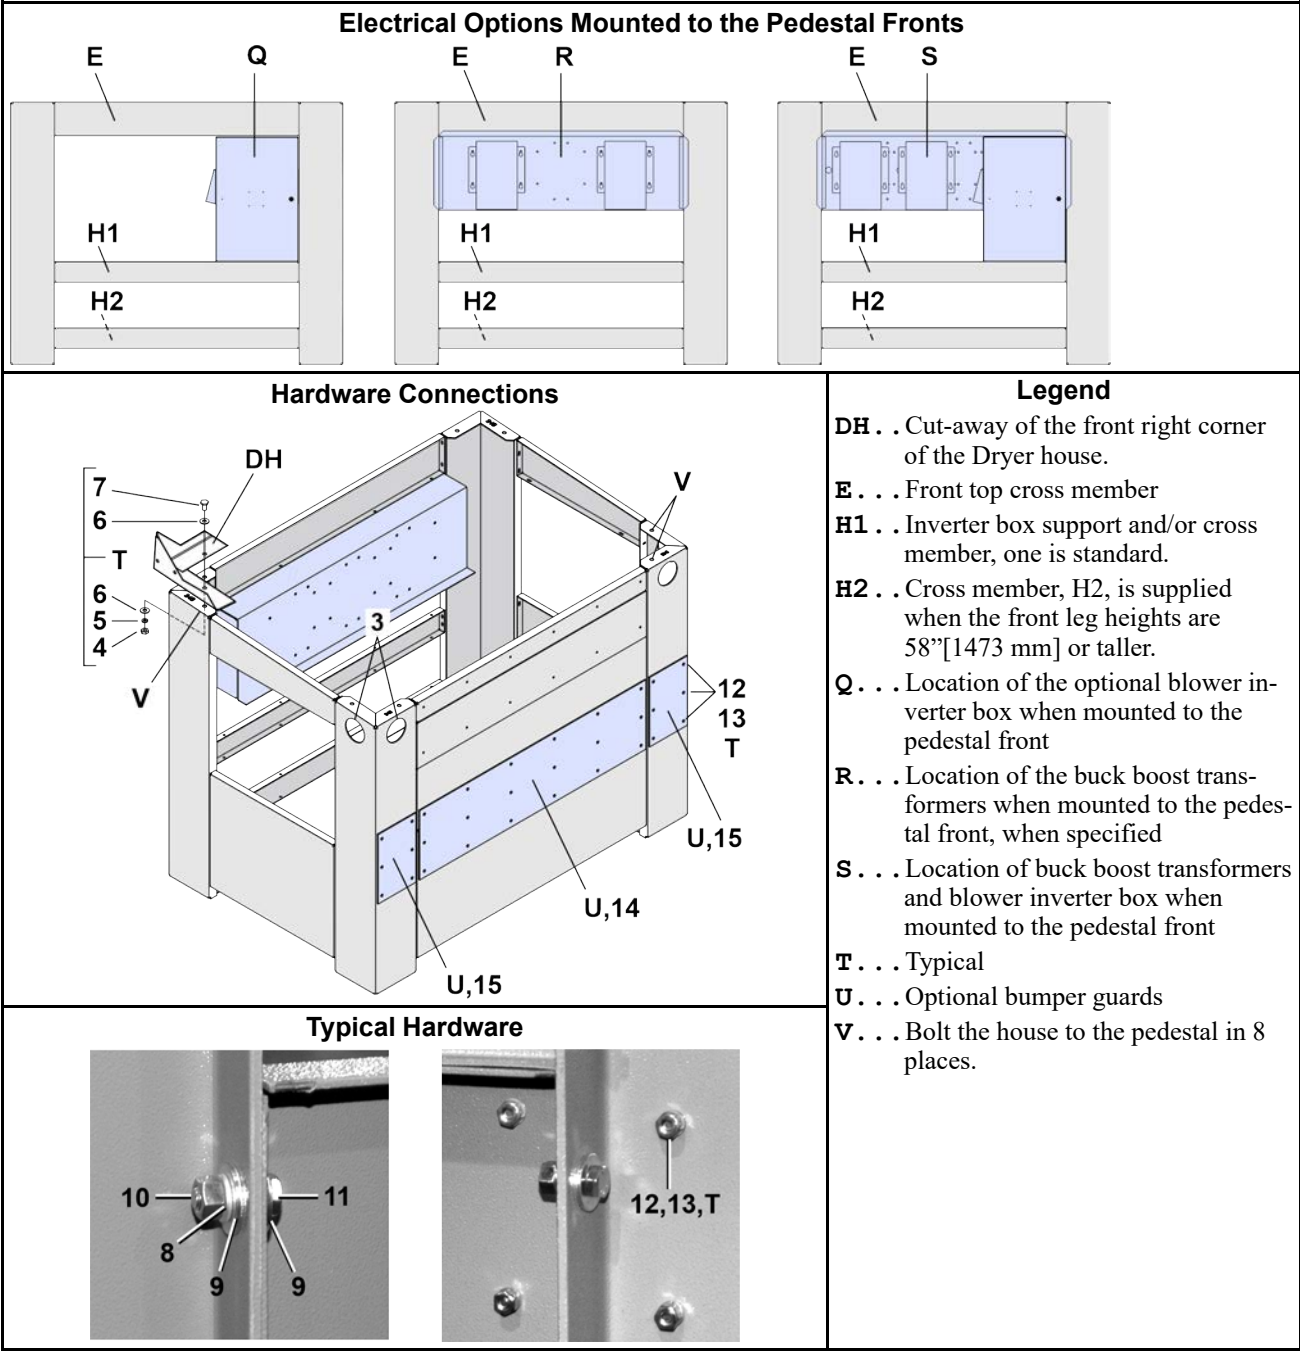

Pedestal Base Installation

5050, 6450, 6458, 6464, 7676, & 8282 Dryers

Figure 10. Anchoring

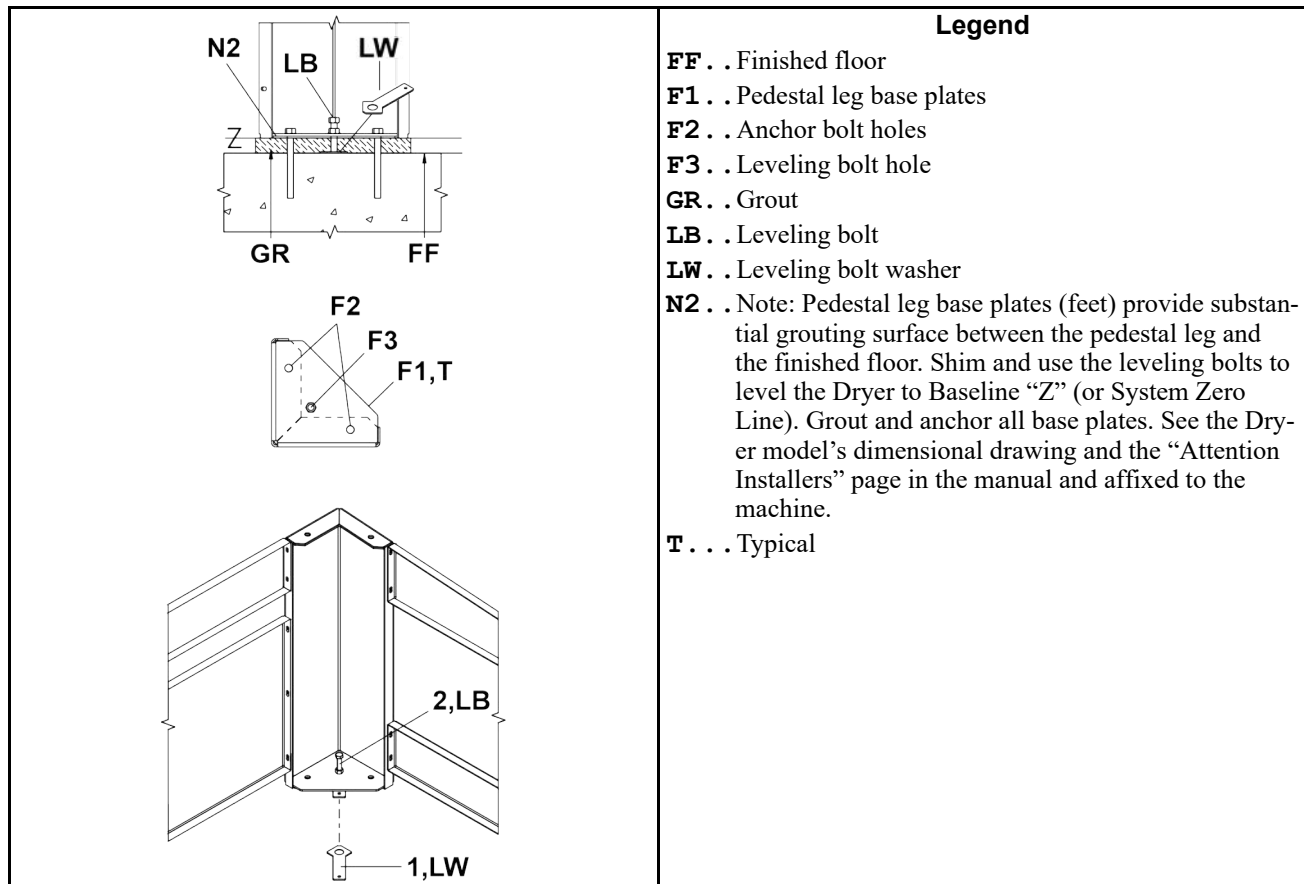


Table 6. Parts List—Pedestal Base Installation

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Reference Assemblies				
	A	G77PD030	DRYER PEDESTAL STANDARD HARDWARE	
Components				
all	1	07 71579	DRYER JACKING BOLT WASHER	
all	2	15K226	HXTAPSCR 5/8-11UNC2AX3 GR5 ZIN	
all	3	12P14KSB	SNAPBUSH 5.0" X 4.75" X .75	
all	4	15G230	HXNUT 1/2-13UNC2B SAE ZINC GR2	
all	5	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	6	15U490	FLTWASH 1+1/2X17/32X1/4 ZINC	
all	7	15K191	HXCAPSCR 1/2-13UNC2AX2.5 GR5 Z	
all	8	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	

Pedestal Base Installation

4 Sheet

5050, 6450, 6458, 6464, 7676, & 8282 Dryers

Table 6 Parts List—Pedestal Base Installation (cont'd.)

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
all	9	15U240	FLATWASHER(USS STD) 3/8" ZNC P	5050, 6450, 6458, 6464 Dryers 7676 Dryers
all	10	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
all	11	15K095	HXCPSCR 3/8-16UNC2AX1 GR5 ZINC	
all	12	15N176	FLATMACSCR 1/4-20NCX3/4SS18-8	
all	13	15G164NE	HEXLOKNUT NYL 1/4-20 UNC2A SS.	
	14	07 71403	6458 BUMPER PAD-16"WX60"LG	
	14	07 81403	7272 BUMPER PAD	
all	15	07 71404	6458 BUMPER PAD-16"WX10"LG	


BPDD6L01 / 2022465

BPDD6L01.1 0000531819 C.2 A.4 11/10/22, 11:34 AM Released

Pedestal Base

6 Sheets

6458TG1L/R,TS1L/R 6464TG1L/R,TS1L/R

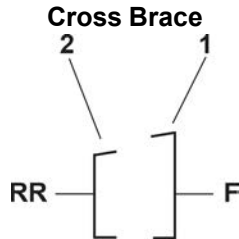

Legend

A . . . Location of the optional inverter box, if supplied.

F . . . Front

L . . . Left


RR. . Rear

v . . . Varies

N1 . . The upper front and upper rear cross braces are angled to match the angle of the pedestal legs. This angle may not be immediately apparent, you may need to use a level to identify the parts. Swapping these parts when assembling will cause the top flange to stick up above the rest of the pedestal and cause the dryer to sit incorrectly.

N2 . . Items 9 are used only in pedestals where the front leg heights are 58" [1473MM] or taller.


N3 . . Item 11 is only supplied with pedestals where the front leg heights are 46-1/4" [1174MM] or taller.

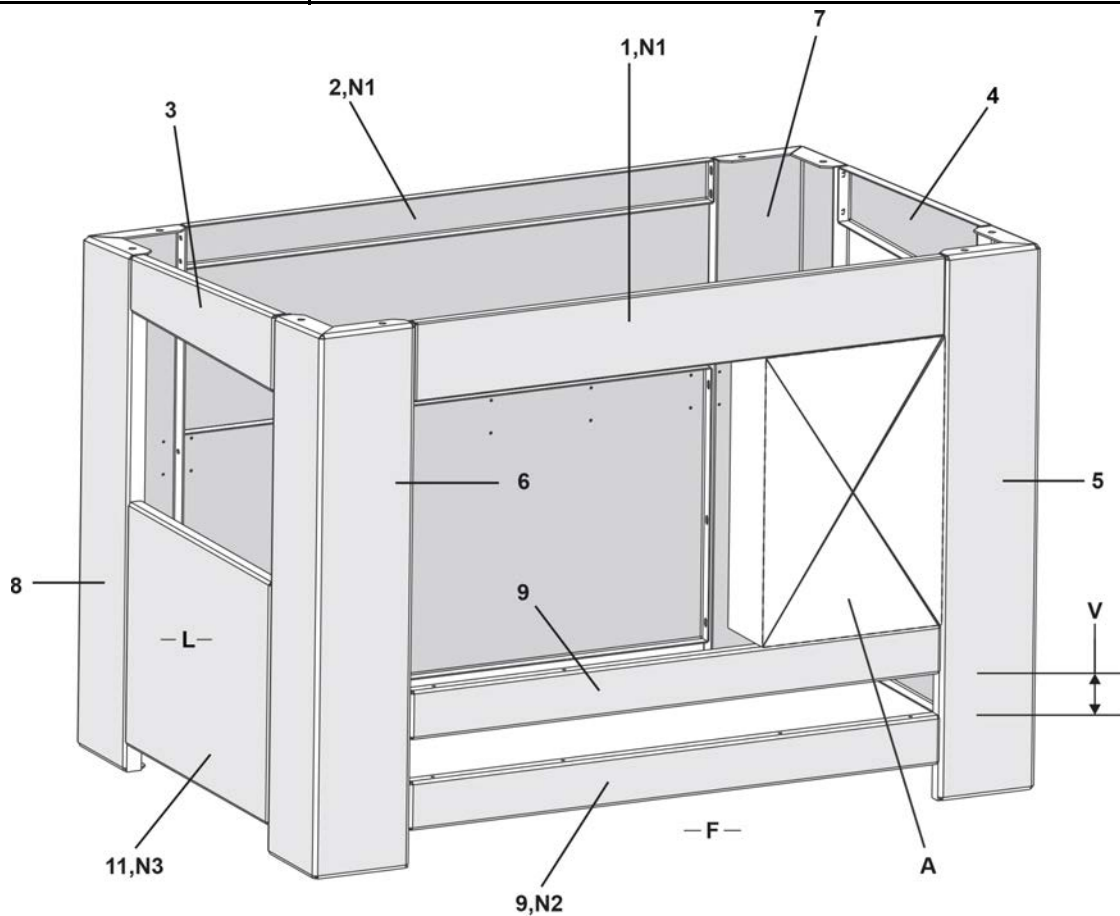

Pedestal Base

6 Sheets


6458TG1L/R ,TS1L/R 6464TG1L/R ,TS1L/R

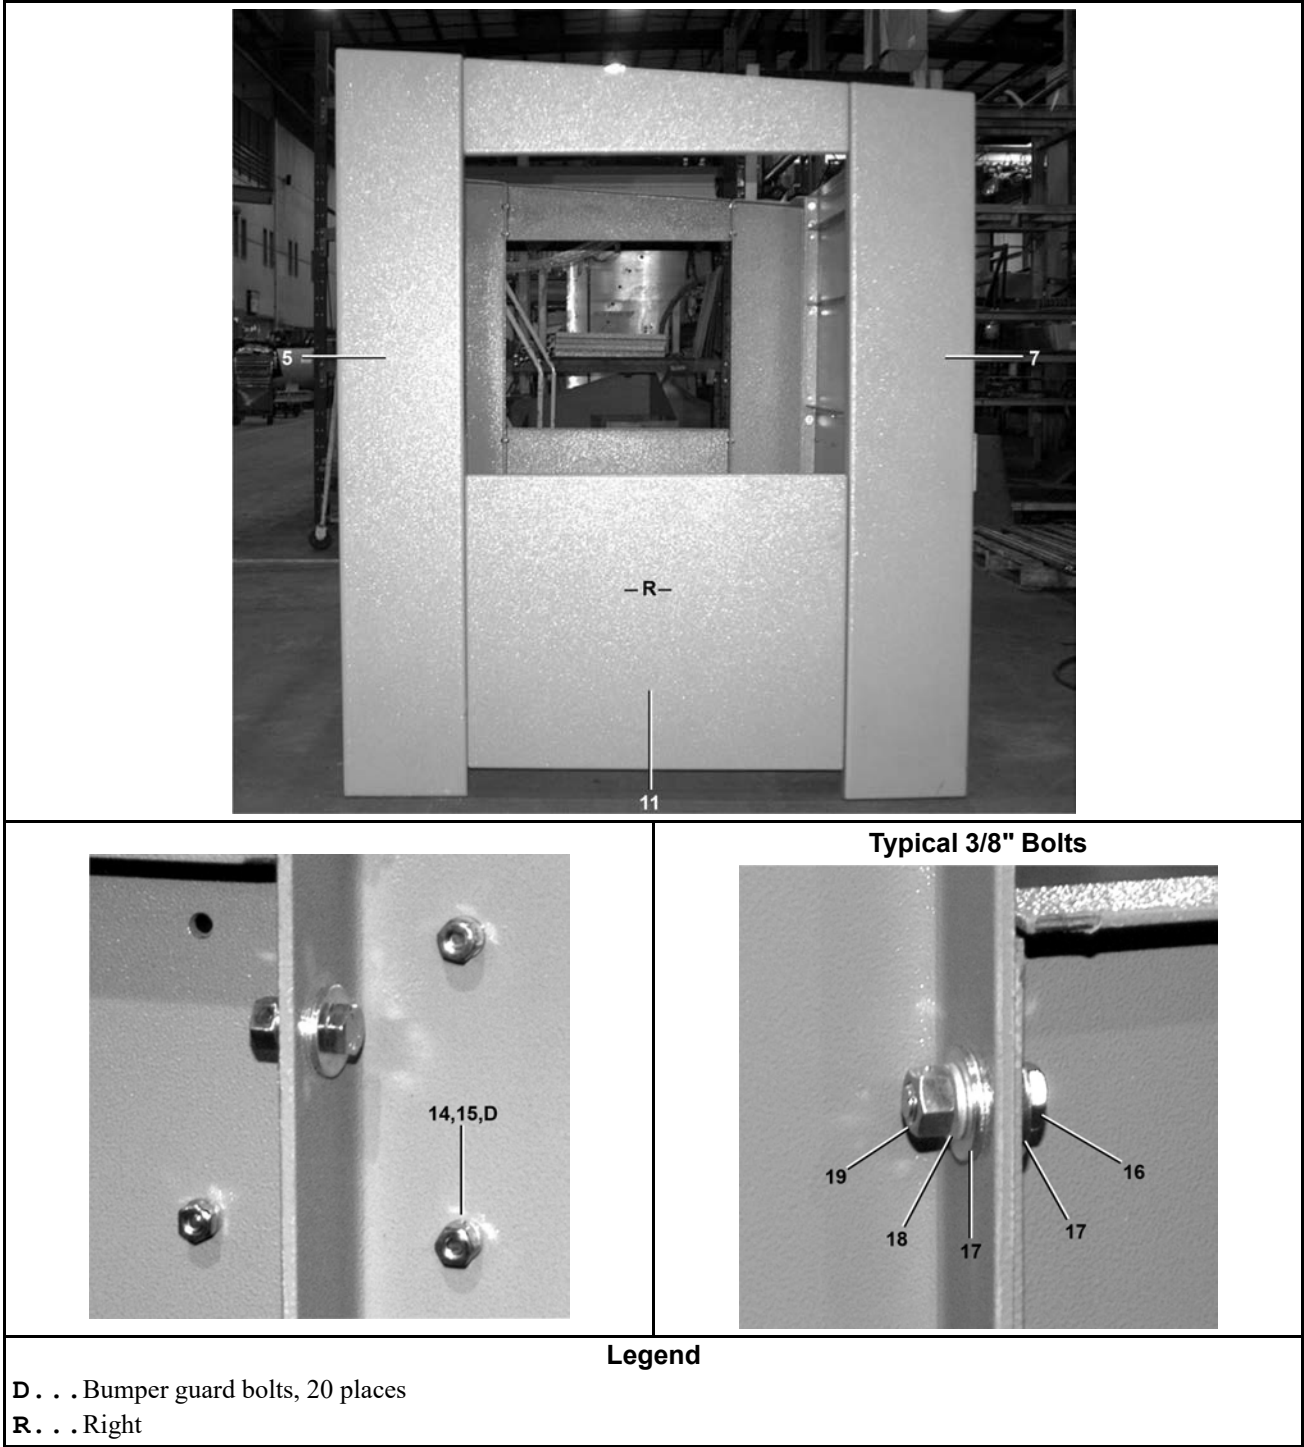

Pedestal Base

6458TG1L/R ,TS1L/R 6464TG1L/R ,TS1L/R

6 Sheets

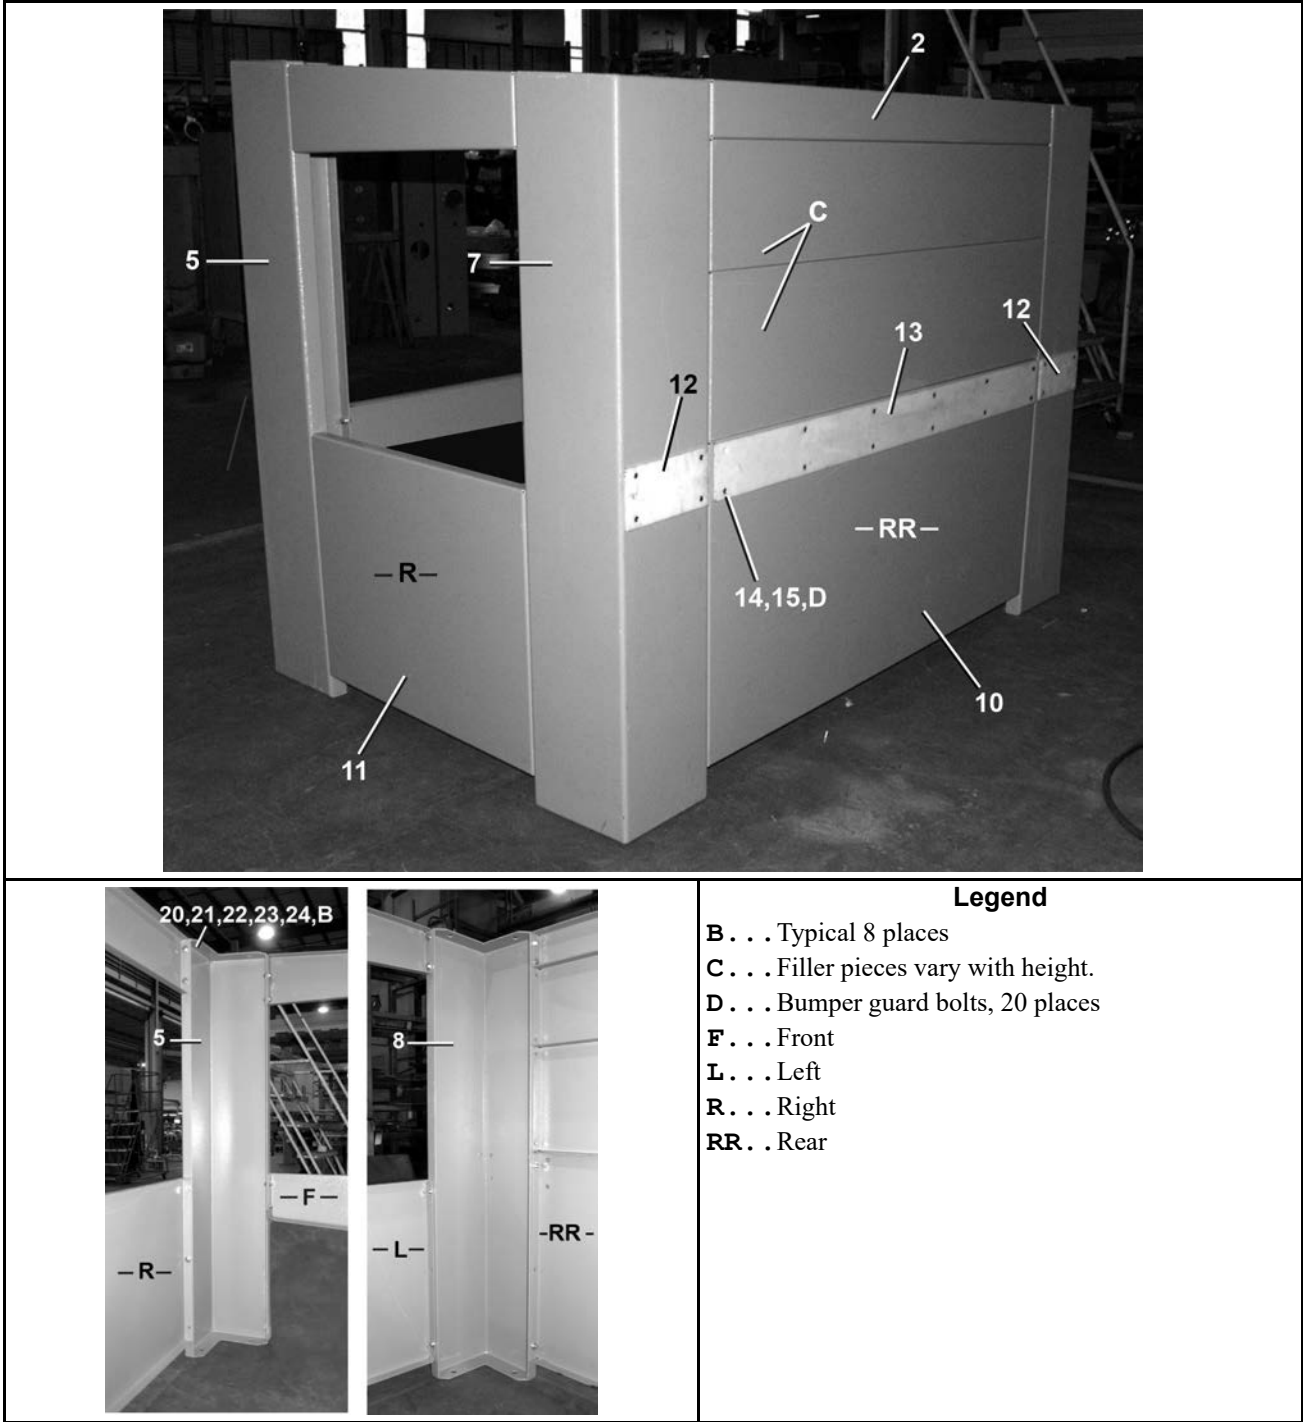

Pedestal Base

6 Sheets

6458TG1L/R , TS1L/R 6464TG1L/R , TS1L/R

Table 7. Front Legs

Pedestal Order Height (inches)	Leg Length (inches)	Item 5 Part Number	Item 6 Part Number
0.0	40.968	07-71320	07-71320A
1.75	42.718	07-71322	07-71322A
3.5	44.468	07-71324	07-71324A
5.25	46.218	07-71326	07-71326A
7.0	47.968	07-71328	07-71328A
8.75	49.718	07-71330	07-71330A
10.5	51.468	07-71332	07-71332A
12.25	53.218	07-71334	07-71334A
14.0	54.968	07-71336	07-71336A
15.75	56.718	07-71338	07-71338A
17.5	58.468	07-71340	07-71340A
19.25	60.218	07-71342	07-71342A
21.0	61.968	07-71344	07-71344A
22.75	63.718	07-71346	07-71346A
24.5	65.468	07-71348	07-71348A
26.25	67.218	07-71350	07-71350A
28.0	68.968	07-71352	07-71352A
29.75	70.718	07-71354	07-71354A
33.25	74.218	07-71356	07-71356A
35.00	75.968	07-71358	07-71358A
36.75	77.718	07-71360	07-71360A
38.50	79.468	07-71362	07-71362A
31.50	72.468	07-71300	07-71300A
-3.5	34	07-71389B	07-71389C
-7	30.5	07-71389	07-71389A

Pedestal Base

6 Sheets

6458TG1L/R, TS1L/R 6464TG1L/R, TS1L/R

Table 8. Rear Legs

Pedestal Order Height (inches)	Leg Length (inches)	Item 7 Part Number	Item 8 Part Number
0.0	37.8	07-71321	07-71321A
1.75	39.55	07-71323	07-71323A
3.5	41.3	07-71325	07-71325A
5.25	43.05	07-71327	07-71327A
7.0	44.8	07-71329	07-71329A
8.75	46.55	07-71331	07-71331A
10.5	48.3	07-71333	07-71333A
12.25	50.05	07-71335	07-71335A
14.0	51.8	07-71337	07-71337A
15.75	53.55	07-71339	07-71339A
17.5	55.3	07-71341	07-71341A
19.25	57.05	07-71343	07-71343A
21.0	58.8	07-71345	07-71345A
22.75	60.55	07-71347	07-71347A
24.5	62.3	07-71349	07-71349A
26.25	64.05	07-71351	07-71351A
28.0	65.8	07-71353	07-71353A
29.75	67.55	07-71355	07-71355A
33.25	71.05	07-71357	07-71357A
35.00	72.80	07-71359	07-71359A
36.75	74.55	07-71361	07-71361A
38.50	76.30	07-71363	07-71363A
31.50	69.300	07-71301	07-71301A
-3.5	30.8	07-71390B	07-71390C
-7	27.3	07-71390	07-71390A

Pedestal Base

6 Sheets

6458TG1L/R , TS1L/R 6464TG1L/R , TS1L/R


Table 9. Parts List—Pedestal Base

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Components				
all	1	07 71391	6458 DRYER BASE FILLER TOP FT	
all	2	07 71392	6458 DRYER BASE FILLER TOP RR	
all	3	07 71395	6458 DRYER BASE FILL DRV RITE	6458 DRYERS
all	3	07 72041	6464 DRYER BASE FILL DRV RIGHT	6464 DRYERS
all	4	07 71395A	6458 DRYER BASE FILL DRV LEFT	6458 DRYERS
all	4	07 72041A	6464 DRYER BASE FILL DRV LEFT	6464 DRYERS
all	5	07 71300	6458/64 = 31.5" PED FRONT RIGHT	
all	6	07 71300A	6458/64=31.5" PED FRONT LEFT	
all	7	07 71301	64" DRYER=31.5" PED REAR RIGHT	
all	8	07 71301A	64" DRYER=31.5" PED REAR LEFT	
all	9	07 71418	6458 DRYER FILLER INVERTER BOX	(2) USED FOR 17.5" PEDESTALS & HIGHER
all	10	07 71402	6458 DRYER BASE FILLER-REAR	
all	11	07 71396	6458 DRYER BASE FILL DRV LOW	6458 DRYERS
all	11	07 72042	6464 DRYER BASE FILL DRV LOW	6464 DRYERS
all	12	07 71404	6458 BUMPER PAD-16"WX10"LG	
all	13	07 71403	6458 BUMPER PAD-16"WX60"LG	
all	14	15G164NE	HEXLOKNUT NYL 1/4-20 UNC2A SS.	
all	15	15N176	FLATMACSCR 1/4-20NCX3/4SS18-8	
all	16	15K095	HXCPSCR 3/8-16UNC2AX1 GR5 ZINC	
all	17	15U240	FLATWASHER(USS STD) 3/8" ZNC P	
all	18	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
all	19	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
all	20	15K162	HXCAPSCR 1/2-13UNC2AX1.5 GR5 P	
all	21	15U490	FLTWASH 1+1/2X17/32X1/4 ZINC	
all	22	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	23	15G230	HXNUT 1/2-13UNC2B SAE ZINC GR2	
all	24	15U280	FL+WASHER(USS STD)1/2 ZNC PL+D	

Unload Bridge Installation

2 Sheets

5050, 6450, 6458, 6464, 7676, & 8282 Dryers

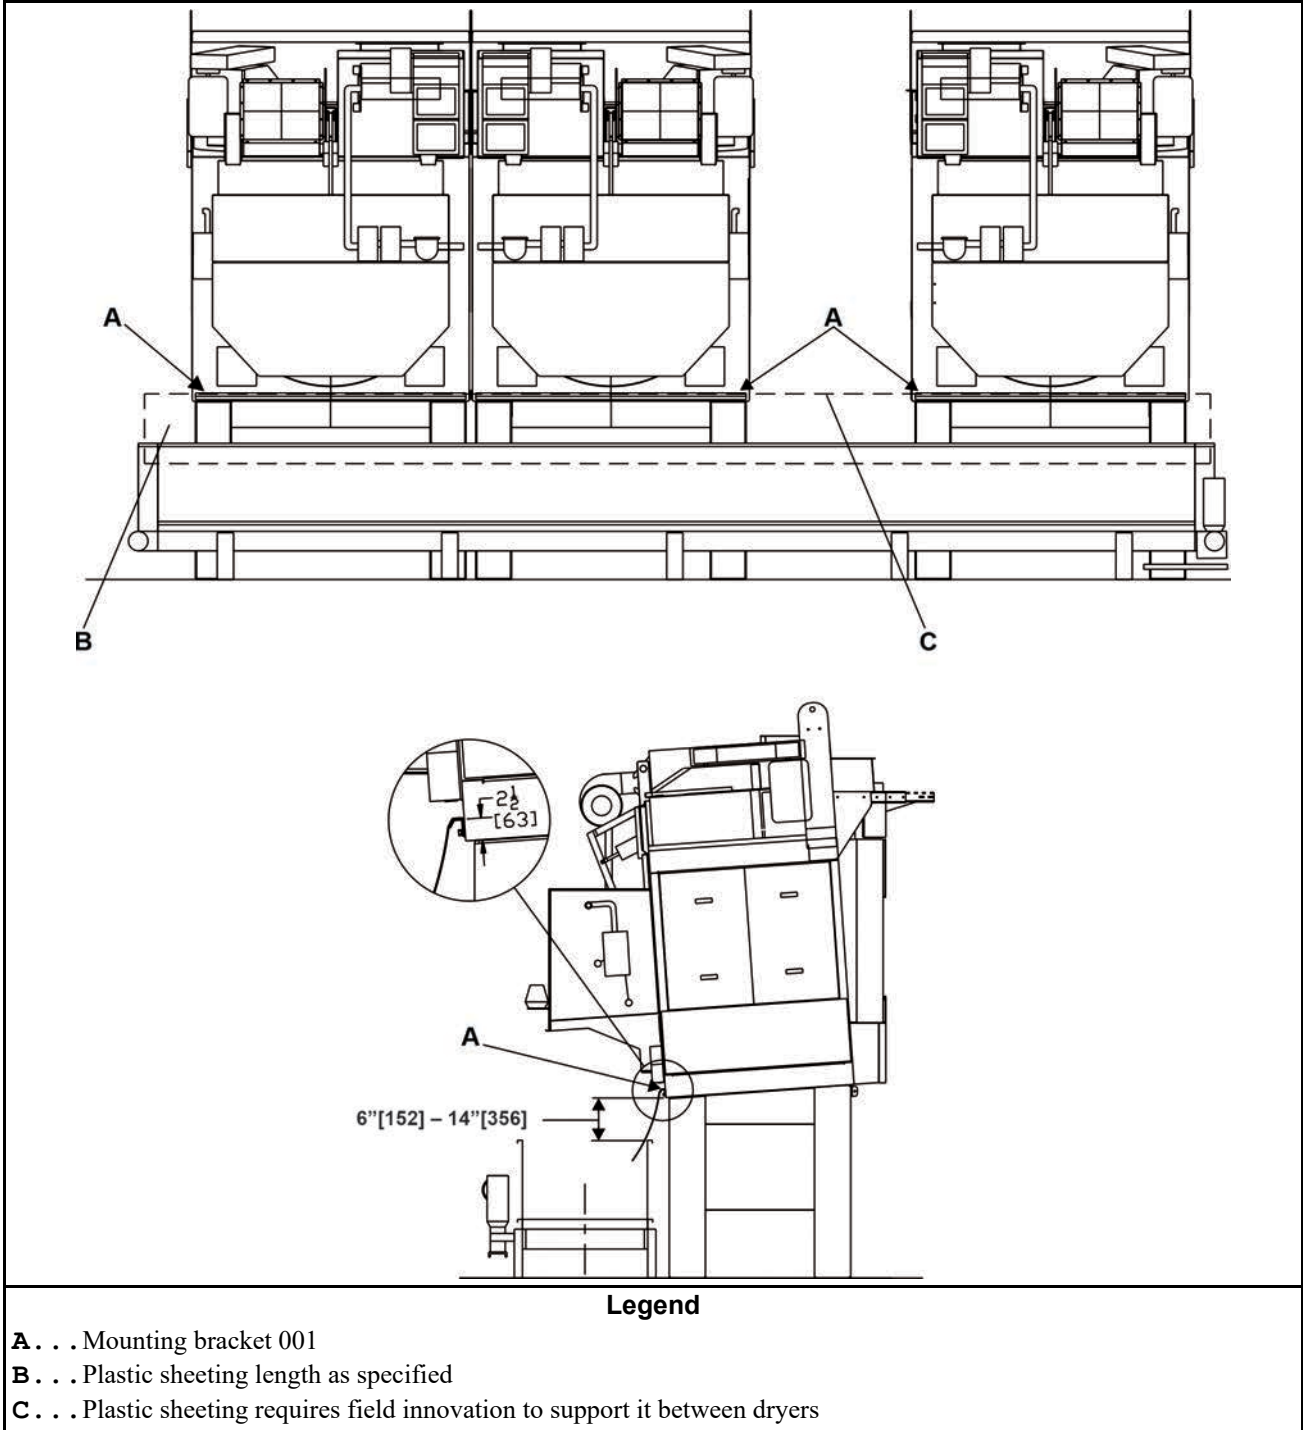

Unload Bridge Installation

2 Sheets

5050, 6450, 6458, 6464, 7676, & 8282 Dryers

Table 10. Parts List—Unload Bridge Installation

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Reference Assemblies				
	B			5050 DRYERS
	C			6450, 6458 DRYERS
	D			6464 DRYERS
	F			7676 DRYERS
	G			8282 DRYERS
Components				
B	1	07 44230	5040 UNLOAD BRIDGE TO CONV	
CD	1	07 71568	6458 UNLOAD BRIDGE TO CONV	
F	1	07 71569	7272 UNLOAD BRIDGE TO CONV	
G	1	07 88094	8282 UNLOAD BRIDGE TO CONV	

2.2 Air and Duct Requirements for Milnor® Pass-through Dryers

BNDDUI01.C01 0000086779 A.10 A.11 C.2 Released



NOTICE: This document, along with the document BNDDUI01 “Utility Requirements for Gas, Steam, and Thermal Oil Dryers” gives air and duct requirements for Milnor® pass-through dryers. It also provides limited guidance for the layout of ducts. Pellerin Milnor Corporation accepts no responsibility for duct design or liability for damage or injury caused by ducts.

2.2.1 Air Requirements

BNDDUI01.C02 0000086790 A.10 C.2 Released



CAUTION: Insufficient air will cause dryers to malfunction and/or greatly reduce drying efficiency. Excessive back-pressure will cause dryers to malfunction.

2.2.1.1 Air Flow

BNDDUI01.C03 0000086789 A.10 A.11 C.2 Released

All Milnor pass-through dryers move air, called main air, through the goods. The quantity of main air specified in document BNDDUI01 “Utility Requirements for Gas, Steam, and Thermal Oil Dryers” (in standard cubic feet per minute or scfm) must be available at the dryer main air inlet.

In addition, gas dryers use laundry room air for combustion. The quantity of combustion air specified in document BNDDUI01 “Utility Requirements for Gas, Steam, and Thermal Oil Dryers” (in standard cubic feet per minute or scfm) must be available at the dryer combustion air inlet.

2.2.1.2 Back Pressure

BNDDUI01.C04 0000086788 A.10 C.2 Released

The total pressure drop imposed by all external components that the main air must pass through (examples: ducts, lint filters, rooftop ventilators) must be between 0 (zero) and 0.5 inch water column (125 Pascals).

For gas dryers, it is necessary to supply a sufficient quantity of air to the room where the dryers are located to replenish the combustion air taken in by the dryers and to prevent a low pressure condition in the room.



NOTE: The internal pressure drop between the dryer main air inlet and exhaust outlet fluctuates during operation and can greatly exceed the allowable external pressure drop.

2.2.2 Duct Requirements

BNDDUI01.C05 0000086787 A.10 C.2 Released

You can connect a duct between the dryer main air inlet and outside air. You must connect a duct between the dryer air exhaust outlet and the exterior of the building.

2.2.2.1 Is an Inlet Duct Necessary?

BNDDUI01.C06 0000086786 A.10 A.11 C.2 Released

Use an inlet duct to avoid negative air or if hazardous or corrosive fumes are present that could be drawn in to the dryers. Otherwise, consider the facility layout, operational procedures, and climatic conditions. It may be possible to take main air from the room in which the dryers are located, especially if this room is dedicated to the dryers and physically separated from other laundry activities. If conditions permit this arrangement, the facility can use barometric dampers to admit the quantity of outside air necessary to replenish the air taken in by the dryers. The air in the dryer room must be sufficient to meet the air requirements explained in [Section 2.2.1.1](#), page 44 at all times that the dryers operate.




CAUTION: Negative air pressure — will draw heat from a dryer into the room it is in. Nearby objects such as roof beams can become very hot.

- Provide an inlet duct when negative air would otherwise occur.

If main air cannot be supplied from inside the room the dryers are in, use inlet ducts to connect the dryers to outside air. For gas dryers, use powered ventilation in the facility to replenish the combustion air taken in by the dryers.

2.2.2.2 Duct Durability

BNDDUI01.C07 0000086785 A.12 A.10 C.2 Released

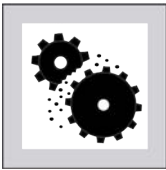

CAUTION: Fluctuations in main air pressure — will cause thin-gauge steel ducts to quickly fail from metal fatigue. Ducts with a rectangular cross-section can be damaged by these forces even when heavy gauge material is used. A rectangular duct on the exhaust side of the dryer is likely to fail.

- Consult a duct design professional before you use rectangular duct.

The ducts must be able to withstand the large flexing forces imposed on it by the internal air pressure changes that occur during dryer operation. At minimum, straight sections fabricated from galvanized sheet steel must have the following material thickness:

- Round duct - 20 gauge
- Rectangular duct - 16 gauge

It can be necessary to increase material thickness and use stiffeners for long duct lengths, large duct sizes, transitions, and elbows. Duct material must be able to withstand any corrosive forces imposed by the laundry environment. Galvanized sheet steel is usually sufficient, but special conditions can occur.

2.2.2.3 Duct Functionality

BNDDUI01.C08 0000086824 A.10 A.11 C.2 Released



WARNING: Incorrect duct design — can promote the buildup of flammable lint or cause flammable materials near a hot duct to ignite. It can also cause dryers to malfunction and greatly reduce productivity.

- ▶ Do not use any internal components in ducts (example: turning vanes).
- ▶ Obey codes that govern the clearances between hot ducts and flammable construction materials (example: roof sheathing).
- ▶ Do not connect ducts from different dryers together if you can avoid it. See [Section 2.2.2.3.1 : Multiple Dryers and Lint Collection, page 46](#).
- ▶ Do not use abrupt transitions or elbows with less than three segments. See [Section 2.2.2.3.2 : Transitions and Elbows, page 46](#)
- ▶ Provide inspection covers as necessary to keep all ducts clean.

2.2.2.3.1 Multiple Dryers and Lint Collection

BNDDUI01.C09 0000086823 A.10 A.11 C.2 Released



CAUTION: Common (shared) ducts — can cause dryers to malfunction due to the fluctuation in pressure drop felt by each dryer as a result of the other dryers. This can occur even if the common duct is large enough to accommodate the combined output of all connected dryers.

- ▶ Consult a duct design professional if you must use a common duct.

If space limitations or other factors make the use of common ducts unavoidable, it will be necessary to provide a system to maintain back pressure within the range specified in [Section 2.2.1.2 : Back Pressure, page 44](#) automatically. A system of this type could include pressure-sensing devices, a variable-speed booster fan, and a controller.

Today, facility designers generally prefer internal lint screens (a Milnor® option) or close-coupled lint collection systems installed on each dryer. However, if the facility uses a common, powered lint collection system, you can connect the air exhaust from two or more dryers to this system if you run separate ducts from each dryer. The system must be designed to:

- accommodate the maximum combined flow from all dryers connected to it.
- maintain a constant back pressure in the range given in [Section 2.2.1.2 : Back Pressure, page 44](#).


2.2.2.3.2 Transitions and Elbows

BNDDUI01.C10 0000086822 A.10 A.11 C.2 Released

Use smooth, gradual transitions. For calculations, consider any transition with a taper less than 7.5 degrees as straight duct. Consider a gradual transition that connects the main air inlet or exhaust outlet on the dryer to a larger size duct as the larger duct size.

See the figure below. For round duct, prefer elbows with radius R1. Do not use a smaller radius than Rs. Prefer elbows with six or more segments. Do not use elbows with less than three segments.

Figure 11. Round duct elbow fabrication

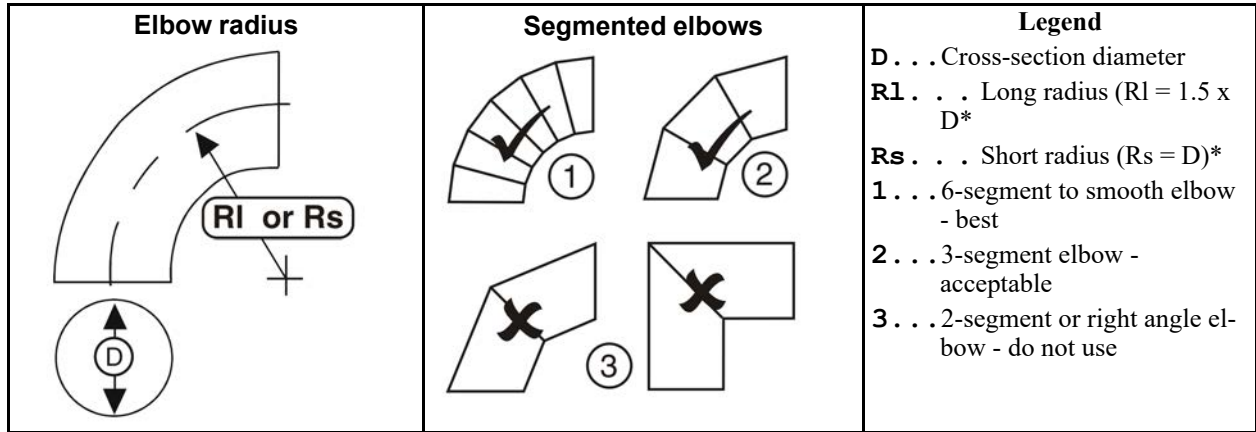


2.2.2.3.3 Vents

BNDDUI01.C11 0000086881 A.10 A.11 C.2 Released

Wind loads can contribute significantly to variations in the external pressure drop felt by dryers. Only the vent designs identified with a check mark in the figure below adequately counteract the effect of wind load.

Do not use a screen in the vent for the main air inlet.

Figure 12. Vent Designs

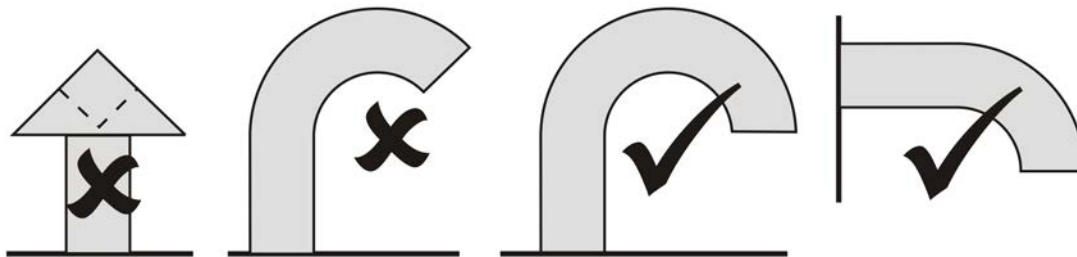

2.2.3 Duct Layout and Pressure Drop Calculations

BNDDUI01.R01 0000086879 A.10 C.2 Released

2.2.3.1 Units of Measure Used in the Calculations

BNDDUI01.R02 0000086878 A.10 C.2 Released

Table 11. Units of Measure

Type of Measurement	English Unit		Metric Unit	
	Abbreviated	Term	Abbreviated	Term
Short length	in	inches	(mm)	millimeters
Long length	ft	feet	(M)	meters
Air flow	scfm	standard cubic feet per minute	(nlpm)	normal liters per minute

Table 11 Units of Measure (cont'd.)

Air velocity	fpm	feet per minute	(npm)	meters per minute
Pressure drop	iwc	inches water column	(Pa)	Pascals

2.2.3.2 Duct Components and Their Pressure Drops

BNDDUI01.R03 0000086877 A.10 A.11 C.2 Released

The table that follows, gives selected round and rectangular duct sizes for each dryer model, in straight lengths and 90 degree elbows. If it is necessary to use components not given in the table (examples: other duct cross-sections, elbows with other than 90 degree angles), it will be necessary to refer to other texts or consult a duct design professional.

Table 12. Duct Sizes and Pressure Drops for Dryer Models

Air Specifications			Duct components, sizes, and pressure drops									
Dryer Model Prefix	Air flow - scfm (nlpm)	Velocity* for given cross-section - fpm (mpm)	Equivalent** cross-sections			Pressure drop - iwc (Pa)						
			Round	Rectangular***		Straight iwc per 100 feet (or Pa per 100 meters)	90 Degree Elbows					
			Diame-ter-in (mm)	Height-in (mm)	Width-in (mm)		Smooth round		3-segment round		Rectangular	
							Rs Short radius	RI Long radius	Rs Short radius	RI Long radius	Radius -in (mm)	iwc (Pa)
50040 5040 5050 58040	3600 (101941)	2034 (620)	18 (457)	14 (356)	20 (508)	0.31 (253)	0.1 (25)	0.07 (17)	0.13 (32)	0.11 (27)	15 (381)	0.09 (22)
				15 (381)	19 (483)						14.25 (362)	
				16 (406)	17 (432)						12.75 (324)	
				17 (432)	16 (406)						12 (305)	
				19 (483)	15 (381)						11.25 (286)	
				20 (508)	14 (356)						10.5 (267)	
58058	5200 (147248)	2384 (727)	20 (508)	16 (406)	22 (559)	0.37 (302)	0.13 (32)	0.09 (22)	0.17 (42)	0.14 (35)	16.5 (419)	0.12 (30)
				17 (432)	20 (508)						15 (381)	
				18 (457)	19 (483)						14.25 (362)	
				19 (483)	18 (457)						13.5 (343)	
				20 (508)	17 (432)						12.75 (324)	
				22 (559)	16 (406)						12 (305)	
58080	Contact factory											
6450	6000 (169901)	2400 (732)	22 (559)	20 (508)	19 (483)	0.30 (245)	0.09 (22)	0.06 (15)	0.18 (45)	0.14 (35)	14.25 (362)	0.12 (30)
6458 6464	8500 (240693)	2400 (732)	26 (660)	24 (610)	23 (584)	0.30 (245)	0.09 (22)	0.06 (15)	0.18 (45)	0.14 (35)	23 (584)	0.08 (20)

Table 12 Duct Sizes and Pressure Drops for Dryer Models (cont'd.)

Air Specifications			Duct components, sizes, and pressure drops									
Dryer Model Prefix	Air flow - scfm (nlpm)	Velocity* for given cross-section - fpm (mpm)	Equivalent** cross-sections			Pressure drop - iwc (Pa)						
			Round	Rectangular***		Straight	90 Degree Elbows					
			Diame-ter-in (mm)	Height-in (mm)	Width-in (mm)	iwc per 100 feet (or Pa per 100 meters)	Smooth round		3-segment round		Rectangular	
							Rs Short radius	RI Long radius	Rs Short radius	RI Long radius	Radius -in (mm)	iwc (Pa)
72072 (with tower)	10000 (283168)	2100 (640)	30 (762)	23 (584)	33 (838)	0.15 (123)	0.21 (52)	0.17 (42)	0.28 (70)	0.24 (60)	31 (787)	0.14 (35)
				24 (610)	31 (787)						30 (762)	
				25 (635)	30 (762)						28.75 (730)	
				26 (660)	28 (711)						28 (711)	
				27 (686)	27 (686)						27.25 (692)	
				28 (711)	26 (660)						26.75 (679)	
				30 (762)	25 (635)						24.5 (622)	
				31 (787)	24 (610)						23.75 (603)	
				33 (838)	23 (584)						22.75 (578)	
7272 7676 8282	14000 (396436)	2600 (792)	32 (813)	27 (686)	29 (737)	0.28 (229)	0.11 (27)	0.08 (20)	0.21 (52)	0.13 (32)	27 (686)	0.13 (32)
* A velocity of at least 2000 fpm (610 mpm) helps keep lint particles in suspension. ** Equivalent means that the rectangular cross sections have the same pressure drop as the round cross-section. *** Field data determines the number of rectangular cross-sections shown for each dryer model.												


2.2.3.3 Example Layout

BNDDUI01.C12 0000087235 A.10 A.11 C.2 Released

To provide a more comprehensive example, the figure below shows both rectangular and round duct. However, avoid using rectangular duct if possible, especially for the exhaust duct.

The figure below shows the pressure drop values taken from [Section 2.2.3.2 : Duct Components and Their Pressure Drops, page 48](#) and used in the example equations in [Section 2.2.3.4 : Pressure Drop Equations and Examples, page 51](#) superimposed on each piece of duct.

Figure 13. Example Duct Layout for Model 6464TG1L Dryer

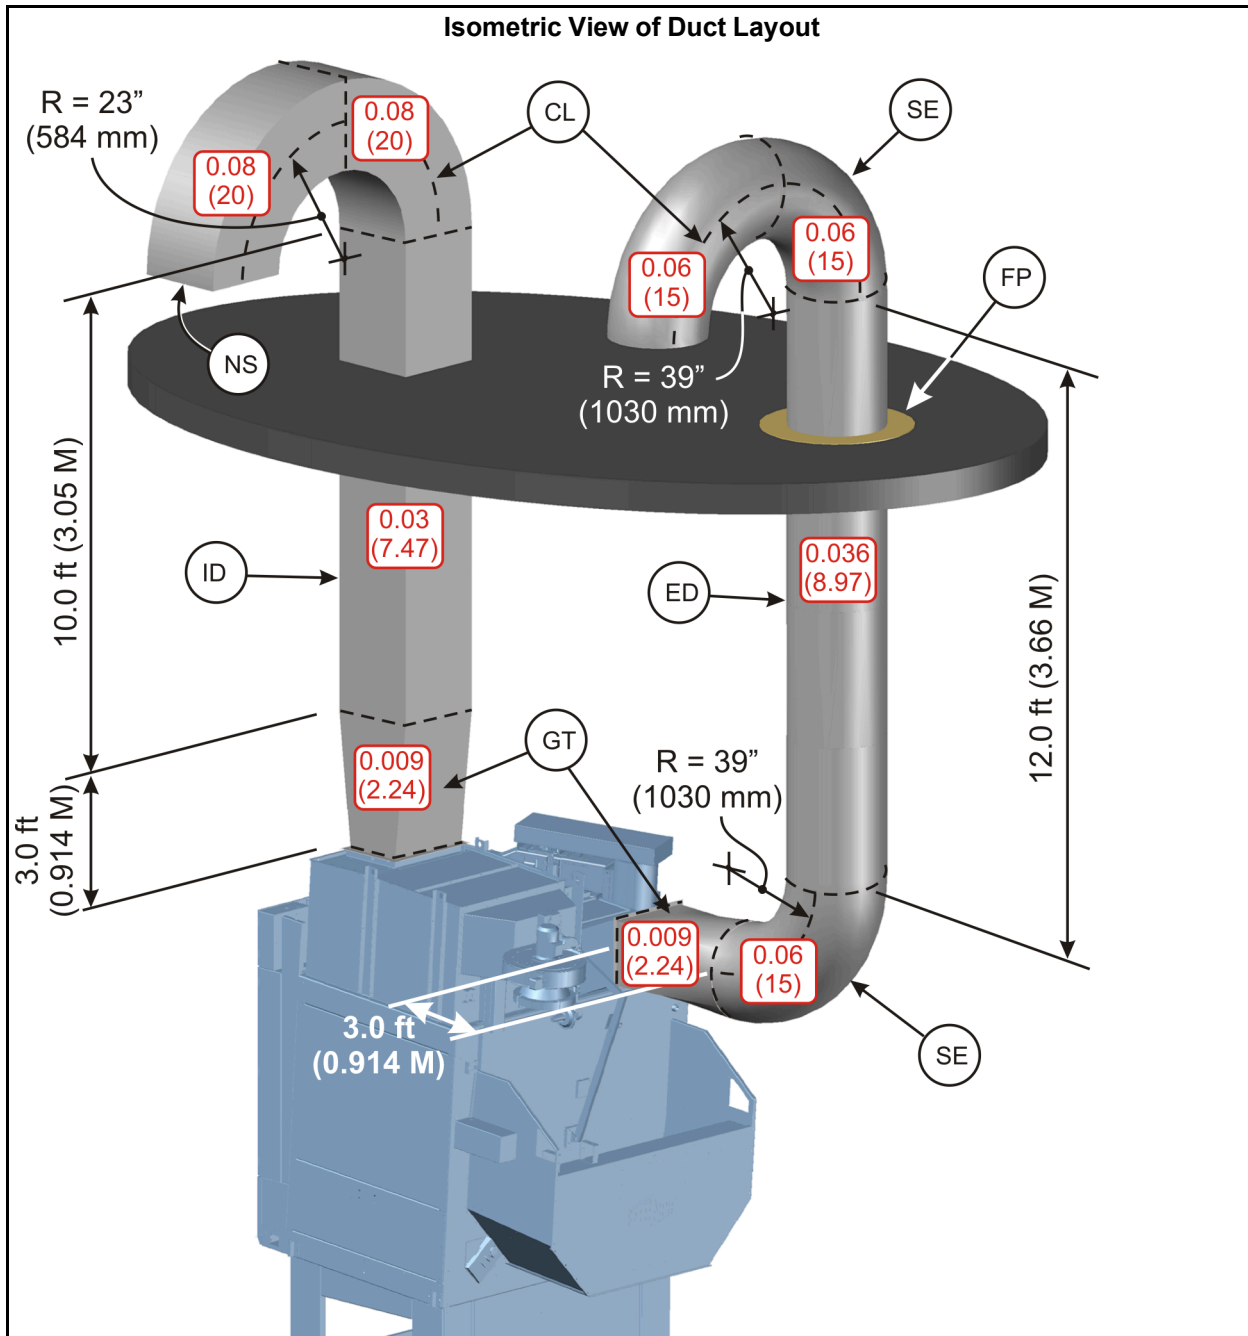

Legend

CL. . . . Center line.

ED. . . Exhaust duct. This example uses 26 inch (660 mm) diameter round duct.

FP . . . Fire protection per construction codes.

GT. . . . Gradual transitions. Treat as straight duct of the same size as their larger end.

ID. . . Inlet duct. This example uses 24 inch (610 mm) high by 23 inch (584 mm) wide rectangular duct.

NS . . . No screen on inlet duct fresh air intake.

SE. . . . Smooth elbows (six or more segments). This example uses large radius elbows.

2.2.3.4 Pressure Drop Equations and Examples

BNDDUI01.C14 0000087352 A.10 A.11 C.2 Released

Calculate the pressure drop for each straight length of duct as follows:

$$PD_s = PD_{100} \times L / 100$$

Where:

PD_s = Pressure drop for a straight length

PD_{100} = Pressure drop per 100 feet (or 100 meters) as given in table

L = Length of straight section in feet (or meters)

The following examples calculate the pressure drop for the 10 ft (3.05 M) length of rectangular duct in Figure 3.

English example:

$$0.3 \times 10 / 100 = 0.03 \text{ iwc}$$

Metric example:

$$243 \times 3.05 / 100 = 7.47 \text{ Pa}$$

Calculate the total pressure drop as follows:

$$PD_T = PD_1 + PD_2 + PD_3 + \dots + PD_n + PD_F$$

Where:

PD_T = Total external pressure drop

PD_1 = Pressure drop for the most upstream (inlet-end) component

PD_2, PD_3, \dots = Pressure drop for each next duct component in sequence

PD_n = Pressure drop for the most downstream (exhaust-end) component

PD_F = Pressure drop contributed by the external lint collection system, if any.

The following examples calculate the total pressure drop for the layout shown in [Figure 13, page 50](#) after the pressure drops for all straight sections have been calculated. The dryer in the example layout uses internal lint screens. The installation does not have a separate, external lint collection system.

English example:

$$0.08 + 0.08 + 0.03 + 0.009 + 0.009 + 0.06 + 0.036 + 0.06 + 0.06 = 0.424 \text{ iwc}$$

Metric example:

$$20 + 20 + 7.47 + 2.24 + 2.24 + 15 + 8.97 + 15 + 15 = 105.92 \text{ Pa}$$

BNDDUI01 / 2019285

BNDDUI01 0000243162 B.5 8/11/25, 2:58 PM Released

2.3 Utility Requirements For Gas, Steam and Thermal Oil Dryers

BNDDUI01.C01 0000243161 C.2 A.4 B.5 1/2/20, 1:40 PM Released

This document applies to all Milnor® pass-through dryer models. It specifies heating fuel and air intake requirements and gives general information on all utility connections. Additional information about utility connections is located in the following documents:

dimensional drawing for your machine gives pipe sizes, connection types, and connection locations

laundry layout drawings for your system gives the control connections, which are system-dependent

document BNDGUI01 “Air and Ductwork Requirements for Milnor® Pass-through Dryers” gives design criteria for customer-supplied inlet and outlet ductwork

external fuse and wire document for your machine gives customer-supplied fuse, circuit breaker, and wire sizes for the available machine voltages

machine nameplate gives the voltage for your machine

The connections which may be required depending on machine model and options are:

1. Piped inlets and outlets: heating fuel (natural gas, propane, steam, or thermal oil), sprinkler (cold) water, compressed air, gas line vent, gas test tap, steam condensate return, vacuum breaker drain.
2. Ducted inlets and outlets: main air intake, main air exhaust
3. Electric power connections and removal of related shipping restraint
4. Control connections
5. Bumper guard attachment

2.3.1 Plumbing and Other Mechanical Connections

BNDUI01.C02 0000243238 A.3 C.2 B.5 1/2/20, 1:40 PM Released

2.3.1.1 Hazards and Precautions


BNDUI01.C03 0000243237 A.3 C.2 B.5 1/2/20, 1:40 PM Released

2.3.1.1.1 All Models

BNDUI01.C04 0000243236 A.3 C.2 B.5 1/2/20, 1:40 PM Released



WARNING: Fire Hazards — Sprinkler and overheat control—Failure to supply water to the sprinkler or to open the manual valve, or failure of the overheat control, eliminates the machine's internal fire protection. Normally the machine stops and water is sprayed into the cylinder if outlet temperature reaches 240 degrees Fahrenheit (116 degrees Celsius).

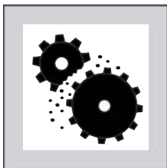

CAUTION: Machine Damage Hazards — Valve bodies have fragile components.

- ▶ Do not distort valve bodies. Hold tension against these valves with a wrench on the side of the valve onto which the pipe is being connected to prevent twist distorting the valve.
- ▶ Always install unions and shut off valves at the water and steam connection points to permit removal of the machine components for servicing.

2.3.1.1.2 Gas and Propane Models

BNDUII01.C05 0000243235 A.3 C.2 B.5 1/2/20, 1:40 PM Released



WARNING: Explosion and Fire Hazards — Improperly installed gas-fired devices can release gas.

- ▶ Conform with local codes or, in their absence, with the **National Fuel Gas Code, ANSI Z223.1/NFPA 54** or the **Natural Gas and Propane Installation Code, CSA B149.1** or a superseding directive.
- ▶ Electrically ground the machine in accordance with local codes or, in their absence, with the **National Electric Code, ANSI/NFPA 70** or the **Canadian Electrical Code, CSA C22.1** or a superseding directive.
- ▶ Install a minimum 1/2 inch NPT plugged tap, accessible for test gauge connection, immediately upstream of the gas supply connections to the dryer.
- ▶ Install vent lines on any regulator vents and vent this gas to the outdoors.



WARNING: Explosion, Fire, and Machine Damage Hazards — Excessive gas pressure can damage gas train components, possibly resulting in the release of gas.

- ▶ Make sure that the pressure of gas entering the dryer is regulated to the maximum specified in this document.
- ▶ Isolate the dryer from the gas supply for any pressure testing of the incoming gas supply line.


2.3.1.1.3 Steam and Thermal Oil Models

BNDUII01.C06 0000243234 A.3 C.2 B.5 1/2/20, 1:40 PM Released



CAUTION: Machine Malfunction Hazard — Steam traps rated at 85 to 180 psi (586 to 1241 kPa) will not operate properly below 60 psi (414 kPa). Steam traps rated at 160 to 225 psi (1103 to 1551 kPa) will not operate properly below 115 psi (793 kPa).

- ▶ Conform to the rated pressure of the steam coil as stated on the machine nameplate.
- ▶ Choose a steam trap with a pressure rating corresponding to the actual pressure supplied.

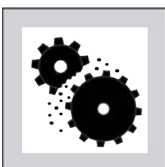

CAUTION: Machine Damage Hazards — Allow steam coil to preheat and purge condensate before operating dryer or conditioner.

- ▶ Verify that the facility boiler has operated at least 15 minutes before the dryer receives the first load each day.



CAUTION: Machine Damage Hazards — Steam coil antifreeze is drained at the factory but some residue may remain.

- ▶ Route the steam condensate return line to the sewer for the first hour of operation to prevent residual antifreeze from entering the boiler system.

2.3.1.2 Heating Fuel and Air Intake Requirements

BNDUII01.C07 0000243233 C.2 A.4 B.5 1/2/20, 1:40 PM Released

These requirements are given in the following two tables. The first table covers models in production on or after January 1, 2016. The second table covers models that were no longer in production as of January 1, 2016.

The nameplate designations for certain newer dryer models (the first table) changed from a 5-digit numeric prefix to a 4-digit numeric prefix, but the specifications remain the same. If you have one of these models, your nameplate may show 5050_ or 50050_, 6450_ or 64050_, 6458_ or 64058_, 6464_ or 64064_.

Newer gas dryer models (the first table) include the 5050_ (or 50050_) models which are only available with the air heat burner design, the 6450_ (or 64050_), 7676_, and 8282_ models, which are only available with the ratio air burner design, and the 6458_ (or 64058_) and 6464_ (or 64064_) models, which are available with either burner design. Older dryer models (the second table) were only available with air heat or older burner design.

Table 13. Gas, Steam, and Air Intake - Newer Dryer Models

Model number prefix	5050_ 50050_	6450_ 64050_	6458_ 64058_	6464_ 64064_	7676_	8282_
Capacity basis - lb (kg)	150 (68)	220 (100)	250 (113)	300 (136)	500 (227)	630 (2860)
Gas inlet with air heat burner (natural gas and propane models)						
Maximum Btu/hr (kcal/hr) at x" (mm) water column	950,000 (240,000) @ 13.5" (343)	1,500,000 (378,246) @ 13.5" (343)	1,800,000 (453,000) @ 13.5" (343)	1,800,000 (453,000) @ 13.5" (343)	n.a.	n.a.
Average Btu/hr (kcal/hr) at x" (mm) water column	495,000 (124,738) @ 13.5" (343)	725,000 (182,819) @ 13.5" (343)	825,000 (207,900) @ 13.5" (343)	990,000 (249,480) @ 13.5" (343)	n.a.	n.a.
Gas inlet with ratio air burner (natural gas and propane models)						
Maximum Btu/hr (kcal/hr) at x" (mm) water column	n.a.	1,300,000 (327,800) @ 25" (635)	1,800,000 (453,000) @ 25" (635)	1,800,000 (453,000) @ 25" (635)	3,000,000 (756,000) @ 40" (1016)	pending
Average Btu/hr (kcal/hr) at x" (mm) water column	n.a.	726,000 (182,952) @ 25" (635)	825,000 (207,900) @ 25" (635)	990,000 (249,480) @ 25" (635)	1,650,000 (415,793) @ 40" (1016)	2,079,000 (523,899) @ 40" (1016)
Steam inlet (steam models)						
Maximum Lb/Hr (kg/hr)	820 (372)	pending	1,990 (903)	1,990 (903)	3,223 (1462)	pending

Table 13 Gas, Steam, and Air Intake - Newer Dryer Models (cont'd.)

Model number prefix	5050_50050_	6450_64050_	6458_64058_	6464_64064_	7676_	8282_
Average Lb/Hr (kg/hr)	382 (173)	561 (254)	638 (289)	765 (347)	1,275 (578)	1,606 (728)
Maximum boiler horse-power (kw)	23.8 (10.8)	pending	57.7 (26.2)	57.7 (26.2)	93.4 (42.4)	pending
Average boiler horse-power (kw)	11.1 (8.3)	16.3 (12.1)	18.5 (13.8)	22.2 (16.5)	37.0 (27.6)	46.6 (34.7)
Thermal oil inlet (thermal oil models) - Consult Milnor® factory						
Main air intake						
Maximum scfm (cu m/ min)	3,600 (102)	6,000 (170)	8,500 (241)	8,500 (241)	14,000 (396)	14,000 (396)
Maximum allowable back pressure	0.5" water column					
Combustion (non-ducted, ambient) air intake with air heat burner (natural gas and propane models)						
Maximum scfm (cu m/ min) to blower	250 (7)	715 (20)	715 (20)	715 (20)	n.a.	n.a.
Maximum scfm (cu m/ min) to fire box	400 (11)	500 (14)	500 (14)	500 (14)	n.a.	n.a.
Total	650 (18)	1,215 (34)	1215 (34)	1215 (34)	n.a.	n.a.
Combustion (non-ducted, ambient) air intake with ratio air burner (natural gas and propane models)						
Maximum scfm (cu m/ min) to blower	n.a.	400 (11)	400 (11)	400 (11)	600 (17)	pending

Table 14. Gas, Steam, and Air Intake - Older Dryer Models

Model number prefix	5040_ 50040_	58040_	58058_	58080_	72072_ with tower	72072_ no tower
Capacity basis - lb (kg)	110 (50)	150 (68)	220 (100)	300 (136)	425 (193)	425 (193)
Gas inlet (natural gas and propane models)						
Maximum Btu/hr (kcal/hr) at x" (mm) water column	950,000 (240,000) @ 13.5" (343)	950,000 (240,000) @ 13.5" (343)	1,400,000 (350,000) @ 13.5" (343)	1,800,000 (453,000) @ 13.5" (343)	2,700,000 (680,000) @ 18" (457)	2,700,000 (680,000) @ 18" (457)
Average Btu/hr (kcal/hr) at x" (mm) water column	363,000 (91,476) @ 13.5" (343)	495,000 (124,738) @ 13.5" (343)	726,000 (182,952) @ 13.5" (343)	990,000 (249,480) @ 13.5" (343)	1,402,500 (353,430) @ 18" (457)	1,402,500 (353,430) @ 18" (457)
Steam inlet (steam models)						
Maximum lb/hr (kg/hr)	600 (272)	600 (272)	950 (431)	1300 (590)	n.a.	n.a.
Average lb/hr (kg/hr)	127 (280)	173 (382)	561 (254)	765 (347)	n.a.	n.a.
Maximum boiler horse-power (kw)	17.4 (7.9)	17.4 (7.9)	27.5 (12.5)	37.7 (17.1)	n.a.	n.a.
Average boiler horse-power (kw)	8.1 (3.7)	11.1 (5.0)	16.3 (7.4)	22.2 (10.1)	n.a.	n.a.

Table 14 Gas, Steam, and Air Intake - Older Dryer Models (cont'd.)

Model number prefix	5040_ 50040_	58040_	58058_	58080_	72072_ with tower	72072_ no tower
Thermal oil inlet (thermal oil models) - Consult Milnor® factory						
Main air intake						
Maximum scfm (cu m/ min)	3,600 (102)	3,600 (102)	5,000 (142)	6,800 (193)	10,000 (283)	14,000 (396)
Maximum allowable back pressure	0.5" (water column)					
Combustion (non-ducted, ambient) air intake (natural gas and propane models)						
Maximum scfm (cu m/ min) to blower	250 (7)	250 (7)	400 (11)	500 (14)	715 (20)	715 (20)
Maximum scfm (cu m/ min) to fire box	400 (11)	n.a.	n.a.	n.a.	900 (25)	900 (25)

2.3.1.3 Other Mechanical Requirements

BNDUII01.C08 0000243305 C.2 A.4 B.5 1/2/20, 1:40 PM Released

Main air intake and exhaust ducting Per document BNDGUI01 “Air and Ductwork Requirements for Milnor® Pass-through Dryers.”

Sprinkler water inlet Minimum 35 PSI (2.4 ATU). Must reliably provide 60 USg (227 liters) per minute for fire safety.

Compressed air inlet Clean and dry 85 PSI (5.8 ATU) to 110 PSI (7.5 ATU)

Compressed air inlet for optional internal lint filter 85 PSI (5.8 ATU) to 110 PSI (7.5 ATU). Air usage estimate: 110 scf (3.1 cubic meter) in 15 seconds when activated.

Customer-supplied connector between the gas inlet and the gas supply piping a listed connector in compliance with ANSI Z21.24 CSA 6.10 “Standard for Connectors for Gas Appliances”

Customer-supplied tap (gas/propane models) 1/2" NPT plugged tap, accessible for test gauge connection. Install immediately upstream of the gas supply connections to the dryer.

Gas line vent (gas/propane models) 1/4" stainless steel. Must be vented from the regulator vent to the exterior of the building.

Steam condensate outlet (steam models) Per plumbing code. Return condensate to boiler through a steam trap of the correct size. Two steam traps are available from Milnor®: One for 85 - 180 PSI (6 - 12 ATU) and one for 160 - 225 PSI (11 - 15 ATU).

Vacuum breaker (steam models) Vent the tube to the sewer.

2.3.2 Electrical Connections

BNDUII01.C09 0000243304 A.3 C.2 B.5 1/2/20, 1:40 PM Released

2.3.2.1 Hazards and Precautions

BNDUII01.C10 0000243303 C.2 A.4 B.5 1/2/20, 1:40 PM Released




WARNING: Severe injury and machine damage hazards — Electric power can shock or electrocute you. Incorrect electrical connections can damage machine components.

- ▶ Do not attempt electric power connections unless qualified and authorized.
- ▶ Prior to making power connections, read the instructions on all related tags.
- ▶ Connect the “stinger leg” if any, only to terminal L3, never to terminals L1 or L2.
- ▶ Verify all motor rotation. If the cylinder turns in the wrong direction, interchange the wires connected to L1 and L2. Never move L3.



CAUTION: Machine Damage Hazards — The blower motor or other drive components can be destroyed if the blower bearing shipping restraint is incorrectly handled.

- ▶ Perform the steps given in [Section 2.3.2.2 : Remove Blower Shipping Bracket and Reconnect Motor Contactor Coil](#), page 57.

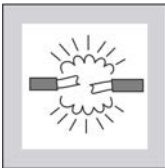

CAUTION: Risk of malfunction and damage — Wiring errors can cause damage and incorrect operation.

- ▶ Label all wires if you must disconnect them to service the control.

2.3.2.2 Remove Blower Shipping Bracket and Reconnect Motor Contactor Coil

BNDUII01.C11 0000243300 A.3 C.2 B.5 1/2/20, 1:40 PM Released

The machine was shipped with a blower shipping restraint ([Figure 14: Blower Shipping Restraint](#), page 57). This bracket immobilizes the blower bearing, preventing bearing damage during shipping. Connections to one side of the blower motor contactor coil ([Figure 15: Reconnect Blower Contactor Coil Wires](#), page 58), are removed after testing, to prevent blower operation with bracket in place. When the machine is in its final position, remove the restraint and reconnect the contactor coil as follows:

1. Unbolt and remove red restraint.
2. Install the belt guard.
3. Locate the blower contactor inside the high voltage electric box.
4. Match the tagged coil wire with the tagged contactor coil terminal and reconnect.

Figure 14. Blower Shipping Restraint

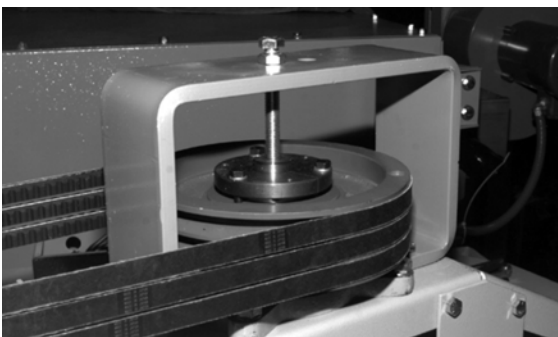


Figure 15. Reconnect Blower Contactor Coil Wires



2.3.2.3 Electric Power Connection Capacities

BNDUII01.C12 0000243297 A.3 C.2 B.5 1/2/20, 1:40 PM Released

The customer must furnish a remotely mounted disconnect switch with lag type fuses or circuit breakers, and wiring between this box and the fuse box on the machine. Refer to the machine nameplate and the external fuse and wire document for your machine to determine the sizes of these fuses or circuit breakers, and wires.

2.3.2.4 Control Connections


BNDUII01.C13 0000243296 A.3 C.2 B.5 1/2/20, 1:40 PM Released

Refer to the layout drawings for your laundering system.

2.3.3 Bumper Guard Installation

BNDUII01.C15 0000841722 A.3 C.2 B.5 8/11/25, 2:47 PM Released

The machine is supplied with bumper guards which must be installed on the rear of the machine when the machine is on site. The guards protect the machine from the constant impact of laundry carts placed under the discharge door. Hence the height at which the guards are installed must match the height of the carts used. See [Figure 16, page 59](#).

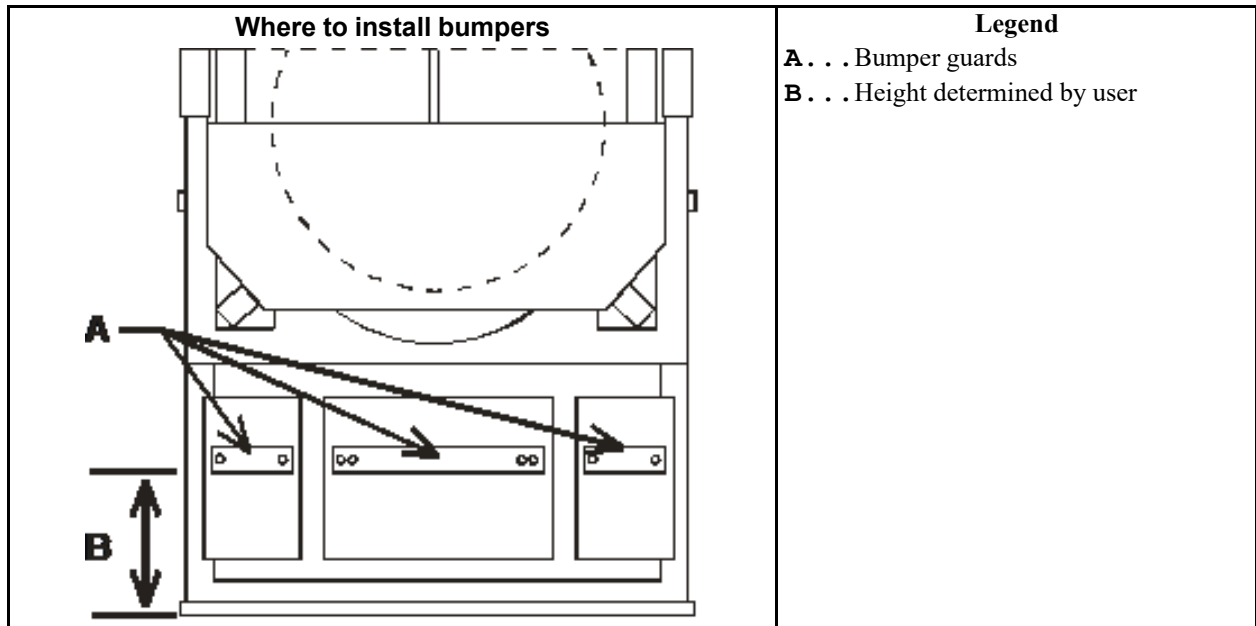Figure 16. Bumper Guard Installation

BNDGUM01 / 2023393

BNDGUM01 0000336888 D.2 9/26/23, 9:39 AM Released

2.4 Set the Heating System—Air Heat Dryer

BNDGUM01.C01 0000336887 C.2 A.5 D.2 4/26/21, 10:11 AM Released

This document applies to gas dryers with an *air heat* burner. See document BNDGUM02 for gas dryers with a *ratio air* burner.

2.4.1 About the Procedure

BNDGUM01.C10 0000344550 C.2 D.2 9/26/23, 9:36 AM Released

The differences between an *air heat* burner and a *ratio air* burner are important with regard to replacement parts and the procedure you use to set or confirm the correct gas and air flows.

Table 15. Current Dryer Models and Burner Types

Burner Type / Dryer Model	5050TG1_	6450TG1_	6458TG1_	6464TG1_	7676TG1_	8282TG1_
Air Heat	only	optional	standard	standard		
Ratio Air		standard	optional	optional	only	only

It can be necessary to set the heating system when the dryer is installed and when components of the gas train are replaced. You must be a technician trained to do work on gas trains and familiar with gas train components.

Necessary test equipment includes:

- A manometer such as Dwyer model 3T294.
- Tubes and fittings to connect to the taps (test ports) shown herein.

- In some cases, a fitting with a valve to control the gas released from the tap.

When you set the heating system, you will do a sequence of steps. In most steps you will make the necessary adjustments to change a measured pressure to match a specified value. Some terms used in this instruction are:


gas train the group of valves and related components that controls the flow of natural gas or propane into the dryer


flame control an electronic module that monitors and maintains a safe flame. Milnor® system dryers use two brands of flame control: **Fireye** (primarily for the USA and Canada) and **Landis + Gyr** (primarily for Europe).

setup mode a method of performing adjustments that activates the appropriate components for a given adjustment step. If your machine has the Fireye flame control, you must use the setup mode to make adjustments.

manual method a method of performing adjustments that runs a dry code manually and permits you to specify certain conditions for a given adjustment step. If your machine has the Landis + Gyr flame control, you must use the manual method to make adjustments.

manometer an instrument to measure fluid pressure

Reset button symbolized  in this procedure, refers to both the physical push button used to cancel a blinking light on the dryer status light panel and to the reset button on the flame control (Fireye or Landis + Gyr). In this procedure, use whichever reset component applies to the task.

Signal Cancel button symbolized  in this procedure, refers to the button on the dryer controller screen used to cancel the operator alarm.

Several types of **Dungs** gas train and the two types of flame control stated above are available to meet different local codes. Applicable models will use one of the types of gas train, corresponding flame control, and corresponding setup method listed in the following table. This instruction describes one general procedure, but indicates where you will do something one way or the other, depending on which of the two setup methods you use (which type of flame control you have).

Table 16. Gas Train and Flame Control Options

Type of Gas Train	Brand of Flame Control	Setup method
Natural Gas, CSA	Fireye	Setup Mode
Propane, CSA	Fireye	Setup Mode
Natural Gas, IRI	Fireye	Setup Mode
Natural Gas, Europe	Landis + Gyr	Manual (dry code) method
Propane, Europe	Landis + Gyr	Manual (dry code) method
Natural Gas, Australia	Landis + Gyr	Manual (dry code) method
Propane, Australia	Landis + Gyr	Manual (dry code) method
Natural Gas, Holland	Landis + Gyr	Manual (dry code) method

2.4.2 Summary of Steps and Required Values (Air Heat)

BNDGUM01.C02 0000336921 C.2 D.2 9/25/23, 2:52 PM Released

Values are displayed in inches of water (and millibar) except where indicated otherwise.


Table 17. Applicable Models

Step		Gauge Points ¹	5050TG_		6450TG_		6458TG_ , 6464TG_		7272TG_	
			Fireye	L+G	Fireye	L+G	Fireye	L+G	Fireye	L+G
1	Static (incoming) gas pressure ²	GGS	13.5 (33.6)	13.5 (33.6)	13.5 (33.6)	13.5 (33.6)	13.5 (33.6)	13.5 (33.6)	13.5 (33.6)	13.5 (33.6)
2	Combustion air pressure	GAC and GRC	0.4 (1)	0.14 (.35)	0.6 (1.5)	0.6 (1.5)	0.6 (1.5)	0.6 (1.5)	0.6 (1.5)	0.6 (1.5)
	Combustion air damper		full open	full open	0.9 (.22)	0.9 (.22)	0.9 (.22)	0.9 (.22)	0.9 (.22)	0.9 (.22)
3	Main air pressure test		—	—	1.6 (4)	1.6 (4)	1.6 (4)	1.6 (4)	1.6 (4)	1.6 (4)
	Main air pressure final	GAM	0.7 (1.7)	0.7 (1.7)	2.4 (6)	2.4 (6)	2.4 (6)	2.4 (6)	2.4 (6)	2.4 (6)
4	Pilot gas regulator	GGP	1.3 (3.2)	1.3 (3.2)	1.6 (4)	1.3 (3.2)	1.6 (4)	1.3 (3.2)	1.6 (4)	1.3 (3.2)
	Pilot flame – natural gas		1 (2.5)	1 (2.5)	1 (2.5)	1 (2.5)	1 (2.5)	1 (2.5)	1 (2.5)	1 (2.5)
	Pilot flame – propane	n.a.	—	—	Turn adjusting screw one full turn.				—	—
	Outlet pressure spring – propane only	n. a.	—	—	1.3 (3.2)				—	—
5	Gas regulator	GGR	4.5 (11.2)	4.5 (11.2)	6.5 (16.2)	6.5 (16.2)	6.5 (16.2)	6.5 (16.2)	5.5 (13.7)	5.5 (13.7)
6	Minimum fire temperature ABOVE AMBIENT	n. a.	Natural gas: 70° F (21° C) to 80° F (27° C) (view on display)							
		n. a.	—	—	Propane: Set minimum fire (min Y) on the modulating gas valve to 17				—	—
	Damper setting	n. a.	Set damper position to 2							
7	High gas pressure	GGH	5.6 (14)	5.6 (14)	8.13 (20.3)	8.13 (20.3)	8.13 (20.3)	8.13 (20.3)	6.87" (17.1)	6.87" (17.1)
8	Low gas pressure	GGL	2.25 (5.6)	2.25 (5.6)	3.25 (8)	3.25 (8)	3.25 (8)	3.25 (8)	2.75 (6.8)	2.75 (6.8)
9	Burner box pressure	GAB	0.06 (0.15)	0.04 (1)	0.06 (0.15)	0.06 (0.15)	0.06 (0.15)	0.06 (0.15)	0.06 (0.15)	0.06 (0.15)
10	Back pressure	n. a.	0.8 (2)	0.8 (2)	0.8 (2)	0.8 (2)	0.8 (2)	0.8 (2)	0.8 (2)	0.8 (2)
1. The reference point is atmosphere unless two values are shown for the gauge point. 2. Must not exceed. A pressure that exceeds the maximum can damage the regulator.										

2.4.3 Component Locations

BNDGUM01.C03 0000336987 C.2 A.4 D.2 3/24/21, 9:39 AM Released


Figure 17. Gas Adjustment Components (5040TG2_ shown. Other models are similar.)

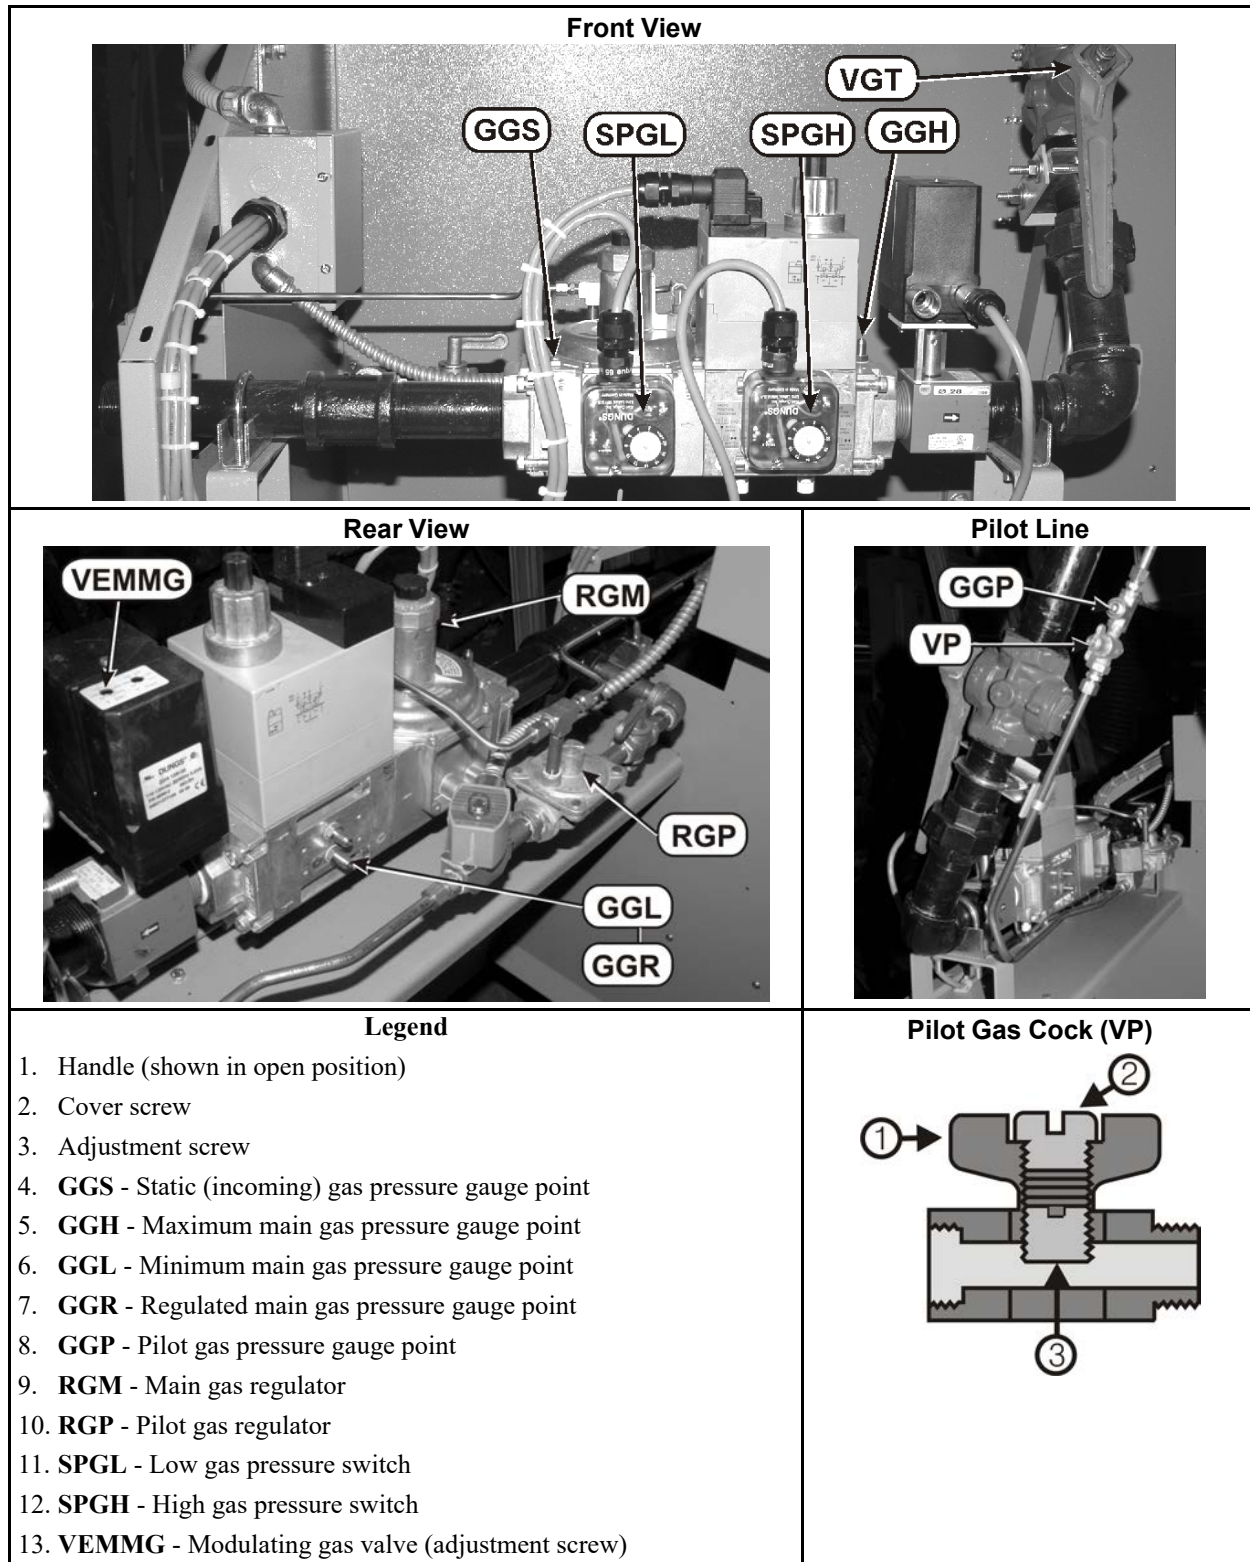

Gas Adjustment Components (5040TG2_ shown. Other models are similar.) (cont'd.)

14. VGT - Manual test valve	
15. VP - Pilot gas cock	

Figure 18. Air Adjustment Components (5040TG2_ shown. Other models are similar.)

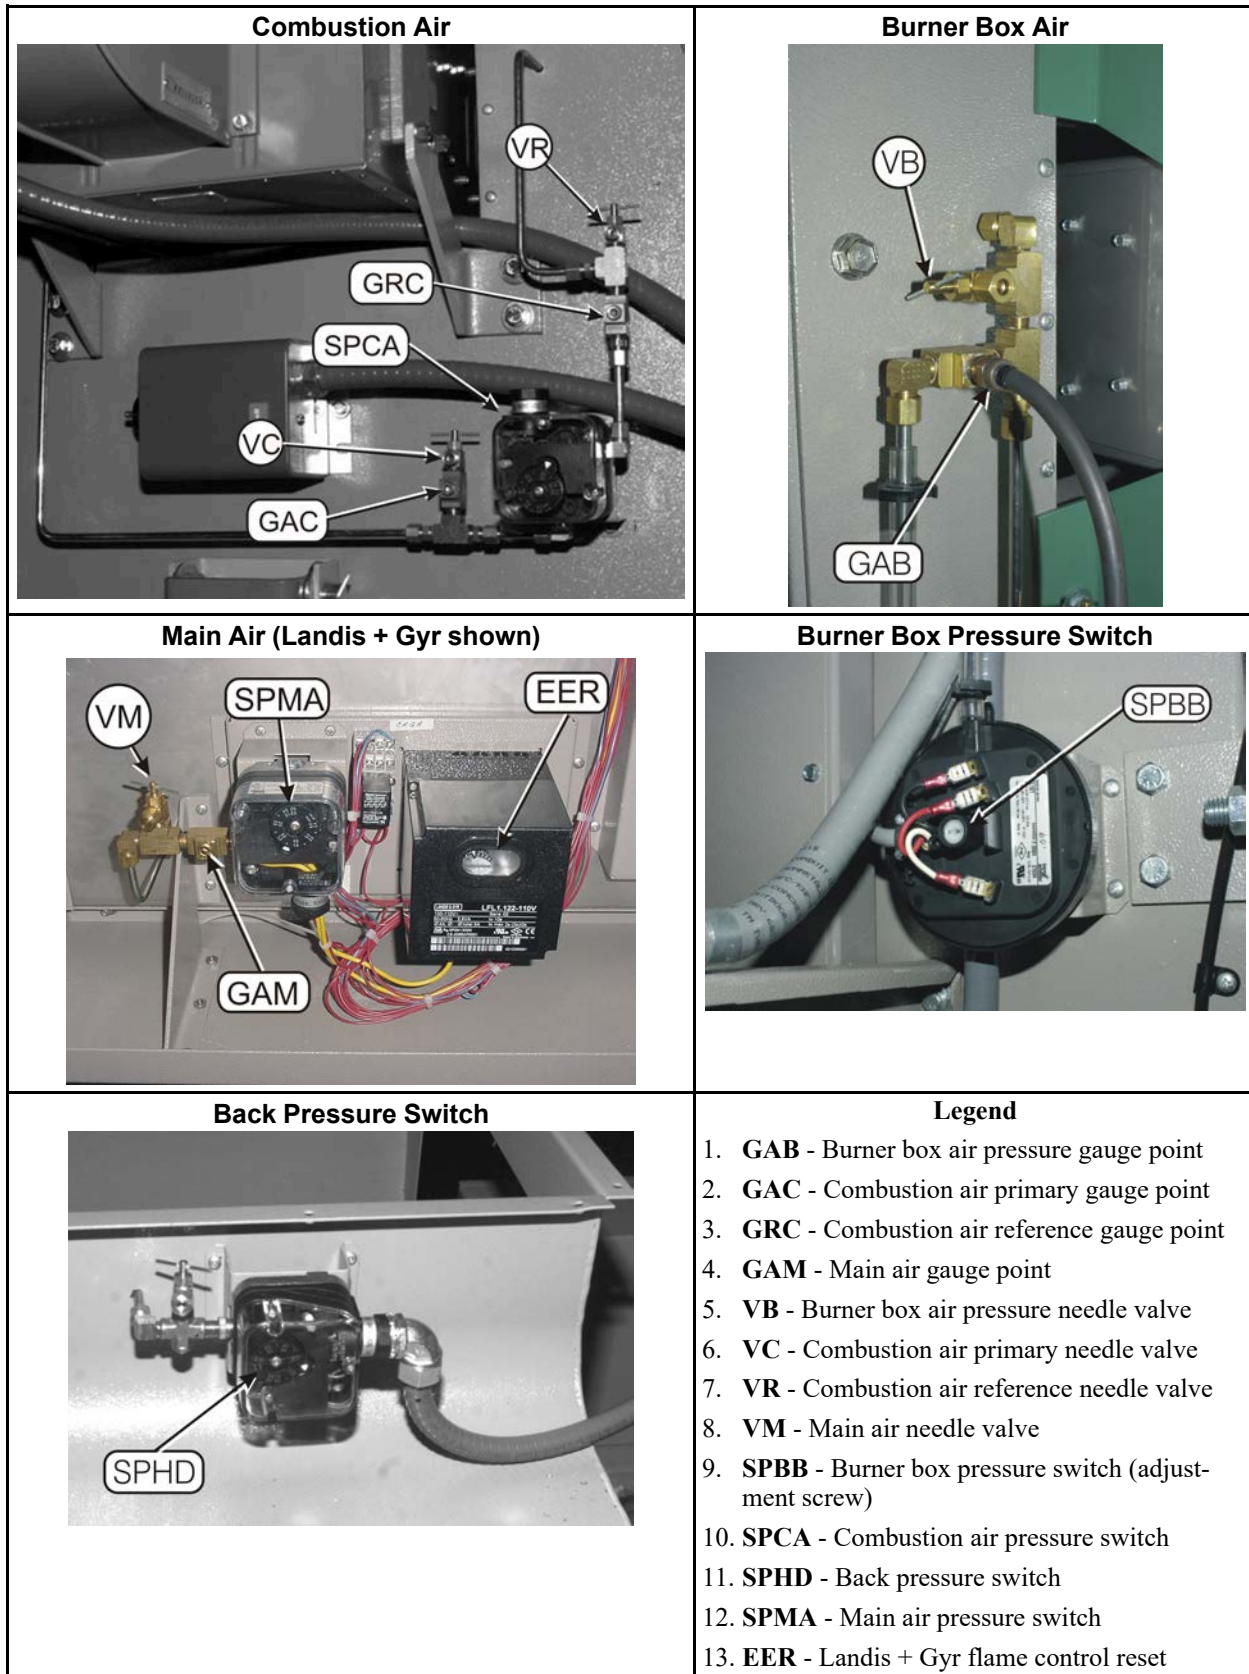

2.4.4 Setup Methods—Fireye or Landis + Gyr Flame Control

BNDGUM01.C04 0000337011 C.2 A.4 D.2 3/24/21, 1:08 PM Released

Do Step 1 (see [Section 2.4.5 : Adjustment Steps, page 67](#)) before you perform one of the setup methods described in this section. Perform the appropriate setup method before you start Step 2. If your machine has a Fireye flame control, use the **Setup mode** (see [Section 2.4.4.1 : Setup Mode \(Fireye flame control\), page 65](#)). If your machine has a Landis + Gyr flame control, use the **Manual method** (see [Section 2.4.4.2 : Manual method \(Landis + Gyr flame control\), page 66](#)).



WARNING: Explosion hazard — Improper gas train maintenance procedures can cause the rapid release of gas.

- ▶ You must be an approved technician.
- ▶ Make sure you can quickly shut off gas at an external valve.



WARNING: Entangle and Crush Hazard — Moving components can entangle and crush body parts.

- ▶ Leave electrical power disconnected from the machine while you work on it, except where stated otherwise in this document.
- ▶ Use extreme caution when you work around moving components.

2.4.4.1 Setup Mode (Fireye flame control)

BNDGUM01.C05 0000337010 C.2 A.4 D.2 3/24/21, 9:39 AM Released

Display or Action	Explanation
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> WAITING FOR LOAD ***** </div>	The display after the power up sequence
<div style="border: 1px solid black; padding: 2px; display: inline-block; text-align: center;"> MANUAL </div>	Accesses manual mode menu (press <div style="border: 1px solid black; padding: 2px; display: inline-block;">CANCEL</div> to return to automatic).
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> RETURN TO AUTOMATIC 00 </div>	Shows the display in manual mode
<div style="border: 1px solid black; padding: 2px; display: inline-block; text-align: center;"> <div style="border: 1px solid black; padding: 2px; display: inline-block;">1</div> <div style="border: 1px solid black; padding: 2px; display: inline-block;">2</div> </div>	Selects the setup procedure
<div style="border: 1px solid black; padding: 2px; display: inline-block;"> SETUP PROCEDURE 12 </div>	
<div style="border: 1px solid black; padding: 2px; display: inline-block; text-align: center;"> ENTER </div>	Accesses setup mode A (or the next mode in sequence)

Whenever the next setup mode is required, press

ENTER

 and resulting display will be shown.

For a **quick return to run mode** from **setup procedure**

ENTER

,

ENTER

, etc.

Advances through each of the six setup modes. Note, however, that the control requires waiting eight seconds in **mode C** and five seconds in **mode D**.

Resulting display

SETUP PROCEDURE
 12



Selects “RETURN TO AUTOMATIC”

Returns to the run mode

2.4.4.2 Manual method (Landis + Gyr flame control)

BNDGUM01.C06 0000337054 C.2 A.5 D.2 3/24/21, 1:08 PM Released

If your machine has a Landis + Gyr flame control, run a dry code manually and set the damper position to 2, as explained below.

Display or Action

WAITING FOR LOAD

Explanation

The display after the power up sequence.



Accesses the **manual load** menu

SELECT DRY CODE
00 REDRY



Accepts the default dry code 00 and prompts for load size

ENTER LOAD SIZE
0 FULL LOAD



Accepts the default load size (full load).

LOAD DRYER WITH REDRY

Ignore this prompt.



Starts the cycle.

LOADING

This display appears.

00F TIC TOC 000 VP
xx xxxAxxx xxx xxx


This display appears. The VP value alternates with an air value.

Wait for the burner to ignite.



Stops the timer and accesses the manual control panel for temperature, damper and basket rotation.

TICHTOC LDA MVP BSPD
xxx+xxx x0x 0x xxxx



Sets the damper position. Hold the keys until the damper position (D) = 2.

TICHTOC LDA MVP BSPD
xxx+xxx x2x xxx 000



Closes the modulating gas valve (position). Hold the keys until MVP = 000.

TICHTOC LDA MVP BSPD
xxx+xxx x2x 000 xxxx

The burner will remain on at minimum fire (MVP=000) until commanded to return to automatic. Start Step 2 here. Upon completion of the steps,



Returns to automatic

2.4.5 Adjustment Steps

BNDGUM01.C07 0000337473 A.3 C.2 D.2 4/6/21, 11:59 AM Released

Refer to [Section 2.4.2 : Summary of Steps and Required Values \(Air Heat\)](#), page 60 while you do these procedures. In these steps, mount the manometer vertically and use the high pressure scale, except where stated otherwise.



WARNING: Explosion hazard — Improper maintenance procedures can cause the rapid release of gas.

- ▶ You must be an approved technician.
- ▶ Make sure you can quickly shut off gas at the external valve.



WARNING: Crush and entangle hazard — Moving components can crush and entangle body parts.

- ▶ Work with electrical power removed from the machine, except where stated otherwise in this document.
- ▶ Use extreme caution when you work near moving components.

2.4.5.1 Step 1: Static (incoming) gas pressure



BNDGUM01.C08 0000337472 A.3 C.2 D.2 3/24/21, 9:39 AM Released

1. Remove electrical power and gas from the machine.
2. Look at [Figure 17](#), page 62. Attach one side of the manometer to gauge point **GGS** (the higher pressure). Leave the other side open to the atmosphere.
3. Supply gas to the machine.
4. Adjust the incoming gas (upstream from dryer) as close as possible to the maximum static gas pressure listed in [Section 2.4.2](#) , page 60. This pressure is necessary for further adjustments. Pressures higher than specified can damage the regulator.

2.4.5.2 Step 2: Combustion air pressure


BNDGUM01.T01 0000337471 C.2 A.4 D.2 4/5/21, 4:24 PM Released

Fireye Start the Setup procedure and select **SETUP MODE A** ([Section 2.4.4.1](#) , page 65) . The combustion air motor runs. The main air pressure switch, modulating gas valve and the two main gas valves are disabled.



Landis + Gyr Start the Manual method ([Section 2.4.4.2](#) , page 66). If the flame control trips during this procedure, press  and  to reset it.

In this step, you will measure a small differential pressure. It is necessary to mount the manometer near horizontal and use the low pressure scale.

1. Look at [Figure 18](#), page 64. Turn the dial on **SPCA** counterclockwise to the lowest value.

2. Attach one end of the manometer to the gauge point **GAC** (the higher pressure). Attach the other side to the gauge point **GRC** (the lower pressure).
3. Adjust **VR** until the manometer displays the value shown in [Section 2.4.2 , page 60](#). If you cannot get the required value with **VR** wide open, slowly open **VC** until you get the required value.
4. Look at the burner box pressure light () on the status light panel. Slowly turn the dial **SPCA** clockwise:

Fireye Stop when the light illuminates.

Landis + Gyr Stop when **SPCA** trips and the burner extinguishes. The light should illuminate momentarily, but this may be too quick to see. Press  and  to reset the flame control.


5. Close **VR** and **VC** fully.

2.4.5.3 Step 3: Main air pressure



BNDGUM01.T02 0000337470 C.2 A.4 D.2 5/12/21, 2:30 PM Released

Fireye machines Select SETUP MODE B (see [Section 2.4.4.1 , page 65](#)). The damper will fully open.

Landis + Gyr machines Set the damper fully open (D=0). See [Section 2.4.4.2 , page 66](#).

1. Look at [Figure 17, page 62](#). Turn the dial on **SPMA** counterclockwise, to the lowest value
2. Attach one side of the manometer to **GAM** (the lower pressure). Leave the other side open to the atmosphere (the higher pressure).
3. Adjust **VM** until the manometer displays the test value shown in [Section 2.4.2 , page 60](#).
4. Look at the burner box pressure light () on the status light panel. Very slowly turn the dial on **SPMA** clockwise:

Fireye machines Stop when the light illuminates.

Landis + Gyr machines Stop when **SPMA** trips and the burner extinguishes. The light should illuminate momentarily, but this may be too quick to see. Press  and  to reset the flame control.

5. Close **VM** fully. The manometer should display the final value shown in [Section 2.4.2 , page 60](#).

2.4.5.4 Step 4A: Regulated pilot gas pressure

BNDGUM01.T03 0000338555 A.3 C.2 D.2 3/24/21, 9:39 AM Released

Fireye machines Select SETUP MODE C (see [Section 2.4.4.1 , page 65](#)). This turns on the **pilot gas valve**. After about eight seconds, the pilot flame should ignite.

Landis + Gyr machines No action is necessary. The pilot flame should be lit.

Explosion and Fire Hazard Improper procedures can release gas.



- Follow instructions carefully.

1. Look at [Figure 17, page 62](#). Attach one side of the manometer to **GGP** (the higher pressure). Leave the other side open to the atmosphere.

2. Remove the cover screw (2) from **VP**.
3. Turn the set screw (3) counterclockwise until the top of the screw is about 1/8 inch (3 mm) below the top of the valve handle. **Do not allow the set screw to come out of the valve. Gas will escape.**
4. Adjust **RGP** until the manometer displays the value specified [Section 2.4.2 , page 60](#).

2.4.5.5 Step 4B: Pilot flame gas pressure



BNDGUM01.T04 0000338566 A.2 C.2 D.2 3/24/21, 9:39 AM Released

If the flame control trips during this step, press  and  to reset it.

1. Look at [Figure 17, page 62](#). Leave the manometer connected to **GGP** and to the atmosphere.
2. Close **VGT**.
3. Turn the adjustment screw (3) on **VP** clockwise, until the manometer shows the value specified in [Section 2.4.2 , page 60](#).
4. Replace the cover screw (2) in **VP**.
5. Open **VGT**.

2.4.5.6 Step 5: Regulated main gas pressure

BNDGUM01.T05 0000338565 A.3 C.2 D.2 3/24/21, 9:39 AM Released

Make adjustment quickly. The machine will reach the maximum permitted temperature quickly and shut-off the burner. If a switch trips during this step, press  and .

Fireye Select SETUP MODE D (see [Section 2.4.4.1 , page 65](#)). This turns on the **two main gas valves**. The **modulating gas valve** opens and modulates to position 100.

Landis + Gyr Set the modulating gas valve to position 100 (MVP=100). See [Section 2.4.4.2 , page 66](#).

1. Make sure **VGT** is open fully
2. Look at [Figure 17, page 62](#). Attach one side of the manometer to **GGR** (the higher pressure). Leave the other side open to the atmosphere.
3. Turn the dial on **SPGL** counterclockwise to the lowest value. Turn the dial on **SPGH** clockwise to the highest value.
4. Adjust **RGM** until the manometer displays the value specified in [Section 2.4.2 , page 60](#).

If you are performing the entire adjustment procedure, you will set **SPGH** and **SPGL** in steps 7 and 8 respectively. If you performed this step as part of a component replacement, do steps 7 and 8 as well.

2.4.5.7 Step 6: Low fire temperature

BNDGUM01.T06 0000338564 A.3 C.2 D.2 3/24/21, 9:39 AM Released

Fireye machines Select SETUP MODE E (see [Section 2.4.4.1 , page 65](#)). This sets the modulating gas valve to 000 and displays the inlet temperature.

Landis + Gyr machines Set the modulating gas valve to position 000 (MVP=000). See [Section 2.4.4.2 , page 66](#).


1. Look at [Figure 17, page 62](#). Turn the adjustment screw on **VEMMG** (arrow points to this screw) fully counterclockwise.
2. **In small increments** turn the screw clockwise until the control panel display shows a temperature in the range specified in [Section 2.4.2, page 60](#). It is necessary to wait for the display to settle after each adjustment. This task can take several minutes due to the lag time between when you make the adjustment and when the change in temperature appears on the display.



2.4.5.8 Step 7: High gas pressure

BNDGUM01.T07 0000338595 A.3 C.2 D.2 4/5/21, 4:26 PM Released

Fireye machines Select SETUP MODE E (see [Section 2.4.4.1, page 65](#)). This sets the modulating gas valve to 000 and displays the inlet temperature.

Landis + Gyr machines Set the modulating gas valve to position 000 (MVP=000). See [Section 2.4.4.2, page 66](#).

1. Look at [Figure 17, page 62](#). Turn the dial on **SPGH** clockwise to the highest value.
2. Attach one side of the manometer to **GGH** (the higher pressure). Leave the other side open to the atmosphere.
3. Start with **VGT** open. Slowly close **VGT** until the manometer displays the value specified in [Section 2.4.2, page 60](#).
4. Look at the gas pressure high light () on the status panel. Slowly turn the dial on **SPGH** counterclockwise (lower). Stop when the switch trips and the burner extinguishes.

Fireye machines The status light illuminates briefly, then blinks. Open the manual test valve again. The burner will ignite as soon as pressure is restored. Press  and  to extinguish the status light.

Landis + Gyr machines The status light should illuminate momentarily, but this may be too quick to see. The flame control automatically resets and attempts to ignite the burner.

5. Verify the proper adjustment: Open **VGT** fully. Watch the manometer. Slowly close **VGT**. **SPGH** should trip when the set value is reached.
6. Open **VGT** fully.


2.4.5.9 Step 8: Low gas pressure



BNDGUM01.T08 0000338608 C.2 A.4 D.2 4/5/21, 4:27 PM Released

Fireye machines Select SETUP MODE E (see [Section 2.4.4.1, page 65](#)). This sets the modulating gas valve to 000 and displays the inlet temperature.

Landis + Gyr machines Set the modulating gas valve to position 000 (MVP=000). see [Section 2.4.4.2, page 66](#).

1. Look at [Figure 17, page 62](#). Turn the dial on **SPGL** counterclockwise to the lowest value.
2. Attach one side of the manometer to **GGL** (the higher pressure). Leave the other side open to the atmosphere.
3. Start with the **external gas shut-off valve** open. Slowly close this valve until the manometer displays the value specified in [Section 2.4.2, page 60](#).

4. Look at the gas pressure low light () on the status light panel. Slowly turn the dial on **SPGL** clockwise (higher). Stop when **SPGL** trips and the burner extinguishes.
5. Open **external gas shut-off valve** fully.

Fireye machines The status light illuminates briefly, then blinks. The burner should ignite as soon as pressure is restored. Press  and  to extinguish the status light.


Landis + Gyr machines The status light should illuminate momentarily, but this may be too quick to see. The flame control automatically resets and attempts to ignite the burner.

2.4.5.10 Step 9: Minimum burner box air pressure

BNDGUM01.T09 0000338607 A.2 C.2 D.2 3/18/21, 4:15 PM Released

Fireye machines Select SETUP MODE E (see [Section 2.4.4.1](#), page 65). This sets the modulating gas valve to 000 and displays the inlet temperature.

Landis + Gyr machines Set the modulating gas valve to position 000 (MVP=000). See [Section 2.4.4.2](#), page 66.

1. Look at [Figure 18](#), page 64. Attach one side of the manometer to **GAB** (the lower pressure) and leave the other side open to the atmosphere.
2. Remove the cover from **SPBB**. Carefully turn the center adjustment screw (white potentiometer that the arrow points to) counterclockwise until the top of the screw is level with the collar. **Do not allow the adjustment screw to come out of the switch. The screw is spring loaded.**
3. Adjust **VB** until the manometer shows the value specified in [Section 2.4.2](#), page 60.
4. Look at the burner box pressure light () on the status light panel. Slowly turn the adjustment screw on **SPBB** clockwise until the status light illuminates and the burner extinguishes.
5. Close **VB** fully.






2.4.5.11 Step 10: Maximum back (air) pressure

BNDGUM01.C09 0000338606 A.2 C.2 D.2 3/18/21, 4:15 PM Released

The dial on **SPHD** (see [Figure 18](#), page 64) is set at the factory to the value specified in [Section 2.4.2](#), page 60. If the maximum back pressure is exceeded, this switch trips. This causes the message "Back pressure high" or "Clean the lint screen" to appear on the controller display to indicate that a lint screen may be blocked. It does not stop dryer operation. It may be necessary to adjust this switch slightly once the machine is connected to the laundry ductwork. Air pressure in the plenum for this dryer may be affected by the ductwork configuration and by adjacent dryers.

It is difficult to adjust **SPHD** with a manometer. Initially, this switch was set with the dial alone (the marks on the dial show the specified value). If the message appears too frequently, turn the dial to a higher value. If the message does not appear when it should (when a lint screen is blocked) turn the dial to a lower value.

3 Dimensional Drawings

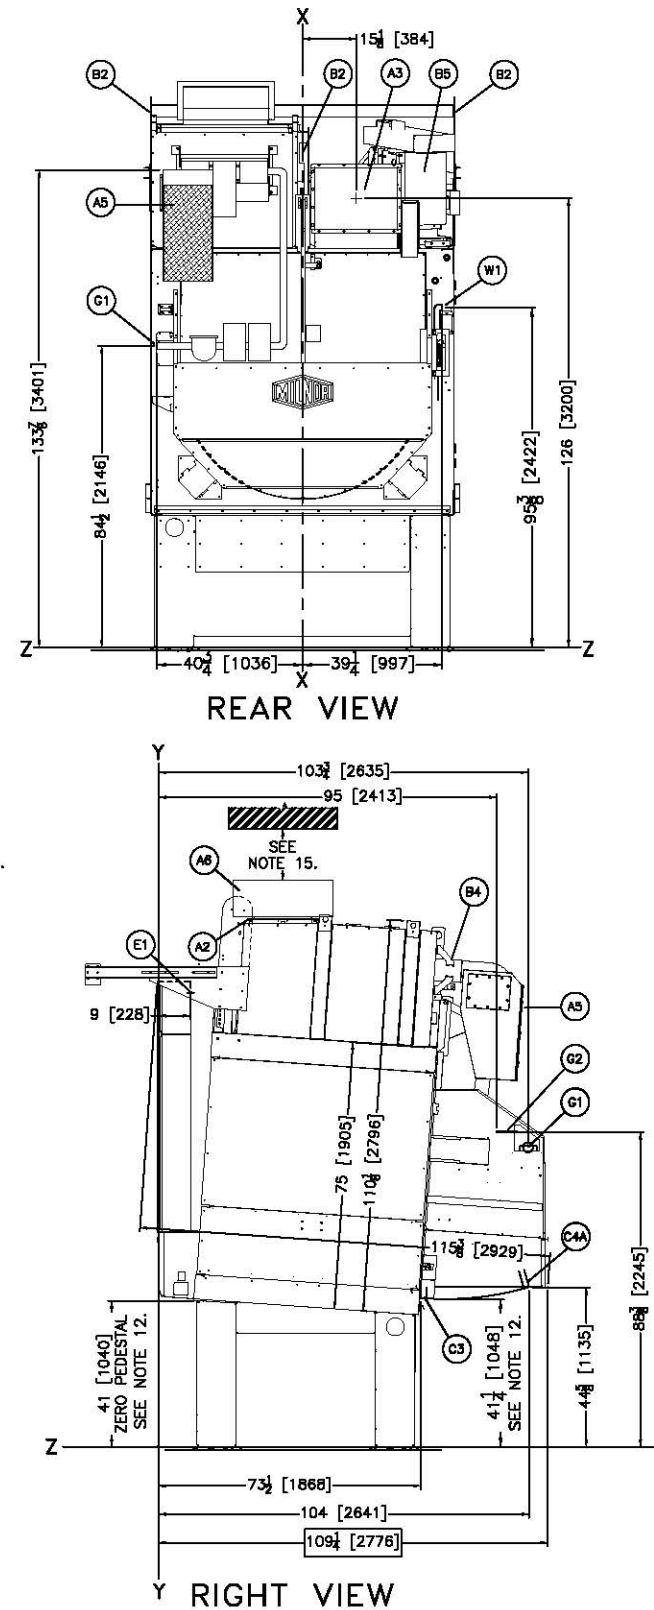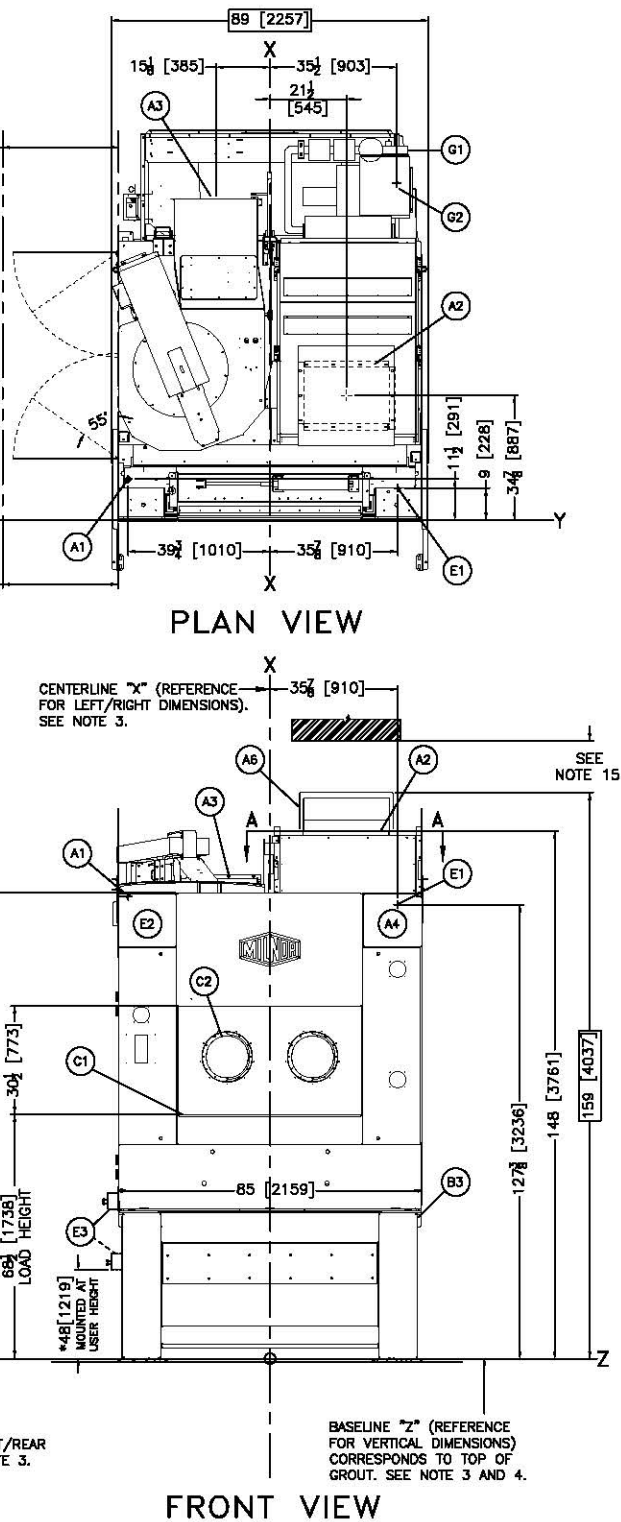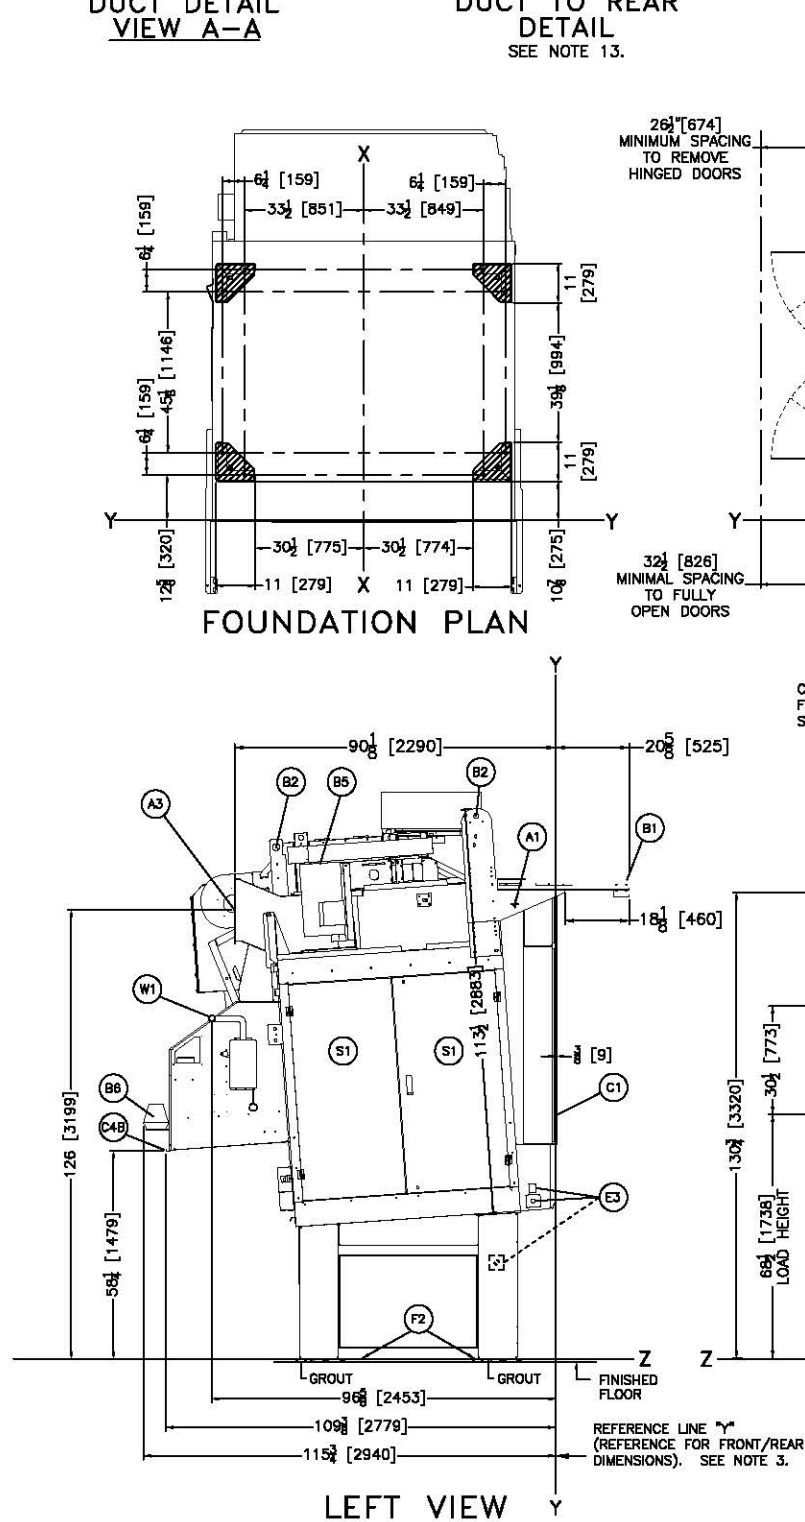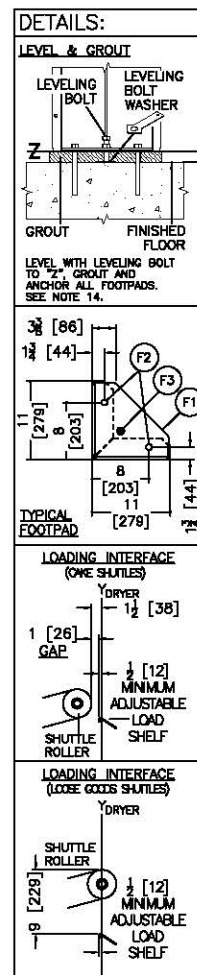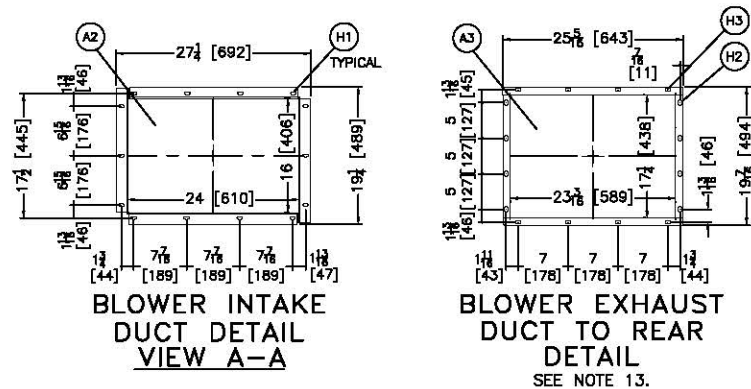

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

G2	GAS LINE VENT, 1/4" STAINLESS STEEL TUBING
G1	GAS INLET, 1-1/2" NPT CONNECTION
F3	LEVELING BOLT (5/8"-11 X 3") SUPPLIED.
F2	DRYER FOOT SUPPORT PLATES, SEE NOTE 14.
F1	ANCHOR BOLT HOLES, 13/16"[21] DIA, 8 PLACES
E3	EMERGENCY STOP & DOOR OPEN CONTROLS
E2	MICROPROCESSOR BOX
E1	MAIN ELECTRICAL CONNECTION
C4B	OPTIONAL SHORT SHROUD
C4A	STANDARD DISCHARGE SHROUD
C3	DISCHARGE DOOR
C2	LOAD DOOR, 52" WIDE
C1	LOAD HEIGHT, ADJUSTABLE LOAD SHELF
B6	OPTIONAL BEACON
B5	BLOWER MOTOR
B4	BURNER
B3	DRYER TO DRYER MOUNTING BRACKET
B2	SHIPPING BRACKET ONLY
B1	DRYER MOUNT FESTOON RAIL SUPPORT
A6	BLOWER AIR INTAKE TEE, REMOVE ONLY WHEN DUCTING
	THE INTAKE
A5	COMBUSTION AIR INTAKE BOX WITH FILTERS
A4	AIR VALVE BOX
A3	BLOWER EXHAUST TO REAR, STANDARD, SEE DETAIL.
A2	BLOWER INTAKE, SEE DETAIL
A1	COMPRESSED AIR, 1"NPT
ITEM	LEGEND

NOTES	
16	FOR UTILITY REQUIREMENTS FOR GAS, STEAM, THERMAL OIL, AIR INTAKE, AND WATER SUPPLY, SEE DOCUMENT BIPDUI01/20180505 OR LATER.
15	IF THE BLOWER INTAKE IS NOT DUCTED THERE MUST BE 8 FEET [2438] OF UNOBSTRUCTED VERTICAL CLEARANCE BETWEEN THE INLET AND ANY OBJECT ABOVE IT.
14	DRYER FOOT SUPPORT PLATES ARE WELDED TO THE BOTTOM OF PEDESTAL LEGS TO ALLOW A GREATER GROUTING SURFACE BETWEEN PEDESTAL LEGS AND FINISHED FLOOR. USE LEVELING BOLTS TO LEVEL THE DRYER TO BASELINE "Z" (COINCIDES WITH BOTTOM OF LEGS.) DRYER FEET MUST BE GROUTED & ANCHORED TO FLOOR.
13	EXHAUST DUCTING: DRYER OPERATES UP TO 8500 SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
12	THIS DRAWING SHOWS THE 6464TG1L DRYER WITH A 41-1/2"[1055] DISCHARGE HEIGHT. WE CALL THE PEDESTAL BASE TO DO THIS A "ZERO PEDESTAL". "ZERO PEDESTAL" IS STANDARD HEIGHT FOR CONVEYOR DISCHARGE. DRYERS MAY BE ORDERED WITH A PEDESTAL TO INCREASE OR DECREASE THE MACHINE HEIGHT IN (+/-)3.5"[89] INCREMENTS. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL. FOR ANYTHING UNDER A ZERO PEDESTAL, RIGHT AND LEFT DRYERS CANNOT BE CONNECTED, AND YOU MUST ALLOW A MINIMUM 18"[458] FOR SERVICING BETWEEN DRYERS, SEE NOTE 10.
11	DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
10	A MINIMUM CLEARANCE OF 26 1/2"[674] IS REQUIRED FROM THE REMOVABLE ACCESS DOORS TO WALL. THIS DISTANCE IS REQUIRED TO OPEN THE DOORS 55 DEGREES TO BE LIFTED OFF THE HINGES. THE DOORS MAY BE FULLY OPENED REQUIRING 32 1/2"[826] OF CLEARANCE.
9	DRYER IS DISASSEMBLED INTO TWO MAJOR COMPONENTS FOR SHIPPING, THE BASE AND THE FRAME. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT MACHINE THROUGH OPENING.
8	DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
7	CONTROL PANEL FOR DRYER MAY BE INSTALLED IN ANY CONVENIENT LOCATION. CONTROL CABLE FROM DRYER TO PANEL IS SUPPLIED BY MILNOR AND PRICED SEPARATELY.
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION


MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION


THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCE GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1L AH	
	BD6464TG1LABE 2022086D
PELLERIN MILNOR CORPORATION	
P.O. Box 400 Kenner, LA 70083, USA, Phone 504/457-8591, FAX 504/458-3094, Email: milnorinfo@milnor.com	


ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

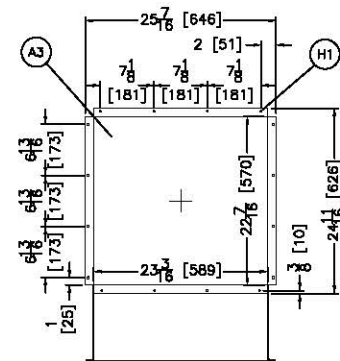


BLOWER EXHAUST
DUCT UP OPTION

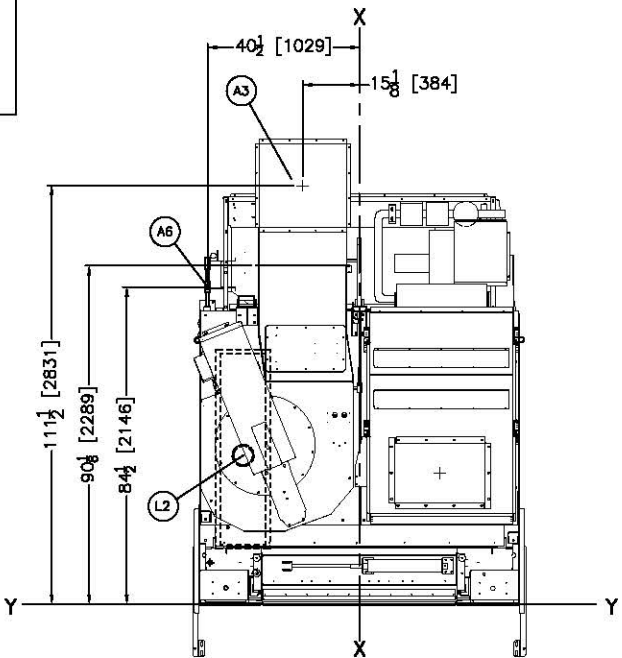

PLAN VIEW

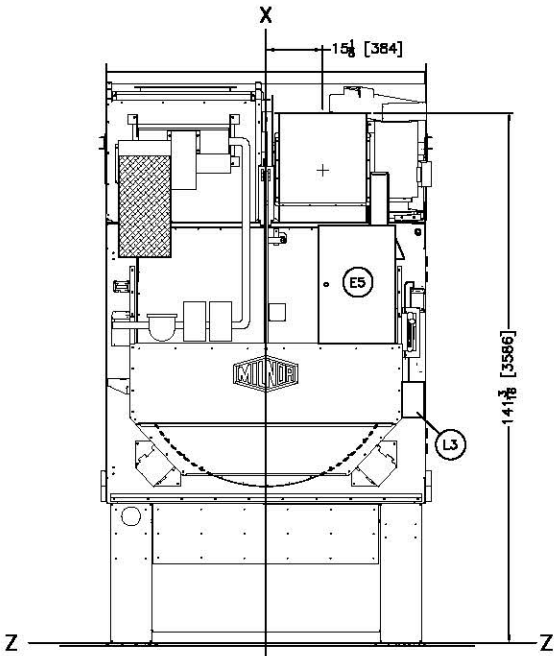


REAR VIEW

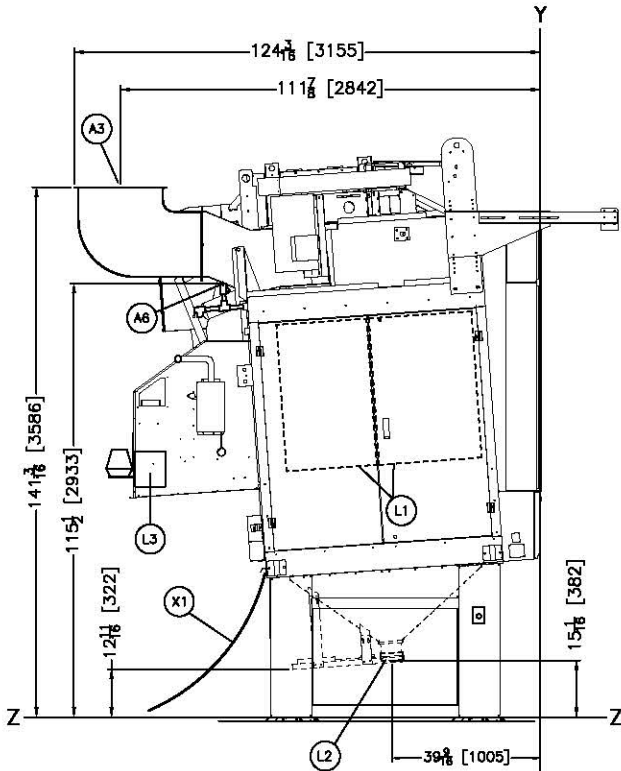


REFERENCE LINE "Y" (REFERENCE FOR FRONT/REAR DIMENSIONS). SEE NOTE 3.

LEFT VIEW

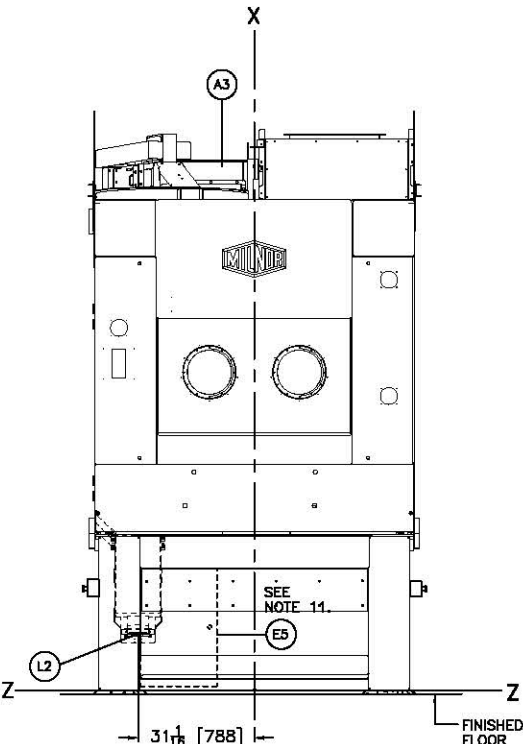

CENTERLINE "X" (REFERENCE FOR LEFT/RIGHT DIMENSIONS). SEE NOTE 3.

FRONT VIEW

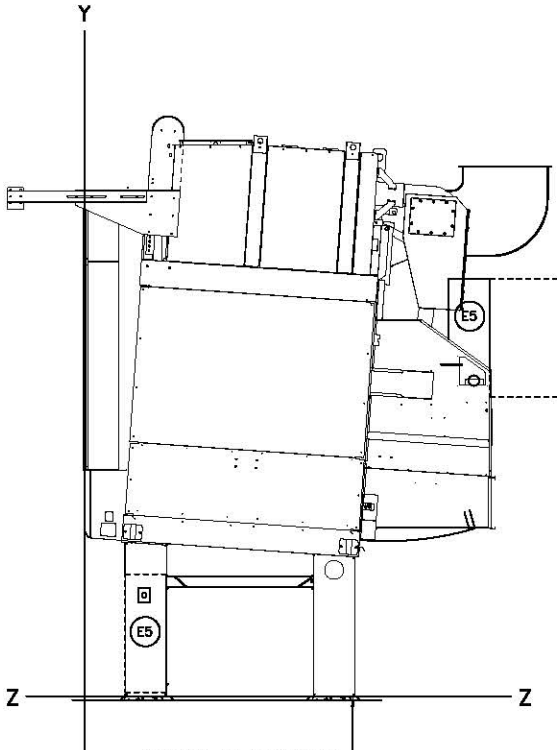

BASELINE "Z" (REFERENCE FOR VERTICAL DIMENSIONS) CORRESPONDS TO TOP OF GROUT. SEE NOTE 3 AND 4.

RIGHT VIEW

X1	OPTIONAL UNLOAD BRIDGE, 48" PLASTIC SHEETING
L3	INTERNAL LINT SCREENS AIR VALVE BOX.
L2	LINT OUTLET (6" FLEX HOSE CONNECTION) FOR OPTIONAL INTERNAL LINT SCREEN. PIPES TO DRYVAC01, DRYVAC02 OR LINT COLLECTOR BY OTHERS. SEE NOTES 9 & 10 AND DRAWING BD6458DLCPBE FOR RECOMMENDED PIPING.
L1	OPTIONAL INTERNAL LINT SCREENS, BEHIND PANELS
H1	BOLT HOLES, 5/16"[7] DIA.
E5	OPTIONAL INVERTER BOX IS LOCATED AS SPECIFIED ON THE DISCHARGE SHROUD, PEDESTAL FRONT, OR FOR REMOTE MOUNTING. SEE NOTE 6.
A6	1" NPT AIR CONNECTION/OPTIONAL INTERNAL LINT SCREENS
A3	BLOWER EXHAUST DUCTING UP OPTION, SEE DETAIL.


ITEM	LEGEND
------	--------


NOTES	
13	FOR UTILITY REQUIREMENTS FOR GAS, STEAM, THERMAL OIL, AIR INTAKE, AND WATER SUPPLY, SEE DOCUMENT BIPDUI01/20160606 OR LATER.
12	A WATER SEPARATOR (NOT SUPPLIED BY PMC) IS REQUIRED FOR THE INCOMING AIR TO THE INTERNAL LINT SYSTEM.
11	OPTIONAL INVERTER BOX MAY BE SPECIFIED FOR PEDESTAL MOUNT ON 48"[1219] (ZERO PEDESTAL PLUS 7"[178]) AND TALLER PEDESTALS ONLY.
10	OPTIONAL INTERNAL LINT SCREENS IS AVAILABLE FOR DRYERS WITH 41"[1041] AND TALLER PEDESTALS ONLY.
9	FOR OPTIONAL INTERNAL LINT FILTERS, IT IS RECOMMENDED TO HAVE A 60 GALLON COMPRESSED AIR BOOSTER TANK FOR EVERY 5 DRYERS.
8	EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
7	THIS DRAWING SHOWS THE 6464 DRYER USING A 41"[1041] PEDESTAL BASE WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.







ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1L AH Options



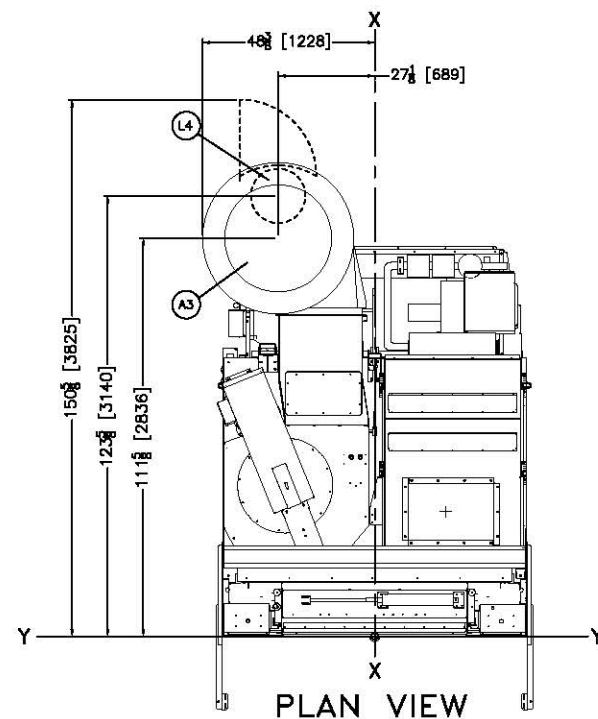

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.
SEE NOTE 7.

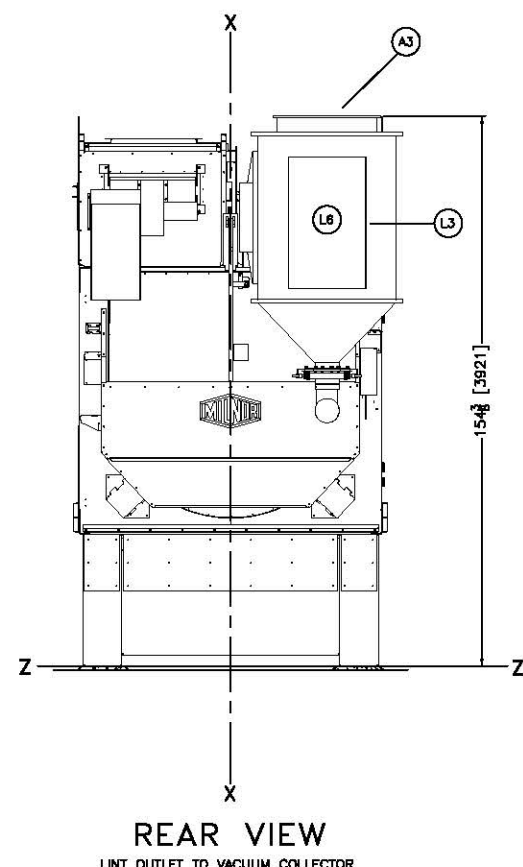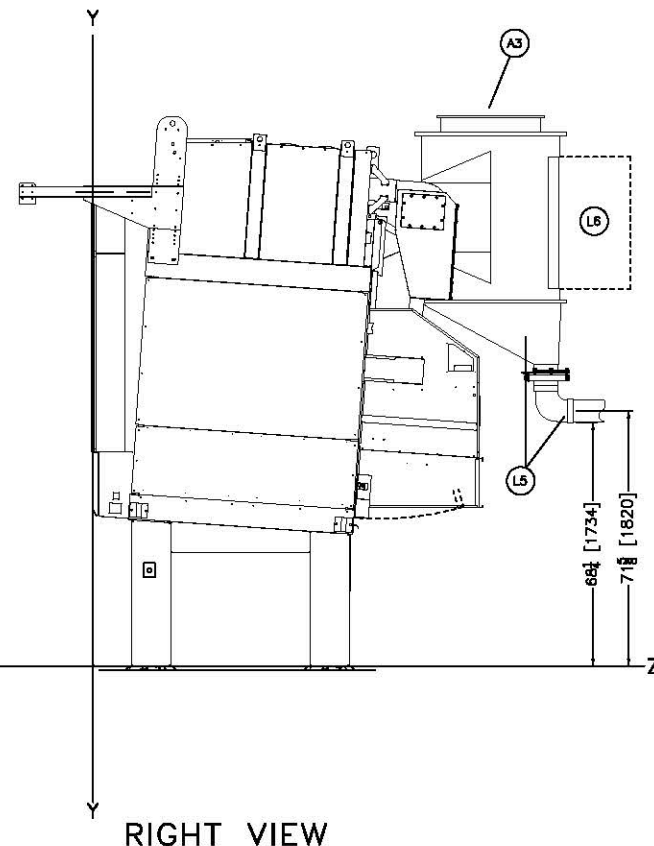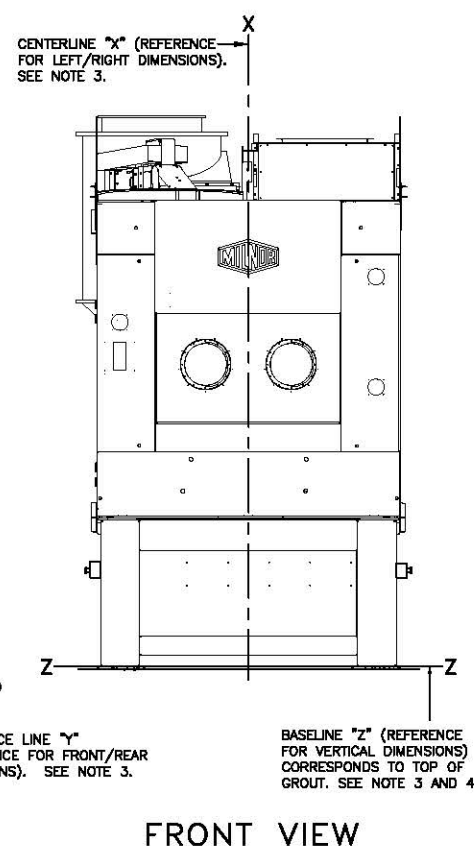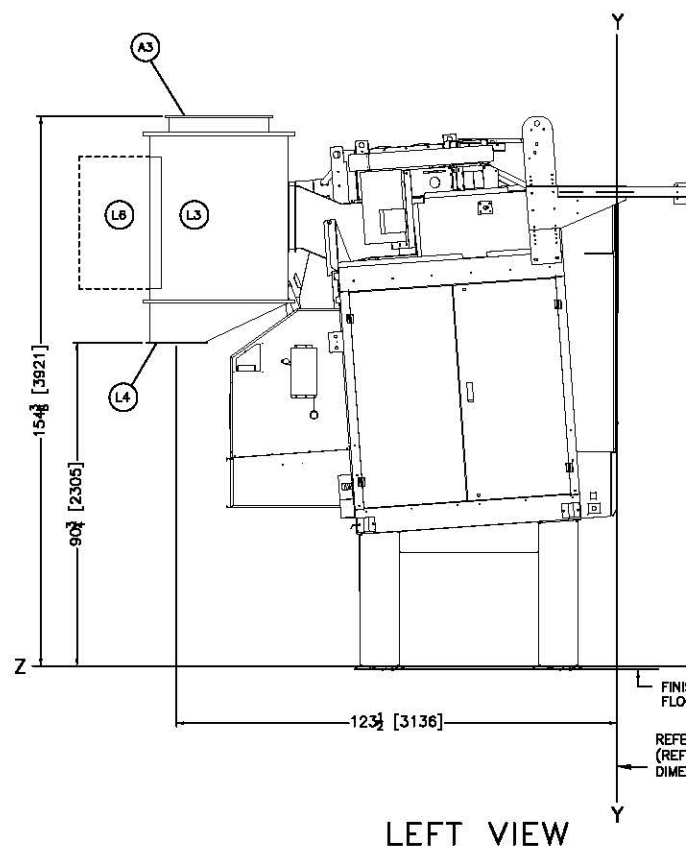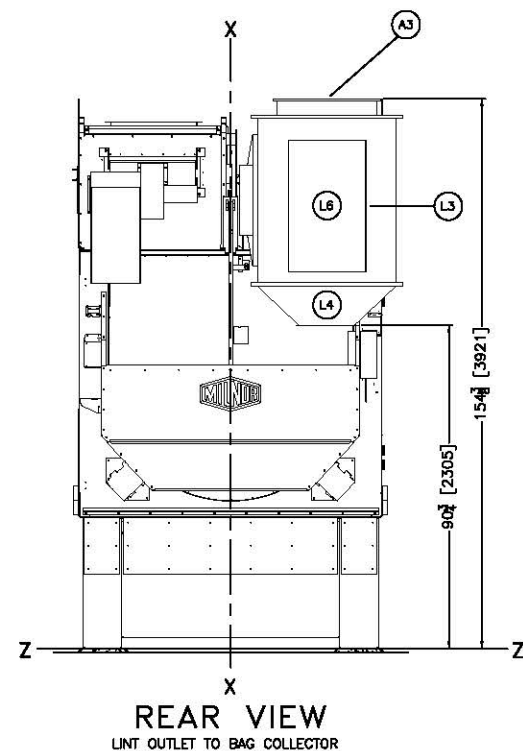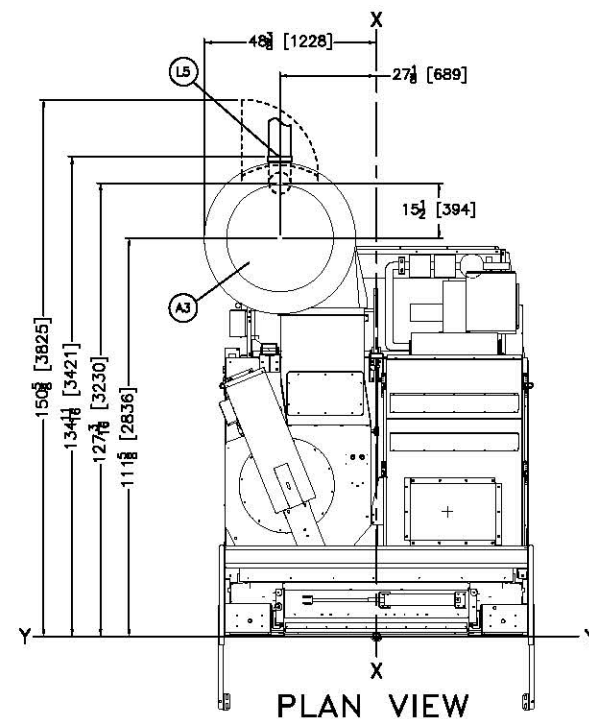

ITEM	LEGEND
L6	HINGED ACCESS DOOR
L5	CONE, LINT COLLECTION OUTLET TO VACUUM COLLECTOR DISCHARGE, 6" PIPE CONNECTION
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE 15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
A3	EXHAUST DUCT, 28" [711] DIAMETER

- NOTES**
- 12 EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - 11 DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - 10 MINIMUM CLEARANCE FOR MAINTENANCE - 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BSHITCLUBE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - 9 DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - 8 DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - 7 THIS DRAWING SHOWS THE 6464, DRYERS USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE, PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.


ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1L AH & MLF1010

DM 0 0.5M 1M
INCHES 0 12 24 36








BD6464TG1LABD
2022086D

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70083, USA, Phone 504/487-9591,
FAX 504/488-3094, Email: milnorinfo@milnor.com

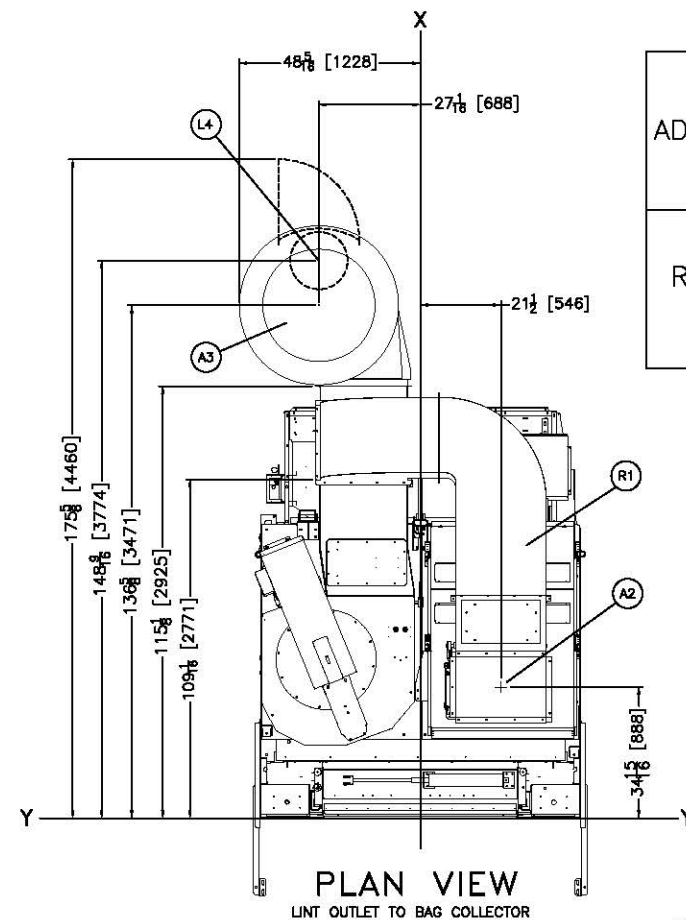

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

THIS DRAWING IS FOR THE
RECIRCULATION DUCTING OPTION.
USE THIS DRAWING WITH
BD6464TG1LBE.

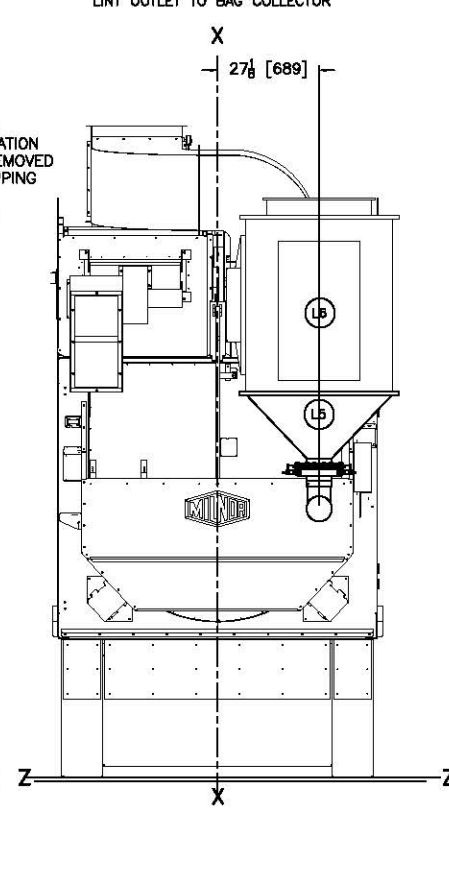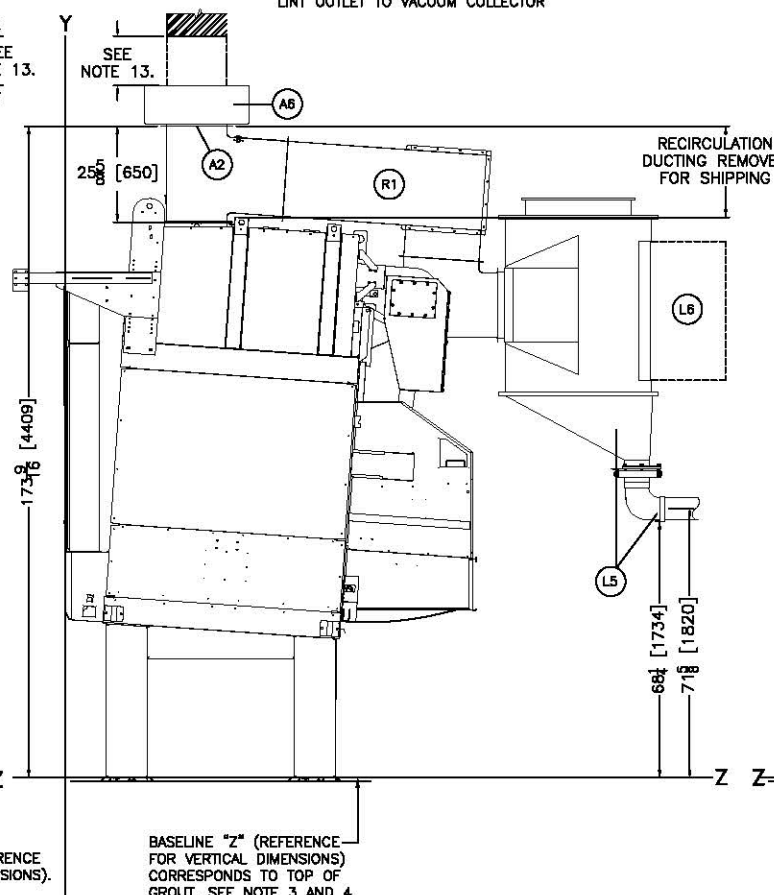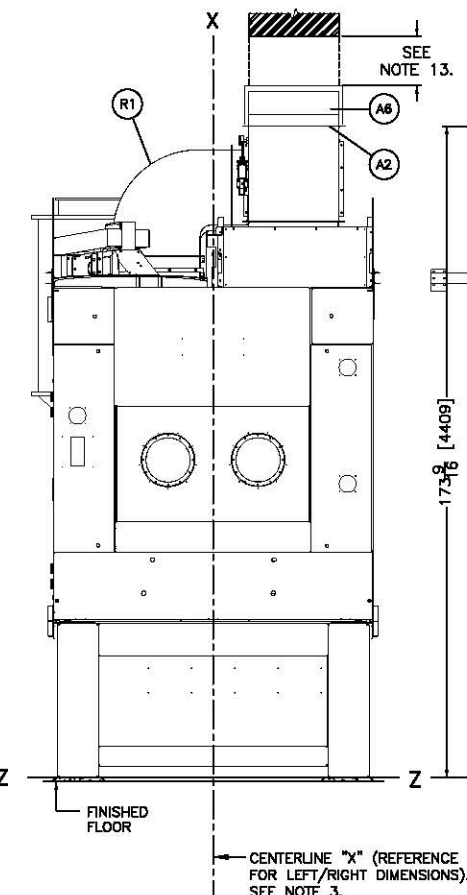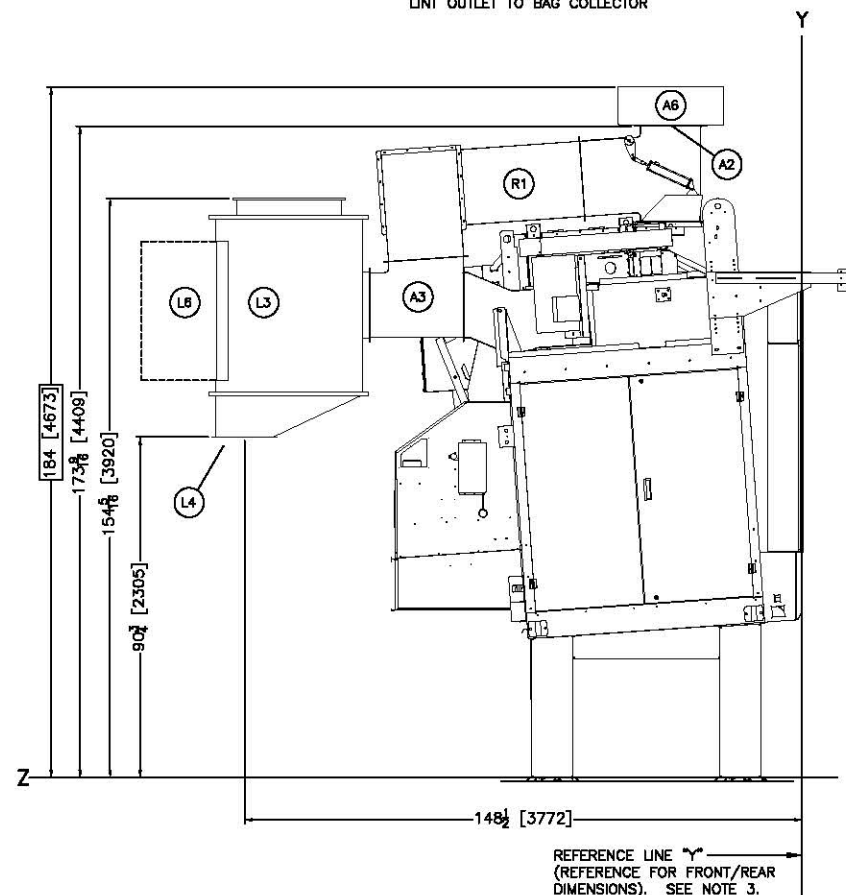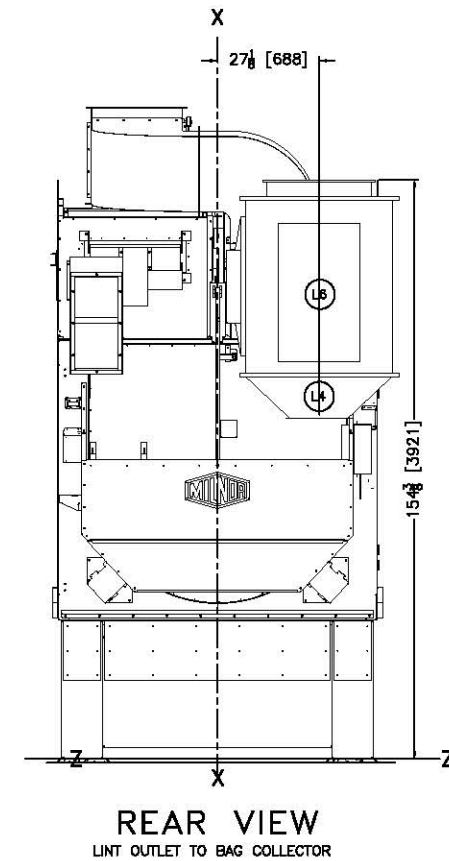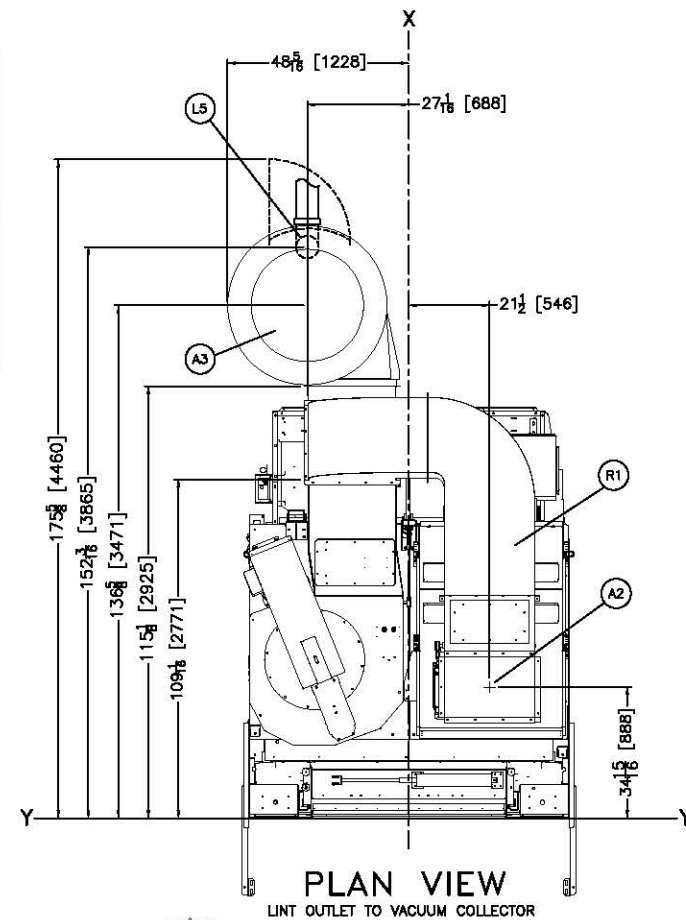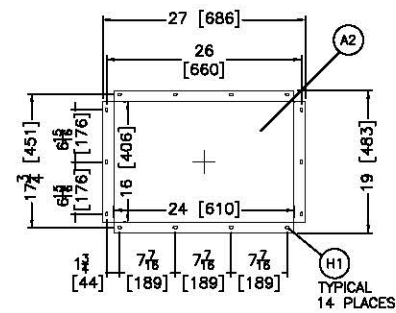


ITEM	LEGEND
R1	RECIRCULATION DUCT
L6	HINGED ACCESS DOOR
L5	CONE, LINT COLLECTION OUTLET TO VACUUM COLLECTOR DISCHARGE, 6" PIPE CONNECTION
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE 15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (SUPPORTED BY OTHERS)
H1	.30" [8] DIAMETER X .50" [13] SLOTS, 14 PLACES
A6	BLOWER AIR INTAKE TEE, REMOVE ONLY WHEN DUCTING THE INTAKE
A3	RECIRCULATION DUCT BLOWER EXHAUST, 28" [711] DIAMETER
A2	RECIRCULATION DUCT BLOWER INTAKE

- NOTES**
- WHEN THE RECIRCULATION DUCT INLET IS NOT DUCTED, THERE MUST BE 8 FEET MINUS THE HEIGHT OF THE RECIRCULATION DUCT OF UNOBSTRUCTED VERTICAL CLEARANCE BETWEEN THE INLET AND ANY OBJECT ABOVE IT.
 - EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THIS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - MINIMUM CLEARANCE FOR MAINTENANCE = 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BOSHCLUBRE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - THIS DRAWING SHOWS THE 64064TG1L DRYER USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASILINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASILINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASILINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.


ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

THIS DRAWING IS FOR THE
FRONT VERTICAL EXHAUST OPTION.
USE THIS DRAWING WITH
BD6464TG1LABE.

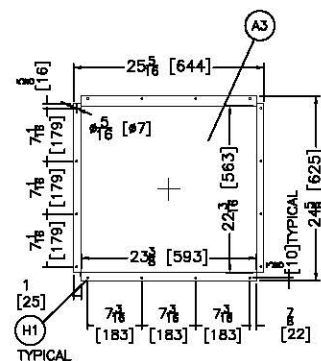


BLOWER EXHAUST
DUCT DETAIL
SEE NOTE 13.


SEE NOTE 13.

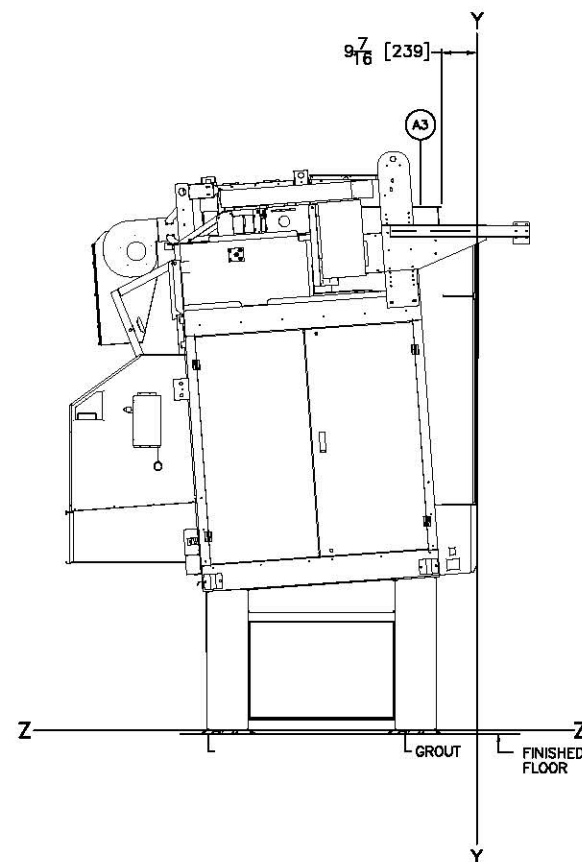

LEFT VIEW

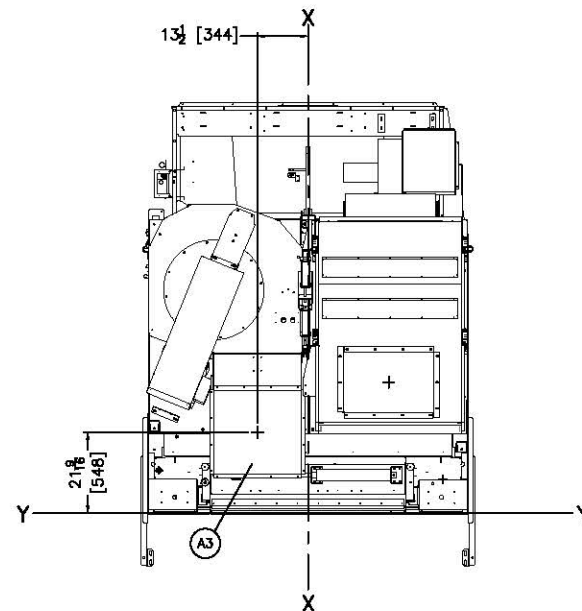


PLAN VIEW

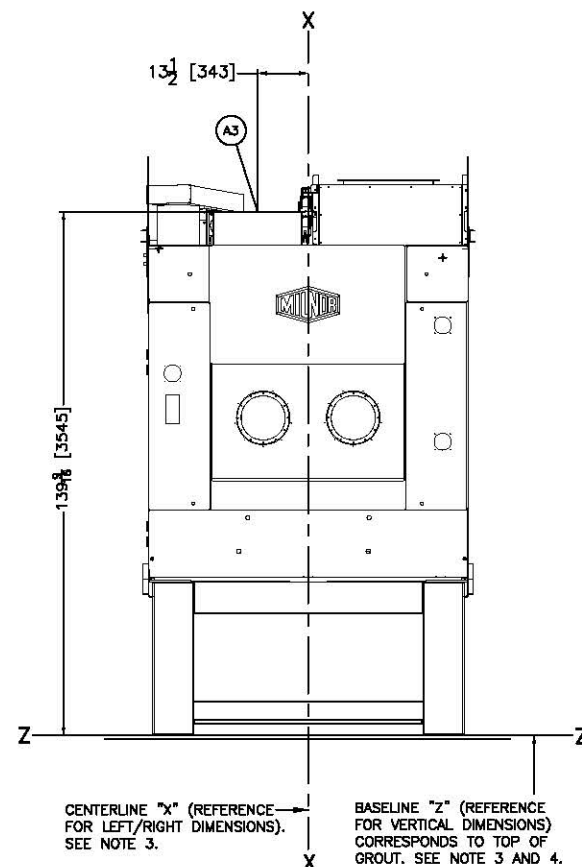


FRONT VIEW

CENTERLINE "X" (REFERENCE—
FOR LEFT/RIGHT DIMENSIONS).
SEE NOTE 3.

BASELINE "Z" (REFERENCE
FOR VERTICAL DIMENSIONS)
CORRESPONDS TO TOP OF
GROUT. SEE NOTE 3 AND 4.

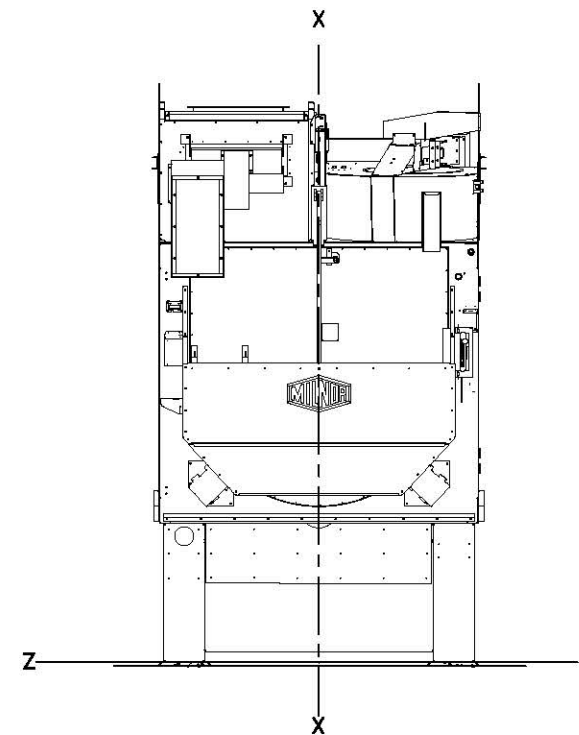

REAR VIEW

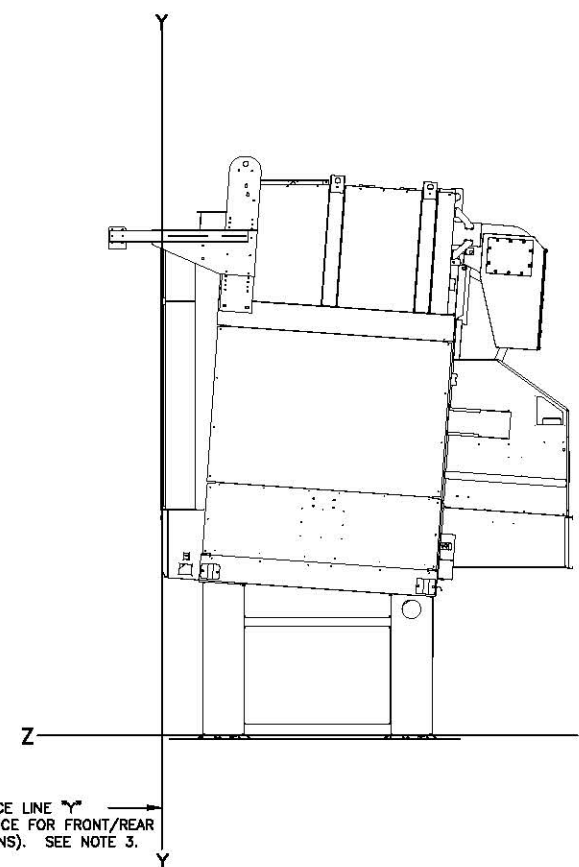

RIGHT VIEW

H1	.25" [7] DIA., 16 PLACES
A3	BLOWER EXHAUST UP FRONT OPTION, SEE DETAIL.
ITEM	LEGEND

NOTES

- 13 EXHAUST DUCTING: DRYER OPERATES UP TO 8500 SFPM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING THIS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL DRAINING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
- 12 THIS DRAWING SHOWS THE 6464GT01L DRYER WITH A 41-1/2"[1055] DISCHARGE HEIGHT. WE CALL THE PEDESTAL BASE TO DO THIS A "ZERO PEDESTAL". "ZERO PEDESTAL" IS STANDARD HEIGHT FOR CONVEYOR DISCHARGE.
- DRYERS MAY BE ORDERED WITH A PEDESTAL TO INCREASE OR DECREASE THE MACHINE HEIGHT IN (+/-)35.5"[89] INCREMENTS. ALL VERTICAL DIMENSIONS MUST BE 50% RUSTED FOOT OR SPECIFIED PEDESTAL HEIGHT. FOR ANYTHING UNDER A ZERO PEDESTAL, RIGHT AND LEFT DRYERS CANNOT BE CONNECTED, AND YOU MUST ALLOW A MINIMUM 18"[458] FOR SERVICING BETWEEN DRYERS, SEE NOTE 10.
- 11 DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
- 10 A MINIMUM CLEARANCE OF 26 1/2"[674] IS REQUIRED FROM THE REMOVABLE ACCESS DOORS TO WALL. THIS DISTANCE IS REQUIRED TO OPEN THE DOORS 55 DEGREES TO BE LIFTED OFF THE HINGES. THE DOORS MAY BE FULLY OPENED REQUIRING 32 1/2"[826] OF CLEARANCE.
- 9 DRYER IS DISASSEMBLED INTO TWO MAJOR COMPONENTS FOR SHIPPING, THE BASE AND THE FRAME. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT MACHINE THROUGH OPENING.
- 8 DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
- 7 CONTROL PANEL FOR DRYER MAY BE INSTALLED IN ANY CONVENIENT LOCATION. CONTROL CABLE FROM DRYER TO PANEL IS SUPPLIED BY MILNOR AND PRICED SEPARATELY.
- 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
38 [914] IF OBJECT IS AN UNGROUNDING (INSULATED) WALL.
38 [1067] IF OBJECT IS A GROUNDING WALL (i.e. Bare CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVERSING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR FINISH MUST BE CONSIDERED. EXISTING FLOOR IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED. ALSO, IN NO EVENT ARE PIPE CLOSERS THAN FIVE FEET FROM MACHINE FACTORY MUST BE CONSULTED. EXISTING MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.



6464TG1L AH Up/Front Exhaust







DWG# BD6464TG1LABH
2018111D



PELLERIN MINILOR CORPORATION
P.O. Box 400 Kenner, LA 70083, USA, Phone 504/467-8591,
FAX 504/467-7094. Email: minlorinfo@minlor.com.

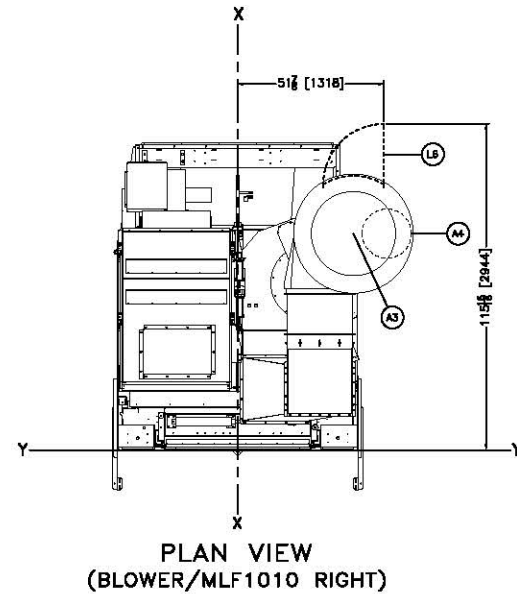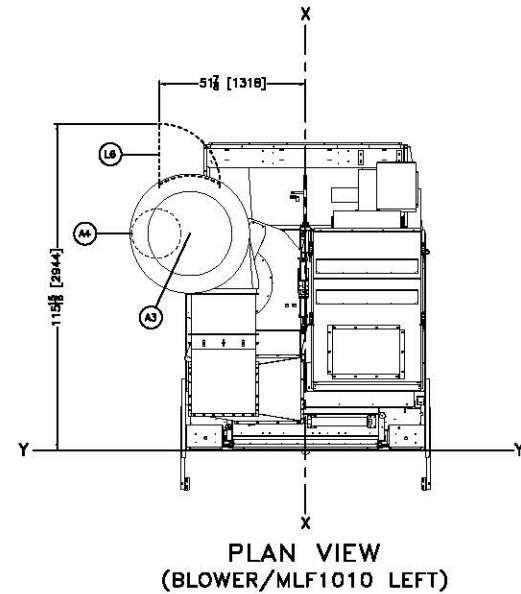

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

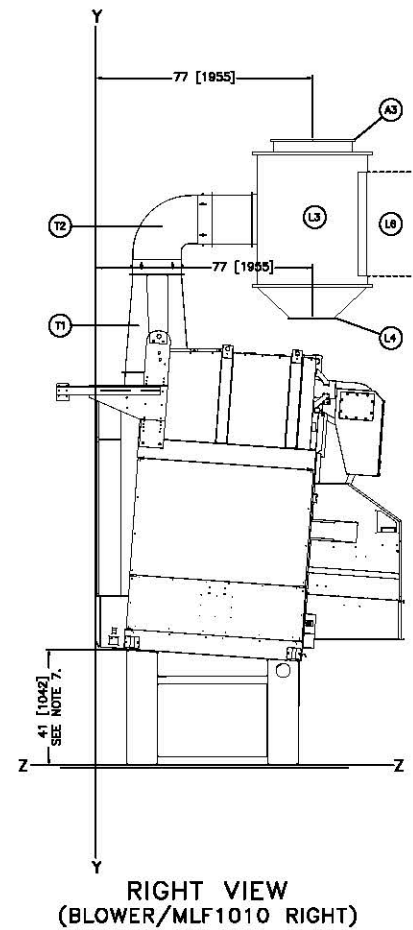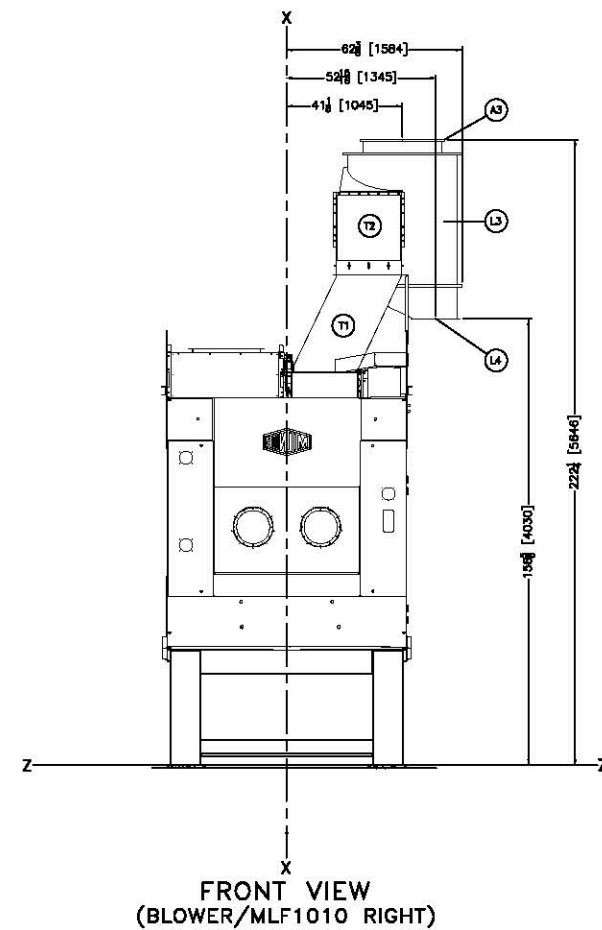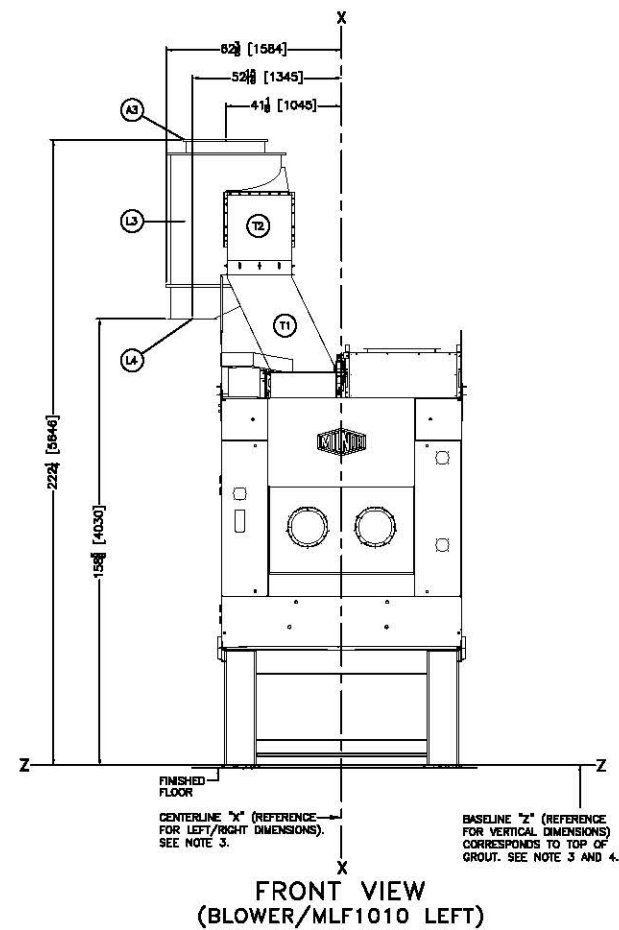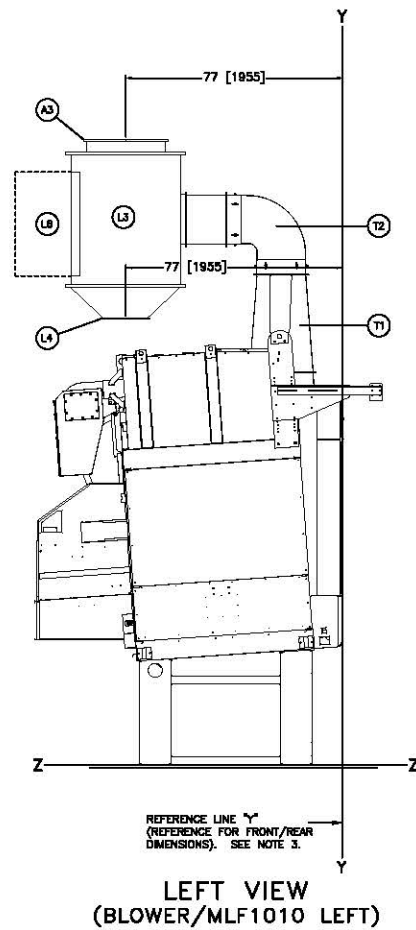


T2	EXHAUST TRANSITION ADJUSTABLE ELBOW
T1	EXHAUST VERTICAL TRANSITION
L6	HINGED ACCESS DOOR
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE
	15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER FOR FRONT VERTICAL EXHAUST (LINT FILTER SUPPORTED BY OTHERS)
A3	EXHAUST DUCT, 28" [711] DIAMETER
ITEM	LEGEND

- NOTES**
- EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - MINIMUM CLEARANCE FOR MAINTENANCE - 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BOSHUTTLER, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - THIS DRAWING SHOWS THE 6464 DRYERS USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE, PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.



ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1L/R AH Up/Front Exhaust & MLF1010









MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/487-9581,
FAX 504/488-3084, Email: milnorinfo@milnor.com

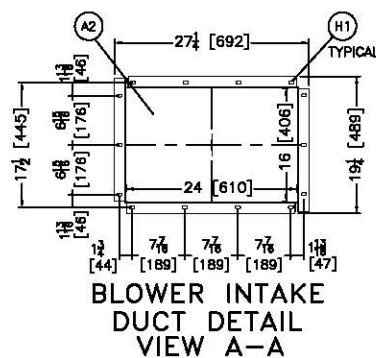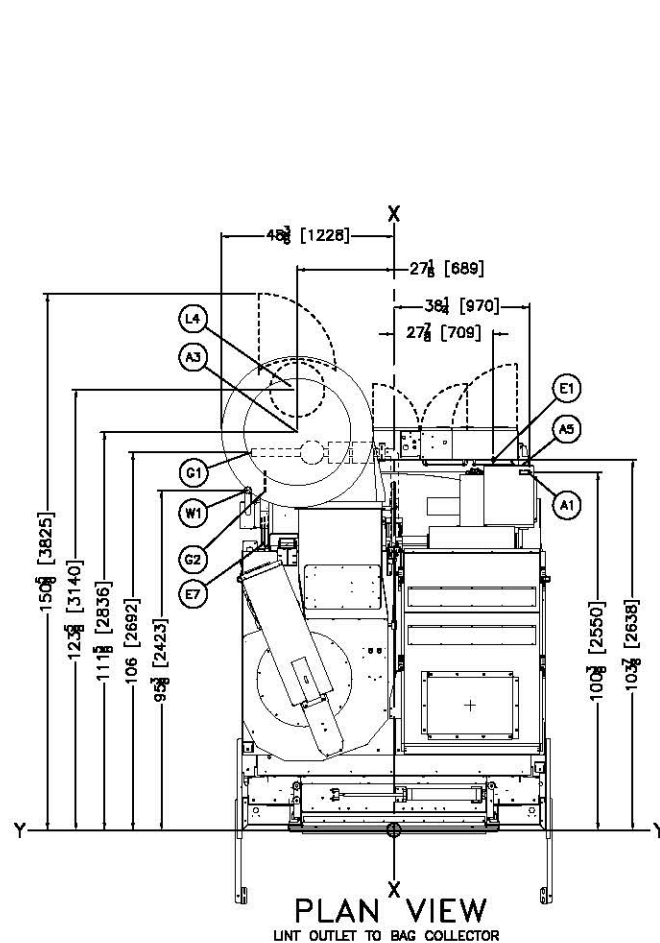

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.
SEE NOTE 7.

THIS DRAWING IS FOR 6464TG1L
AIR HEAT WITH
REAR CONTROLS & MLF1010.
IT SHOWS CONNECTIONS THAT
DIFFER FROM FRONT CONTROL
MODEL.

THIS DRAWING IS TO BE USED IN
CONJUNCTION WITH BD6464TG1LABE
FOR ADDITIONAL NOTES AND
DIMENSIONS THAT APPLY TO THIS
THE MODEL.

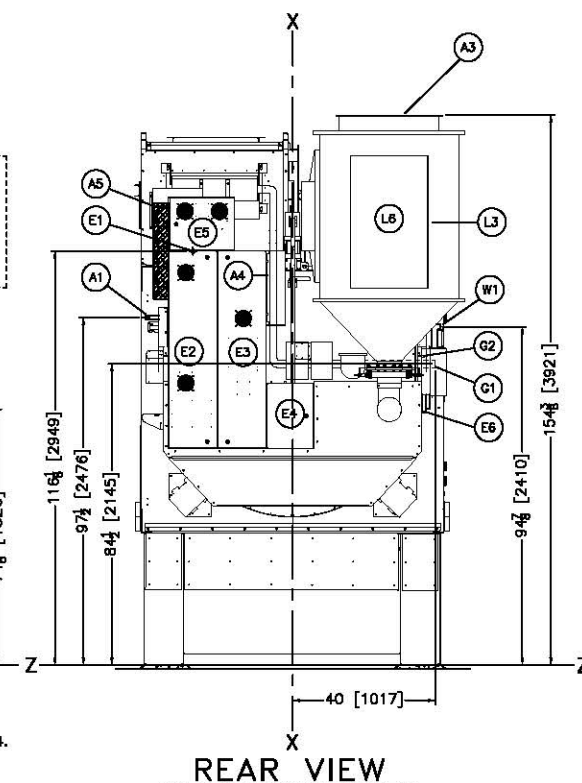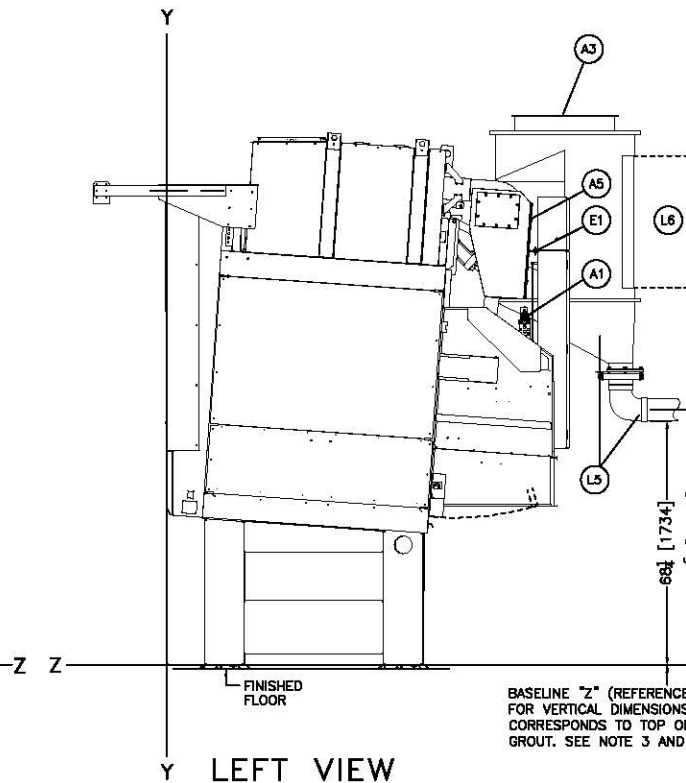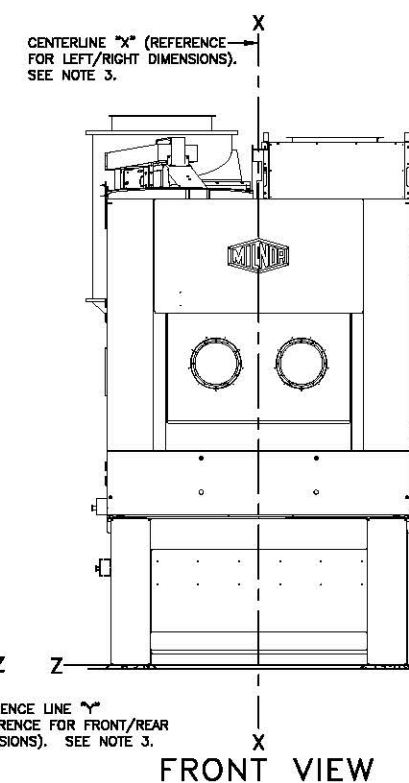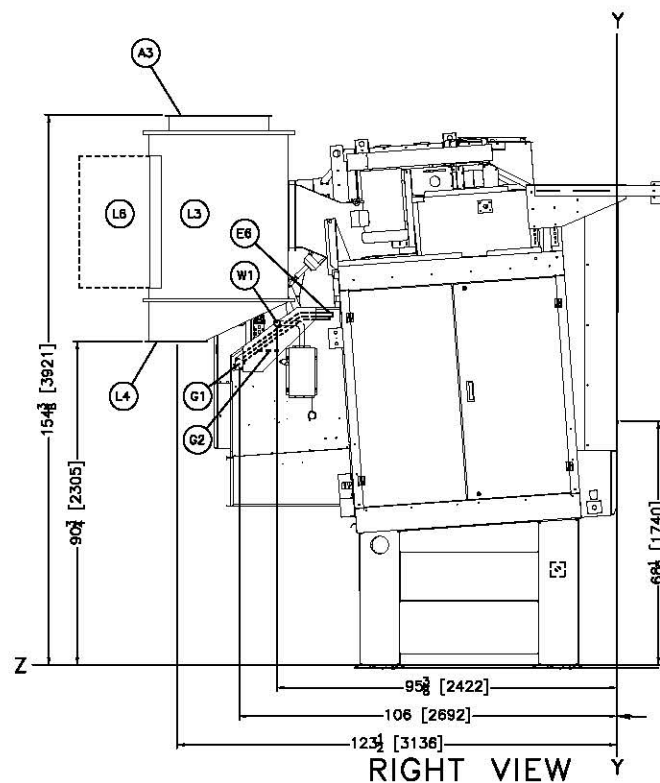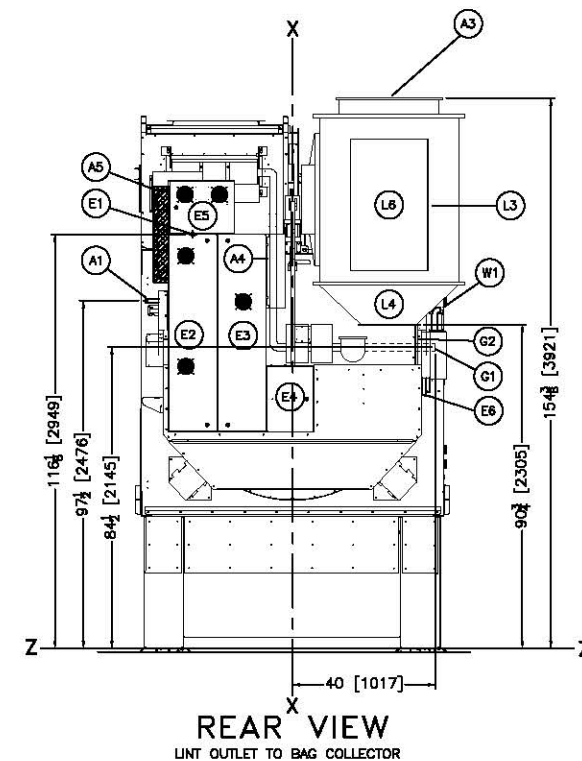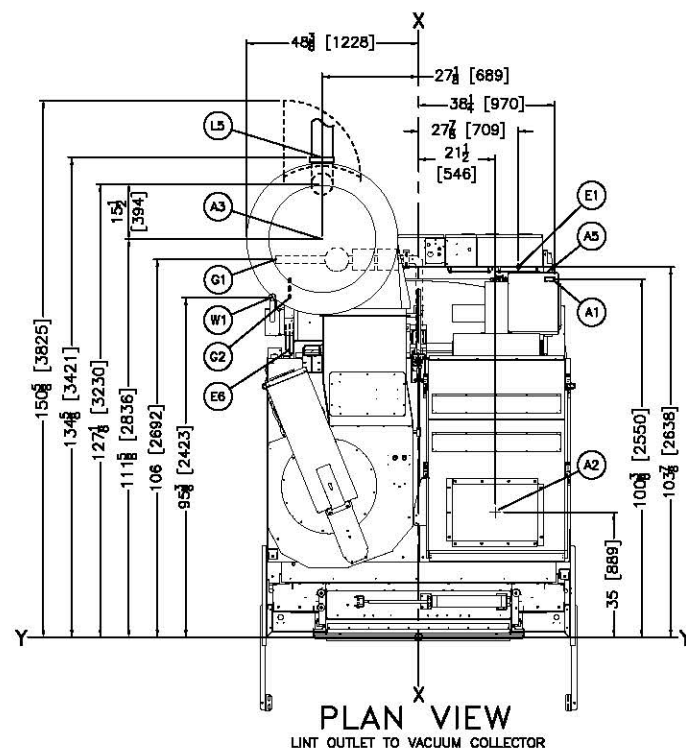

ITEM	LEGEND
W1	SPRINKLER WATER INLET, 1-1/4" NPT
L6	HINGED ACCESS DOOR
L5	CONE, LINT COLLECTION OUTLET TO VACUUM COLLECTOR
	DISCHARGE, 6" PIPE CONNECTION
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE
	15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
H1	.40" DIA. X .75" SLOTS, 14 PLACES
G2	GAS LINE VENT, 1/4" STAINLESS STEEL TUBING
G1	GAS INLET, 1-1/2" NPT CONNECTION
E6	CABLING FOR MANUAL CONTROLS AND OPTIONAL REMOTE
	MOUNTED BLOWER INVERTER (IF SPECIFIED) EXITS HERE.
E5	OPTIONAL INVERTER BOX
E4	MICROPROCESSOR BOX
E3	LOW VOLTAGE BOX
E2	HIGH VOLTAGE BOX
E1	MAIN ELECTRICAL CONNECTION
A5	COMBUSTION AIR INTAKE BOX WITH FILTERS
A4	AIR VALVE BOX
A3	MLF1010 EXHAUST DUCT, 28" DIA.
A2	BLOWER INTAKE, SEE DETAIL
A1	COMPRESSED AIR, 1" NPT

- NOTES**
- 12 EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - 11 DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - 10 MINIMUM CLEARANCE FOR MAINTENANCE - 18" (458). SOME JURISDICTIONS REQUIRE UP TO 30" (762) CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BOSHCLUBRE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - 9 DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - 8 DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - 7 THIS DRAWING SHOWS THE 6464 DRYERS USING A 41T(1041) PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR OR SHUTTLE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 (914) IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 (1067) IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.).
48 (1219) IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED TO DISCONNECT TO EQUIPMENT.
 - 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE SHUTTLE. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" THICK GROUT BED.
 - 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1L AH REAR CONTROLS & MLF1010

BD6464TG1LABL
2024452D

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/487-9591,
Fax 504/488-3094, Email: milnorinfo@milnor.com

W1	SPRINKLER WATER INLET, 1-1/4" NPT
VL6	VACUUM LOADING FIREBOX INLET DAMPER (BLOWER INTAKE)
VL5	VACUUM LOADING BURNER COVERS
VL4	VACUUM LOADING COMBUSTION BOX DAMPER
VL3	VACUUM LOADING DUCT
VL2	VACUUM LOADING GOODS INLET
VL1	VACUUM LOADING CONTROLS, MANUAL SWITCH
VLS	VACUUM LOADING STAND
L3	INTERNAL LINT SCREENS AIR VALVE BOX.
L2	LINT OUTLET (6" FLEX HOSE CONNECTION) FOR OPTIONAL INTERNAL LINT SCREEN. PIPES TO DRYVAC01, DRYVAC02 OR LINT COLLECTOR BY OTHERS. SEE NOTES 14,15,16. DRAWING BD6458DLCPBE FOR RECOMMENDED PIPING.
L1	OPTIONAL INTERNAL LINT SCREENS, BEHIND PANELS
G2	GAS LINE VENT, 1/4" STAINLESS STEEL TUBING
G1	GAS INLET, 1-1/2" NPT CONNECTION
E5	OPTIONAL INVERTER BOX
E4	MICROPROCESSOR BOX
E3	LOW VOLTAGE BOX
E2	HIGH VOLTAGE BOX
E1	MAIN ELECTRICAL CONNECTION
A6	1" NPT AIR CONNECTION/OPTIONAL INTERNAL LINT SCREENS
A5	COMBUSTION AIR INTAKE BOX WITH FILTERS
A4	AIR VALVE BOX
A3	BLOWER EXHAUST TO REAR, STANDARD, SEE DETAIL ON BD6464TG1LABE.
A2	BLOWER INTAKE
A1	COMPRESSED AIR, 1"NPT

ITEM	LEGEND
------	--------

- NOTES**
- 16 A WATER SEPARATOR (NOT SUPPLIED BY PMC) IS REQUIRED FOR THE INCOMING AIR TO THE INTERNAL LINT SYSTEM.
- 15 OPTIONAL INTERNAL LINT SCREENS IS AVAILABLE FOR DRYERS WITH 41" [1041] AND TALLER PEDESTALS ONLY.
- 14 FOR OPTIONAL INTERNAL LINT FILTERS, IT IS RECOMMENDED TO HAVE A 60 GALLON COMPRESSED AIR BOOSTER TANK FOR EVERY 5 DRYERS.
- 13 IF THE FIREBOX INLET (BLOWER INTAKE) IS NOT DUCTED, THERE MUST BE 8 FEET- [2438] OF UNOBSTRUCTED VERTICAL CLEARANCE BETWEEN THE INLET AND ANY OBJECT ABOVE IT.
- 12 EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
- 11 DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
- 10 MINIMUM CLEARANCE FOR MAINTENANCE - 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BD5HTCLRBE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
- 9 DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
- 8 DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
- 7 THIS DRAWING SHOWS THE 6464L DRYERS USING A 41" [1041] PEDESTAL BASE WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
- 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.


ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1L AH REAR CONTROLS, VACUUM LOAD, IL


DM 0 0.5M DWG. BD6464TG1LABM4 2025222D



MILNOR PELLERIN MILNOR CORPORATION P.O. Box 400 Kenner, LA 70083, USA, Phone 504/487-9591, FAX 504/488-3084, Email: milnorinfo@milnor.com

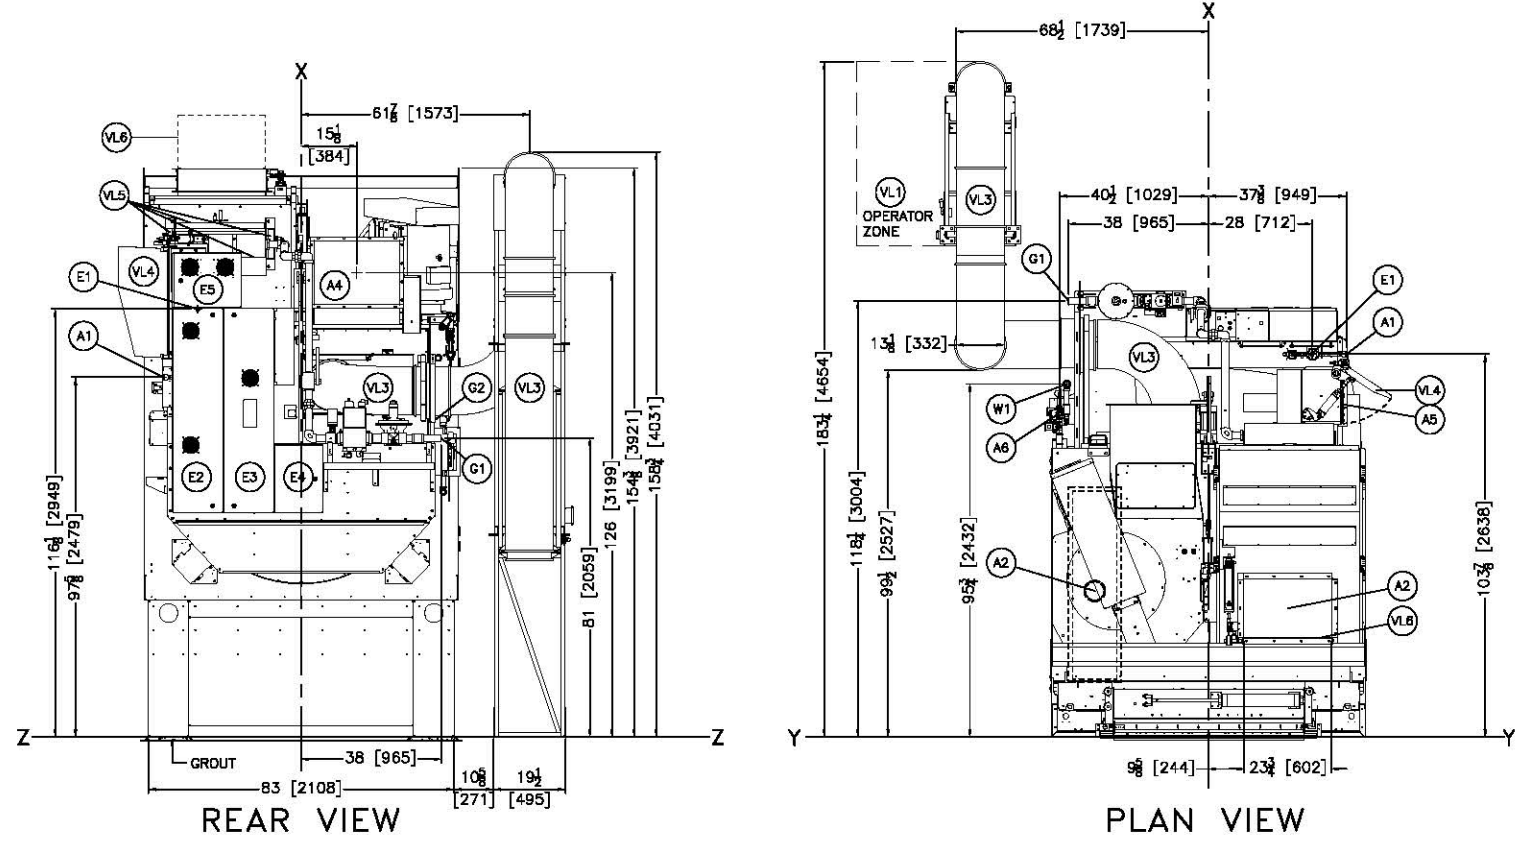




ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.
SEE NOTE 7.

THIS DRAWING IS THE 6464TG1L
WITH OPTIONS FOR REAR CONTROL,
VACUUM LOADING, AND INTERNAL
LINT. USE THIS DRAWING WITH
BD6464TG1LABE FOR STANDARD
EQUIPMENT AND INSTALLATION
INFORMATION.

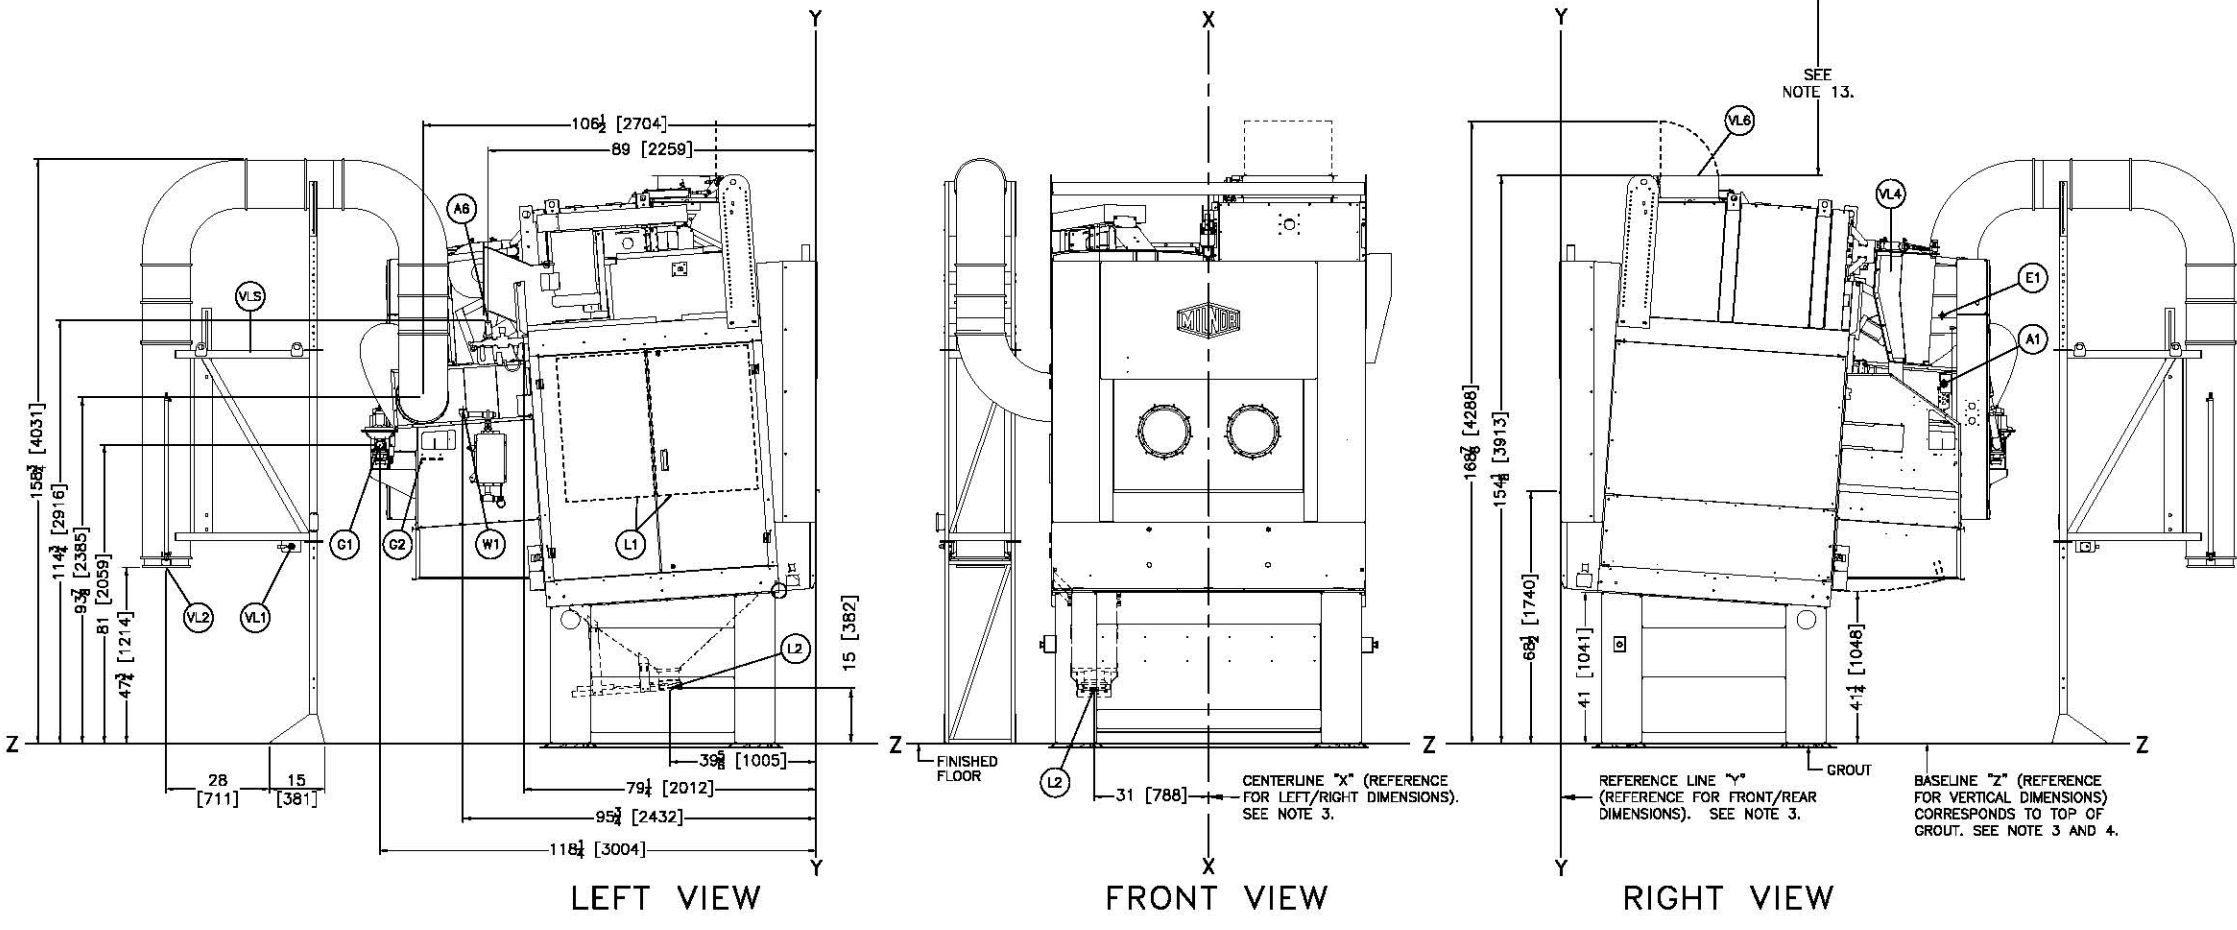

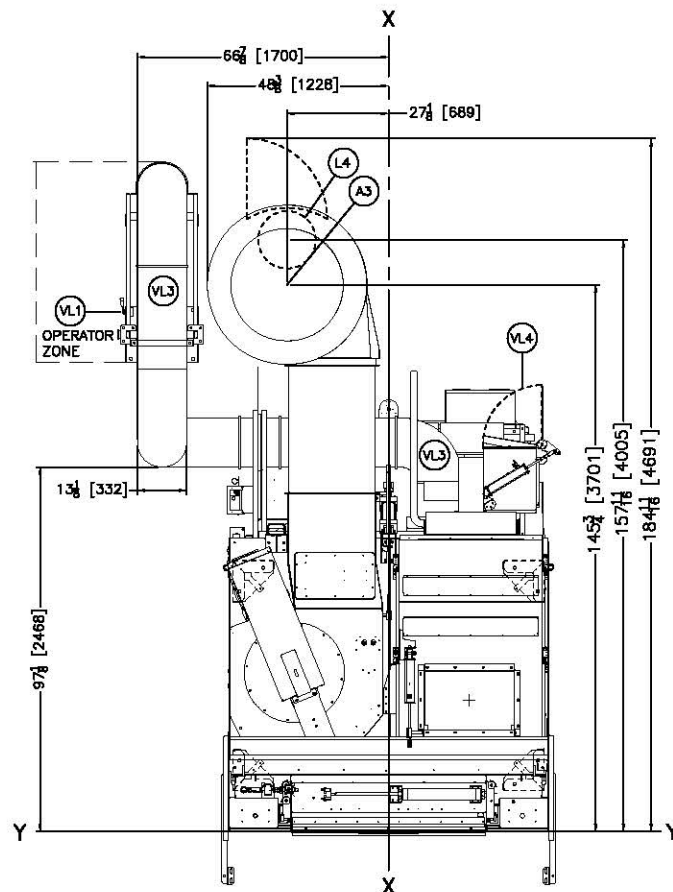
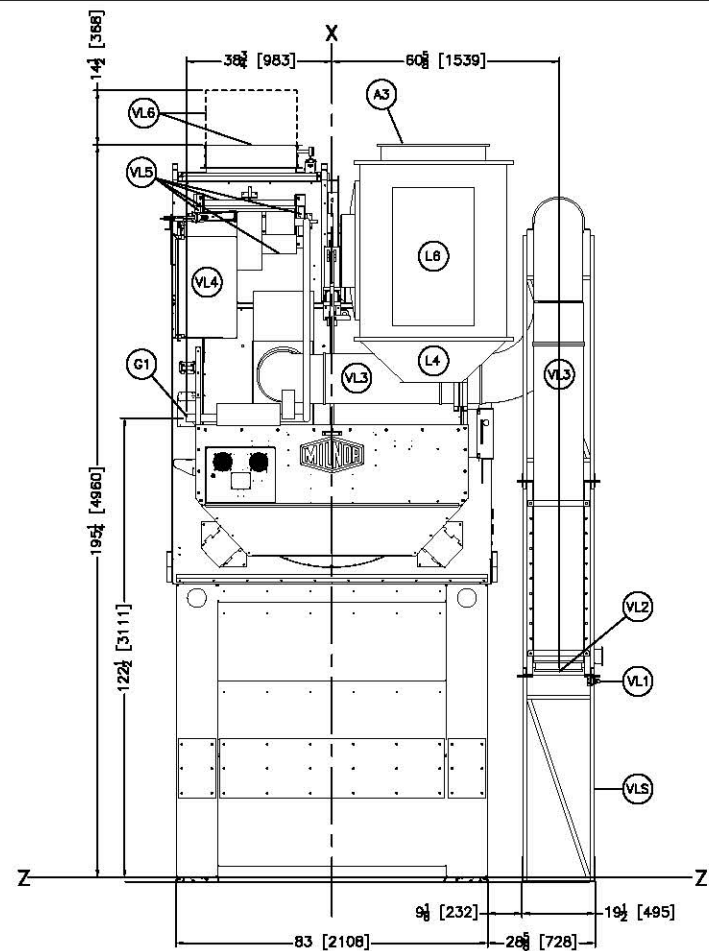


THIS DRAWING IS FOR THE
VACUUM LOADING OPTION. USE
THIS DRAWING WITH
BD6464TG1LABE.


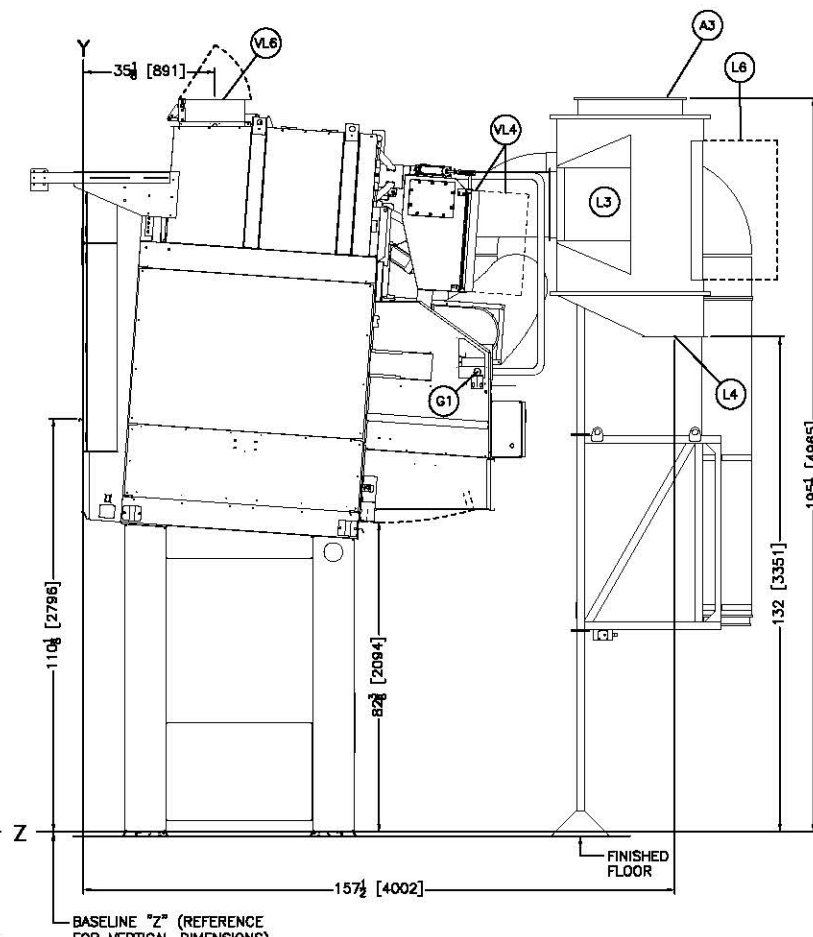
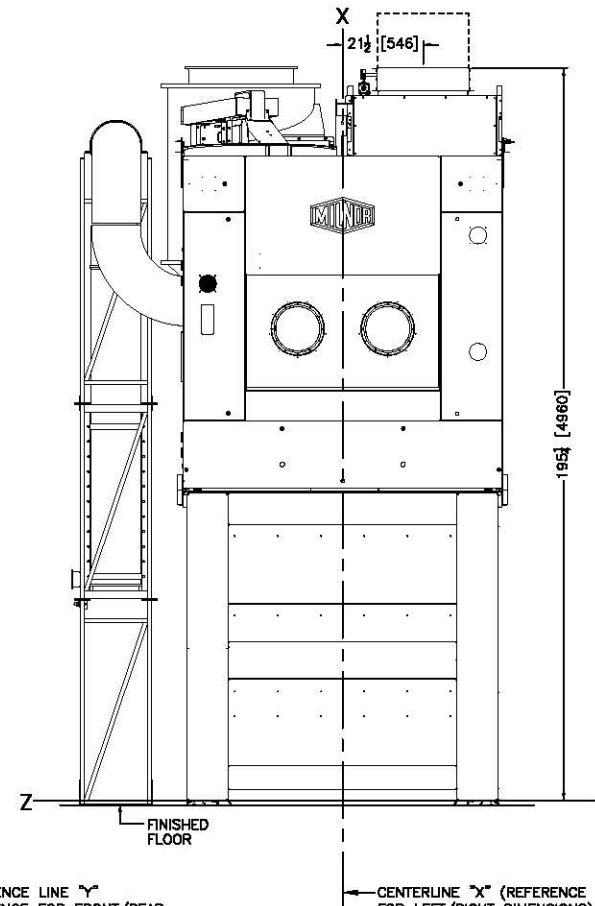
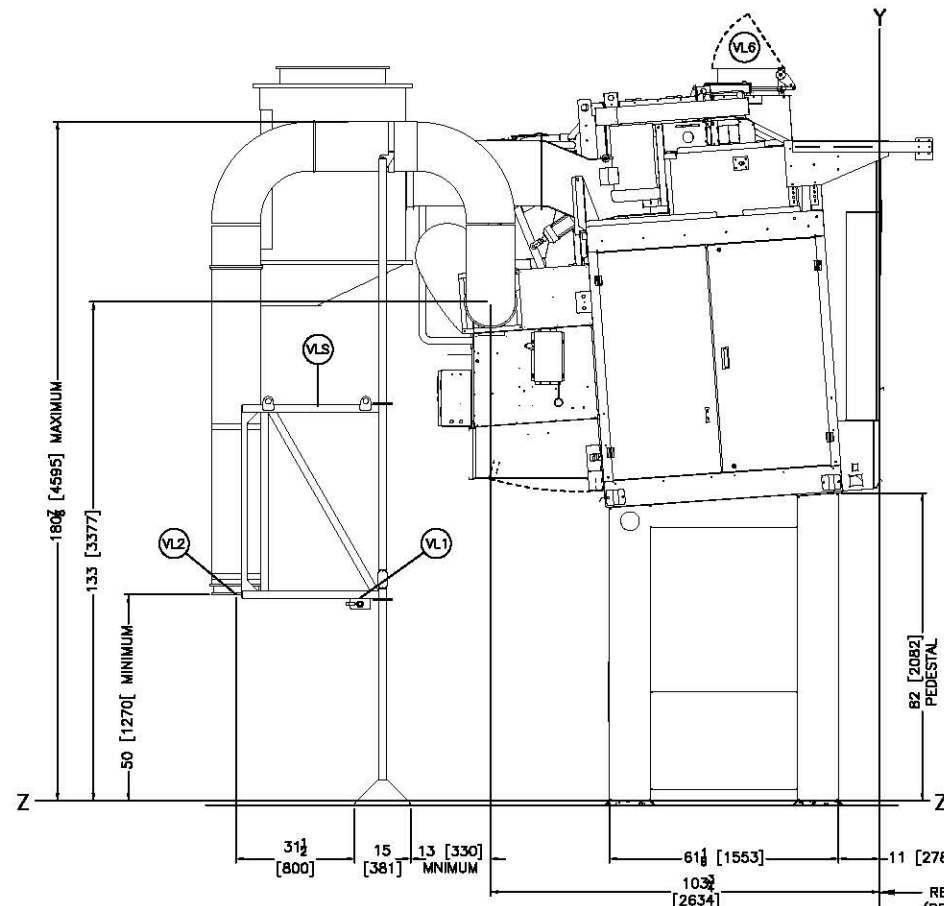


VL6	VACUUM LOADING FIREBOX INLET DAMPER
VL5	VACUUM LOADING BURNER COVERS
VL4	VACUUM LOADING COMBUSTION BOX DAMPER
VL3	VACUUM LOADING DUCT
VL2	VACUUM LOADING GOODS INLET
VL1	VACUUM LOADING CONTROLS, MANUAL SWITCH
VLS	VACUUM LOADING STAND
L6	HINGED ACCESS DOOR
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE
L3	15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
G1	GAS INLET WHEN VACUUM LOADED, 1-1/2" NPT CONNECTION
A3	EXHAUST DUCT, 28" [711] DIAMETER
ITEM	LEGEND

NOTES	
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
ATTENTION	
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.	
ATTENTION	
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.	

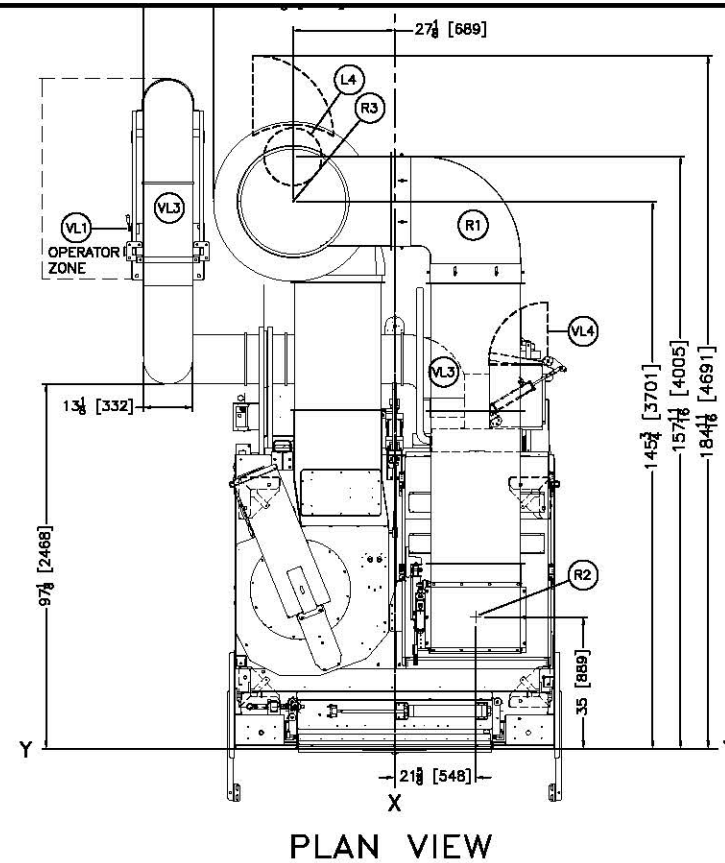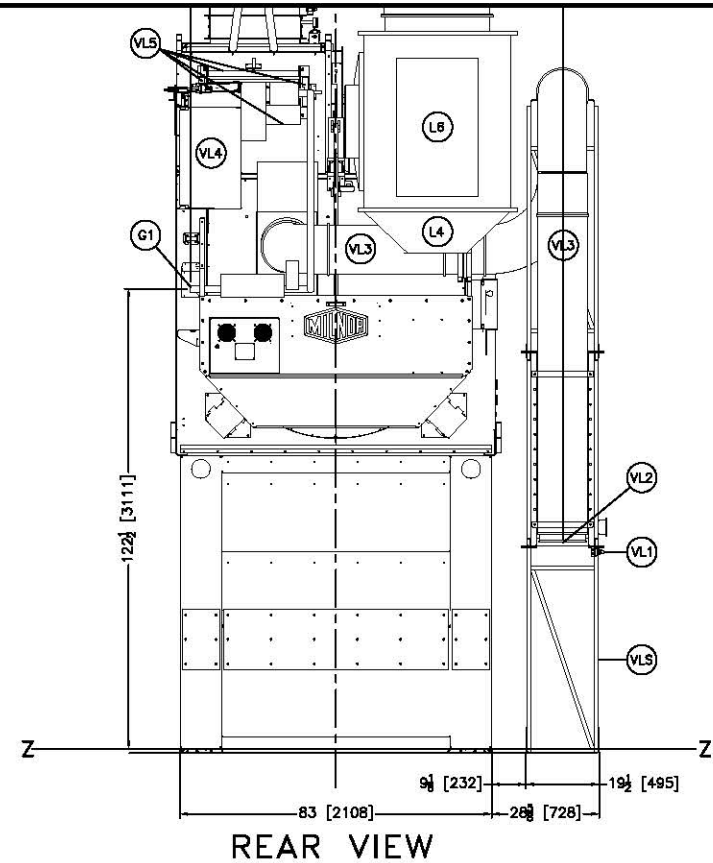

THIS DRAWING IS FOR
VACUUM LOADING+MLF+RECIRC OPTIONS.
USE THIS DRAWING WITH BD6464TG1LABE.

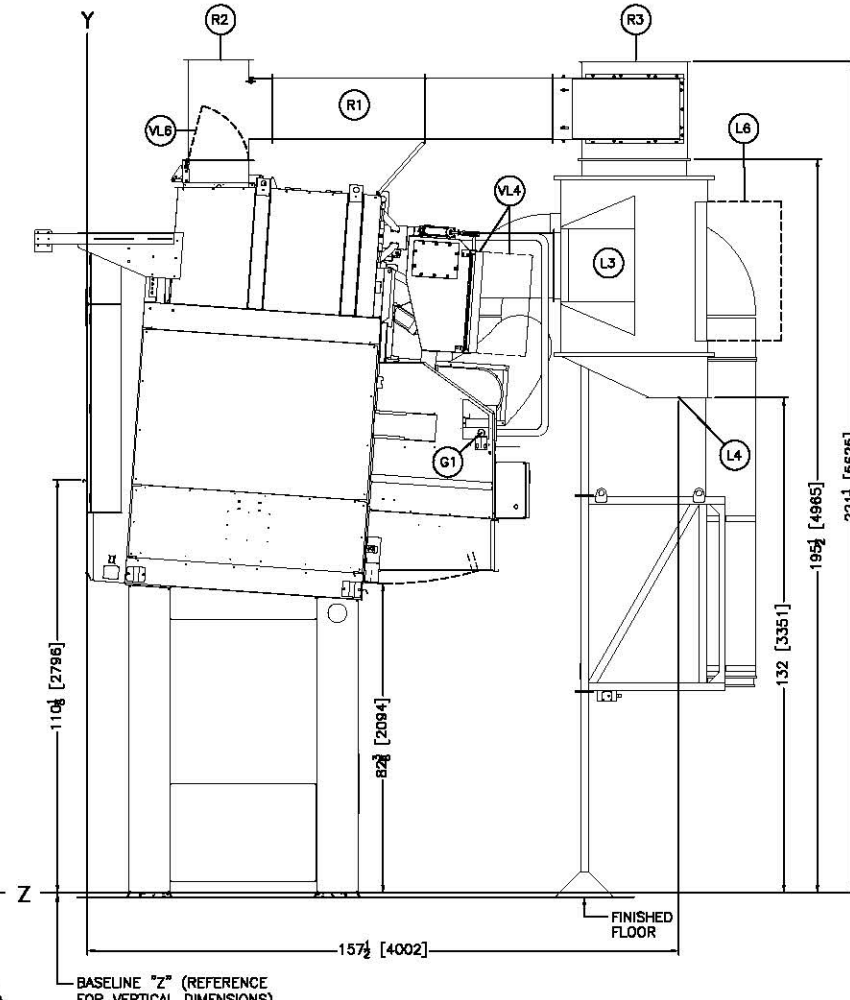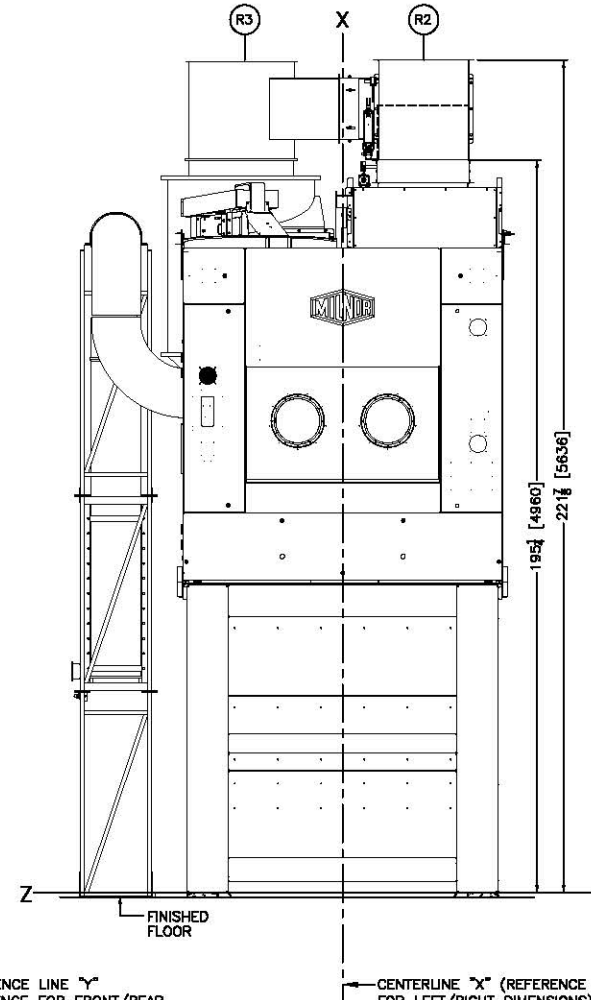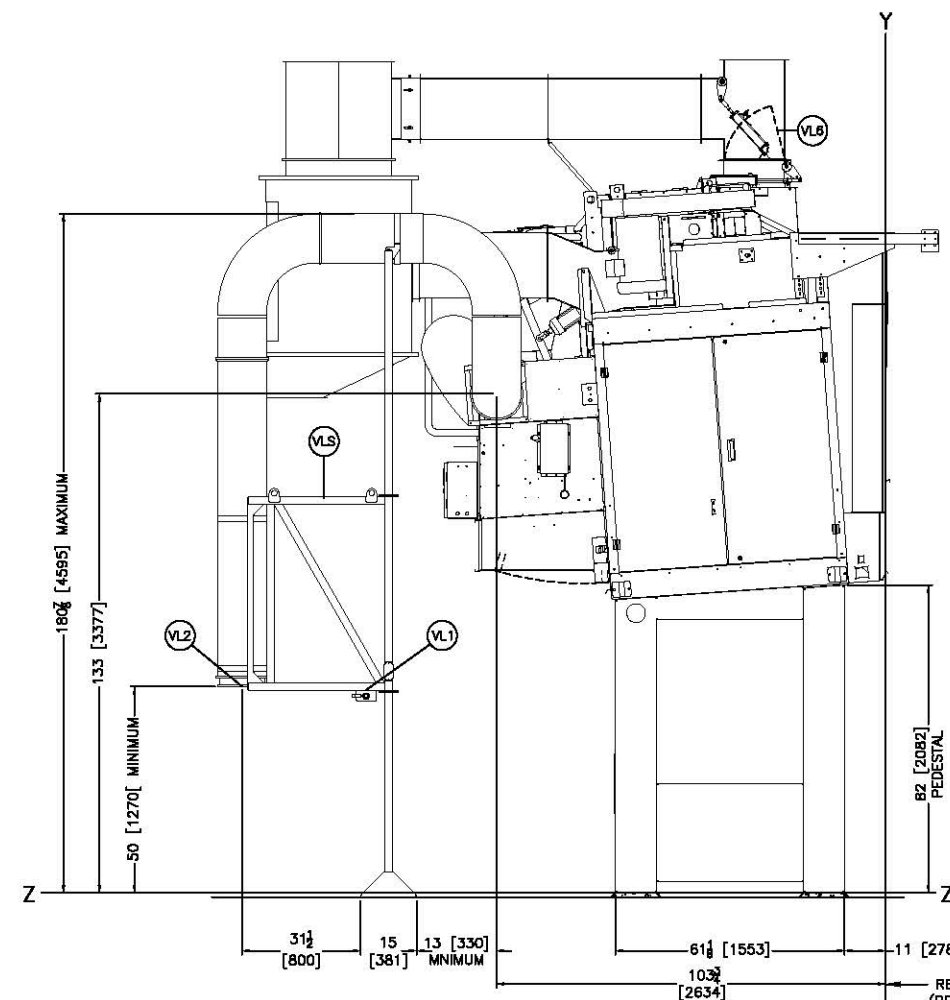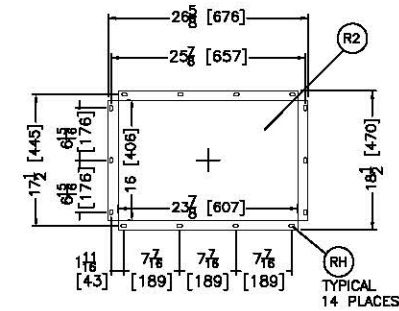

VL6	VACUUM LOADING FIREBOX INLET DAMPER
VL5	VACUUM LOADING BURNER COVERS
VL4	VACUUM LOADING COMBUSTION BOX DAMPER
VL3	VACUUM LOADING DUCT
VL2	VACUUM LOADING GOODS INLET
VL1	VACUUM LOADING CONTROLS, MANUAL SWITCH
VLS	VACUUM LOADING STAND
RH	.30"[8] DIAMETER X .50"[13] SLOTS, 14 PLACES
R3	RECIRCULATION DUCT BLOWER EXHAUST, 28"[711] DIAMETER
R2	RECIRCULATION DUCT BLOWER INTAKE
R1	RECIRCULATION DUCT
L6	HINGED ACCESS DOOR
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE
L3	15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
G1	GAS INLET WHEN VACUUM LOADED, 1-1/2" NPT CONNECTION

ITEM	LEGEND
------	--------

NOTES

6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.

5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.

4 BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.

3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.

2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.

1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

LEFT VIEW

FRONT VIEW



RIGHT VIEW

6464TG1L AH VACUUM LOAD/MLF/RECIRC

DWG: BD6464TG1LAB0 2022035D

MILLER PELLERIN MILNOR CORPORATION

P.O. Box 400 Kenner, LA 70063, USA, Phone 504/487-9581, FAX 504/488-3084, Email: milnorinfo@milnor.com

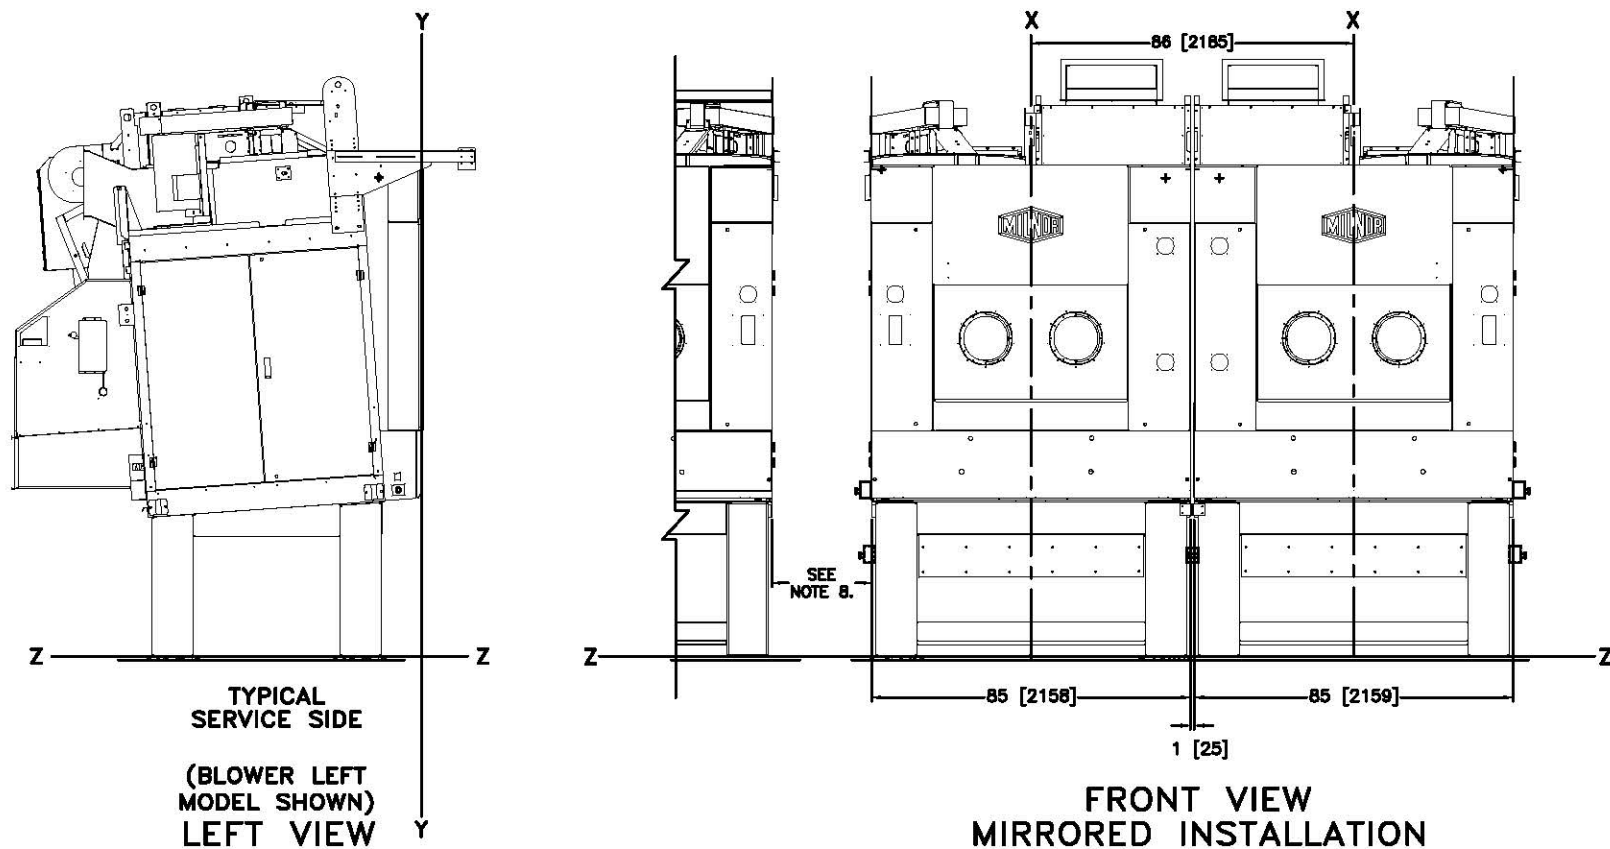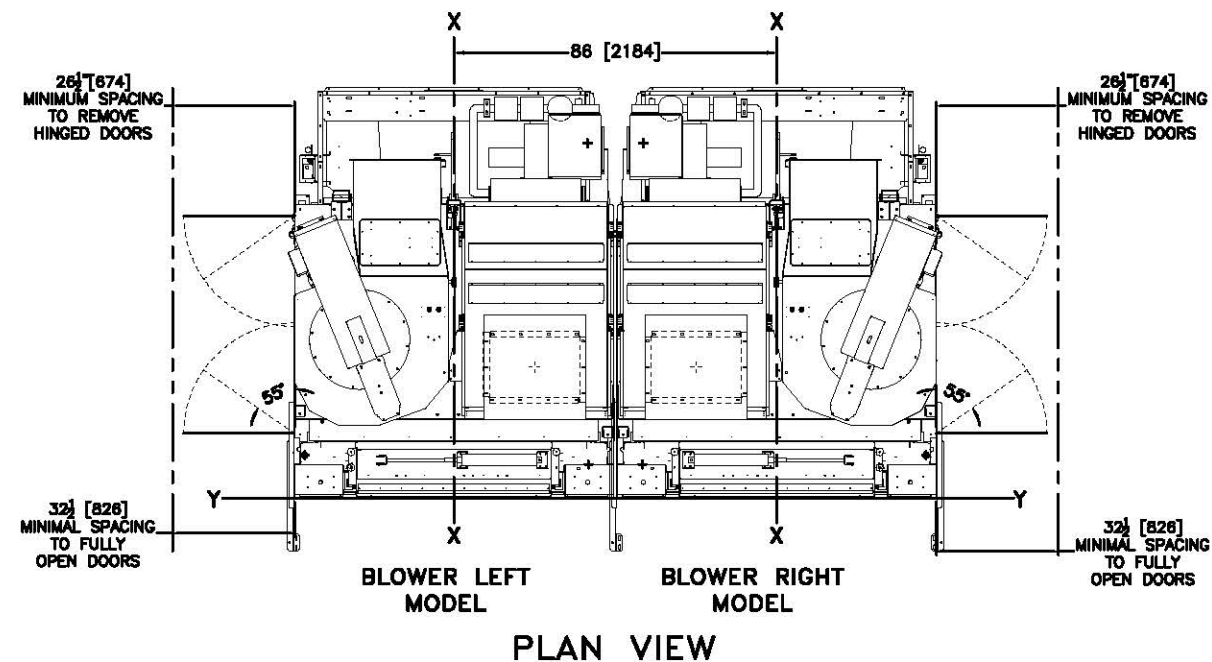

NOTES

- 6 A MINIMUM CLEARANCE OF 28 1/2 [674] IS REQUIRED FROM THE REMOVABLE ACCESS DOORS TO WALL. THIS DISTANCE IS REQUIRED TO OPEN THE DOORS 55 DEGREES TO BE LIFTED OFF THE HINGES. THE DOORS MAY BE FULLY OPENED REQUIRING 32 1/2 [826] OF CLEARANCE.
- 7 THIS DRAWING SHOWS 6464TG1L/R DRYERS USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
- 8 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- 9 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.




ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.


6464TG1L & TG1R AH Paired



PELLERIN MILNOR CORPORATION
 P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-6601,
 FAX 504/468-3064, Email: milnorinfo@milnor.com

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.
SEE NOTE 7.

THIS DRAWING IS FOR
REAR CONTROLS & MLF1010.
USE THIS DRAWING WITH
BD6464TG1LABE, BD6464TG1LABL,
& BD6464TG1RABL.








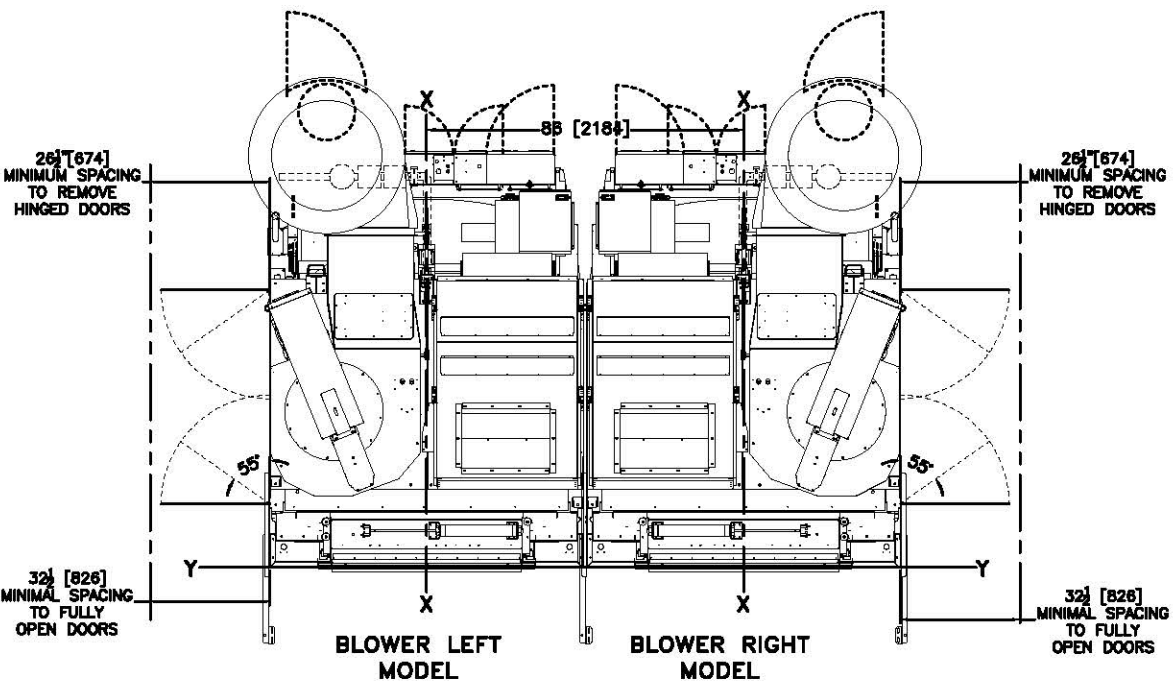


PLAN VIEW

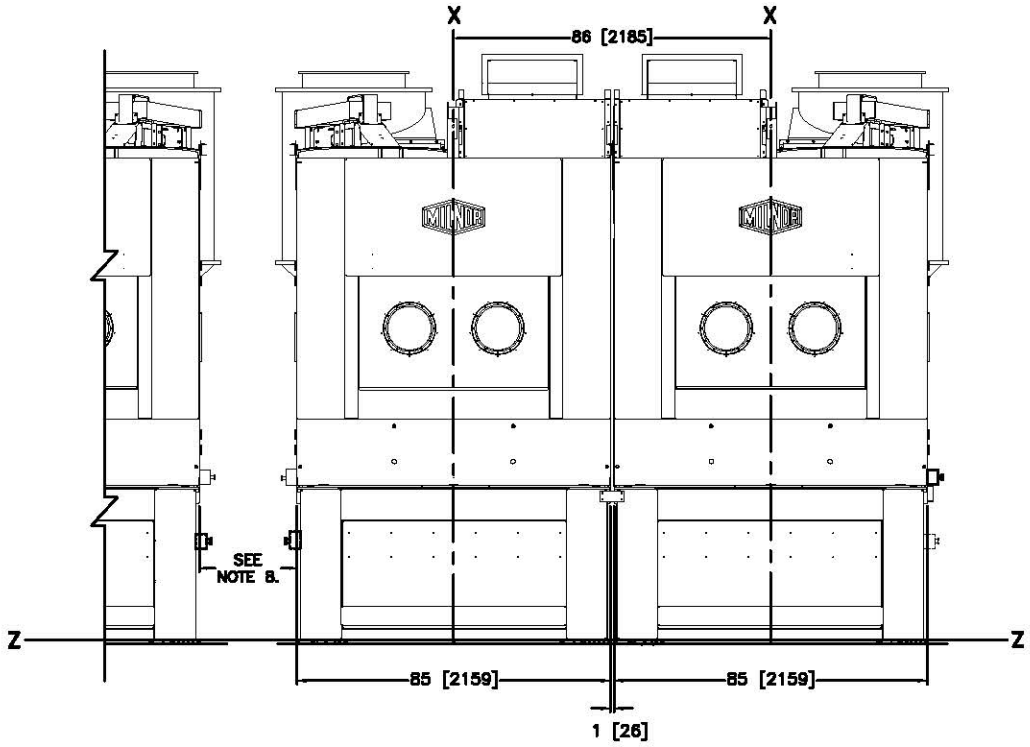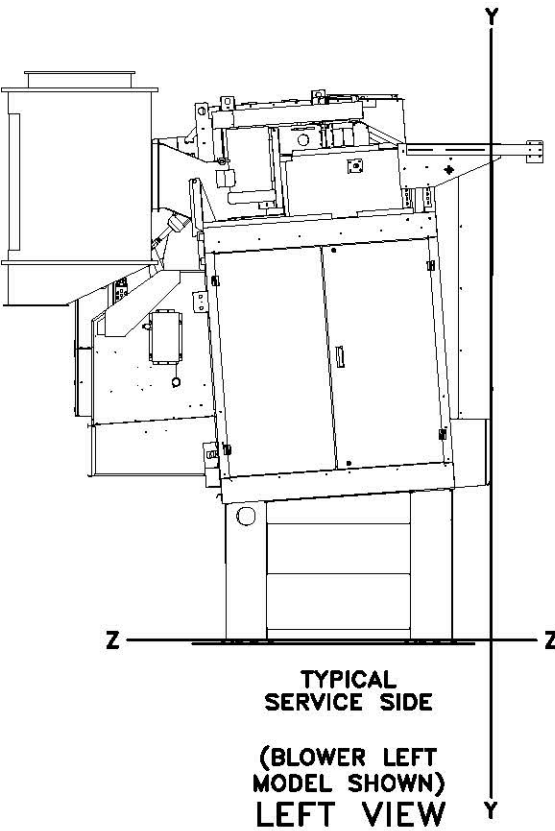

FRONT VIEW
MIRRORED INSTALLATION

- NOTES**
- A MINIMUM CLEARANCE OF 26 1/2 [674] IS REQUIRED FROM THE REMOVABLE ACCESS DOORS TO WALL. THIS DISTANCE IS REQUIRED TO OPEN THE DOORS 55 DEGREES TO BE LIFTED OFF THE HINGES. THE DOORS MAY BE FULLY OPENED REQUIRING 32 1/2 [826] OF CLEARANCE.
 - THIS DRAWING SHOWS 6464TG1/R DRYERS USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE, PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
30 [814] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASISLINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASISLINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASISLINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
- ATTENTION**
- MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.
- ATTENTION**
- THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

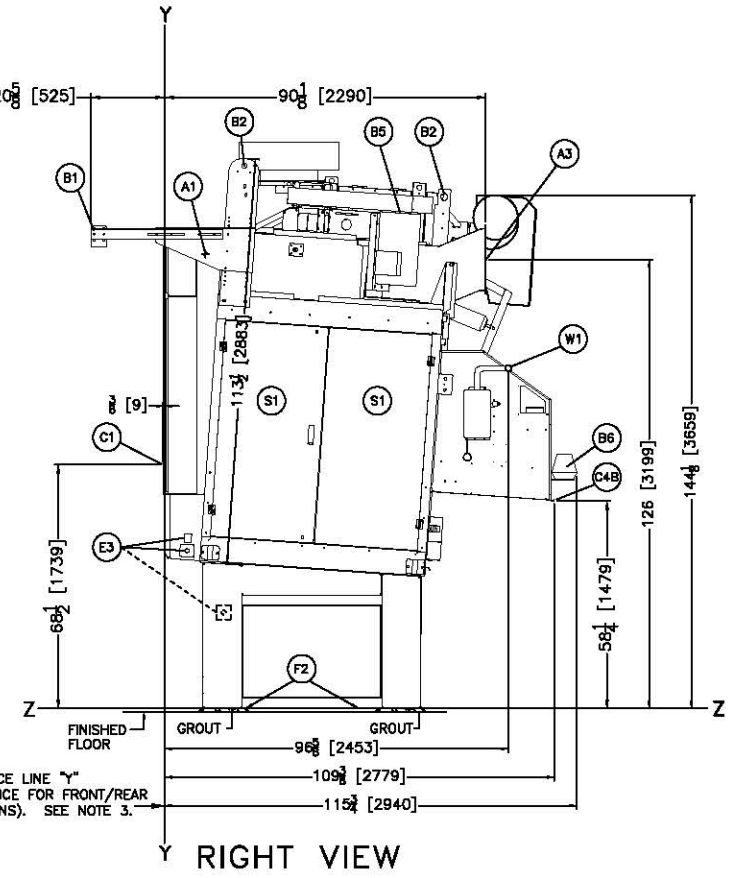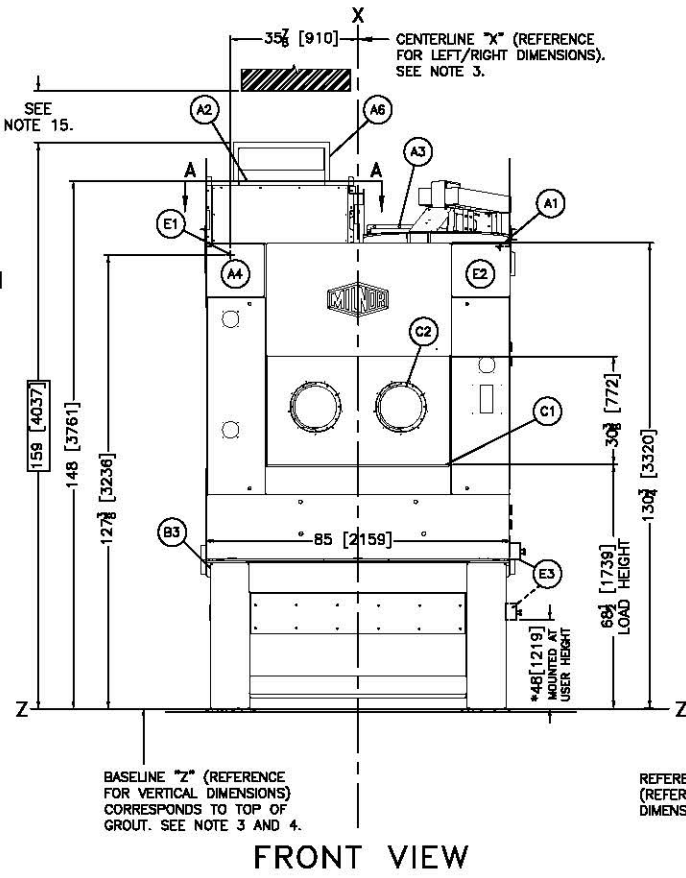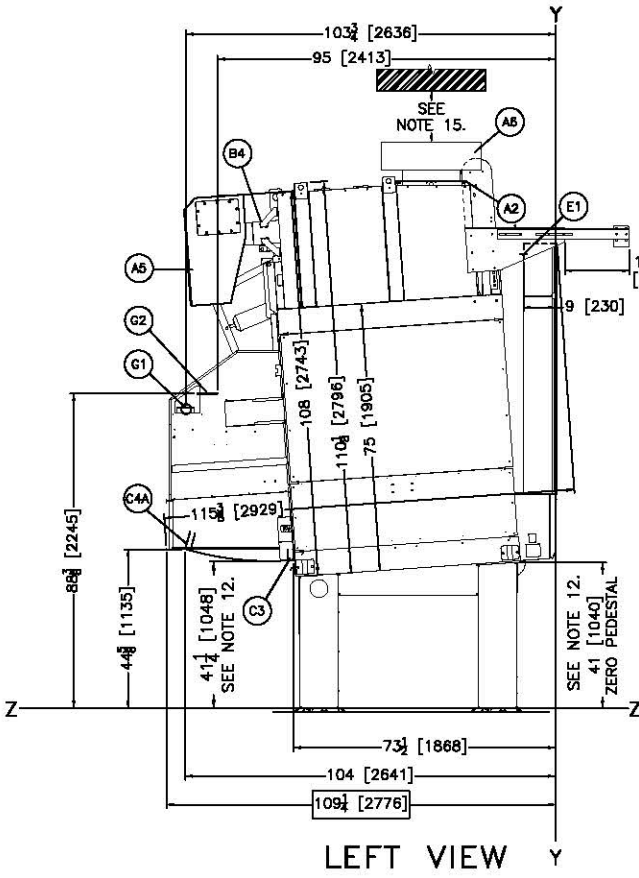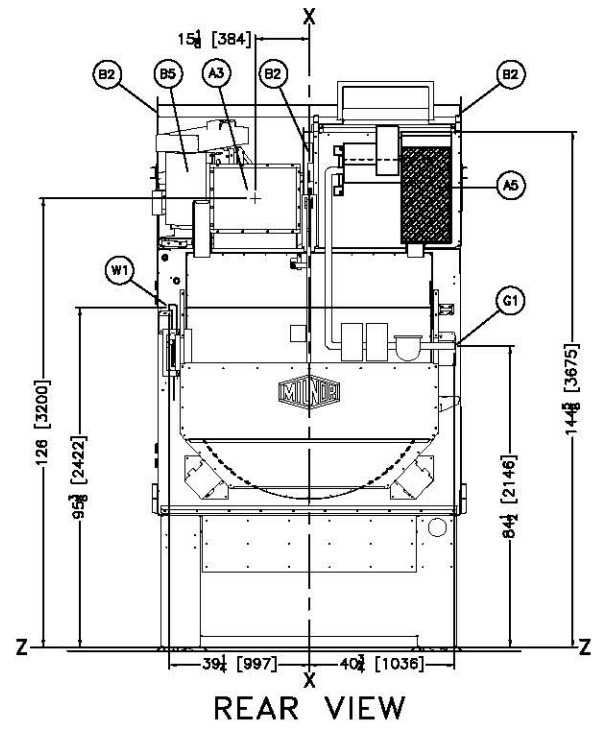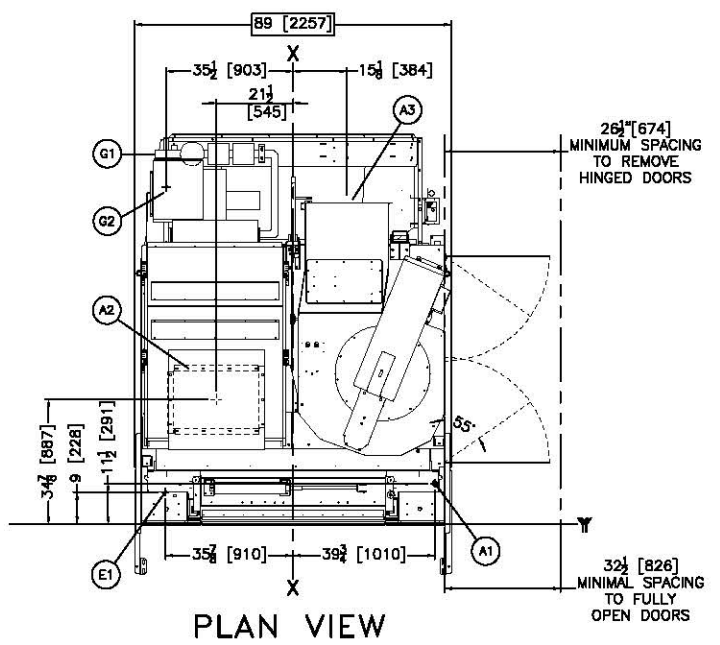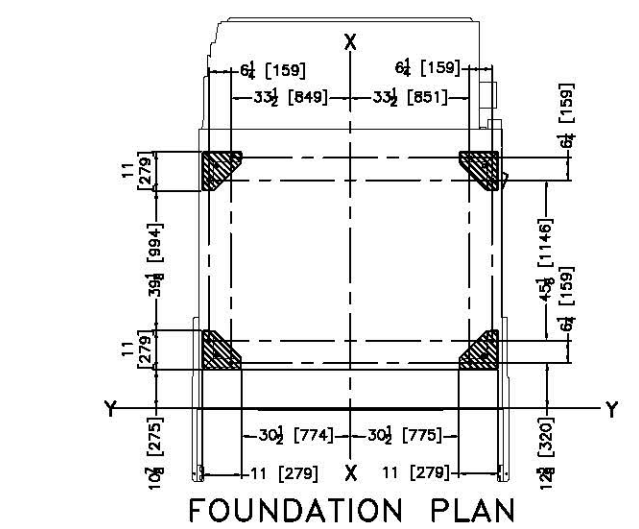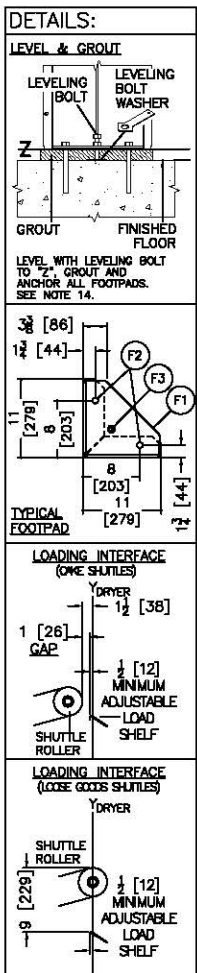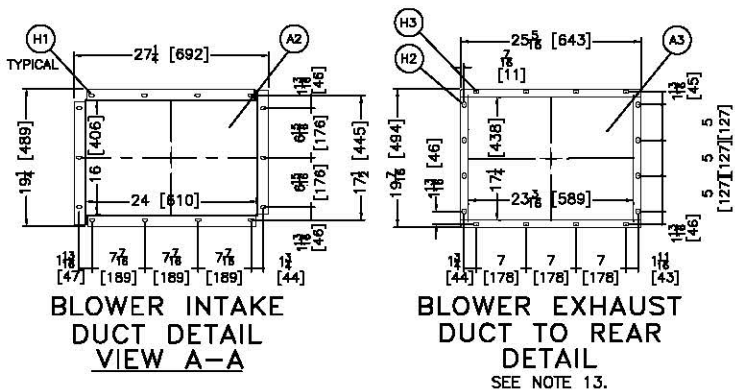

W1 SPRINKLER WATER INLET, 1-1/4" NPT
S1 REMOVABLE ACCESS DOORS
H3 .40" [10] DIA. X .75" [19] SLOTS, 8 PLACES
H2 .50" [13] DIA. X .75" [19] SLOTS, 8 PLACES
H1 .40" [10] DIA. X .75" [19] SLOTS, 14 PLACES

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

G2	GAS LINE VENT, 1/4" STAINLESS STEEL TUBING
G1	GAS INLET, 1-1/2" NPT CONNECTION
F3	LEVELING BOLT (5/8"-11 X 3") SUPPLIED.
F2	DRYER FOOT SUPPORT PLATES, SEE NOTE 14.
F1	ANCHOR BOLT HOLES, 13/16" [21] DIA., 8 PLACES
E3	EMERGENCY STOP & DOOR OPEN CONTROLS
E2	MICROPROCESSOR BOX
E1	MAIN ELECTRICAL CONNECTION
C4B	OPTIONAL SHORT SHROUD
C4A	STANDARD DISCHARGE SHROUD
C3	DISCHARGE DOOR
C2	LOAD DOOR, 52" WIDE
C1	LOAD HEIGHT, ADJUSTABLE LOAD SHELF
B6	OPTIONAL BEACON
B5	BLOWER MOTOR
B4	BURNER
B3	DRYER TO DRYER MOUNTING BRACKET
B2	SHIPPING BRACKET ONLY
B1	DRYER MOUNT FESTOON RAIL SUPPORT
A6	BLOWER AIR INTAKE TEE, REMOVE ONLY WHEN DUCTING THE INTAKE
A5	COMBUSTION AIR INTAKE BOX WITH FILTERS
A4	AIR VALVE BOX
A3	BLOWER EXHAUST TO REAR, STANDARD, SEE DETAIL.
A2	BLOWER INTAKE, SEE DETAIL
A1	COMPRESSED AIR, 1"NPT
ITEM	LEGEND

NOTES

16 FOR UTILITY REQUIREMENTS FOR GAS, STEAM, THERMAL OIL, AIR INTAKE, AND WATER SUPPLY, SEE DOCUMENT BIPD01/20180505 OR LATER.

15 IF THE BLOWER INTAKE IS NOT DUCTED THERE MUST BE 8 FEET [2438] OF UNOBSTRUCTED VERTICAL CLEARANCE BETWEEN THE INLET AND ANY OBJECT ABOVE IT.

14 DRYER FOOT SUPPORT PLATES ARE WELDED TO THE BOTTOM OF PEDESTAL LEGS TO ALLOW A GREATER GROUTING SURFACE BETWEEN PEDESTAL AND FINISHED FLOOR. USE LEVELING BOLTS TO LEVEL THE DRYER TO BASELINE "Z" (COINCIDES WITH BOTTOM OF LEGS). DRYER FEET MUST BE GROUTED & ANCHORED TO FLOOR.

13 EXHAUST DUCTING: DRYER OPERATES UP TO 8500 SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THIS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.

12 THIS DRAWING SHOWS THE 6464TG1R DRYER WITH A 41-1/2 [1055] DISCHARGE HEIGHT. WE CALL THE PEDESTAL BASE TO DO THIS A "ZERO PEDESTAL". "ZERO PEDESTAL" IS STANDARD HEIGHT FOR CONVEYOR DISCHARGE.

DRYERS MAY BE ORDERED WITH A PEDESTAL TO INCREASE OR DECREASE THE MACHINE HEIGHT IN (+/-) 3.5" [89] INCREMENTS. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR ANYTHING UNDER A ZERO PEDESTAL. RIGHT AND LEFT DRYERS CANNOT BE CONNECTED, AND YOU MUST ALLOW A MINIMUM 18" [458] FOR SERVICING BETWEEN DRYERS, SEE NOTE 10.

11 DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.

10 A MINIMUM CLEARANCE OF 26 1/2" [674] IS REQUIRED FROM THE REMOVABLE ACCESS DOORS TO WALL. THIS DISTANCE IS REQUIRED TO OPEN THE DOORS 55 DEGREES TO BE LIFTED OFF THE HINGES. THE DOORS MAY BE FULLY OPENED REQUIRING 32 1/2" [826] OF CLEARANCE.

9 DRYER IS DISASSEMBLED INTO TWO MAJOR COMPONENTS FOR SHIPPING, THE BASE AND THE FRAME. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT MACHINE THROUGH OPENING.

8 DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.

7 CONTROL PANEL FOR DRYER MAY BE INSTALLED IN ANY CONVENIENT LOCATION. CONTROL CABLE FROM DRYER TO PANEL IS SUPPLIED BY MILNOR AND PRICED SEPARATELY.

6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL
42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.

5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.

4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.

3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.

2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.

1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.


ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.


ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (VIBRATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.


ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

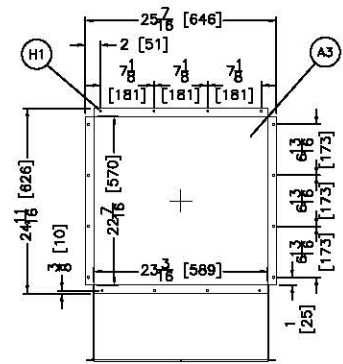


BLOWER EXHAUST
DUCT UP OPTION

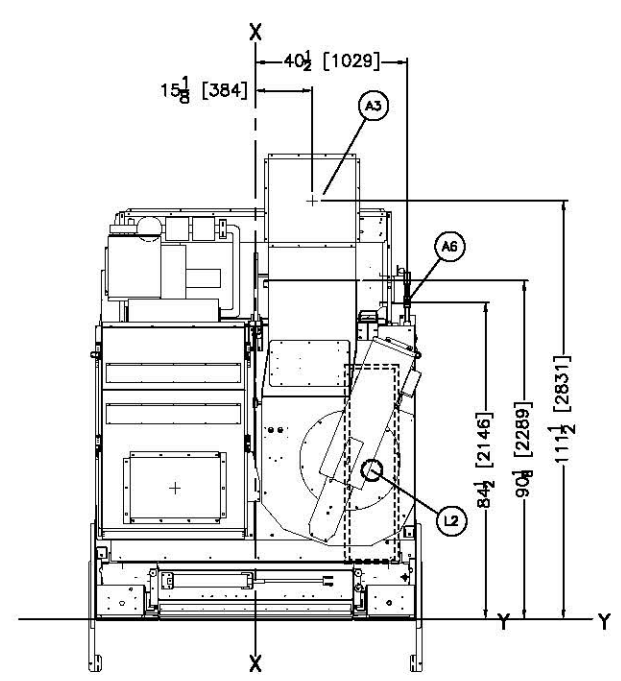


PLAN VIEW

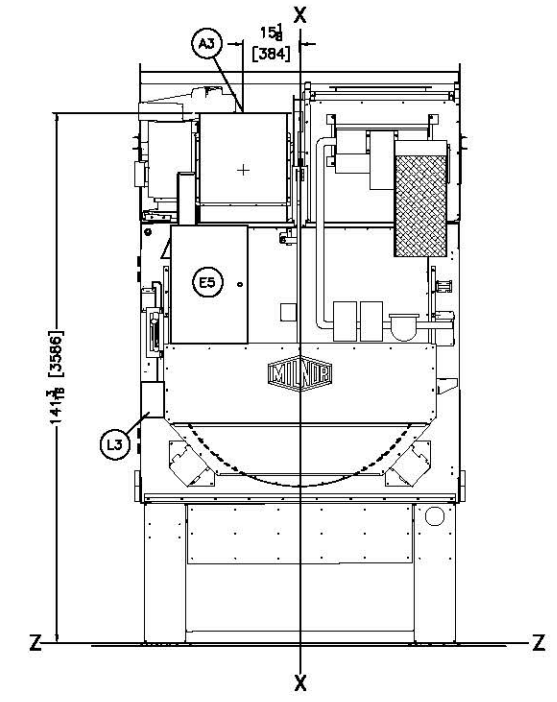


REAR VIEW

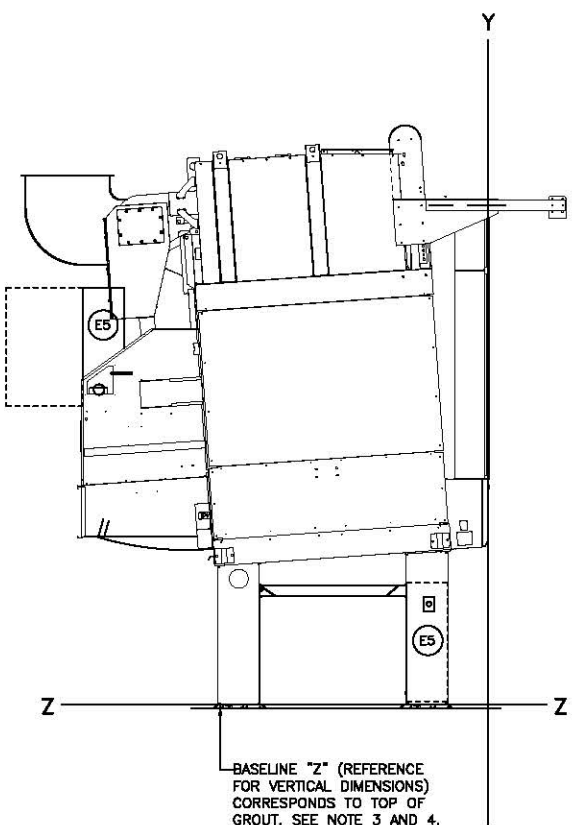

RIGHT VIEW

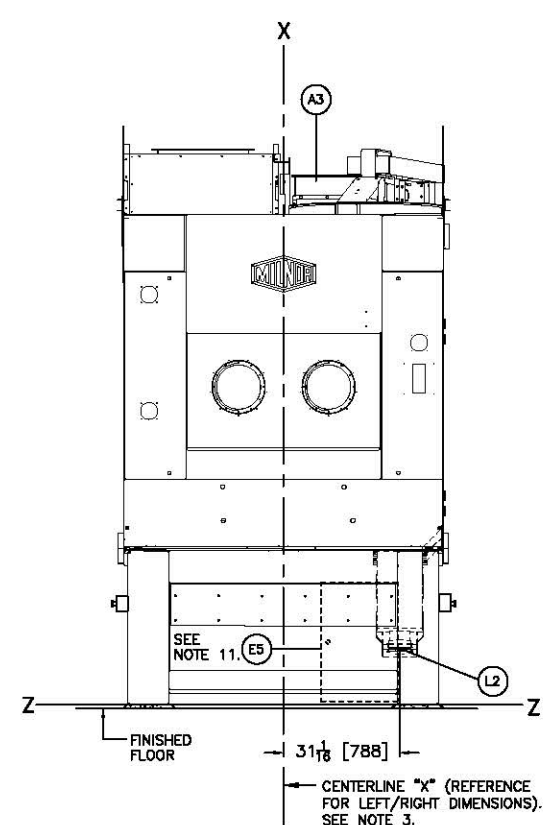

FRONT VIEW

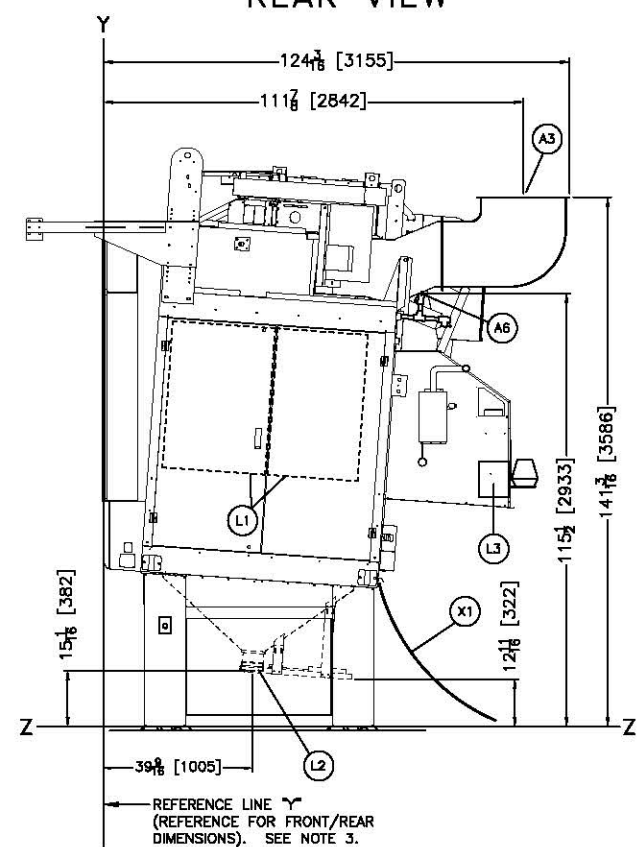

LEFT VIEW

X1	OPTIONAL UNLOAD BRIDGE, 48" PLASTIC SHEETING
L3	INTERNAL LINT SCREENS AIR VALVE BOX.
L2	LINT OUTLET (6" FLEX HOSE CONNECTION) FOR OPTIONAL INTERNAL LINT SCREEN. PIPES TO DRYVAC01, DRYVAC02 OR LINT COLLECTOR BY OTHERS. SEE NOTES 9 & 10 AND DRAWING BD6458DLCPBE FOR RECOMMENDED PIPING.
L1	OPTIONAL INTERNAL LINT SCREENS, BEHIND PANELS
H1	BOLT HOLES, 5/16" [7] DIA.
E5	OPTIONAL INVERTER BOX IS LOCATED AS SPECIFIED ON THE DISCHARGE SHROUD, PEDESTAL FRONT, OR FOR REMOTE MOUNTING. SEE NOTE 6.
A6	1" NPT AIR CONNECTION/OPTIONAL INTERNAL LINT SCREENS
A3	BLOWER EXHAUST DUCTING UP OPTION, SEE DETAIL.
ITEM	LEGEND

NOTES	
13	FOR UTILITY REQUIREMENTS FOR GAS, STEAM, THERMAL OIL, AIR INTAKE, AND WATER SUPPLY, SEE DOCUMENT BIPDUI01/20160605 OR LATER.
12	A WATER SEPARATOR (NOT SUPPLIED BY PMC) IS REQUIRED FOR THE INCOMING AIR TO THE INTERNAL LINT SYSTEM.
11	OPTIONAL INVERTER BOX MAY BE SPECIFIED FOR PEDESTAL MOUNT ON 48" [1219] (ZERO PEDESTAL PLUS 7" [178]) AND TALLER PEDESTALS ONLY.
10	OPTIONAL INTERNAL LINT SCREENS IS AVAILABLE FOR DRYERS WITH 41" [1041] AND TALLER PEDESTALS ONLY.
9	FOR OPTIONAL INTERNAL LINT FILTERS, IT IS RECOMMENDED TO HAVE A 60 GALLON COMPRESSED AIR BOOSTER TANK FOR EVERY 5 DRYERS.
8	EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
7	THIS DRAWING SHOWS THE 6464 DRYER USING A 41" [1041] PEDESTAL BASE WHICH IS EQUAL TO ZERO PEDESTAL STANDARD HEIGHT FOR CONVEYOR DISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.) 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
ATTENTION	
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.	
ATTENTION	
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.	








6464TG1R AH Options

BD6464TG1RABB
2022086D

PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/487-9591,
FAX 504/488-3094, Email: milnorinfo@milnor.com

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

THIS DRAWING IS FOR THE
RECIRCULATION DUCTING OPTION.
USE THIS DRAWING WITH
BD6464TG1L8BE.

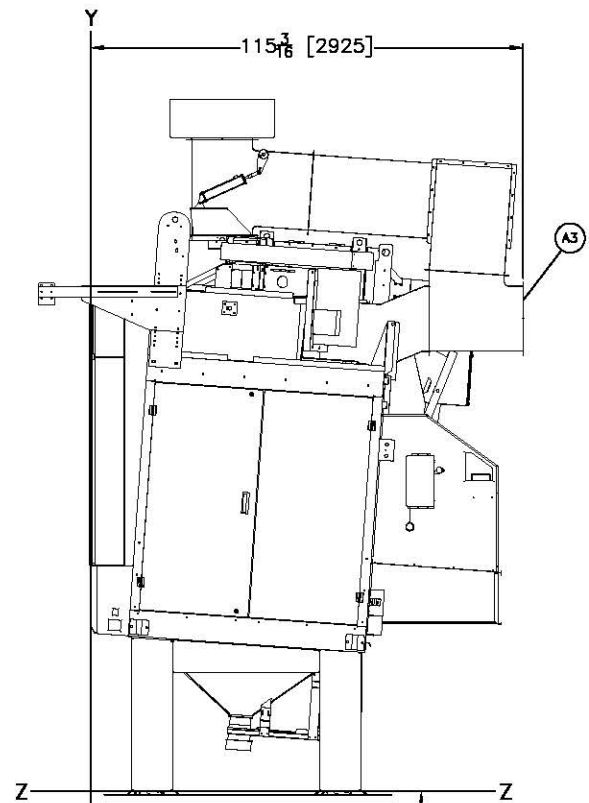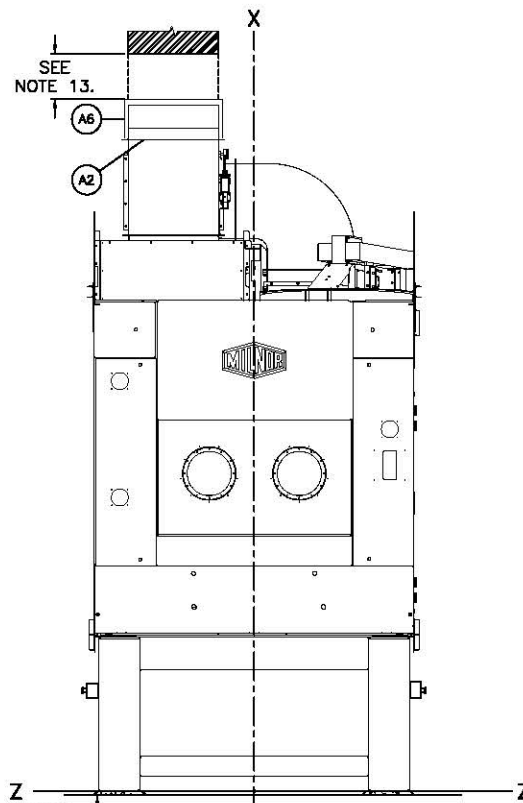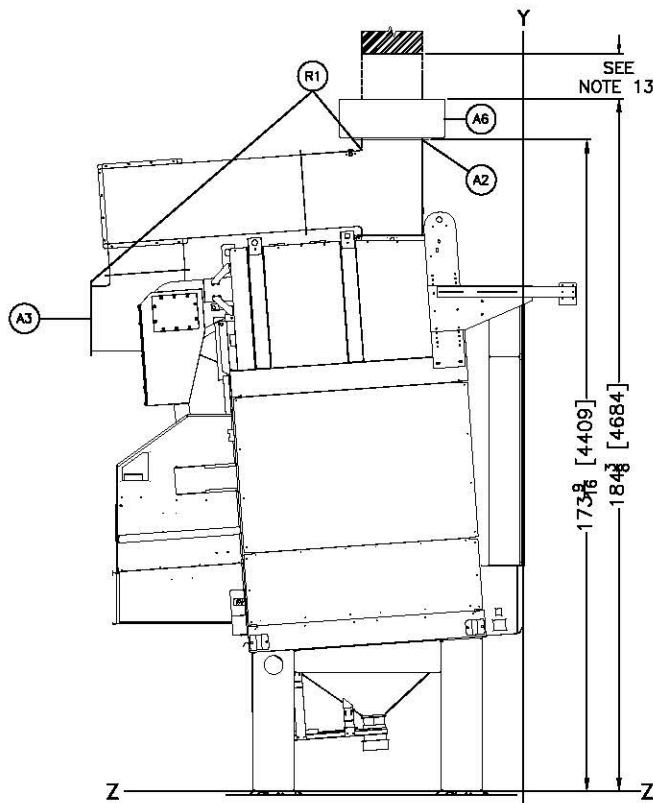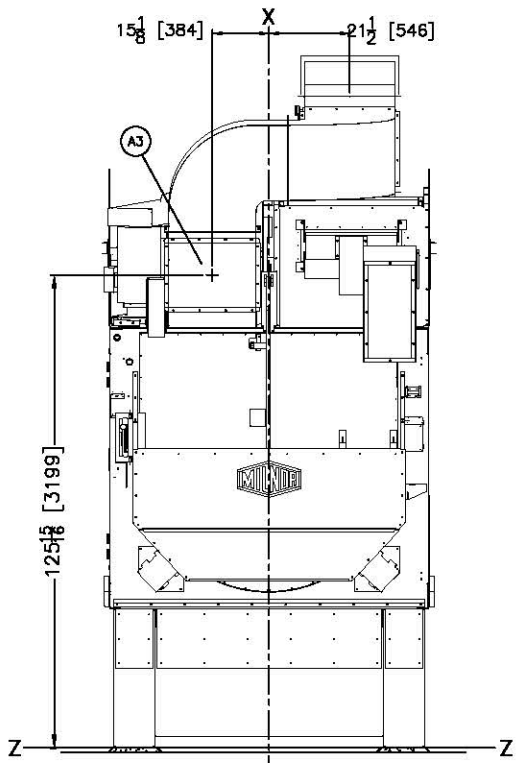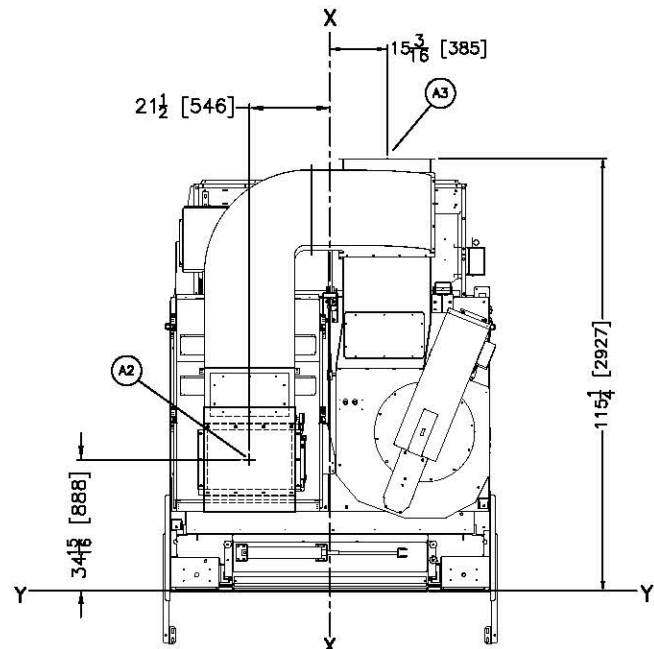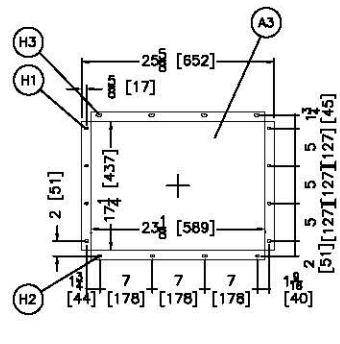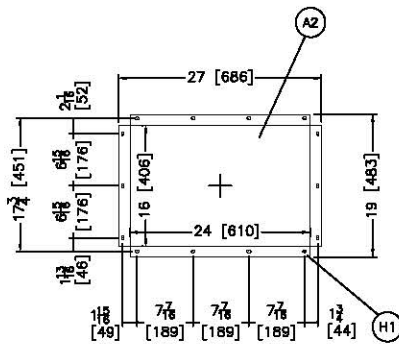

REFERENCE LINE "Y"
(REFERENCE FOR FRONT/REAR
DIMENSIONS). SEE NOTE 3.

CENTERLINE "X" (REFERENCE
FOR LEFT/RIGHT DIMENSIONS).
SEE NOTE 3.

BASELINE "Z" (REFERENCE
FOR VERTICAL DIMENSIONS)
CORRESPONDS TO TOP OF
GROUT. SEE NOTE 3 AND 4.


ITEM	LEGEND
R1	OPTIONAL RECIRCULATION DUCTING
H3	.30" [8] DIA. X .75" [19] SLOTS, 4 PLACES
H2	.30" [8] DIA. X .60" [15] SLOTS, 4 PLACES
H1	.30" [8] DIA. X .50" [13] SLOTS, 14 PLACES (A2), 4 PLACES (A3)
A6	BLOWER AIR INTAKE TEE, REMOVE ONLY WHEN DUCTING THE INTAKE
A3	RECIRCULATION DUCT BLOWER EXHAUST REAR, SEE DETAIL
A2	RECIRCULATION DUCT BLOWER INLET, SEE DETAIL

- NOTES**
- WHEN THE RECIRCULATION DUCT INLET IS NOT DUCTED, THERE MUST BE 8 FEET MINUS THE HEIGHT OF THE RECIRCULATION DUCT OF UNOBSTRUCTED VERTICAL CLEARANCE BETWEEN THE INLET AND ANY OBJECT ABOVE IT.
 - EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT, ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - MINIMUM CLEARANCE FOR MAINTENANCE = 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BOSHCLRBE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING. THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - THIS DRAWING SHOWS THE 6464TG1L DRYER USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.


ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.







6464TG1R AH with Recirculation



MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/487-9591,
FAX 504/488-3084, Email: milnorinfo@milnor.com

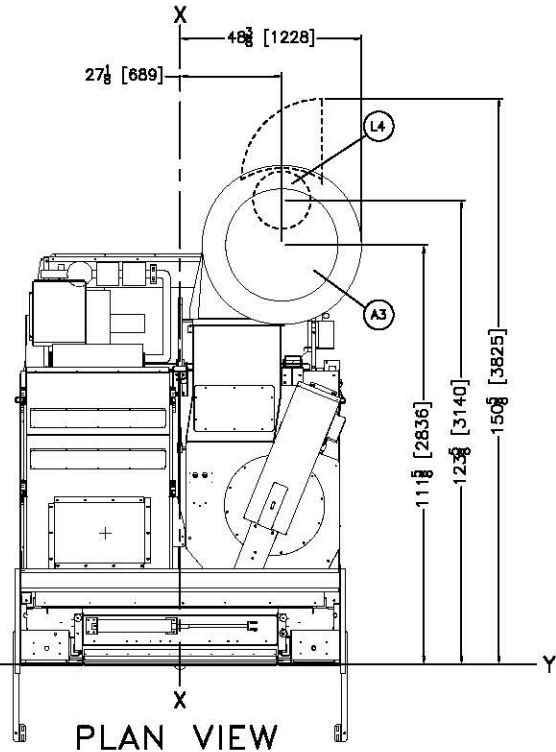

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.
SEE NOTE 7.

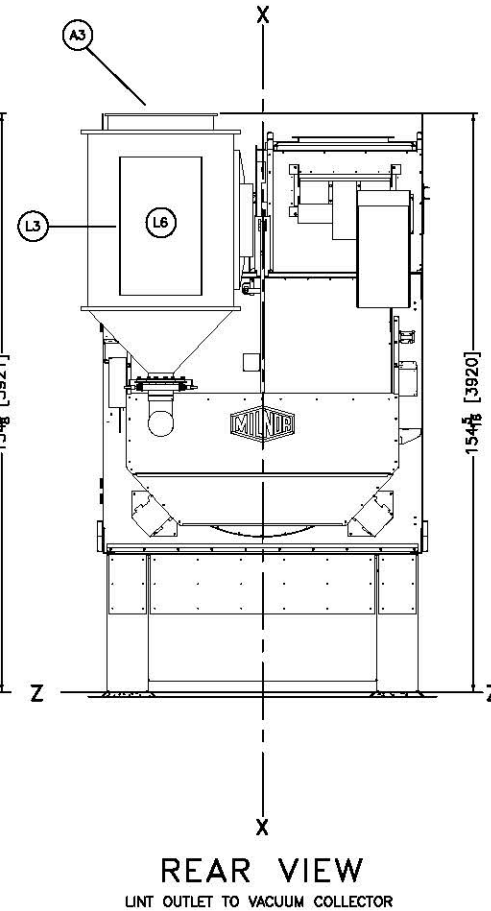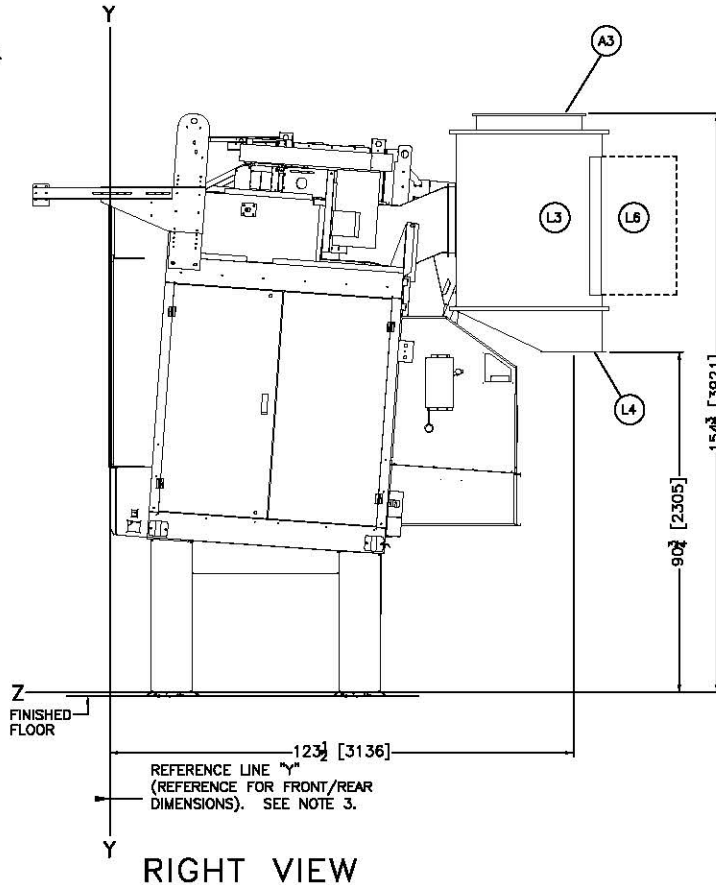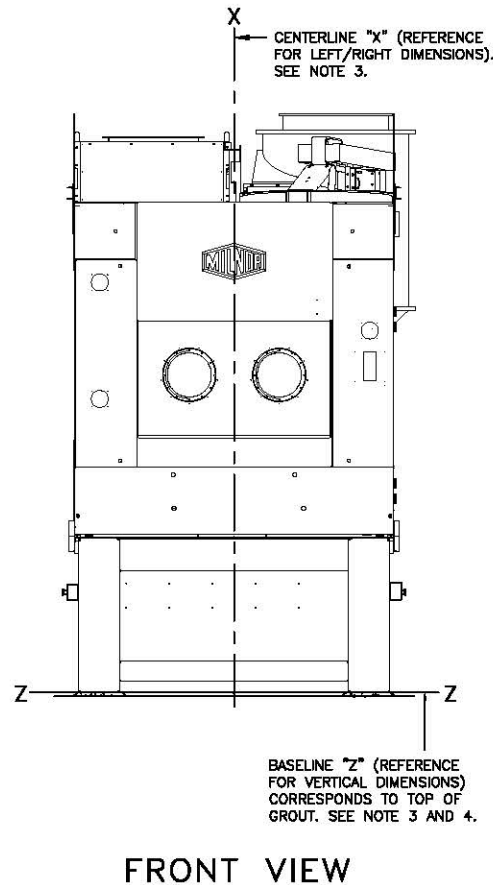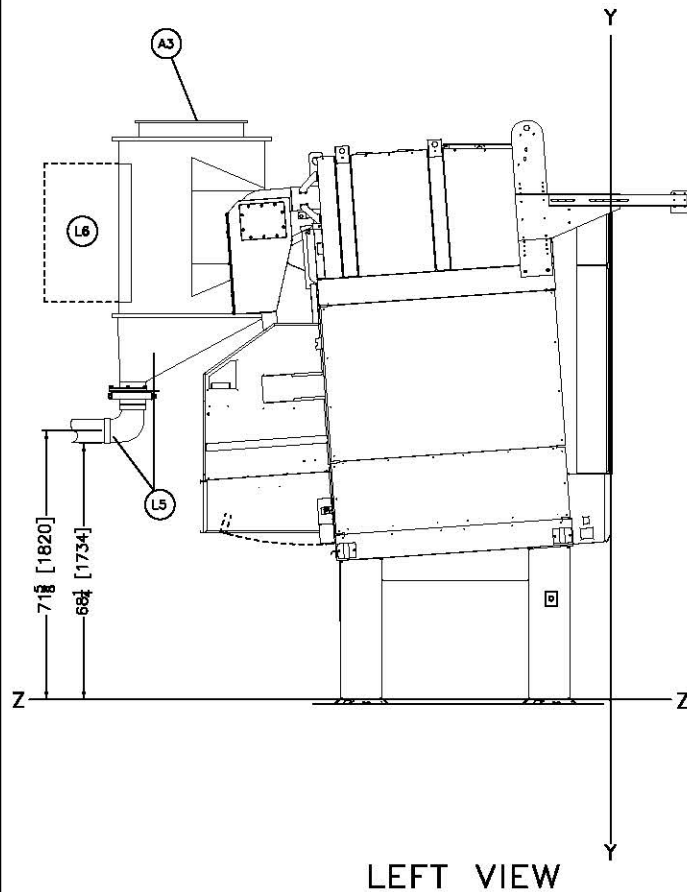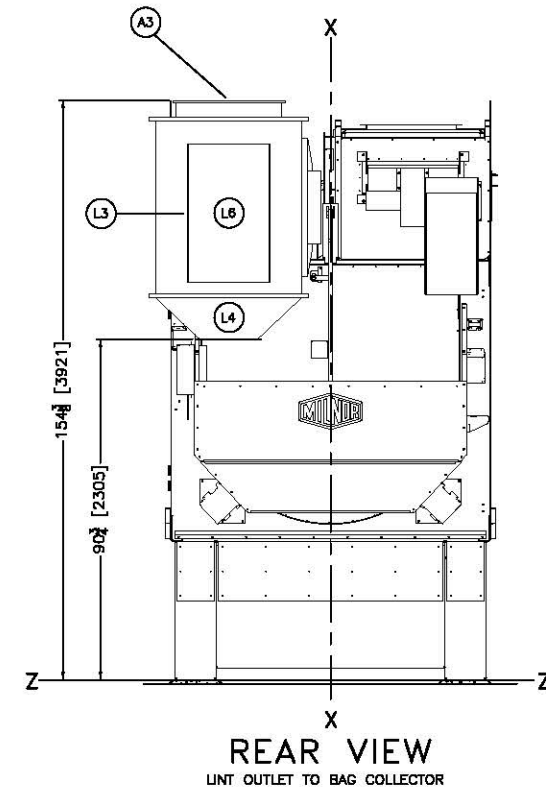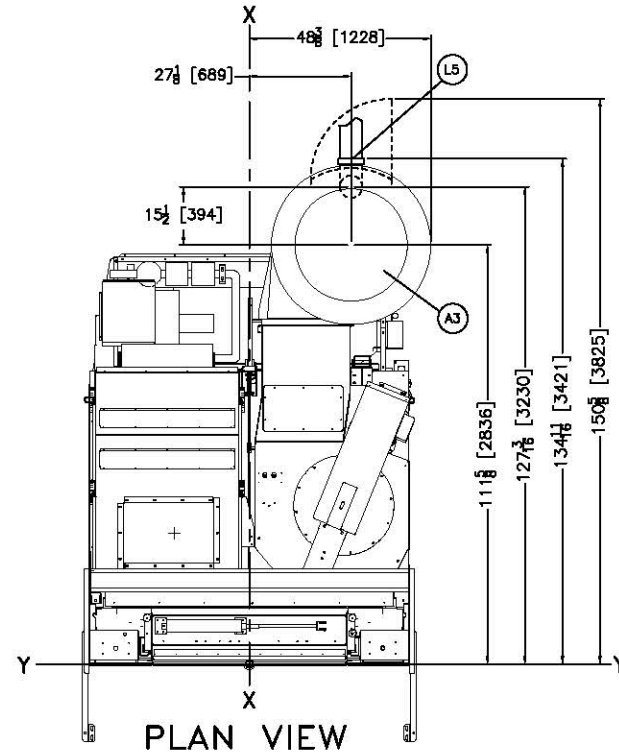


ITEM	LEGEND
L6	HINGED ACCESS DOOR
L5	CONE, LINT COLLECTION OUTLET TO VACUUM COLLECTOR DISCHARGE, 6" PIPE CONNECTION
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE 15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
A3	EXHAUST DUCT, 28" [711] DIAMETER

- NOTES**
- EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - MINIMUM CLEARANCE FOR MAINTENANCE - 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BOSHILUBE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - THIS DRAWING SHOWS THE 6464 DRYERS USING A 41T[1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE, PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASILINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASILINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASILINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASILINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASILINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASILINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.


ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1R AH & MLF1010










MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70083, USA, Phone 504/487-9591,
FAX 504/488-3094, Email: milnorinfo@milnor.com

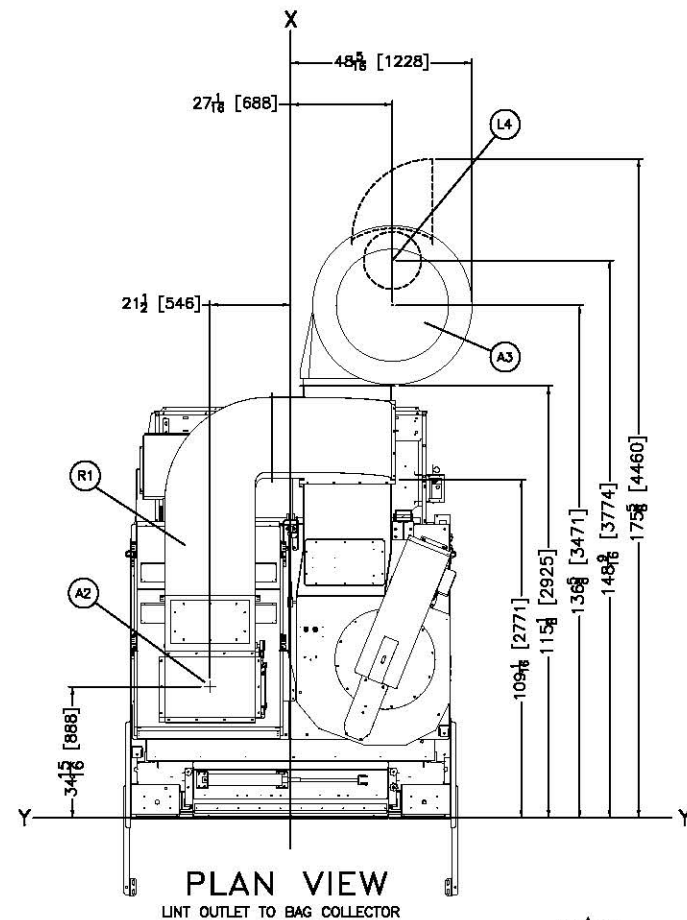

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.

THIS DRAWING IS FOR THE
RECIRCULATION DUCTING OPTION.
USE THIS DRAWING WITH
BD6464TG1LBE.

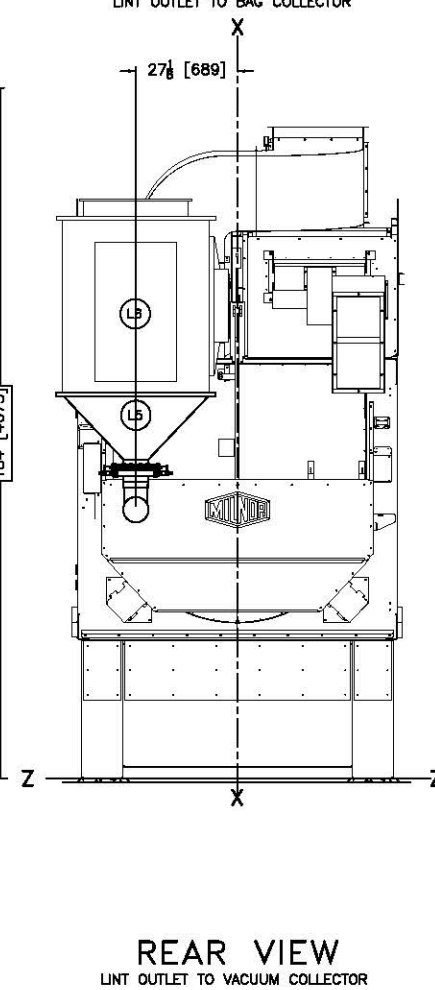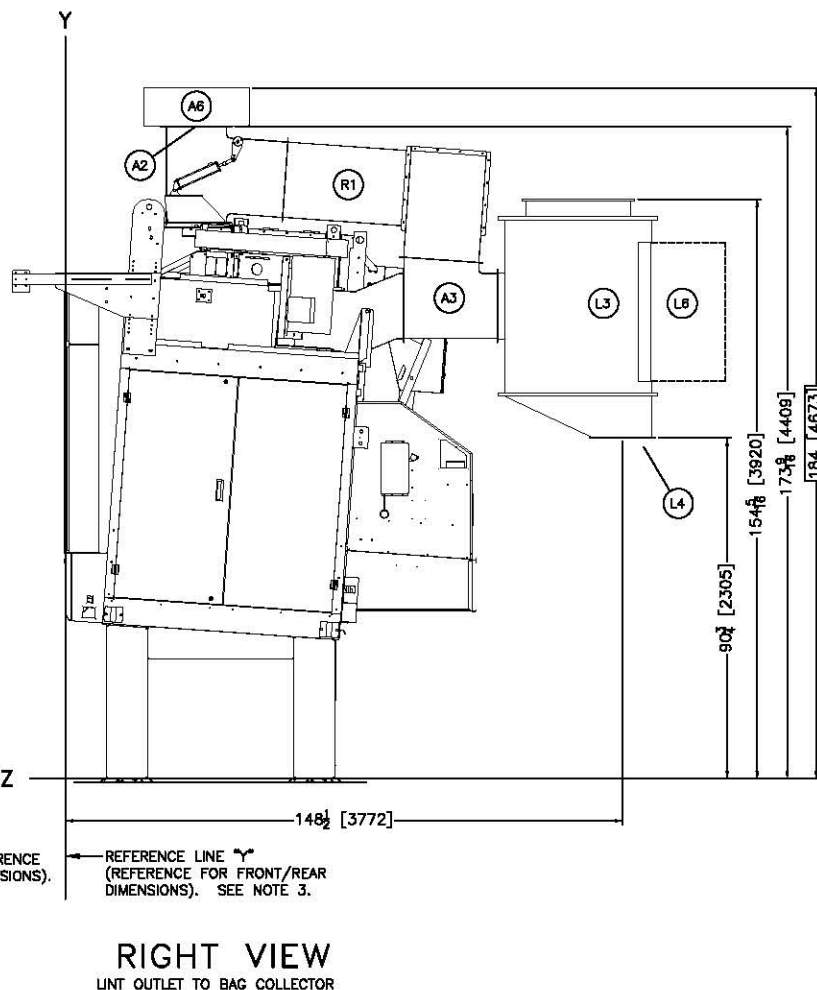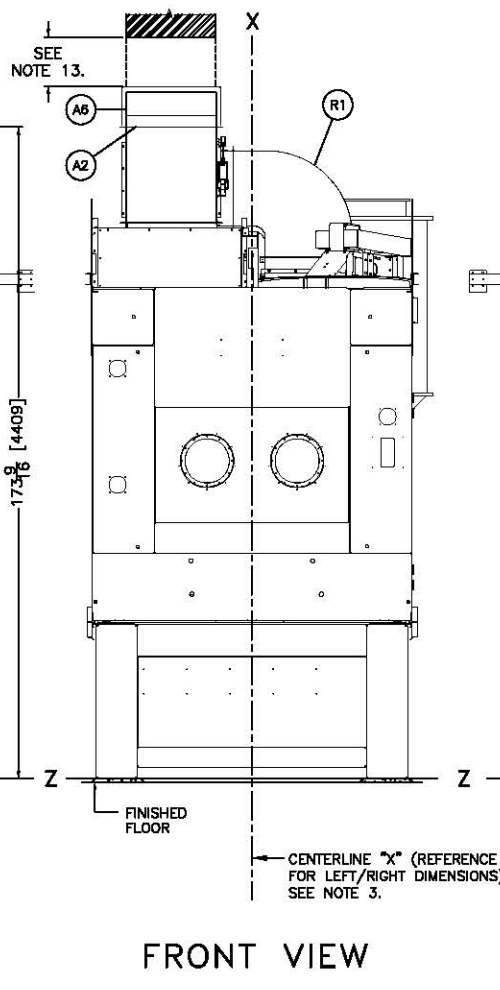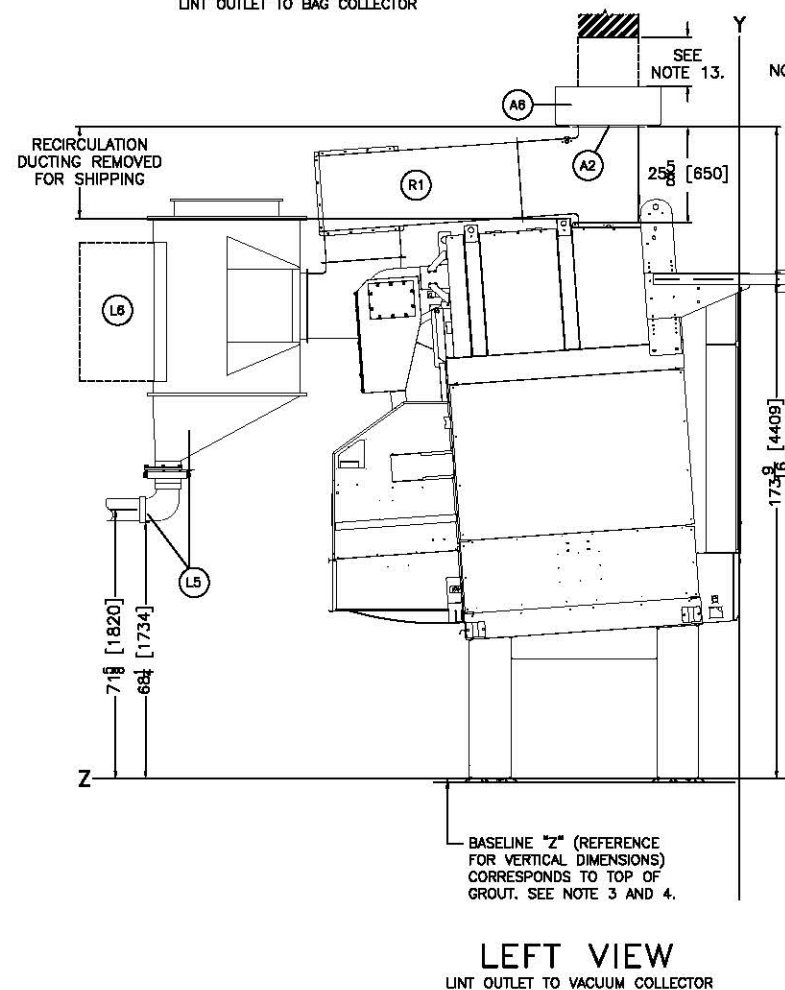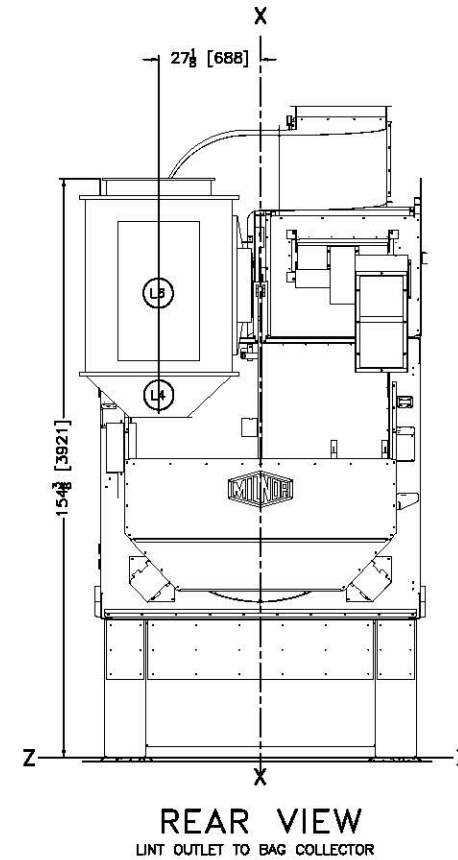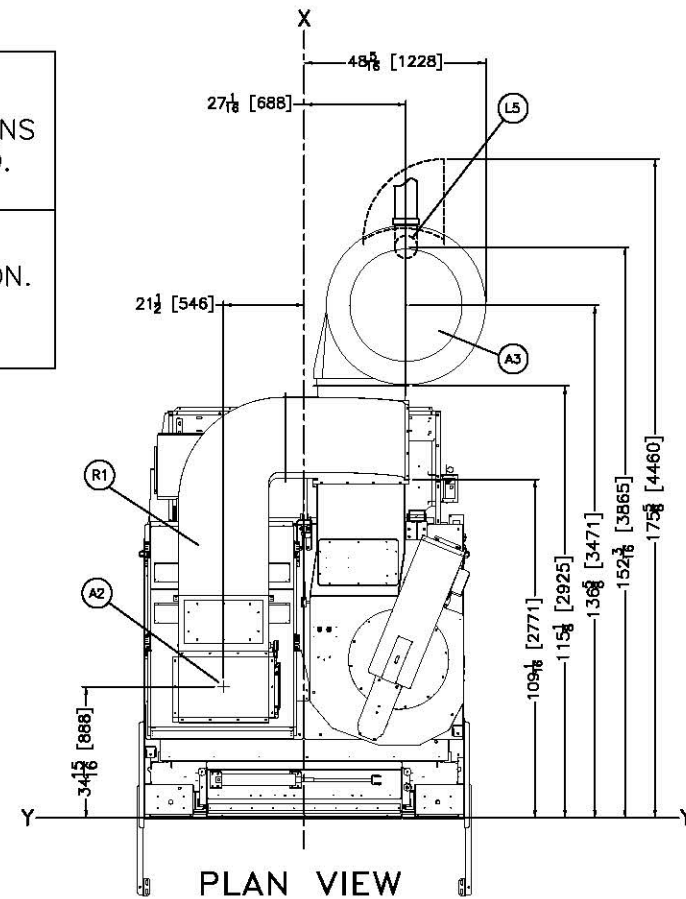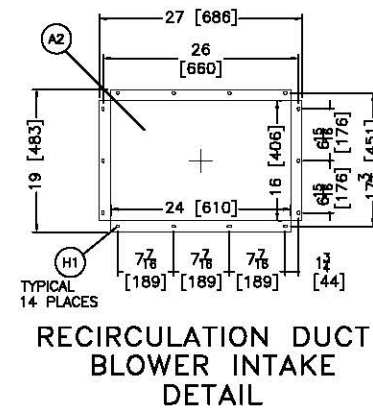

ITEM	LEGEND
R1	RECIRCULATION DUCT
L6	HINGED ACCESS DOOR
L5	CONE, LINT COLLECTION OUTLET TO VACUUM COLLECTOR DISCHARGE, 6" PIPE CONNECTION
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE 15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (SUPPORTED BY OTHERS)
H1	.30" [8] DIAMETER X .50" [13] SLOTS, 14 PLACES
A6	BLOWER AIR INTAKE TEE, REMOVE ONLY WHEN DUCTING THE INTAKE
A3	RECIRCULATION DUCT BLOWER EXHAUST, 28" [711] DIAMETER
A2	RECIRCULATION DUCT BLOWER INTAKE

- NOTES**
- WHEN THE RECIRCULATION DUCT INLET IS NOT DUCTED, THERE MUST BE 8 FEET MINUS THE HEIGHT OF THE RECIRCULATION DUCT OF UNOBSTRUCTED VERTICAL CLEARANCE BETWEEN THE INLET AND ANY OBJECT ABOVE IT.
 - EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THIS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - MINIMUM CLEARANCE FOR MAINTENANCE = 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, B08TCL006, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING. THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - THIS DRAWING SHOWS THE 64064TG1L DRYER USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR REDISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-FILE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.


ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION


THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

THIS DRAWING IS FOR THE
FRONT VERTICAL EXHAUST OPTION.
USE THIS DRAWING WITH
BD6464TG1LBE.

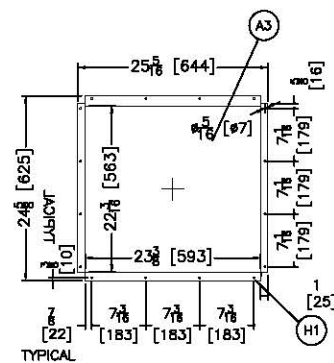


BLOWER EXHAUST
DUCT DETAIL
SEE NOTE 13.


SEE NOTE 13.

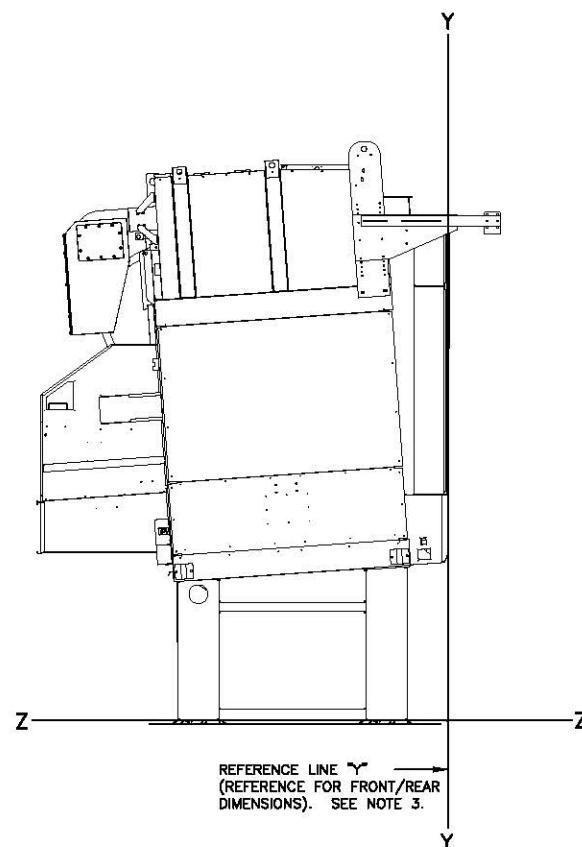


LEFT VIEW

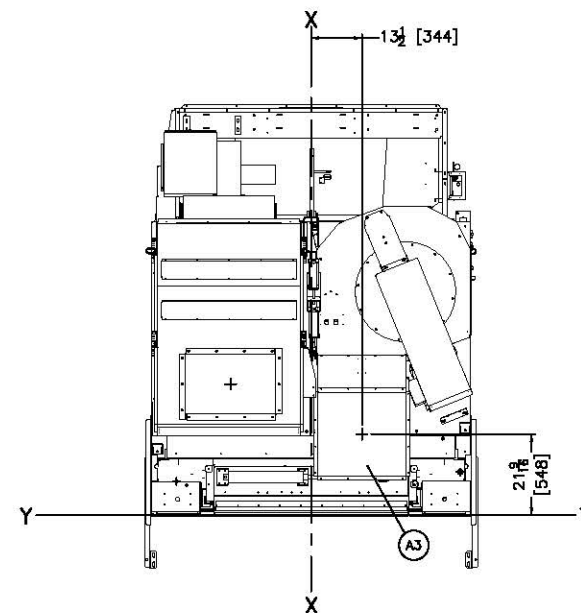


PLAN VIEW

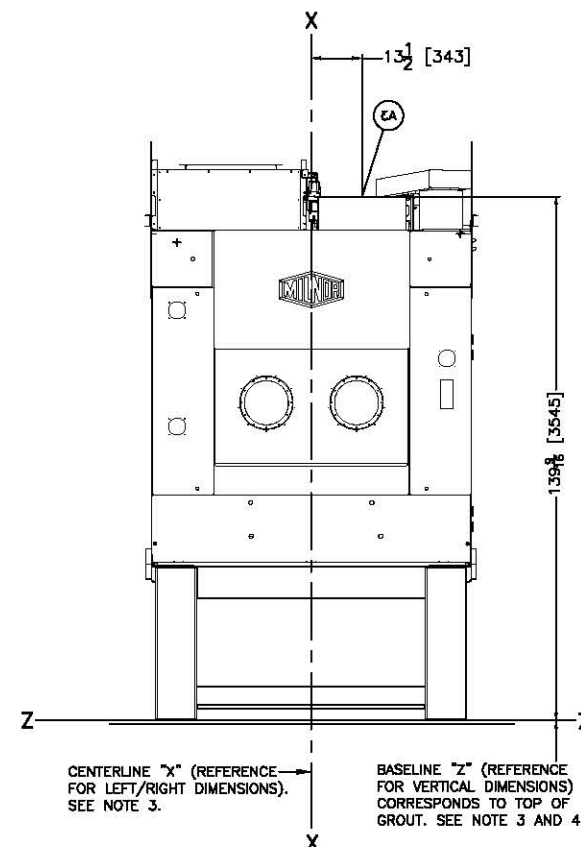

FRONT VIEW

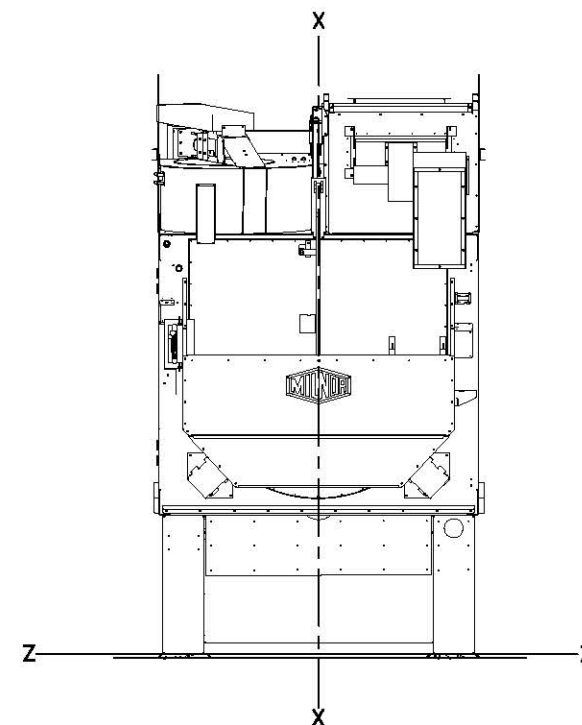

REAR VIEW

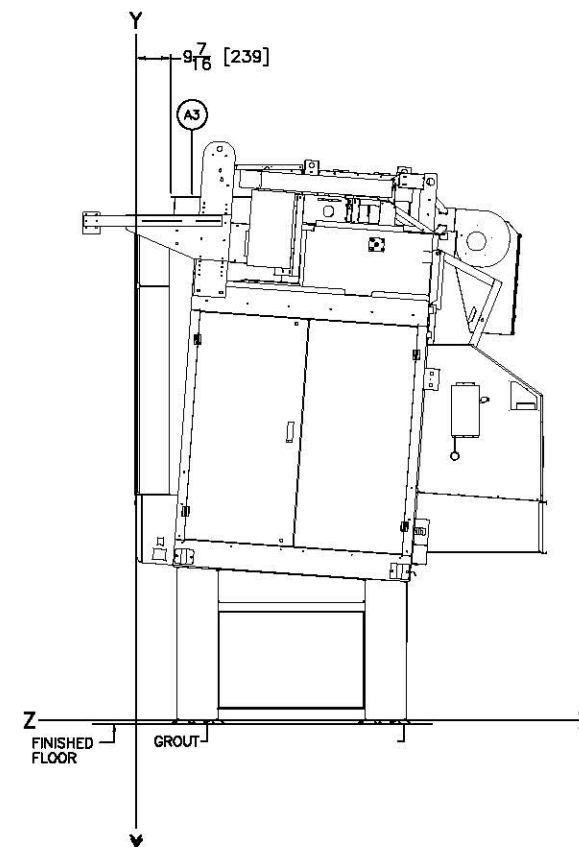

RIGHT VIEW

H1	.25"[7] DIA., 16 PLACES
A3	BLOWER EXHAUST UP FRONT OPTION, SEE DETAIL.
ITEM	LEGEND

NOTES

- | | |
|----|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 13 | <p>EXHAUST DUCTING DRYER OPERATES UP TO 8500 SFPM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 1/4" THICK GALVANIZED SHEET STEEL IS REQUIRED. HAMMER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS MUST WILL REQUIRE DOUBLING THE GAUGE.</p> |
| 12 | <p>THIS DRAWING SHOWS THE GA464701L DRYER WITH A 41-1/2"[1055] DISCHARGE HEIGHT. WE CALL THE PEDESTAL BASE TO DO THIS A "ZERO PEDESTAL". "ZERO PEDESTAL" IS STANDARD HEIGHT FOR CONVEYOR DISCHARGE.</p> <p>DRYERS MAY BE ORDERED WITH A PEDESTAL TO INCREASE OR DECREASE THE MACHINE HEIGHT IN (+/-)3.5"[88] INCREMENTS. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL. FOR ANYTHING UNDER A ZERO PEDESTAL, RIGHT AND LEFT DRYERS CANNOT BE CONNECTED, AND YOU MUST ALLOW A MINIMUM 18"[458] FOR SERVICING BETWEEN DRYERS, SEE NOTE 10.</p> |
| 11 | DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT. |
| 10 | <p>A MINIMUM CLEARANCE OF 26 1/2"[674] IS REQUIRED FROM THE REMOVABLE ACCESS DOORS TO WALL. THIS DISTANCE IS REQUIRED TO OPEN THE DOORS 55 DEGREES TO BE LIFTED OFF THE HINGES. THE DOORS MAY BE FULLY OPENED REQUIRING 32 1/2"[828] CLEARANCE.</p> |
| 9 | DRYER IS DISASSEMBLED INTO TWO MAJOR COMPONENTS FOR SHIPPING, THE BASE AND THE FRAME. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT MACHINE THROUGH OPENING. |
| 8 | DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED. |
| 7 | CONTROL PANEL FOR DRYER MAY BE INSTALLED IN ANY CONVENIENT LOCATION. CONTROL CABLE FROM DRYER TO PANEL IS SUPPLIED BY MILNOR AND PRICED SEPARATELY. |
| 6 | <p>AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:</p> <p>36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL</p> <p>42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.)</p> <p>48 [1219] IF OBJECT IS ANY LIVE PART.</p> <p>CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.</p> |
| 5 | CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT SWITCHES WITH TWO TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT. |
| 4 | <p>"BASELINE Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS, ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ADJUSTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.</p> |
| 3 | USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS. |
| 2 | NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS. |
| 1 | <p>ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED AS SUCH. IN NO EVENT PRE-PRIE CLOSER THAN FIVE FEET FROM MACHINE, FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.</p> |

ATTENTION


ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.




6464TG1R AH Up/Front Exhaust



DWD
BD6464TG1RABH
2018111D








PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70083, USA, Phone 504/487-8591,
FAX 504/488-7004. E-mail: mail@pellin.com

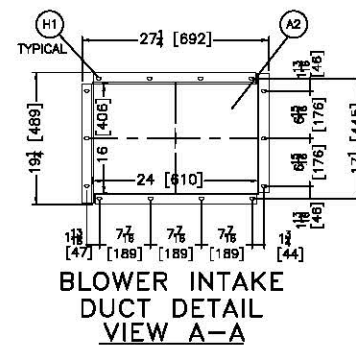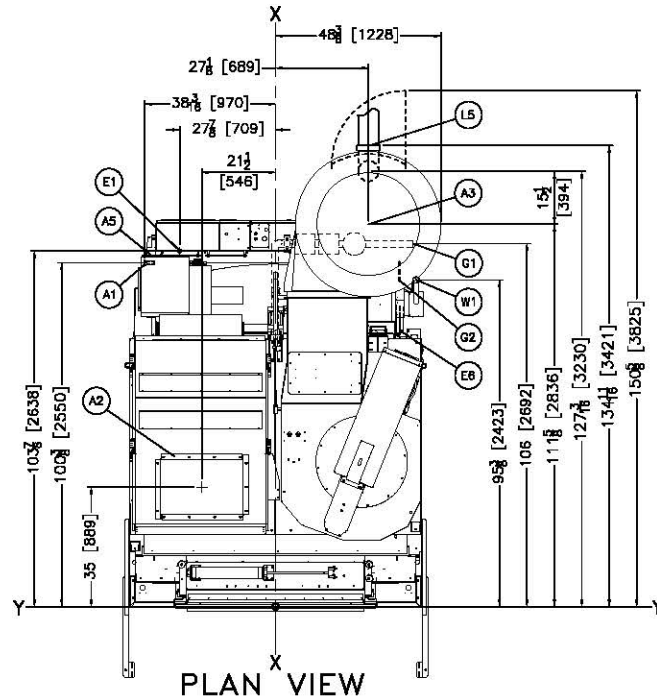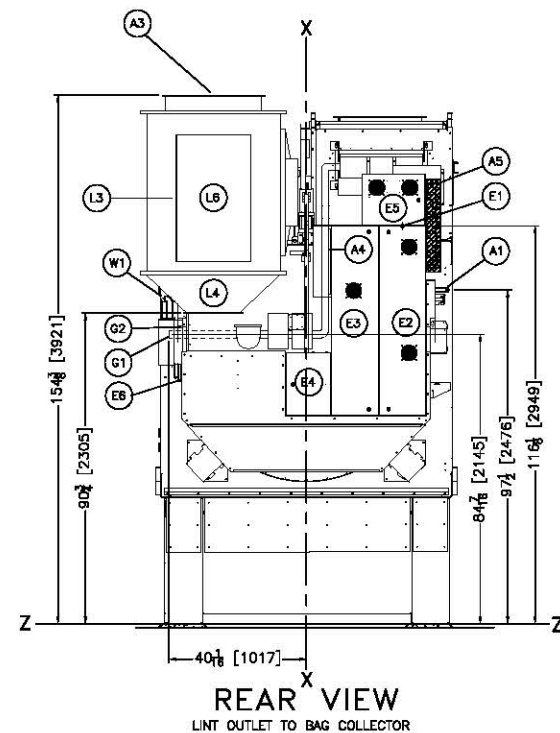

ZERO PEDESTAL SHOWN.
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.
SEE NOTE 7.

THIS DRAWING IS FOR 6464TG1R
AIR HEAT WITH
REAR CONTROLS & MLF1010.
IT SHOWS CONNECTIONS THAT
DIFFER FROM FRONT CONTROL
MODEL.

THIS DRAWING IS TO BE USED WITH
BD6464TG1RABE FOR ADDITIONAL
NOTES AND DIMENSIONS THAT
APPLY TO ALL 6464TG1L MODEL.

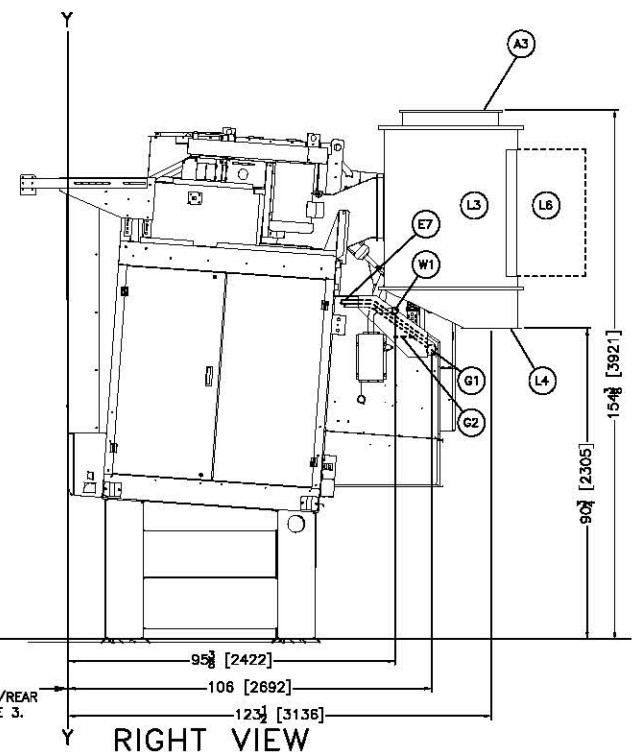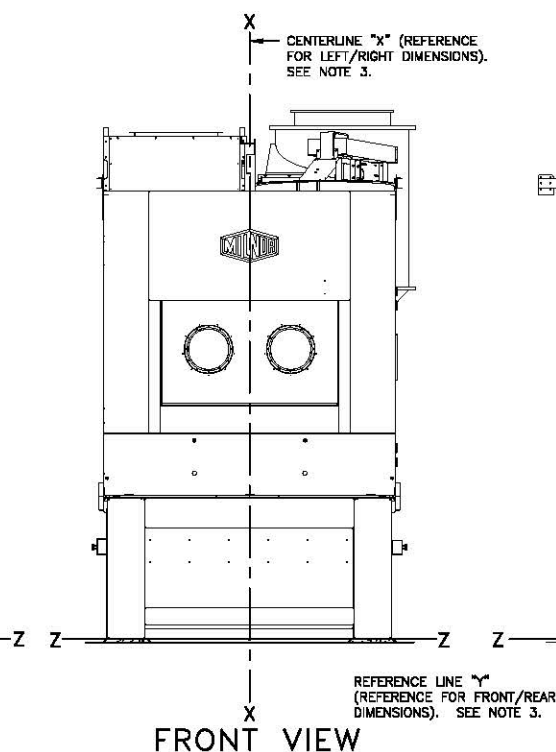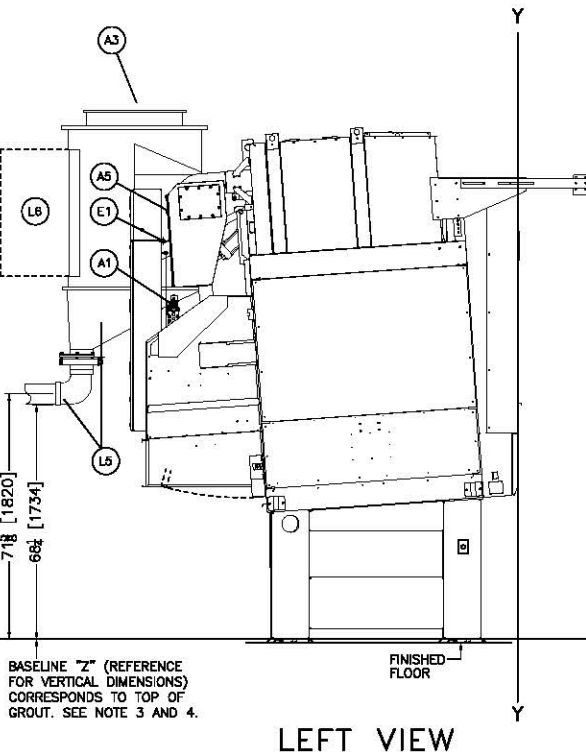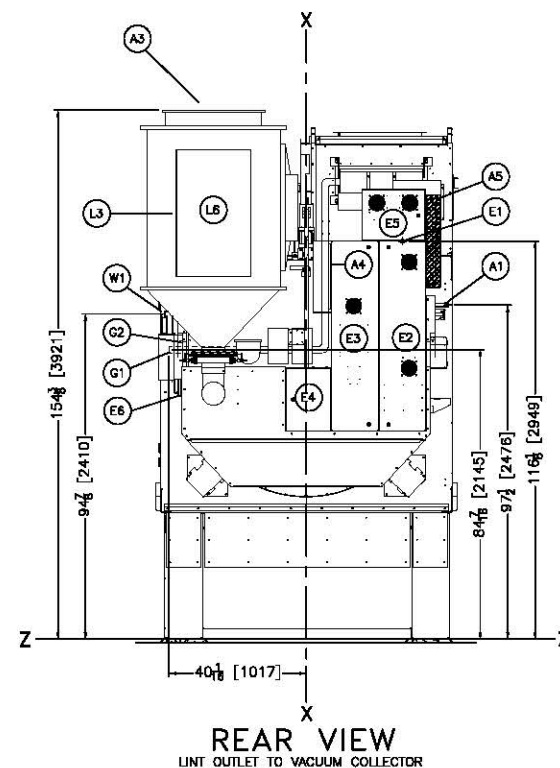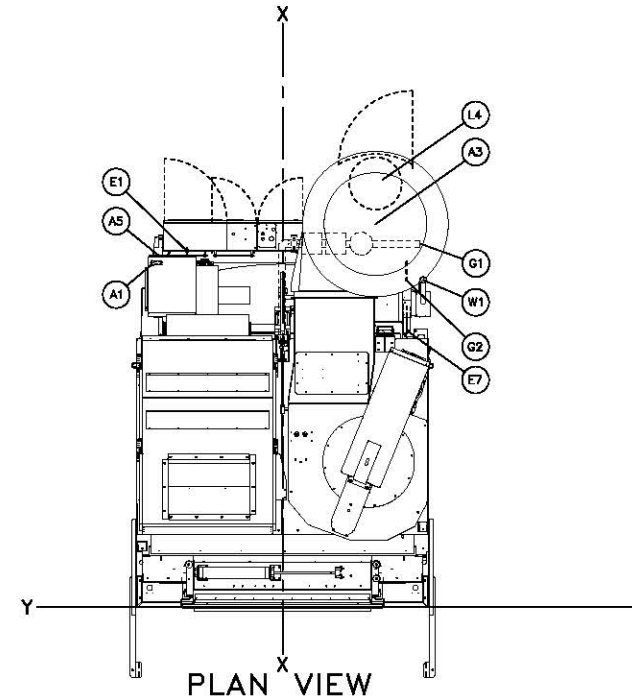

W1	SPRINKLER WATER INLET, 1-1/4" NPT
H1	.40" [10] DIA. X .75" [19] SLOTS, 14 PLACES
G2	GAS LINE VENT, 1/4" STAINLESS STEEL TUBING
G1	GAS INLET, 1-1/2" NPT CONNECTION
E7	CABLING FOR MANUAL CONTROLS AND OPTIONAL REMOTE MOUNTED BLOWER INVERTER (IF SPECIFIED) EXITS HERE.
E6	OPTIONAL BLOWER INVERTER BOX
E5	AIR VALVE BOX
E4	MICROPROCESSOR BOX
E3	LOW VOLTAGE BOX
E2	HIGH VOLTAGE BOX
E1	MAIN ELECTRICAL CONNECTION
A5	COMBUSTION AIR INTAKE BOX WITH FILTERS
A4	AIR VALVE BOX
A1	COMPRESSED AIR, 1" NPT
L5	CONE, LINT COLLECTION OUTLET TO VACUUM COLLECTOR DISCHARGE, 6" PIPE CONNECTION
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE 15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
A3	MLF1010 EXHAUST DUCT, 28" [711] DIAMETER
A2	BLOWER INTAKE, SEE DETAIL
A1	COMPRESSED AIR, 1" NPT

ITEM	LEGEND
------	--------

NOTES

12 EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL SPIRAL DUCT WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.

11 DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.

10 MINIMUM CLEARANCE FOR MAINTENANCE - 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, B05HTC1RBE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.

9 DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.

8 DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.

7 THIS DRAWING SHOWS THE 6464L DRYERS USING A 41" [1041] PEDESTAL BASE, WHICH IS EQUAL TO ZERO PEDESTAL. STANDARD HEIGHT FOR CONVEYOR DISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.

6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.

5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.

4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.

3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.


2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.

1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.



ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

6464TG1R AH REAR CONTROLS & MLF1010






MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kerner, LA 70083, USA, Phone 504/487-8591,
FAX 504/488-3084, Email: milnorinfo@milnor.com

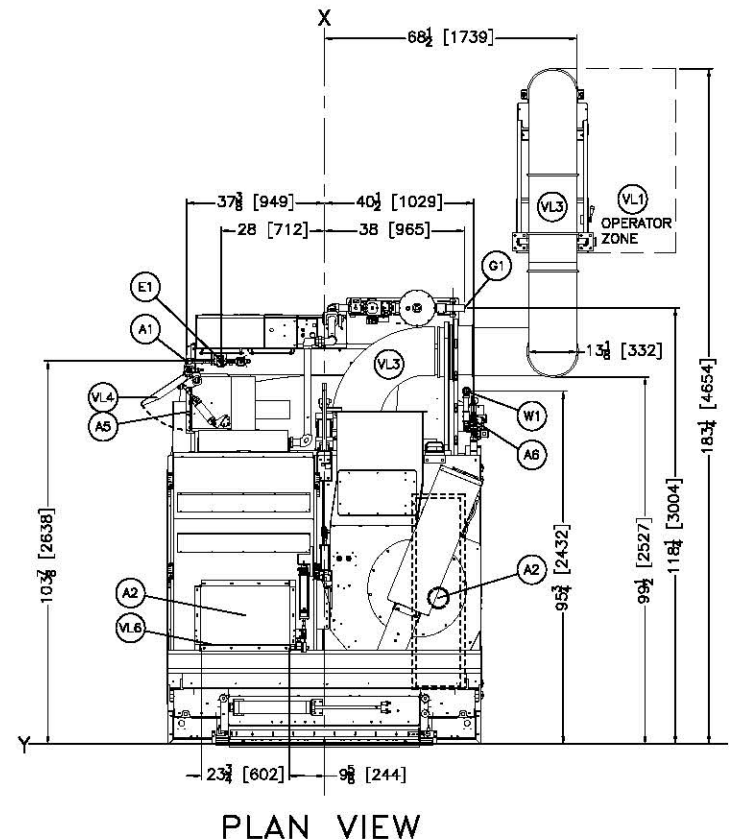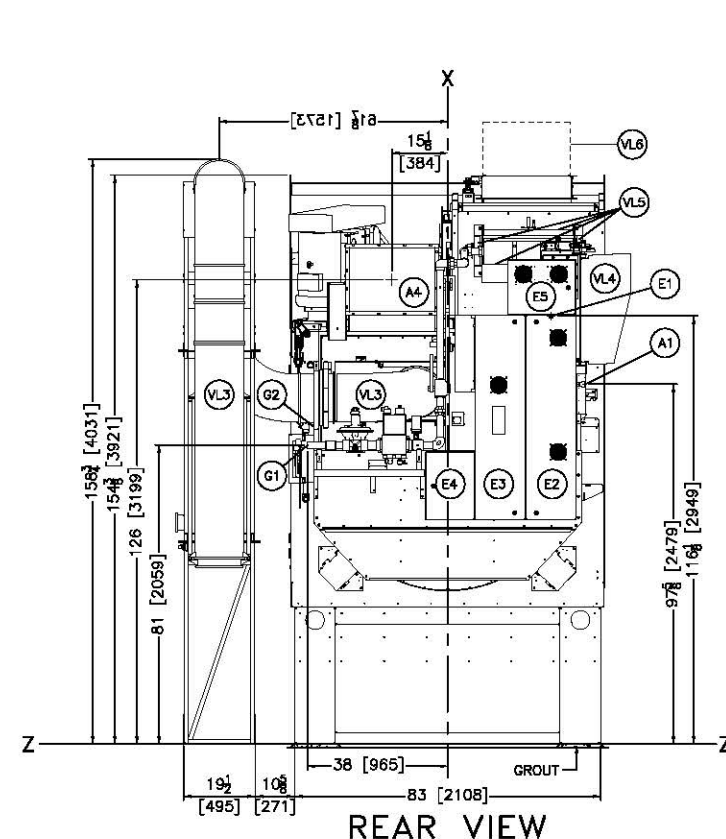

ZERO PEDESTAL SHOWN
ADJUST ALL VERTICAL DIMENSIONS
TO THE PEDESTAL SPECIFIED.
SEE NOTE 7.

THIS DRAWING IS THE 6464TG1R
WITH OPTIONS FOR REAR CONTROL,
VACUUM LOADING, AND INTERNAL
LINT. USE THIS DRAWING WITH
BD6464TG1RABE FOR STANDARD
EQUIPMENT AND INSTALLATION
INFORMATION.

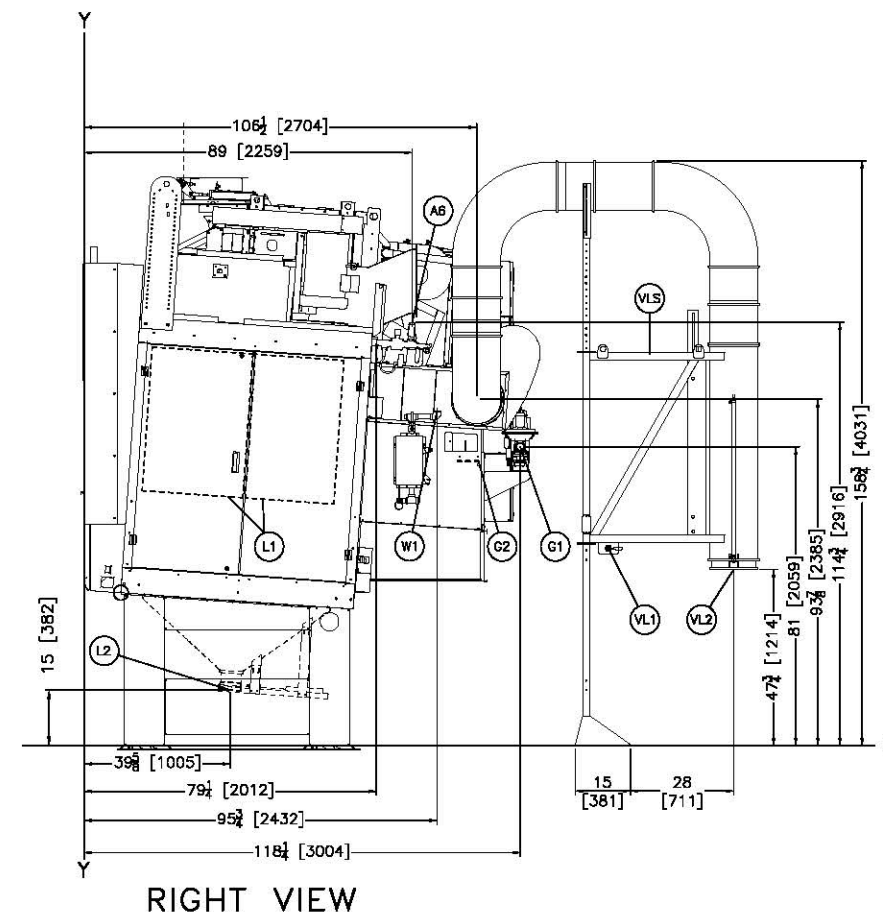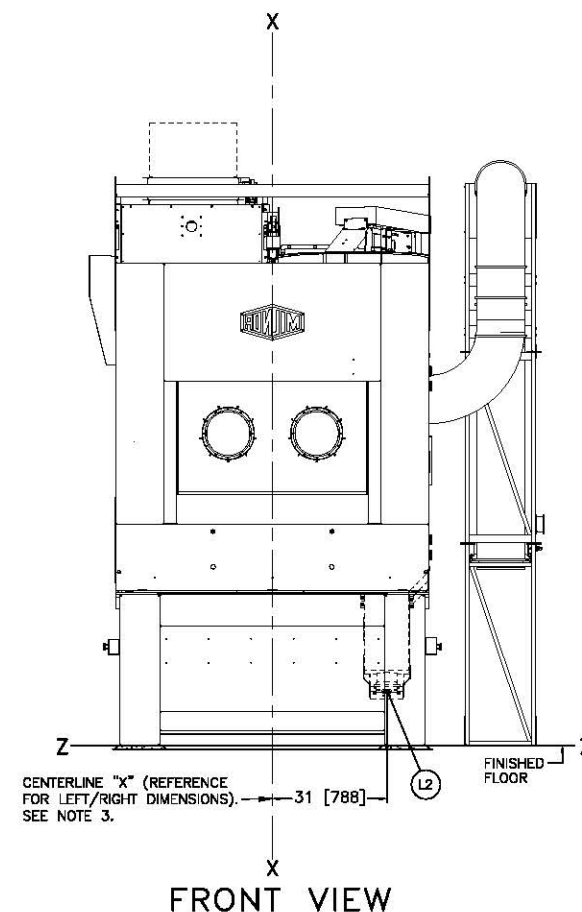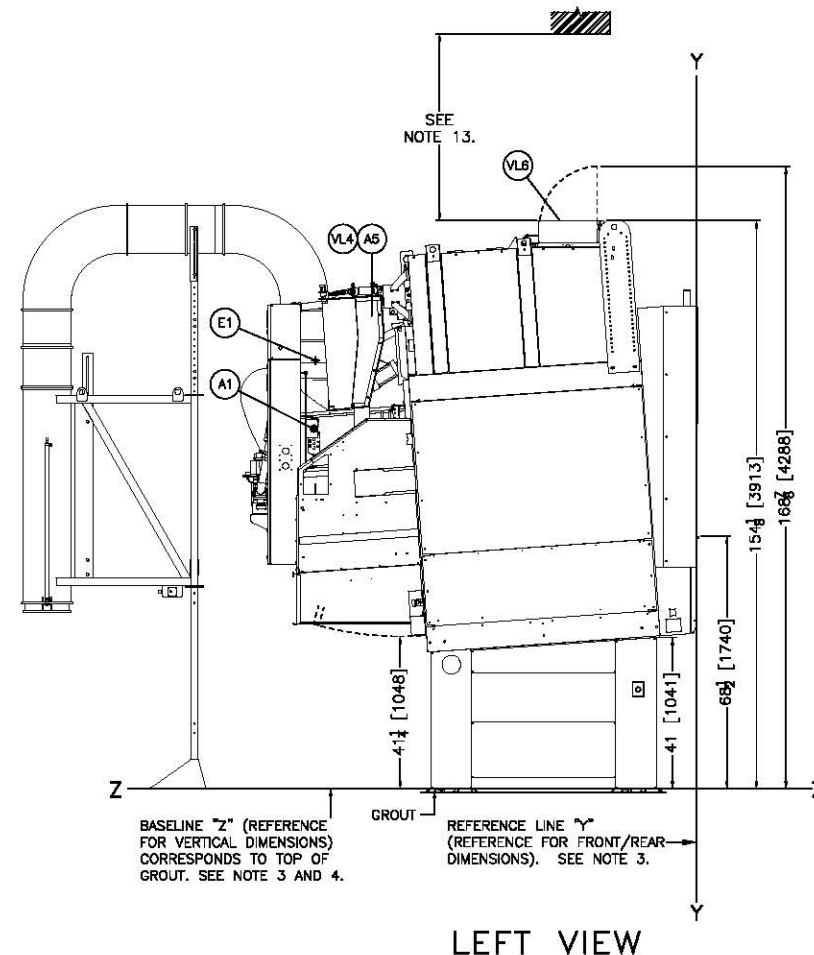

W1	SPRINKLER WATER INLET, 1-1/4" NPT
VL6	VACUUM LOADING FIREBOX INLET DAMPER (BLOWER INTAKE)
VL5	VACUUM LOADING BURNER COVERS
VL4	VACUUM LOADING COMBUSTION BOX DAMPER
VL3	VACUUM LOADING DUCT
VL2	VACUUM LOADING GOODS INLET
VL1	VACUUM LOADING CONTROLS, MANUAL SWITCH
VLS	VACUUM LOADING STAND
L3	INTERNAL LINT SCREENS AIR VALVE BOX.
L2	LINT OUTLET (6" FLEX HOSE CONNECTION) FOR OPTIONAL INTERNAL LINT SCREEN. PIPES TO DRYVAC01, DRYVAC02 OR LINT COLLECTOR BY OTHERS. SEE NOTES 14,15,16. DRAWING BD6458DLCPBE FOR RECOMMENDED PIPING.
L1	OPTIONAL INTERNAL LINT SCREENS, BEHIND PANELS
G2	GAS LINE VENT, 1/4" STAINLESS STEEL TUBING
G1	GAS INLET, 1-1/2" NPT CONNECTION
E5	OPTIONAL INVERTER BOX
E4	MICROPROCESSOR BOX
E3	LOW VOLTAGE BOX
E2	HIGH VOLTAGE BOX
E1	MAIN ELECTRICAL CONNECTION
A6	1" NPT AIR CONNECTION/OPTIONAL INTERNAL LINT SCREENS
A5	COMBUSTION AIR INTAKE BOX WITH FILTERS
A4	AIR VALVE BOX
A3	BLOWER EXHAUST TO REAR, STANDARD, SEE DETAIL ON BD6464TG1RABE.
A2	BLOWER INTAKE
A1	COMPRESSED AIR, 1"NPT
ITEM	LEGEND

- NOTES**
- 16 A WATER SEPARATOR (NOT SUPPLIED BY PMC) IS REQUIRED FOR THE INCOMING AIR TO THE INTERNAL LINT SYSTEM.
 - 15 OPTIONAL INTERNAL LINT SCREENS IS AVAILABLE FOR DRYERS WITH 41" [1041] AND TALLER PEDESTALS ONLY.
 - 14 FOR OPTIONAL INTERNAL LINT FILTERS, IT IS RECOMMENDED TO HAVE A 60 GALLON COMPRESSED AIR BOOSTER TANK FOR EVERY 5 DRYERS.
 - 13 IF THE FIREBOX INLET (BLOWER INTAKE) IS NOT DUCTED, THERE MUST BE 8 FEET- [2438] OF UNOBSTRUCTED VERTICAL CLEARANCE BETWEEN THE INLET AND ANY OBJECT ABOVE IT.
 - 12 EXHAUST DUCTING: DRYER OPERATES UP TO 8500SCFM WITH PRESSURE CHANGES OF UP TO 4" DURING THE CYCLE. THESE CYCLES ARE NUMEROUS AND VARYING. THUS FATIGUE OF THE EXHAUST DUCTING NEEDS TO BE CONSIDERED. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 20 GAUGE GALVANIZED SHEET STEEL WORKS WELL. IF SQUARE DUCTING IS USED, MATERIAL THICKNESS MUST BE CONSIDERED TO PREVENT OIL CANNING AND VIBRATION. FIELD EXPERIENCE HAS SHOWN THAT A MINIMUM THICKNESS OF 16 GAUGE GALVANIZED SHEET STEEL IS REQUIRED. HEAVIER GAUGE AND OR STIFFENERS MAY BE REQUIRED GIVEN THE SIZE AND LENGTH OF THE DUCT. ELBOWS AND TRANSITIONS LIKELY WILL REQUIRE DOUBLING THE GAUGE.
 - 11 DO NOT USE ANY TYPE OF TURNING VANE IN THE DRYER EXHAUST DUCTING AS THESE WILL IMMEDIATELY PLUG WITH LINT.
 - 10 MINIMUM CLEARANCE FOR MAINTENANCE - 18" [458]. SOME JURISDICTIONS REQUIRE UP TO 30" [762] CLEARANCE. CONSULT LOCAL CODES. IN SHUTTLE INSTALLATIONS, MINIMUM DISTANCES FROM DRYER TO WALL IS DETERMINED BY SHUTTLE REQUIREMENTS. SEE DRAWING, BD5HTCLRBE, FOR MINIMUM DIMENSION OF SHUTTLE AT LAST STOPPING PLACE (MAY BE DRYER) TO WALL.
 - 9 DRYER IS DISASSEMBLED INTO THREE MAJOR COMPONENTS FOR SHIPPING, THE BASE, THE FRAME & THE RECIRCULATION DUCTING. CONSULT MILNOR FACTORY IF COMPONENTS SUCH AS BLOWER HOUSING MUST BE REMOVED TO FIT THE MACHINE THROUGH AN OPENING.
 - 8 DO NOT RUN PIPING OR CONDUIT OVER BLOWER HOUSING, SO THAT THE BLOWER MAY BE REMOVED FOR SERVICING, IF NEEDED.
 - 7 THIS DRAWING SHOWS THE 6464. DRYERS USING A 41" [1041] PEDESTAL BASE WHICH IS EQUAL TO ZERO PEDESTAL, STANDARD HEIGHT FOR CONVEYOR DISCHARGE. PEDESTALS MAY BE ORDERED TO INCREASE OR DECREASE THE MACHINE HEIGHT. ALL VERTICAL DIMENSIONS MUST BE ADJUSTED FOR THE SPECIFIED PEDESTAL.
 - 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVERSING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.



ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.


ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

THIS DRAWING IS FOR THE
VACUUM LOADING OPTION. USE
THIS DRAWING WITH
BD6464TG1RABE.

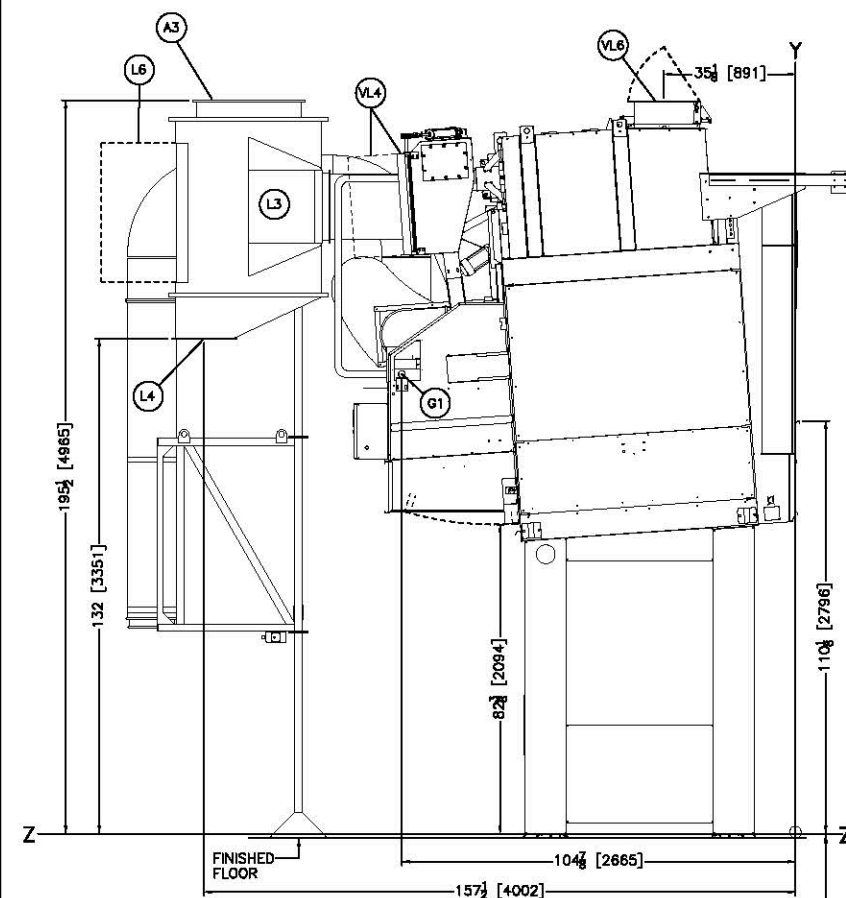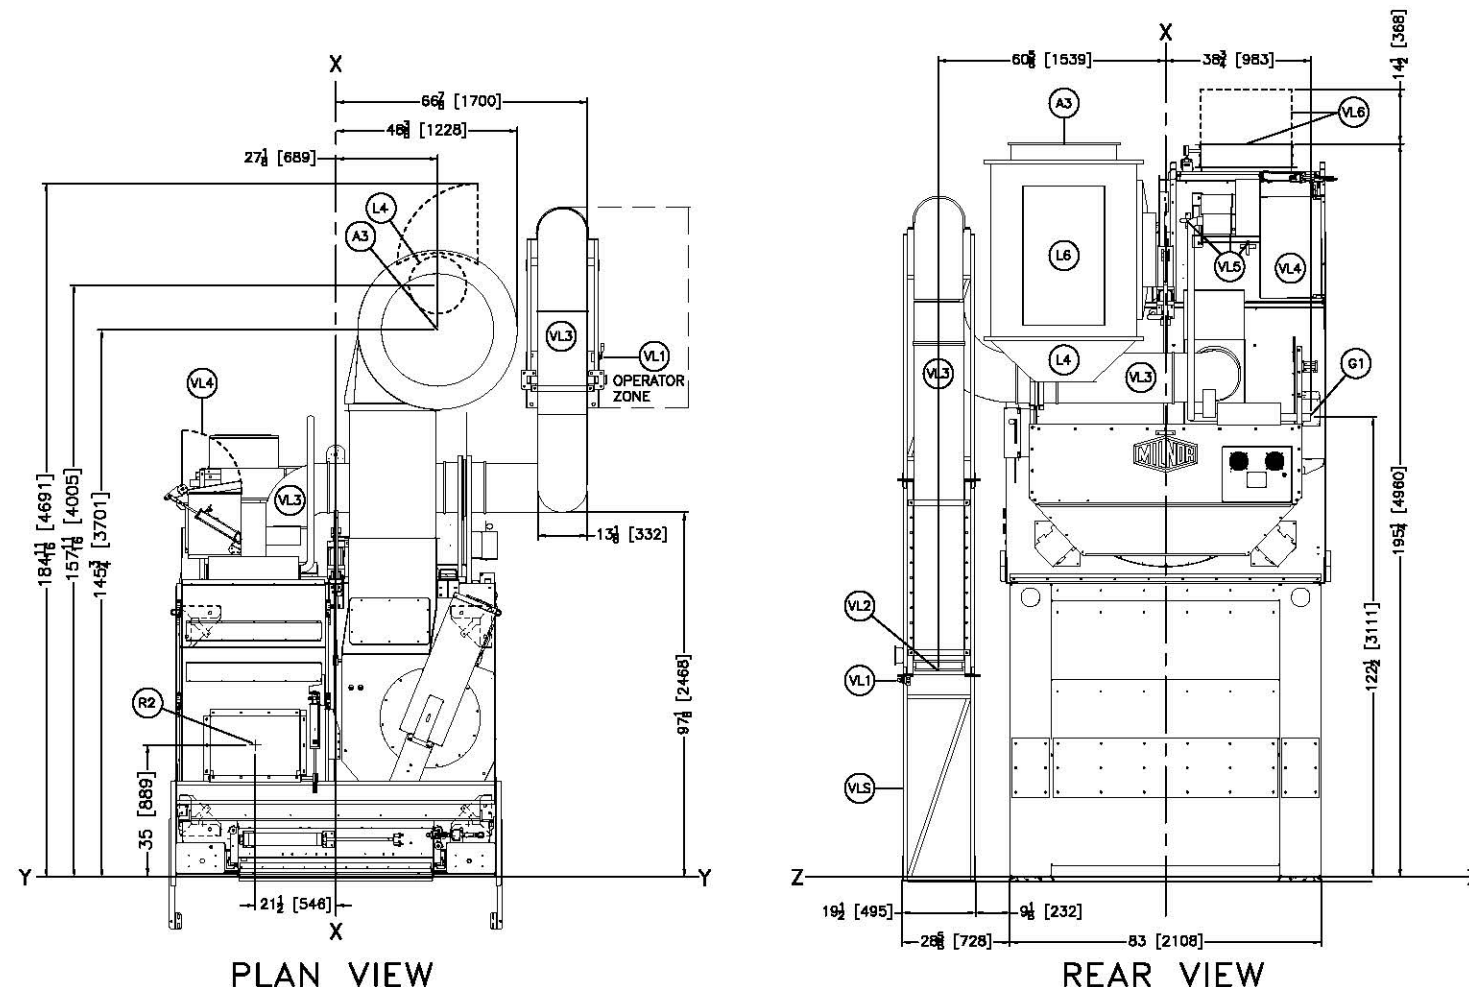


BASELINE "Z" (REFERENCE
FOR VERTICAL DIMENSIONS)
CORRESPONDS TO TOP OF
GROUT. SEE NOTE 3 AND 4.

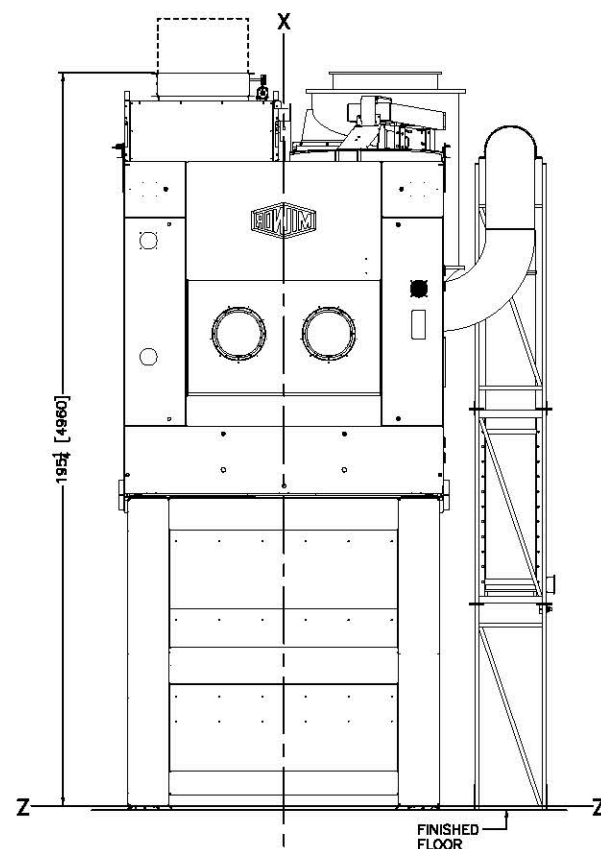

CENTERLINE "X" (REFERENCE
FOR LEFT/RIGHT DIMENSIONS).
SEE NOTE 3.


REFERENCE LINE "Y"
(REFERENCE FOR FRONT/REAR
DIMENSIONS). SEE NOTE 3.

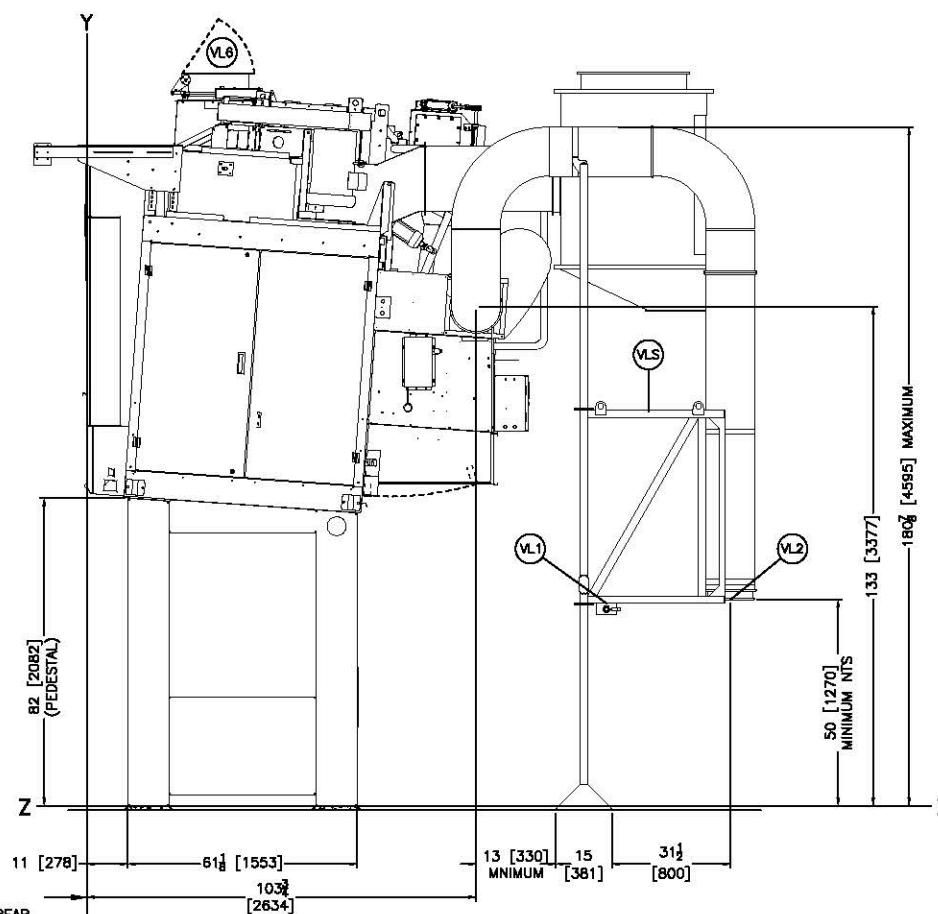


VL6	VACUUM LOADING FIREBOX INLET DAMPER
VL5	VACUUM LOADING BURNER COVERS
VL4	VACUUM LOADING COMBUSTION BOX DAMPER
VL3	VACUUM LOADING DUCT
VL2	VACUUM LOADING GOODS INLET
VL1	VACUUM LOADING CONTROLS, MANUAL SWITCH
VL5	VACUUM LOADING STAND
L6	HINGED ACCESS DOOR
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE
L3	15-1/2" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
G1	GAS INLET WHEN VACUUM LOADED, 1-1/2" NPT CONNECTION
A3	EXHAUST DUCT, 28" [711] DIAMETER
ITEM	LEGEND

NOTES	
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
ATTENTION	
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.	
ATTENTION	
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.	


THIS DRAWING IS FOR
VACUUM LOADING+MLF+RECIRC OPTIONS.
USE THIS DRAWING WITH BD6464TG1RABE.

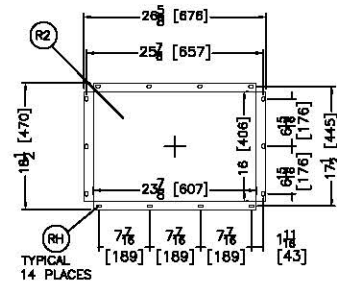


RECIRCULATION DUCT
BLOWER INTAKE
DETAIL

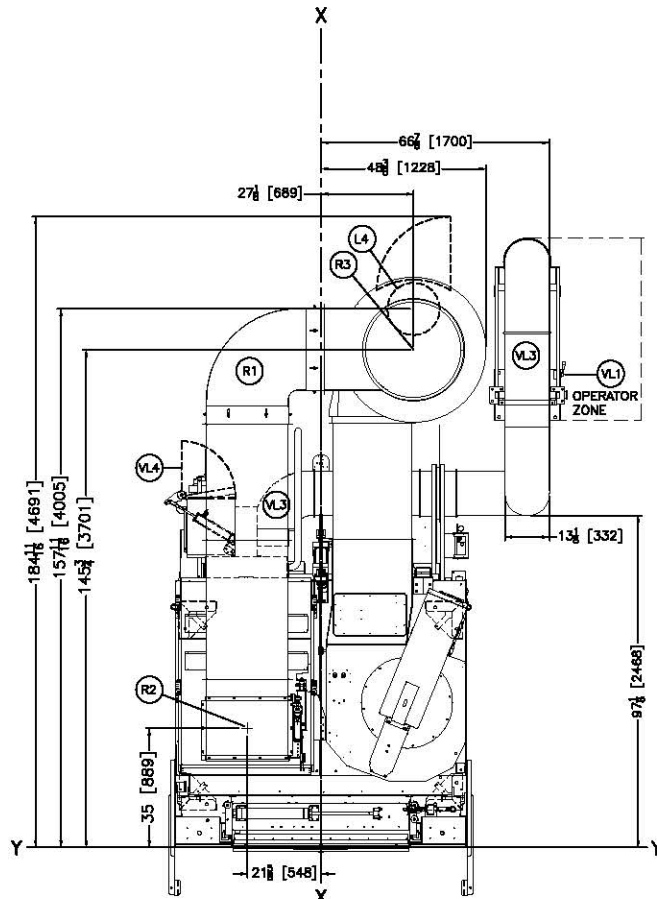


PLAN VIEW

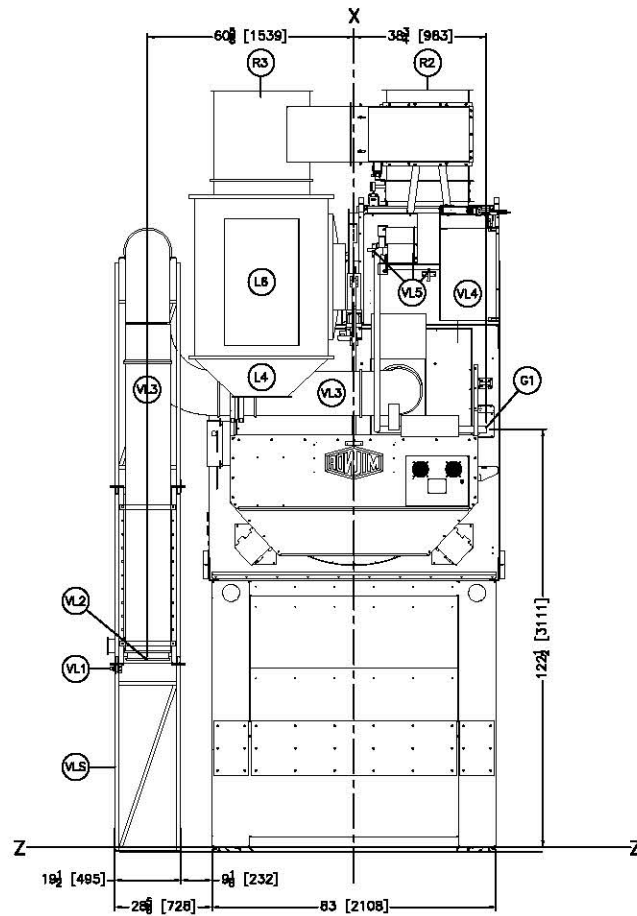


REAR VIEW

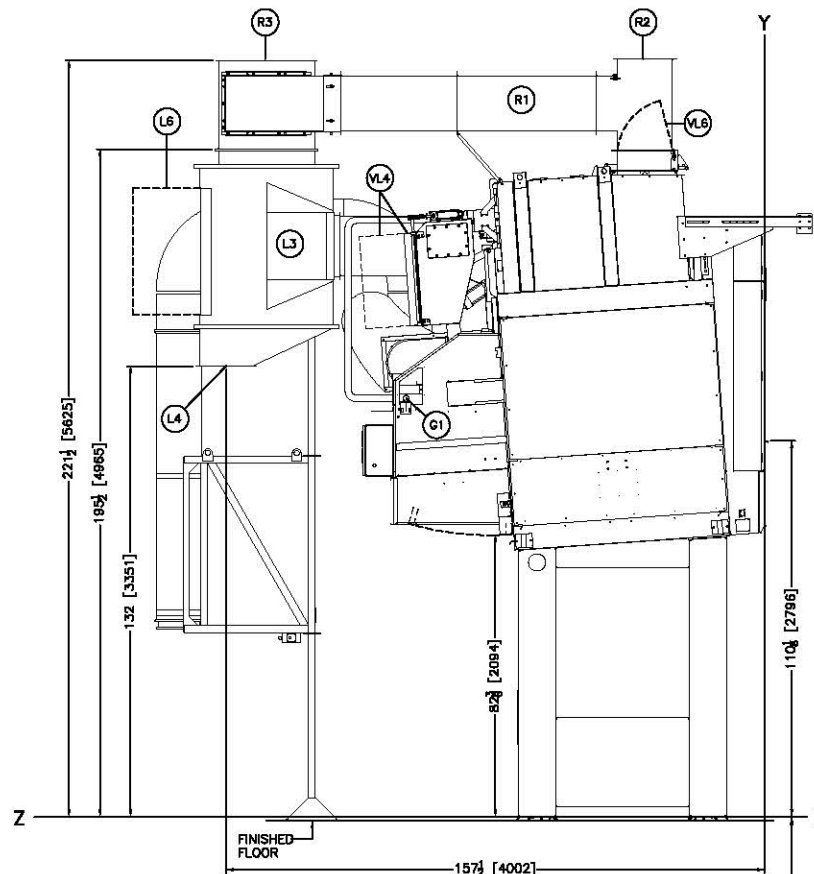

LEFT VIEW

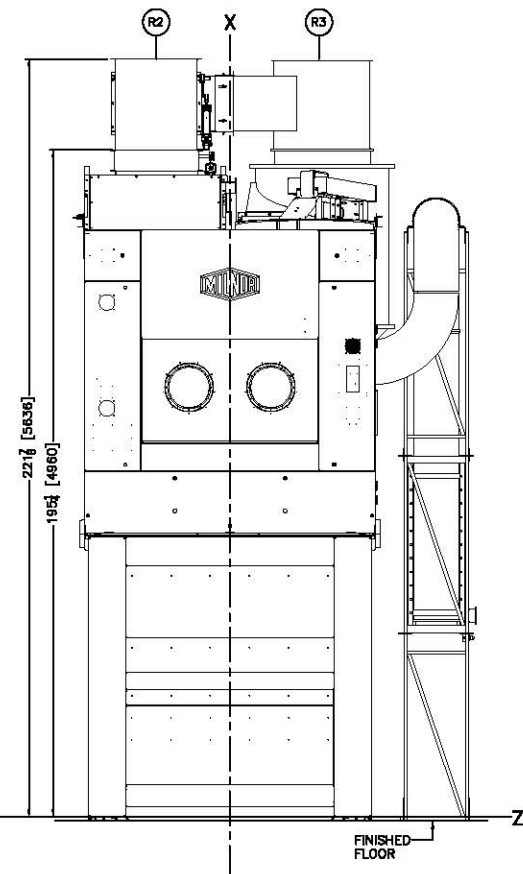

FRONT VIEW

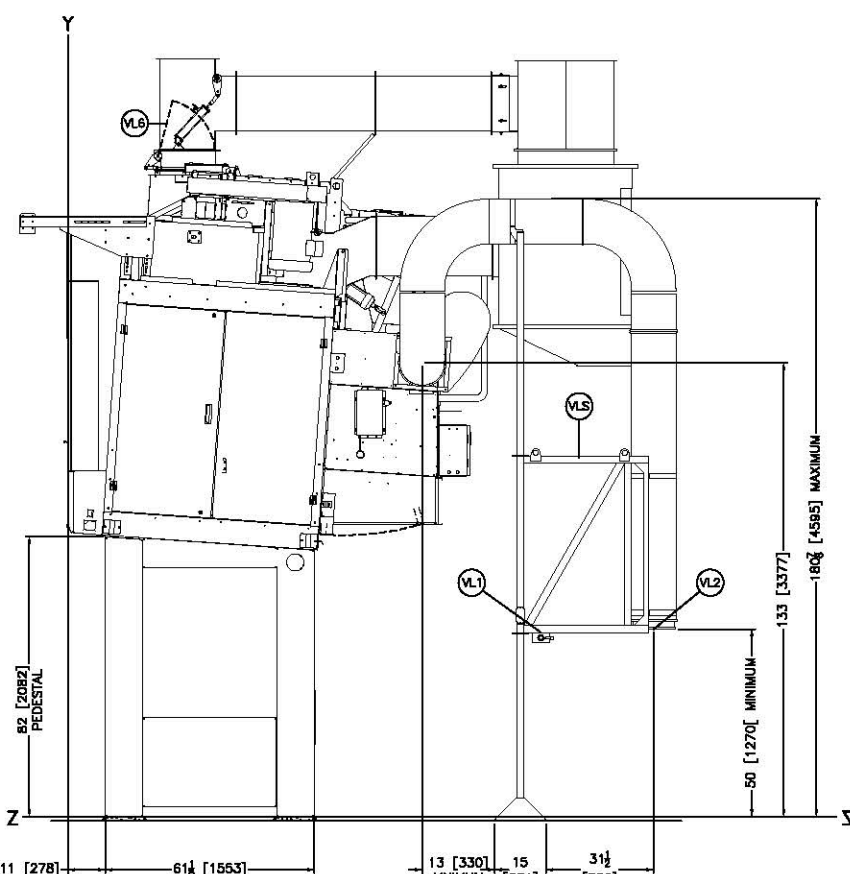

RIGHT VIEW

VL6	VACUUM LOADING FIREBOX INLET DAMPER
VL5	VACUUM LOADING BURNER COVERS
VL4	VACUUM LOADING COMBUSTION BOX DAMPER
VL3	VACUUM LOADING DUCT
VL2	VACUUM LOADING GOODS INLET
VL1	VACUUM LOADING CONTROLS, MANUAL SWITCH
VLS	VACUUM LOADING STAND
RH	.30\"[8] DIAMETER X .50\"[13] SLOTS, 14 PLACES
R3	RECIRCULATION DUCT BLOWER EXHAUST, 28\"[711] DIAMETER
R2	RECIRCULATION DUCT BLOWER INTAKE
R1	RECIRCULATION DUCT
L6	HINGED ACCESS DOOR
L4	CONE, LINT COLLECTION OUTLET TO BAG, DISCHARGE 15-1/2\" ID FLANGED OUTLET
L3	MLF1010 LINT FILTER (LINT FILTER SUPPORTED BY OTHERS)
G1	GAS INLET WHEN VACUUM LOADED, 1-1/2\" NPT CONNECTION
ITEM	LEGEND

NOTES	
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1\"[25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
ATTENTION	
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.	
ATTENTION	
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.	

6464TG1R AH VACUUM LOAD/MLF/RECIRC

0 0.2M 24


INCHES 0 12 24

BD6464TG1RAB0
2022035D

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/487-9591,
FAX 504/488-3084, Email: milnorinfo@milnor.com

ADDITIONAL AIR REQUIREMENTS
FOR (L1)– OPTIONAL
INTERNAL LINT FILTERS
(SEE NOTE 7.)

AIR PRESSURE REQUIREMENTS: 85–110 PSI
CONNECTION (A2): 1" NPT
AIR USAGE (ESTIMATED):
110 SCF IN 15 SECONDS WHEN ACTIVATED

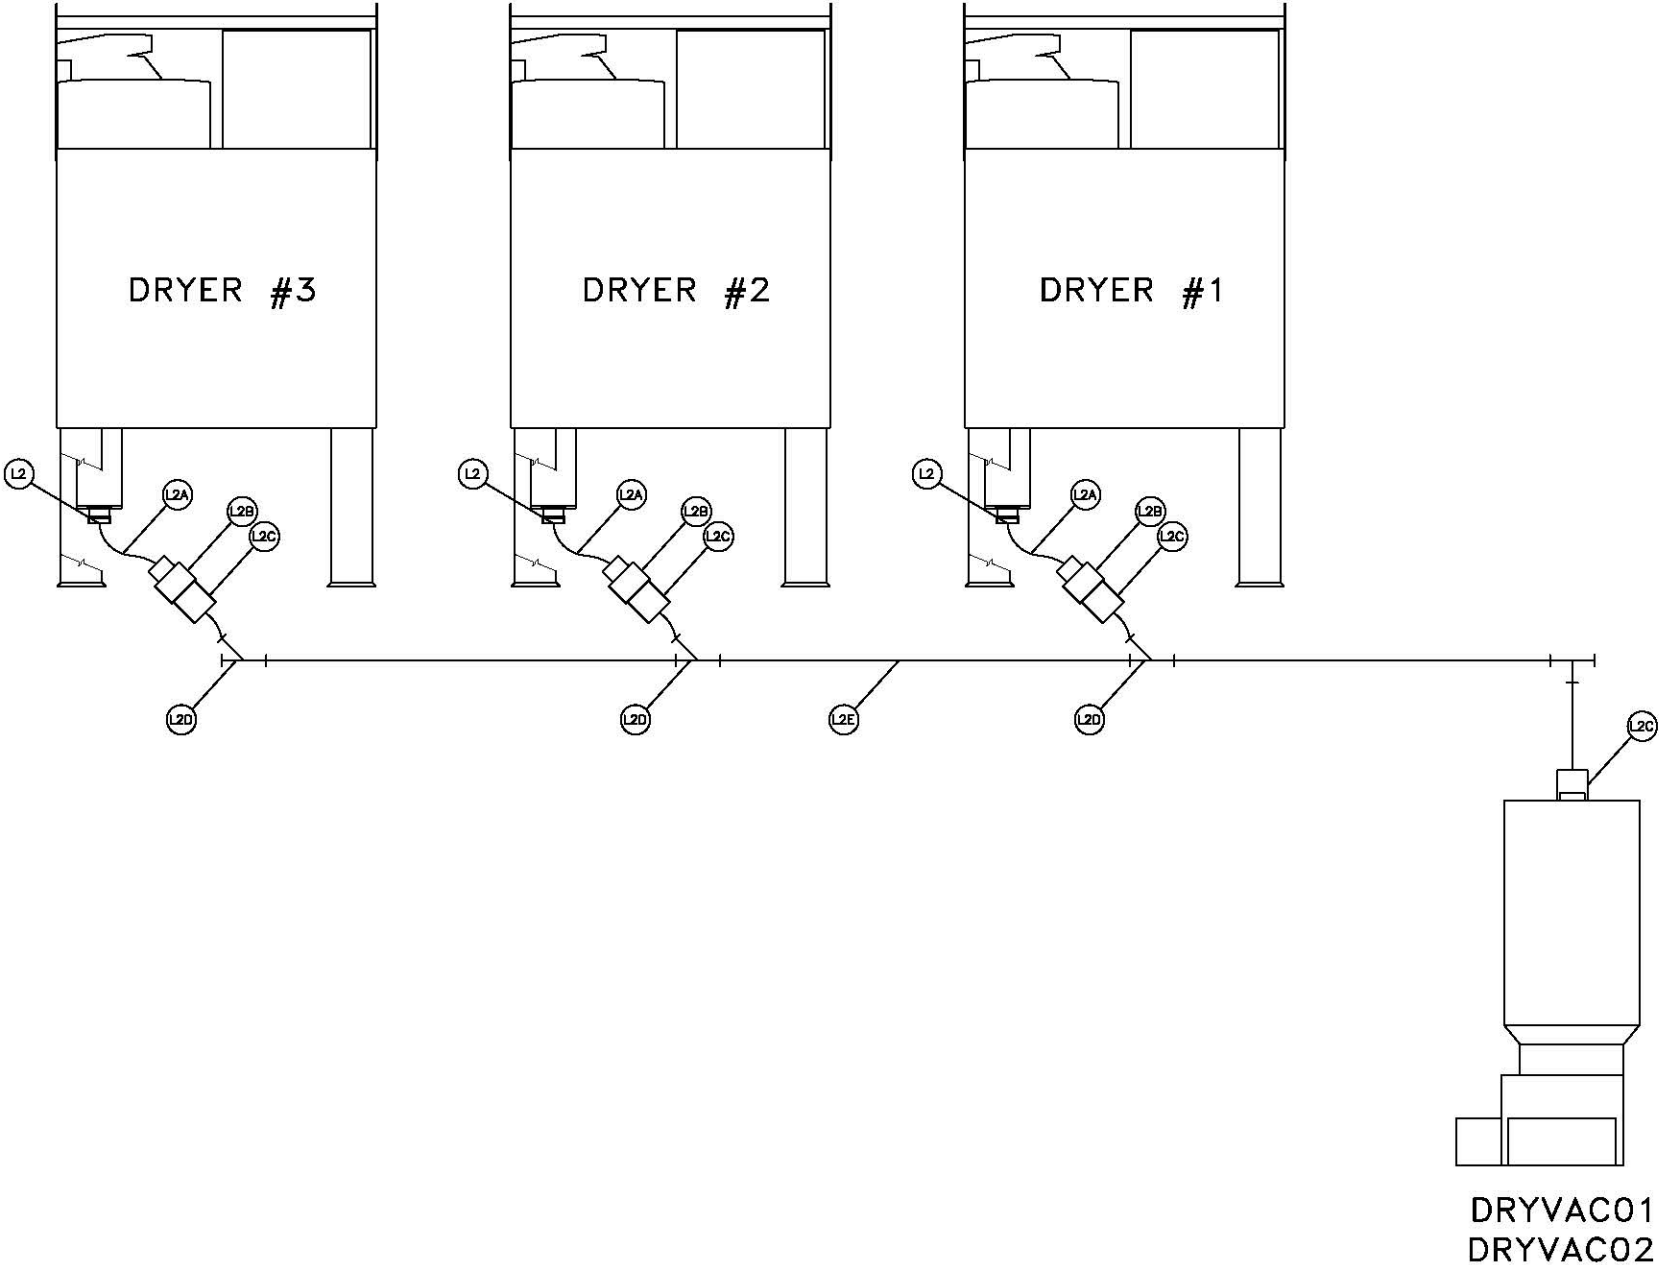

L2E	6" SHC40 PVC (NOT SUPPLIED PMC.)
L2D	6" Y – PVC (NOT SUPPLIED PMC.)
L2C	6" NO HUB CONNECTOR (NOT SUPPLIED PMC.)
L2B	REDUCER 6" X 6", (PART W7-71865, SUPPLIED PMC)
L2A	6" FLEX HOSE (NOT SUPPLIED PMC.)
L2	LINT OUTLET (6" FLEX HOSE CONNECTION) FOR OPTIONAL INTERNAL LINT SCREEN. PIPES TO DRYVAC01, DRYVAC02 OR LINT COLLECTOR BY OTHERS.

ITEM	LEGEND
------	--------

NOTES
8 SEE DRYER OPTION PAGES FOR ADDITIONAL DIMENSIONAL INFORMATION FOR OPTIONAL INTERNAL LINT SCREENS.
7 FOR OPTIONAL INTERNAL LINT FILTERS, IT IS RECOMMENDED TO HAVE A 60 GALLON COMPRESSED AIR BOOSTER TANK FOR EVERY 5 DRYERS.
6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.) 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4 BASELINE "Z" IS THE SAME FOR ALL MILNOR MACHINES AND IS SHOWN ON ALL DIMENSIONAL DRAWINGS. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR MAY VARY (WITH CHANGES IN FLOOR HEIGHT) AS REQUIRED TO INSURE THAT BASELINE "Z" IS HORIZONTAL AND ALL COMPONENTS REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE
OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT.
ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS,
FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME
IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY
GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT
MANUFACTURER OR VENDOR.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT
STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT
FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE
INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES
GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE
DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

RECOMMENDED LINT COLLECTOR PIPING

DM	0	0.5M	1M	DWG#	BD6458DLCPBE
INCHES	0	12	24	36	2014453D