
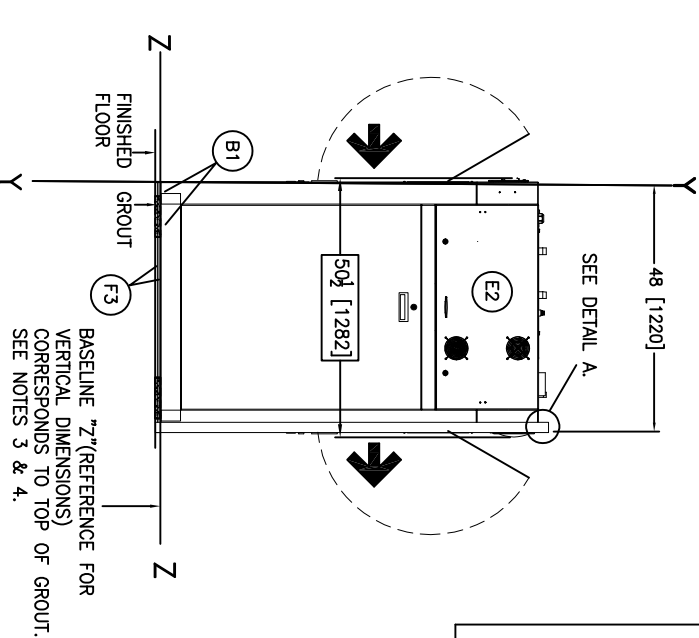
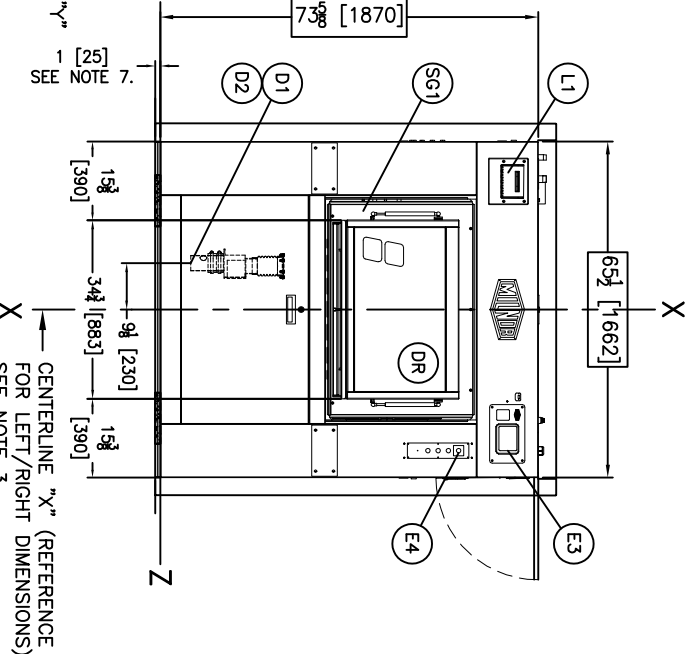
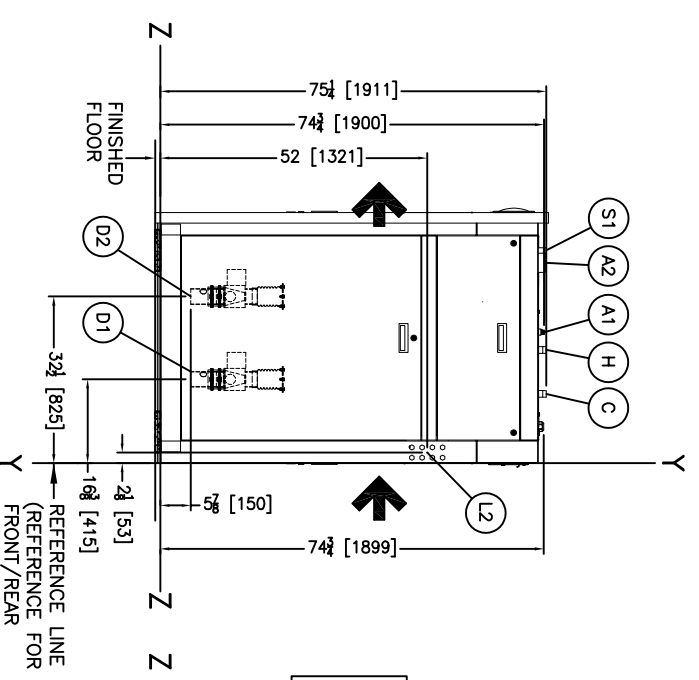
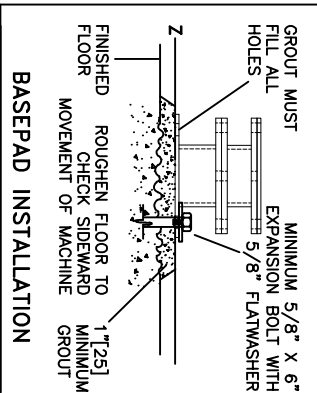
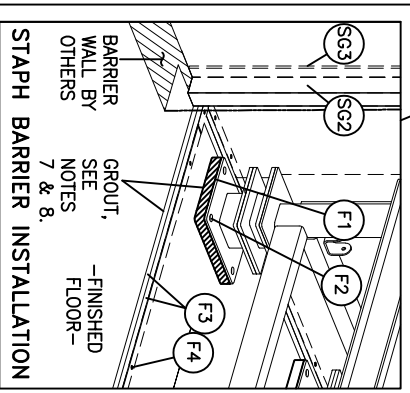
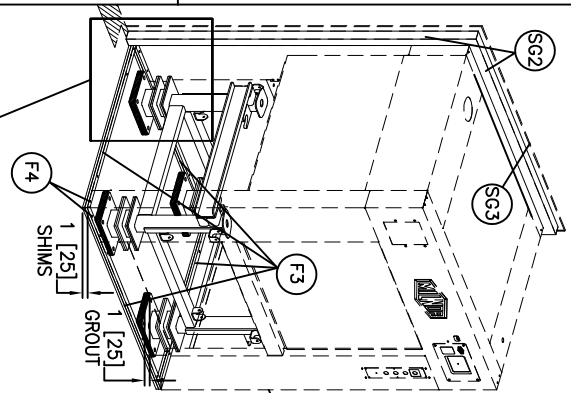
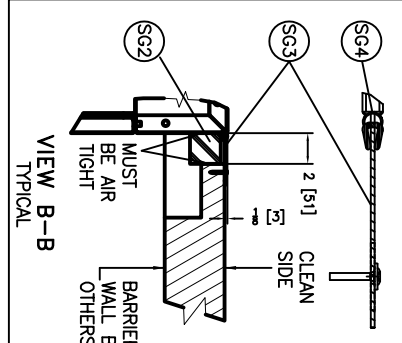
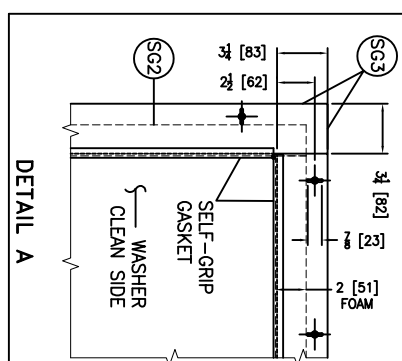
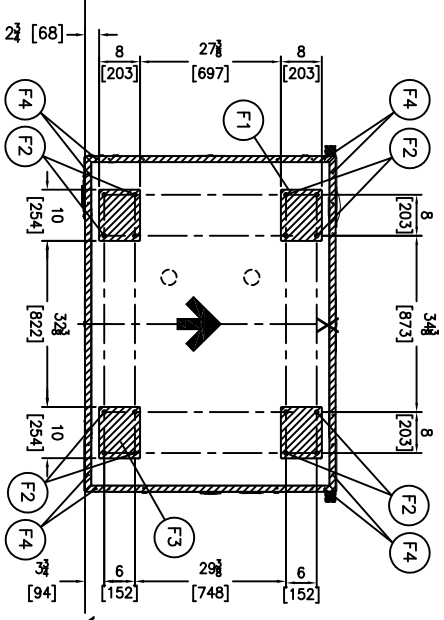
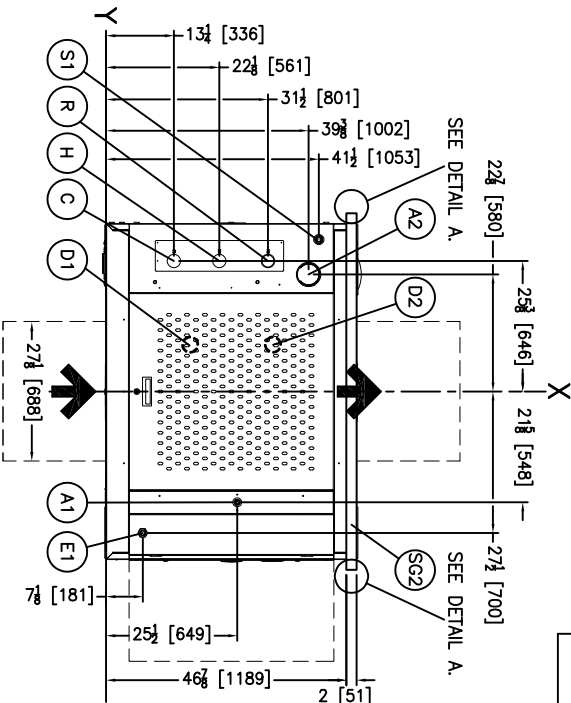


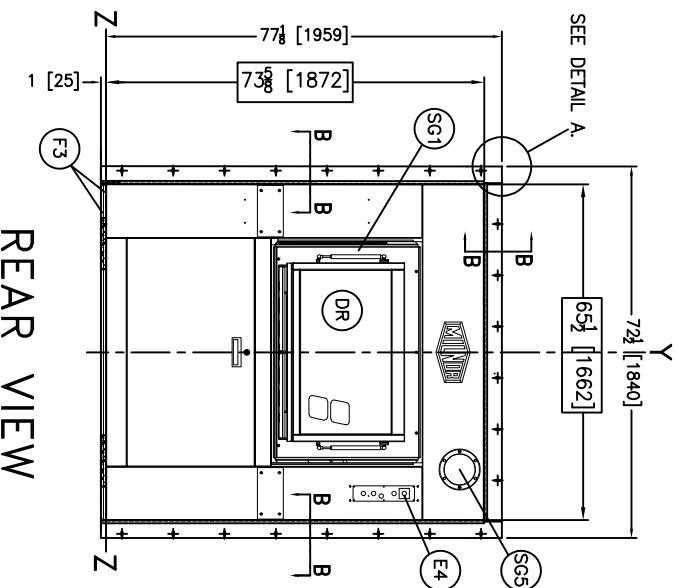

SG5	FRESH AIR IN
SG4	SELF-GRIP GASKET ON STAPH SHEET METAL BARRIER
SG3	STAPH BARRIER, SHEET METAL SUPPLIED
SG2	STAPH BARRIER, 2" NEOPRENE CLOSED CELL FOAM, SUPPLIED
SG1	STAPH MEMBRANE BARRIER, LOAD AND UNLOAD
S	STEAM INLET, 3/4" NPT
R	REUSE WATER INLET, 1" NPT
L2	STANDARD LIQUID SUPPLY, 8 PORTS WITH 6 SIGNALS
L1	STANDARD SOAP CHUTE
H	HOT WATER INLET, 1" NPT
F4	(20) HOUSE BOLT HOLES 3/8"[10] DIAMETER, ANCHOR
	2 PER CORNER, (8) PLACES MINIMUM, 1/4" x 3-1/2" BOLTS MINIMUM.
F3	HOUSE-FRAME-SHIMS, SEE NOTE 8.
F2	(16) 3/4"[20] DIAMETER ANCHOR BOLT HOLES, ANCHOR
	(1) BOLT PER PAD MINIMUM, 5/8" x 6" BOLTS MINIMUM
F1	FOUNDATION BASEPADS, 4 PLACES
E4	EMERGENCY STOP
E3	MITTOUCH-EX™ TOUCH SCREEN CONTROLLER
E2	HIGH VOLTAGE CONTROL BOX
E1	MAIN ELECTRICAL CONNECTION
DR	LOAD & UNLOAD DOORS
D2	DRAIN TO REUSE, 3"[80MM] AIR OPERATED
D1	DRAIN TO SEWER, 3"[80MM] AIR OPERATED
C	COLD WATER INLET, 1" NPT
B1	HOUSE FRAME
A2	VENT TO ATMOSPHERE, 4-1/2" DIAMETER
A1	COMPRESSED AIR INLET, 1/2" NPT
ITEM	LEGEND

NOTES

8. GROUT OR SHIM 1" UNDER EXTERIOR GROUT FRAME, BOLT HOUSE SHIM THROUGH HOUSE—FRAME SHIMS TO FOUNDATION. GROUT AS REQUIRED.
7. SHAPE BASEPAGES TO LEVEL, THE MACHINE AND ALLOW FOR 1" [25] MINIMUM GROUT. ANCHOR WITH ONE ANCHOR BOLT PER P.O. MINIMUM USE 5/8" X 6" BOLTS. MINIMUM SEE INSTALLATION MANUAL FOR FURTHER INSTRUCTIONS.
6. AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODE (NEC) FOR THE CONDUIT SHALL BE:
42 [1067] IF OBJECT IS AN UNBURNED (UNBURNED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC).
5. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
4. CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SEPARATE) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SPECIFIED GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
3. THE BASE PAGES ARE THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WHICH HAVE BASE PAGES BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASELINE "Z" ON MACHINES WITH ADJUSTABLE FEET. BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT ON TRAVELING SHUTTLES. BASELINE "Z" CORRESPONDS TO THE THICKNESS OF THE BOTTOM OF THE SHUTTLE WHEN THE MACHINE IS AT ITS MINIMUM FEASIBLE HEIGHT. THE DIMENSIONS REQUIRED FOR THE BASELINE "Z" IS FOUNDATION AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 11[25] THICK GROUT BED.
2. USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
1. NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.

ALL DIMENSIONS SHOWN ARE APPROXIMATE. SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REVISION AND/OR REDUCTION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION PURPOSES. THE USER SHALL BE RESPONSIBLE FOR THE PROPER INSTALLATION OF THE MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING CODES IN THE USA) HOLD THE OWNER USER IS ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, IN CONTACT WITH THE INSTALLATION AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR MANUAL OR RESISTANT MOTION) TO SUPPORT THE MACHINE AND TO SUPPORT THE WEIGHT OF THE MACHINE AND THE GOODS, THE WEIGHT, AND ANY REPEATED SHOCKING (ROUTING) FORCE(S) GENERATED DURING ITS OPERATION, WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH AND RIGIDITY WITH DUE CONSIDERATION FOR MANUAL OR RESISTANT POWERED TOOLS. THE OWNER/USER MUST REDUCE ALL FORESEEN SAFETY LOADS, INCLUDING THE WEIGHT OF THE EQUIPMENT, TO THE MINIMUM SAFE LOADS, IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

THE MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. THE OWNER/USER MUST REDUCE ALL FORESEEN SAFETY LOADS, INCLUDING THE WEIGHT OF THE EQUIPMENT, TO THE MINIMUM SAFE LOADS, IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

DURING THE OPERATION, WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.