

**Read the
separate
safety
manual
before
installing,
operating,
or servicing**


Published Manual Number/ECN: MPI39G3TBE/2025414A

- Publishing System: TPAS2
- Access date: 11/12/2025
- Document ECNs: NOT latest

Installation and Service

76028 & 76039 G3 CBW®

Continuous Batch Washers

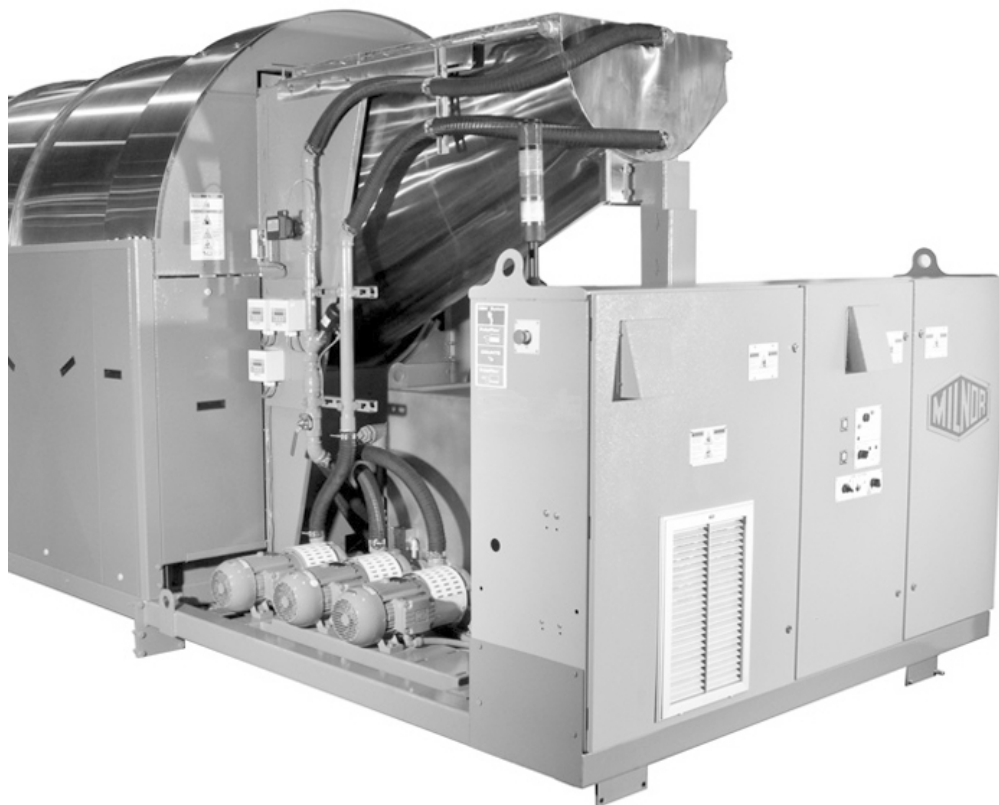

PELLERIN MILNOR CORPORATION POST OFFICE BOX 400, KENNER, LOUISIANA 70063-0400, U.S.A.

Table of Contents

MPI39G3TBE/25414A

Page	Description	Document
1	Limited Standard Warranty	BMP720097/2025142
2	How to Get the Necessary Repair Components	BIUUUD19/20081231
3	Trademarks	BNUUUU02/2023296A
5	1. Safety and Maintenance	
6	Safety—Continuous Batch Washer	BIUUUS27PC/20051111
11	Safety Placard Use and Placement 76028,76039G3 CBW & 9248G4 CBW	BMP040038/2004313V
13	Safety Placard Use and Placement ISO 76028,76039 G3 CBW & 9248 G4 CBW	BMP040039/2004313V
15	Safety Placard Use and Placement Mentor Controller for CBW	BMP040040/2004313V
17	Safety Placard Use and Placement ISO Mentor Controller for CBW	BMP040041/2004313V
19	Safety Placard Use and Placement Inverter Box for CBW	BMP040042/2004313V
21	Safety Placard Use and Placement ISO Inverter Box for CBW	BMP040043/2004313V
23	Safety Placard Use and Placement Typical All CBW Auxiliary Tanks	BMP040046/2004313V
25	Safety Placard Use and Placement ISO Typical All CBW Auxiliary Tanks	BMP040047/2004313V
27	Cover Installation	BMP000075/2023103B
28	Tunnel Feet & Shipping Brackets	BPT3UL01/2025046A
30	Tag Guidelines	BIUUUI02PL/20170824
35	Prevent Damage from Chemical Supplies and Chemical Systems	BIWUUI03/2019296A
39	Torque Requirements for Fasteners	BIUUUM04/20180109
47	2. Parts and Assemblies	
49	2.1. Drive Assemblies	
50	Drive Chart	BMP000026/2023103B
52	Chain Tensioner	BMP000027/2008184B
54	Chain Oiler	BMP110071/2013102A
56	Support Rollers	BPT3UI01/2025414A
61	Guide Roller Assembly - 76028 & 76039G3; 92048G4 Tunnels	BMP000031/2011474B
63	Unit to Unit Drive Coupling	BMP000036/2001225V
65	Gear Reducer with Chain Coupling - 76028 & 76039 G3 Tunnels	BMP000033/2010052B
67	Replacing G3 Drive Chain Couplings	BIPCLM01/2000162N
71	Drive Train Service	BIPCLM02/20020430

Table of Contents, continued

MPI39G3TBE/25414A

Page	Description	Document
76	Proximity Switch & Target Settings G3 Tunnels	BMP000034/2025183B
79	Setting Rotation Limit Switch Positions on 76028 and 76039 Tunnel Washers	MSSMD446AE/199637AV
83	2.2. Load Chute and Seals	
84	Load Chute and Seal Installation - 76028 & 76039G3; 92048G4 Tunnel	BMP110060/2011483B
88	G3 Retractable Load Chute Option	BPT3UM01/2021386A
90	Water Collectors - 76028G3, 76039G3, & 92048G4	BMP000035/2011444B
92	Unit to Unit Transition Seal Installation	BMP940101/2014096B
93	Tension Seal Assembly - 76028 & 76039G2 & G3; 92048G4 Tunnels	BMP840026/2011474B
95	2.3. Water, Steam and Peristaltic	
96	Level Box Drain Options	BMP000077/2022144B
99	Air Cylinder Flow Not Valve	BMP970001/2002272V
101	Level Switch Assembly - 76028 & 76039G3; 92048G4 Tunnel	BMP000048/2011494B
103	Level Box Lid - 76028 & 76039G3; 92048G4 Tunnels	BMP000079/2011503B
104	Drain Stops - 76028 & 76039G3; 92048G4 Tunnel	BMP100024/2011494B
105	Drain Stop Bonnet, 4" Double Acting - 76028G3, 76039G3, & 9248G4	BMP100025/2010203B
106	Water Assemblies and Schematics 76028 & 76039G3 Tunnels	BMP000070/2001444V
113	Magmeter	BMP110014/2011085B
114	Steam Components with No-Air Sparger	BMP180015/2023103A
118	Peristaltic Chemical Inlets 76028G3, 76039G3, 92048G4 Tunnels	BMP180016/2019416A
120	Dump Valve Installation 76032, 76028, 76039, 92048 Tunnels	BMP000072/2018013A
122	Dump Valve Bonnet - 76028 & 76039G3; 92048G4 Tunnel	BMP000073/2011494B
124	Dump Valve Bonnet - Normally Closed	BMP970067/2023103B
126	Reuse Tank - 76028 & 76039 G3 Tunnels	BMP000071/2009482B
128	Flow Splitter	BMP070005/2007064B
134	Press Water Return Tank	BMP070006/2007062B
139	2.4. Pneumatics	
140	Pneumatic Shuttle Valve	BMP080032/2008462B
141	3. Installation	
142	Attention Installers! Press, Tunnel Installation	B2T2010023/2019193A
143	Tips for Connecting Tunnel Units on Site	BIPCLI02/20140226
145	Proximity Safeguarding for Automatic Shuttle Conveyors	BISUUI01/20171205

Table of Contents, continued

MPI39G3TBE/25414A

Page	Description	Document
149	Connecting Ancillary Equipment and Services	BIPCUI02/20160113
153	3.1. Dimensional Drawings	
155	Dimensional Drawing - 76028 G3 Tunnel 3 Module	BDST28G3M3CE/2024125D
156	Dimensional Drawing - 76028G3 Tunnel 4 Module	BDST28G3M4CE/2024125D
157	Dimensional Drawing - 76028 G3 Tunnel 5 Module	BDST28G3M5CE/2024125D
158	Dimensional Drawing - 76028 G3 Tunnel Options	BDST28G3OPCE/2024125D
159	Dimensional Drawing - 76028G3 ST Venting	BDST28G3VTCE/2016034D
161	Dimensional Drawing - 76028G3 & MP2601	BDST28G3INDB/2010406D
162	Dimensional Drawing - 76028G3 & MMT42032/MXT42032	BDST28G3INDE/2017044D
163	Dimensional Drawing - 76028G3 & MP1540, MP1556, MP1640, MP1656	BDST28G3INGC/2010495D
165	Dimensional Drawing - Foundation 76028 G3 Tunnels	BDST28G3FBDE/2024125D
166	Dimensional Drawing - Shipping Brackets 76028G3	BDST28G3SBCE/2010406D
167	Dimensional Drawing - 76028 G3 Tunnel 3 Module	BDST39G3M3CE/2024125D
168	Dimensional Drawing - 76039 G3 Tunnel 4 Module	BDST39G3M4CE/2024125D
169	Dimensional Drawing - 76039 G3 PF Tunnel Options	BDST39G3OPCE/2024125D
171	Dimensional Drawing - 76039G3 ST Venting	BDST39G3VTCE/2016034D
172	Dimensional Drawing - Drain Trough 76028 & 76039 Tunnels	BDST39G3DTCE/2012026D
173	Dimensional Drawing - 76039G3 & MP2601	BDST39G3INDB/2010406D
174	Dimensional Drawing - 76039G3 & MMT42032/MXT42032	BDST39G3INDE/2017044D
175	Dimensional Drawing - 76039G3 & M7T4840/M9T4840	BDST39G3INDF/2017044D
176	Dimensional Drawing - 76039G3 Interface/MP1540, MP1556, MP1640, MP1656	BDST39G3INGC/2010495D
177	Dimensional Drawing - Foundation 76039 G3 Tunnels	BDST39G3FBDE/2024125D
178	Dimensional Drawing - Shipping Brackets 76039G3 ST	BDST39G3SBCE/2010406D
179	Dimensional Drawing - CBW Ancillary Components	BDCBWAC1CE/2006514D
180	Dimensional Drawing - Installation CBW Components	BDCBWAC1CB/2008132D

PELLERIN MILNOR CORPORATION LIMITED STANDARD WARRANTY

We warrant to the original purchaser that MILNOR machines including electronic hardware/software **(hereafter referred to as "equipment")**, will be free from defects in material and workmanship for a period of one year from the date of shipment (unless the time period is specifically extended for certain parts pursuant to a specific MILNOR published extended warranty) from our factory with no operating hour limitation. This warranty is contingent upon the equipment being installed, operated and serviced as specified in the operating manual supplied with the equipment, and operated under normal conditions by competent operators.

Providing we receive written notification of a warranted defect within 30 days of its discovery, we will—at our option—repair or replace the defective part or parts, EX Factory (labor and freight specifically NOT included). We retain the right to require inspection of the parts claimed defective in our factory prior to repairing or replacing same. We will not be responsible, or in any way liable, for unauthorized repairs or service to our equipment, and this warranty shall be void if the equipment is tampered with, modified, or abused, used for purposes not intended in the design and construction of the machine, or is altered in any way without MILNOR's written consent.

Parts damaged by exposure to weather, to aggressive water, or to chemical attack are not covered by this warranty. For parts which require routine replacement due to normal wear—such as gaskets, contact points, brake and clutch linings, belts, hoses, and similar parts—the warranty time period is 90 days.

We reserve the right to make changes in the design and/or construction of our equipment (including purchased components) without obligation to change any equipment previously supplied.

ANY SALE OR FURNISHING OF ANY EQUIPMENT BY MILNOR IS MADE ONLY UPON THE EXPRESS UNDERSTANDING THAT MILNOR MAKES NO EXPRESSED OR IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR ANY PARTICULAR USE OR PURPOSE OR ANY OTHER WARRANTY IMPLIED BY LAW INCLUDING BUT NOT LIMITED TO REDHIBITION. MILNOR WILL NOT BE RESPONSIBLE FOR ANY COSTS OR DAMAGES ACTUALLY INCURRED OR REQUIRED AS A RESULT OF: THE FAILURE OF ANY OTHER PERSON OR ENTITY TO PERFORM ITS RESPONSIBILITIES, FIRE OR OTHER HAZARD, ACCIDENT, IMPROPER STORAGE, MIS-USE, NEGLIGENCE, POWER OR ENVIRONMENTAL CONTROL MALFUNCTIONS, DAMAGE FROM LIQUIDS, OR ANY OTHER CAUSE BEYOND THE NORMAL RANGE OF USE. REGARDLESS OF HOW CAUSED, IN NO EVENT SHALL MILNOR BE LIABLE FOR SPECIAL, INDIRECT, PUNITIVE, LIQUIDATED, OR CONSEQUENTIAL COSTS OR DAMAGES, OR ANY COSTS OR DAMAGES WHATSOEVER WHICH EXCEED THE PRICE PAID TO MILNOR FOR THE EQUIPMENT IT SELLS OR FURNISHES.

THE PROVISIONS ON THIS PAGE REPRESENT THE ONLY WARRANTY FROM MILNOR AND NO OTHER WARRANTY OR CONDITIONS, STATUTORY OR OTHERWISE, SHALL BE IMPLIED.

WE NEITHER ASSUME, NOR AUTHORIZE ANY EMPLOYEE OR OTHER PERSON TO ASSUME FOR US, ANY OTHER RESPONSIBILITY AND/OR LIABILITY IN CONNECTION WITH THE SALE OR FURNISHING OF OUR EQUIPMENT TO ANY BUYER.

How to Get the Necessary Repair Components



This document uses Simplified Technical English.
Learn more at <http://www.asd-ste100.org>.

You can get components to repair your machine from the approved supplier where you got this machine. Your supplier will usually have the necessary components in stock. You can also get components from the Milnor® factory.

Tell the supplier the machine model and serial number and this data for each necessary component:

- The component number from this manual
- The component name if known
- The necessary quantity
- The necessary transportation requirements
- If the component is an electrical component, give the schematic number if known.
- If the component is a motor or an electrical control, give the nameplate data from the used component.

To write to the Milnor factory:

Pellerin Milnor Corporation
Post Office Box 400
Kenner, LA 70063-0400
UNITED STATES

Telephone: 504-467-2787
Fax: 504-469-9777
Email: parts@milnor.com

— End of BIUUUD19 —

Trademarks

BNUUUU02.R01 0000158093 F.2 E.2 3/3/21, 9:47 AM Released

These words are trademarks of Pellerin Milnor[®] Corporation and other entities:

Table 1. Trademarks

AutoSpot [™]	GreenFlex [™]	MilMetrix [®]	PulseFlow [®]
CBW [®]	GearTrace [™]	MilTouch [™]	RAM Command [™]
Drynet [™]	GreenTurn [™]	MilTouch-EX [™]	RecircONE [®]
E-P Express [®]	Hydro-cushion [™]	MilRAIL [®]	RinSave [®]
E-P OneTouch [®]	Mentor [®]	Miltrac [™]	SmoothCoil [™]
E-P Plus [®]	Mildata [®]	MilVision [™]	Staph Guard [®]
Gear Guardian [®]	Milnor [®]	PBW [™]	

End of document: BNUUUU02

Safety and Maintenance

1

Safety—Continuous Batch Washer

1. General Safety Requirements—Vital Information for Management Personnel [Document BIUUUS04]

Incorrect installation, neglected preventive maintenance, abuse, and/or improper repairs, or changes to the machine can cause unsafe operation and personal injuries, such as multiple fractures, amputations, or death. The owner or his selected representative (owner/user) is responsible for understanding and ensuring the proper operation and maintenance of the machine. The owner/user must familiarize himself with the contents of all machine instruction manuals. The owner/user should direct any questions about these instructions to a Milnor® dealer or the Milnor® Service department.

Most regulatory authorities (including OSHA in the USA and CE in Europe) hold the owner/user ultimately responsible for maintaining a safe working environment. Therefore, the owner/user must do or ensure the following:

- recognize all foreseeable safety hazards within his facility and take actions to protect his personnel, equipment, and facility;
- work equipment is suitable, properly adapted, can be used without risks to health or safety, and is adequately maintained;
- where specific hazards are likely to be involved, access to the equipment is restricted to those employees given the task of using it;
- only specifically designated workers carry out repairs, modifications, maintenance, or servicing;
- information, instruction, and training is provided;
- workers and/or their representatives are consulted.

Work equipment must comply with the requirements listed below. The owner/user must verify that installation and maintenance of equipment is performed in such a way as to support these requirements:

- control devices must be visible, identifiable, and marked; be located outside dangerous zones; and not give rise to a hazard due to unintentional operation;
- control systems must be safe and breakdown/damage must not result in danger;
- work equipment is to be stabilized;
- protection against rupture or disintegration of work equipment;
- guarding, to prevent access to danger zones or to stop movements of dangerous parts before the danger zones are reached. Guards to be robust; not give rise to any additional hazards; not be easily removed or rendered inoperative; situated at a sufficient distance from the danger zone; not restrict view of operating cycle; allow fitting, replacing, or maintenance by restricting access to relevant area and without removal of guard/protection device;
- suitable lighting for working and maintenance areas;
- maintenance to be possible when work equipment is shut down. If not possible, then protection measures to be carried out outside danger zones;
- work equipment must be appropriate for preventing the risk of fire or overheating; discharges of gas, dust, liquid, vapor, other substances; explosion of the equipment or substances in it.

- 1.1. **Laundry Facility**—Provide a supporting floor that is strong and rigid enough to support—with a reasonable safety factor and without undue or objectionable deflection—the weight of the fully loaded machine and the forces transmitted by it during operation. Provide sufficient clearance for machine movement. Provide any safety guards, fences, restraints, devices, and verbal and/or posted restrictions necessary to prevent personnel, machines, or other moving machinery from accessing the machine or its path. Provide adequate ventilation to carry away heat and vapors. Ensure service connections to installed machines meet local and national safety standards, especially regarding the electrical disconnect (see the National Electric Code). Prominently post safety information, including signs showing the source of electrical disconnect.
- 1.2. **Personnel**—Inform personnel about hazard avoidance and the importance of care and common sense. Provide personnel with the safety and operating instructions that apply to them. Verify that personnel use proper safety and operating procedures. Verify that personnel understand and abide by the warnings on the machine and precautions in the instruction manuals.
- 1.3. **Safety Devices**—Ensure that no one eliminates or disables any safety device on the machine or in the facility. Do not allow machine to be used with any missing guard, cover, panel or door. Service any failing or malfunctioning device before operating the machine.
- 1.4. **Hazard Information**—Important information on hazards is provided on the machine safety placards, in the Safety Guide, and throughout the other machine manuals. **Placards must be kept clean so that the information is not obscured. They must be replaced immediately if lost or damaged. The Safety Guide and other machine manuals must be available at all times to the appropriate personnel.** See the machine service manual for safety placard part numbers. Contact the Milnor Parts department for replacement placards or manuals.
- 1.5. **Maintenance**—Ensure the machine is inspected and serviced in accordance with the norms of good practice and with the preventive maintenance schedule. Replace belts, pulleys, brake shoes/disks, clutch plates/tires, rollers, seals, alignment guides, etc. before they are severely worn. Immediately investigate any evidence of impending failure and make needed repairs (e.g., cylinder, shell, or frame cracks; drive components such as motors, gear boxes, bearings, etc., whining, grinding, smoking, or becoming abnormally hot; bending or cracking of cylinder, shell, frame, etc.; leaking seals, hoses, valves, etc.) Do not permit service or maintenance by unqualified personnel.

2. Safety Alert Messages—Internal Electrical and Mechanical Hazards [Document BIUUUS11]

The following are instructions about hazards inside the machine and in electrical enclosures.



WARNING 1: Electrocution and Electrical Burn Hazards—Contact with electric power can kill or seriously injure you. Electric power is present inside the cabinetry unless the main machine power disconnect is off.

- Do not unlock or open electric box doors.
- Do not remove guards, covers, or panels.
- Do not reach into the machine housing or frame.
- Keep yourself and others off of machine.
- Know the location of the main machine disconnect and use it in an emergency to remove all electric power from the machine.



WARNING [2]: Entangle and Crush Hazards—Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.

- Do not remove guards, covers, or panels.
- Do not reach into the machine housing or frame.
- Keep yourself and others off of machine.
- Know the location of all emergency stop switches, pull cords, and/or kick plates and use them in an emergency to stop machine motion. These may not stop certain devices such as pumps on some machines.



CAUTION [3]: Burn Hazards—Contact with hot goods or machine components can burn you.

- Do not remove guards, covers, or panels.
- Do not reach into the machine housing or frame.

3. Safety Alert Messages—External Mechanical Hazards [Document BIUUUS12]

The following are instructions about hazards around the front, sides, rear or top of the machine.

4. Safety Alert Messages—Cylinder and Processing Hazards [Document BIUUUS13]

The following are instructions about hazards related to the cylinder and laundering process.



WARNING [4]: Confined Space Hazards—Confinement in the cylinder can kill or injure you. Hazards include but are not limited to panic, burns, poisoning, suffocation, heat prostration, biological contamination, electrocution, and crushing.

- Do not attempt unauthorized servicing, repairs, or modification.



WARNING [5]: Explosion and Fire Hazards—Flammable substances can explode or ignite in the cylinder, drain trough, or sewer. The machine is designed for washing with water, not any other solvent. Processing can cause solvent-containing goods to give off flammable vapors.

- Do not use flammable solvents in processing.
- Do not process goods containing flammable substances. Consult with your local fire department/public safety office and all insurance providers.

5. Safety Alert Messages—Unsafe Conditions [Document BIUUUS14]

5.1. Damage and Malfunction Hazards

5.1.1. Hazards Resulting from Inoperative Safety Devices



WARNING [6]: Multiple Hazards—Operating the machine with an inoperative safety device can kill or injure personnel, damage or destroy the machine, damage property, and/or void the warranty.

- Do not tamper with or disable any safety device or operate the machine with a malfunctioning safety device. Request authorized service.



WARNING [7]: Electrocutation and Electrical Burn Hazards—Electric box doors—Operating the machine with any electric box door unlocked can expose high voltage conductors inside the box.

- Do not unlock or open electric box doors.



WARNING [8]: Entangle and Crush Hazards—Guards, covers, and panels—Operating the machine with any guard, cover, or panel removed exposes moving components.

- Do not remove guards, covers, or panels.

5.1.2. Hazards Resulting from Damaged Mechanical Devices



WARNING [9]: Multiple Hazards—Operating a damaged machine can kill or injure personnel, further damage or destroy the machine, damage property, and/or void the warranty.

- Do not operate a damaged or malfunctioning machine. Request authorized service.



CAUTION [10]: Machine Damage Hazards—Drive shaft and drive motors—Although the tunnel may operate with drive shafts disconnected between modules or units, or with a motor not functioning, the added stress on drive components will quickly damage the machine.

- Do not operate the machine with any evidence of damage or malfunction.

5.2. Careless Use Hazards

5.2.1. Careless Operation Hazards—Vital Information for Operator Personnel (see also operator hazards throughout manual)



WARNING [11]: Multiple Hazards—Careless operator actions can kill or injure personnel, damage or destroy the machine, damage property, and/or void the warranty.

- Do not tamper with or disable any safety device or operate the machine with a malfunctioning safety device. Request authorized service.
- Do not operate a damaged or malfunctioning machine. Request authorized service.
- Do not attempt unauthorized servicing, repairs, or modification.
- Do not use the machine in any manner contrary to the factory instructions.
- Use the machine only for its customary and intended purpose.
- Understand the consequences of operating manually.



CAUTION [12]: Goods Damage and Wasted Resources—Entering incorrect cake data causes improper processing, routing, and accounting of batches.

- Understand the consequences of entering cake data.

5.2.2. Careless Servicing Hazards—Vital Information for Service Personnel (see also service hazards throughout manuals)



WARNING [13]: Electrocutation and Electrical Burn Hazards—Contact with electric power can kill or seriously injure you. Electric power is present inside the cabinetry unless the main machine power disconnect is off.

- Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of

any other overriding standard.



WARNING [14]: Entangle and Crush Hazards—Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically.

- Do not service the machine unless qualified and authorized. You must clearly understand the hazards and how to avoid them.
- Abide by the current OSHA lockout/tagout standard when lockout/tagout is called for in the service instructions. Outside the USA, abide by the OSHA standard in the absence of any other overriding standard.



WARNING [15]: Confined Space Hazards—Confinement in the cylinder can kill or injure you. Hazards include but are not limited to panic, burns, poisoning, suffocation, heat prostration, biological contamination, electrocution, and crushing.

- Do not enter the cylinder until it has been thoroughly purged, flushed, drained, cooled, and immobilized.
- Abide by the confined space entry procedures in the reference manual.

— End of BIUUUS27 —

Safety Placard Use and Placement
76028,76039 G3 CBW & 92048 G4 CBW

BMP040038/2004313V
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Notes:

1. Replace placard immediately, if removed or unreadable.
2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

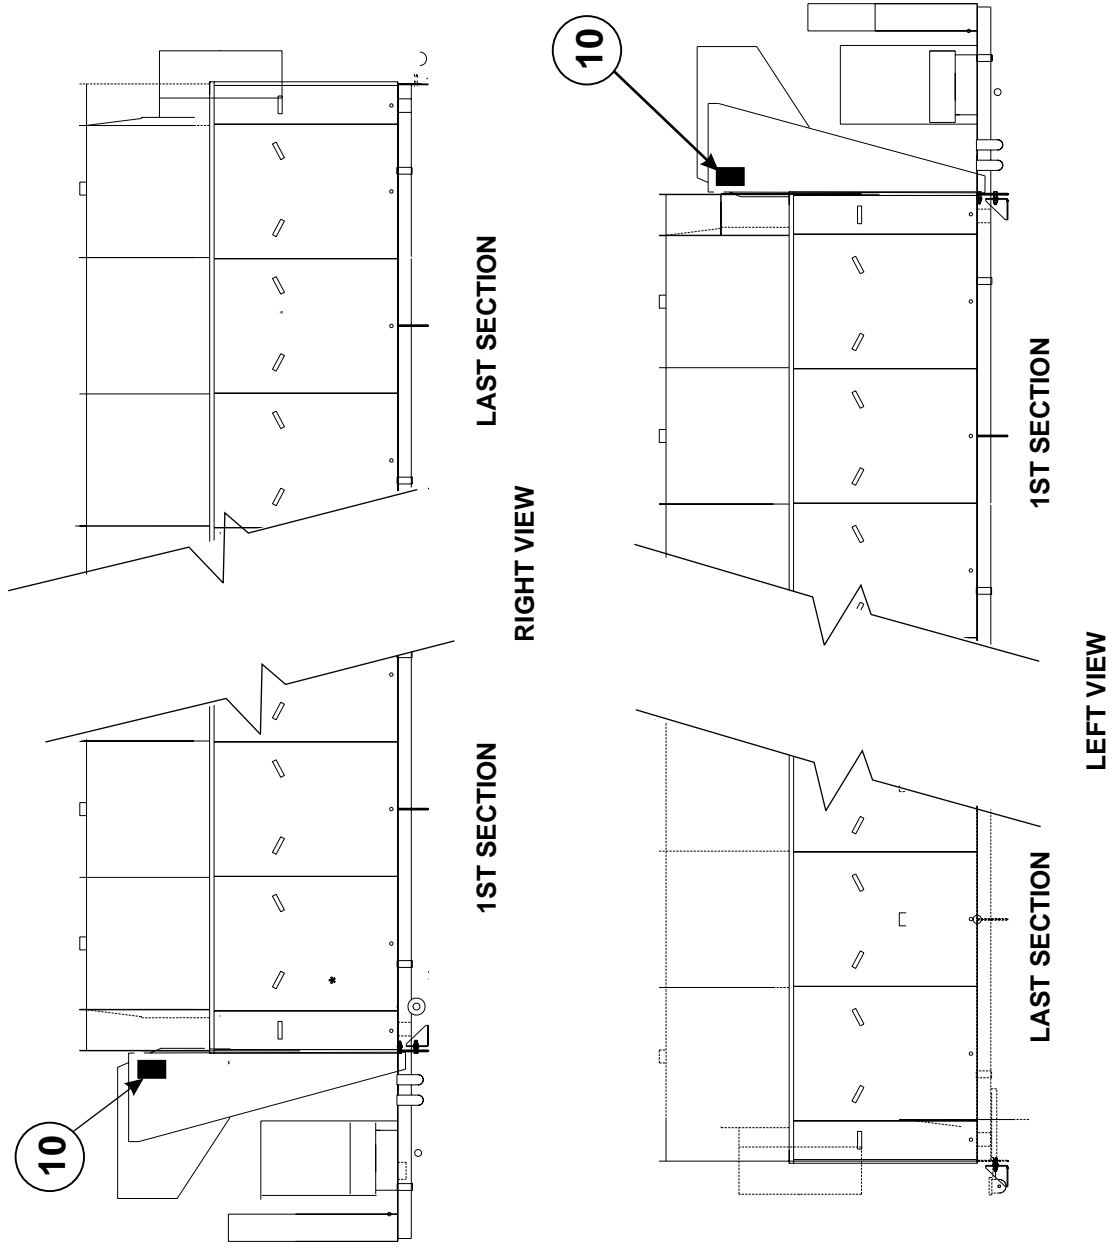



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Safety Placard Placement

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
			none	
-----COMPONENTS-----				
all	10	01 10511A	NPLT:CBW END HAZARD-TCATA	
all	20	01 10377A	NPLT:ELEC HAZARD LG-TCATA	
all	30	01 10699B	NPLT:SERV HZRD-ALUM-TCATA	

Safety Placard Use and Placement ISO
76028,76039 G3 CBW & 92048 G4 CBW

BMP040039/2004313V
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

**ISO Placards
shown on this page**

- Notes:**
1. Replace placard immediately, if removed or unreadable.
 2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

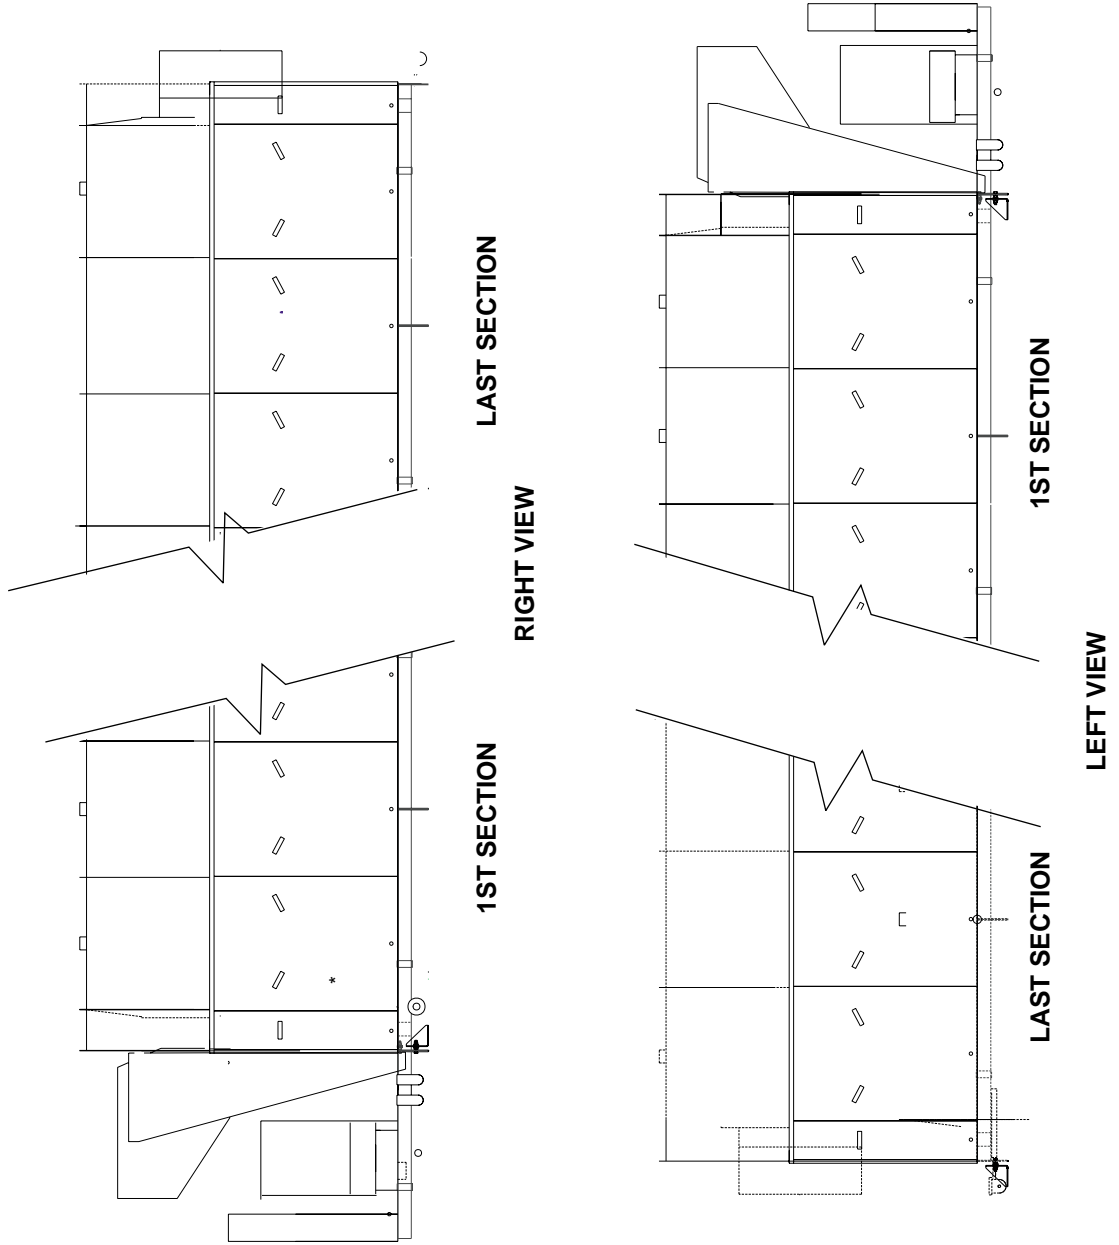



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Safety Placard Placement

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
<hr/>				
-----ASSEMBLIES-----				
none				
<hr/>				
-----COMPONENTS-----				
all	10	01 10511X	NPLT:CBW WARNINGS	
all	20	01 10377	NPLTE:"WARNING" 4X4	

Safety Placard Use and Placement

Mentor Controller for CBW

BMP040040/2004313V
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

Notes:


1. Replace placard immediately, if removed or unreadable.
2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

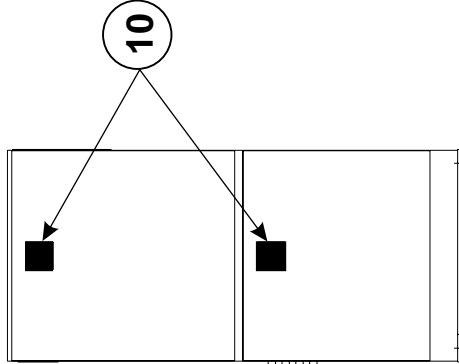


REAR VIEW

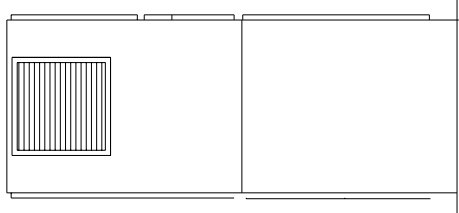

LEFT VIEW

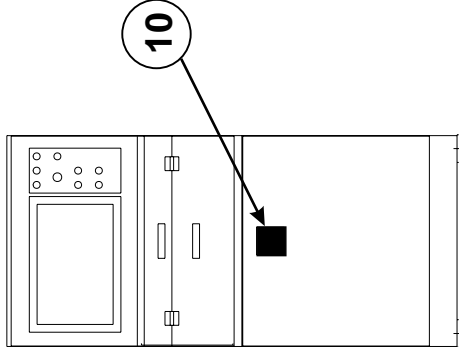

FRONT VIEW

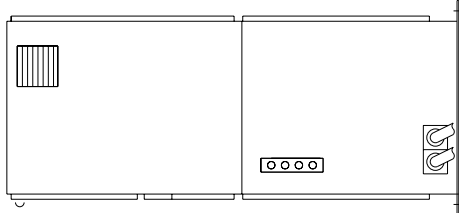

RIGHT VIEW



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Safety Placard Placement

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
			none	
			-----COMPONENTS-----	
all	10	01 10377A	NPLT:ELEC HAZARD LG-TCATA	




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.


ISO Placards shown on this page

Notes:


1. Replace placard immediately, if removed or unreadable.
2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

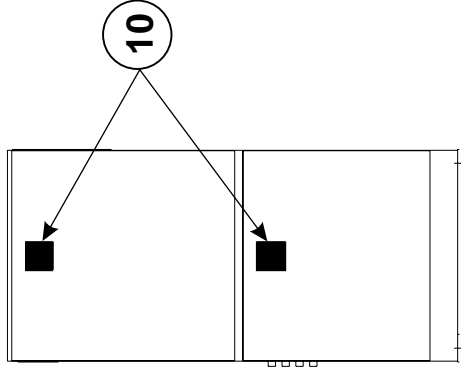


REAR VIEW

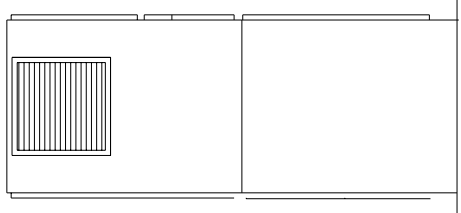

LEFT VIEW

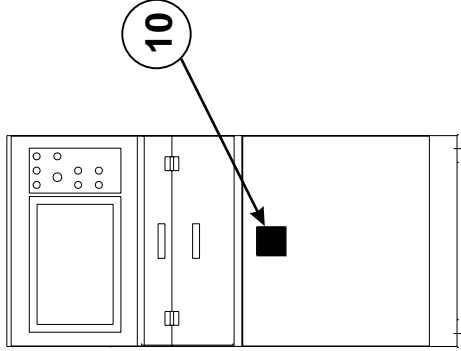

FRONT VIEW

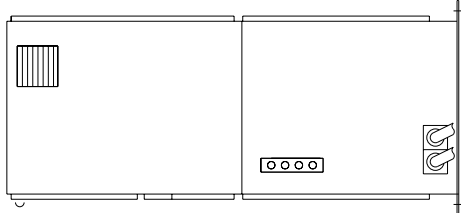

RIGHT VIEW



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Safety Placard Placement

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			none	
			COMPONENTS	
all	10	01 10377	NPLTE:"WARNING" 4X4	

Safety Placard Use and Placement

Inverter Box for CBW

BMP040042/2004313V
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

Notes:

- 1. Replace placard immediately, if removed or unreadable.
- 2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

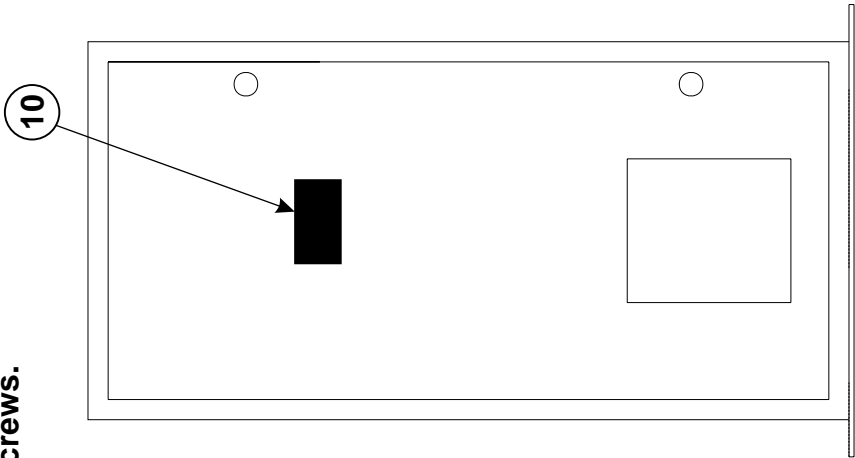

FRONT VIEW



RIGHT VIEW



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Safety Placard Placement

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
			none	
			-----COMPONENTS-----	
all	10	01 10377A	NPLT:ELEC HAZARD LG-TCATA	




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.


ISO Placards shown on this page

Notes:

1. Replace placard immediately, if removed or unreadable.
2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

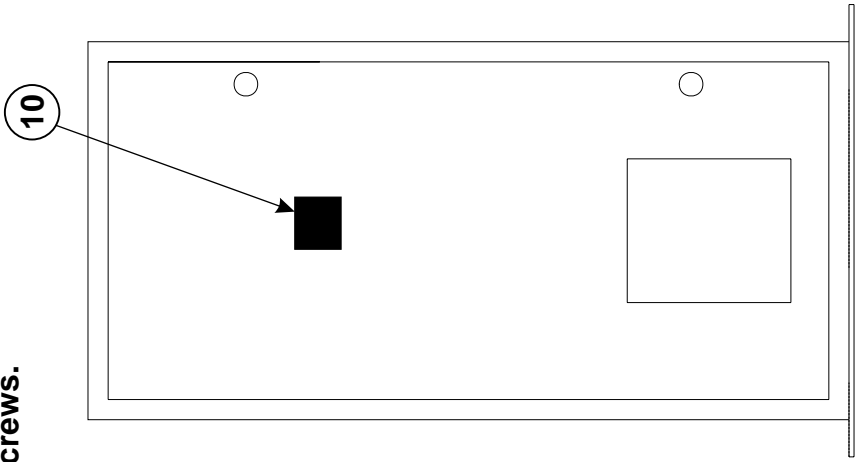

FRONT VIEW



RIGHT VIEW

Litho in U.S.A.

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

22

Safety Placard Use and Placement

TYPICAL ALL CBW AUXILIARY TANKS

BMP040046/2004313V
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

Notes:

1. Replace placard immediately, if removed or unreadable.
2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

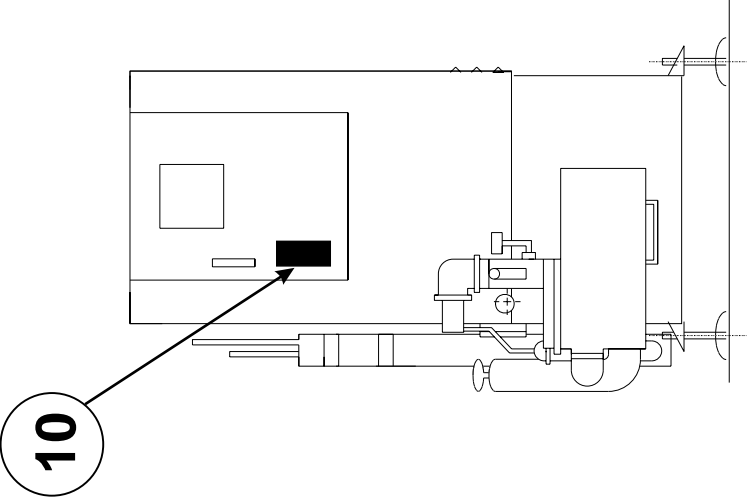

RIGHT VIEW

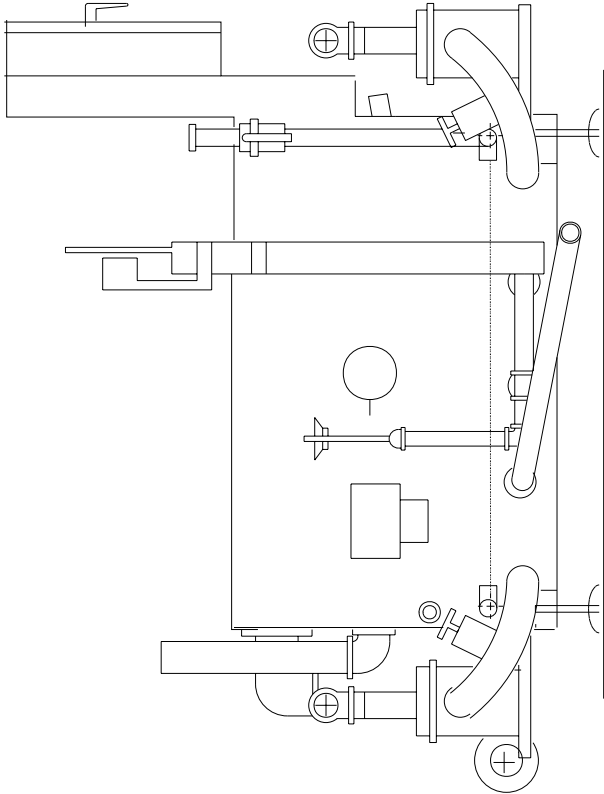

Note:
Pumps and piping will vary dependent on function.

FRONT VIEW

Litho in U.S.A.

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			none	
			COMPONENTS	
all	20	01 10375C	NPLT:E-HAZARD SM VERTCL-TCATA	

Safety Placard Use and Placement ISO

Typical All CBW Auxiliary Tanks

BMP040047/2004313V
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

ISO Placards shown on this page


Notes:

1. Replace placard immediately, if removed or unreadable.
2. Approximate locations of placards are shown. Mounting holes are provided on machine. If aluminum placard use #8 self-tapping screws.

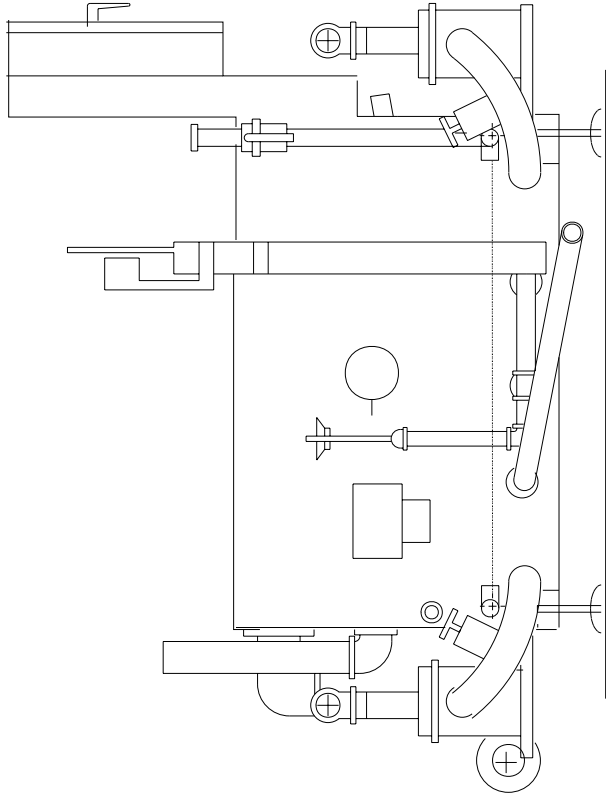

Note:
Pumps and piping will vary dependent on function.

FRONT VIEW

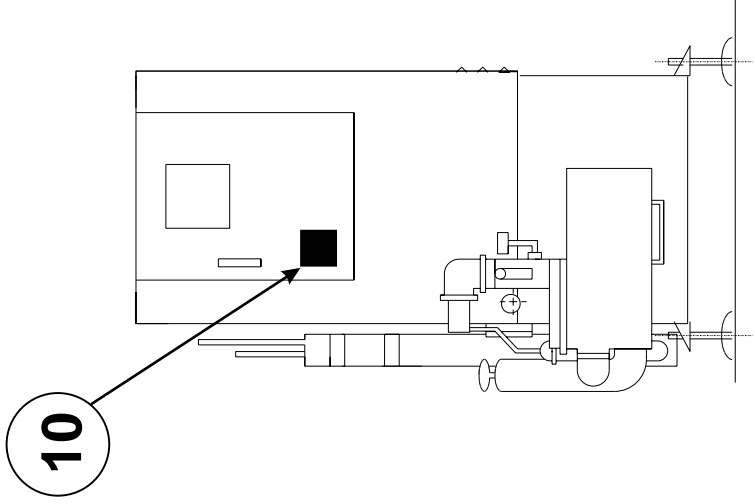

RIGHT VIEW

Litho in U.S.A.

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.


Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			none	
			COMPONENTS	
all	20	01 10375	NPLTE:"WARNING" 2X2	

Cover Installation
76028 & 76039 G3 Tunnels

BMP000075/2023103B
(Sheet 1 of 1)

 **Pellerin Milnor Corporation**
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

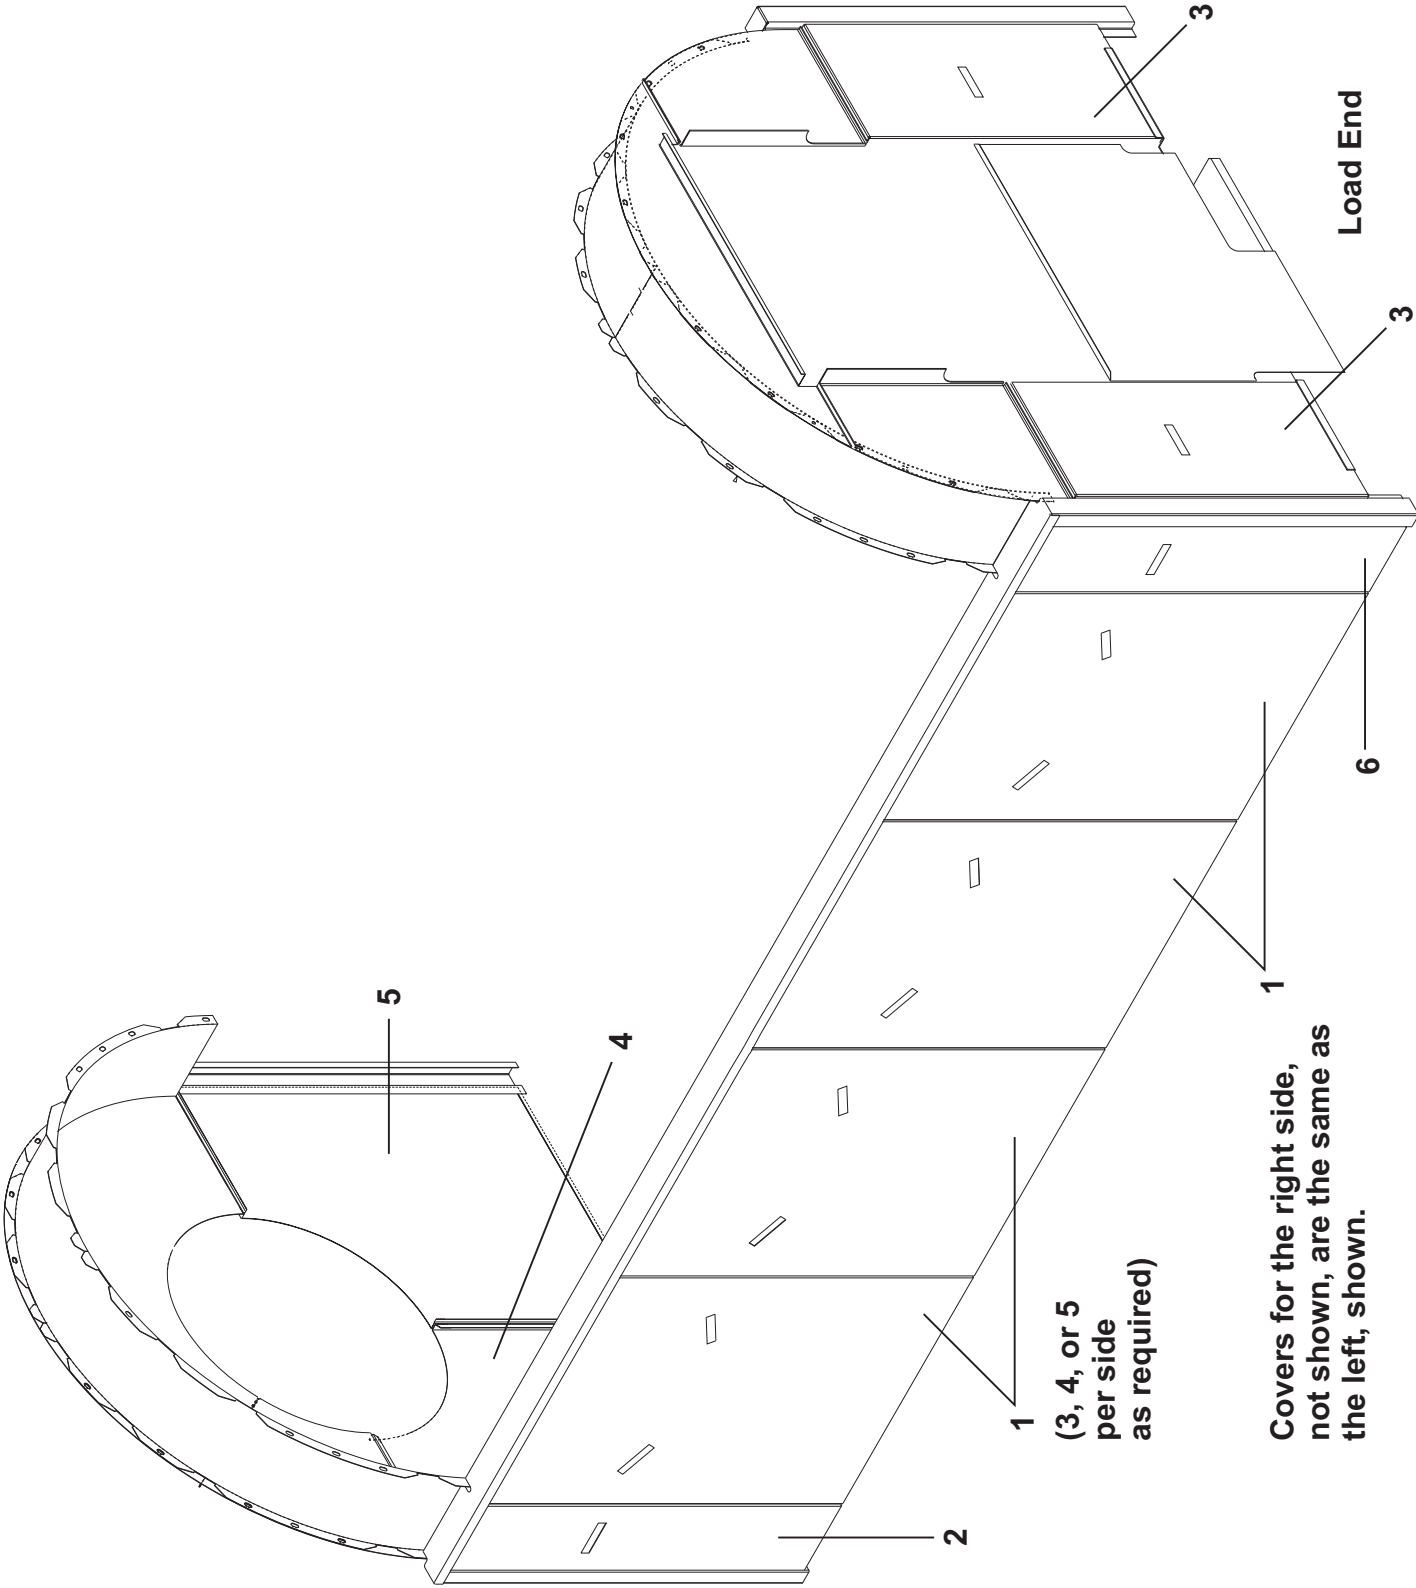

1
(3, 4, or 5
per side
as required)

2

3

3

6

Load End

Covers for the right side,
not shown, are the same as
the left, shown.

Parts List—Cover Installation

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----REFERENCE ASSEMBLIES-----				
	AA	G66GC003F	7628G3 INSTCOVER ALUM 4M FIRST	7628G3 FIRST SECTION
	AB	G66GC003M	7628G3 INSTCOVER ALUM 4M MID	7628G3 MID SECTIONS
	AC	G66GC003L	7628G3 INSTCOVER ALUM 4M LST	7628G3 LAST SECTION
	BA	G65GC007F	7639G3 INSTCOVER ALUM 4M FIRST	7639G3 FIRST SECTION
	BB	G65GC007M	7639G3 INSTCOVER ALUM 4M MID	7639G3 MID SECTIONS
	BC	G65GC007L	7639G3 INSTCOVER ALUM 4M LAST	7639G3 LAST SECTION
-----COMPONENTS-----				
AA,AB,AC BA,BB,BC	1	A65GC016	ASSY=COVER VINYL 30.0X54.56	
	1	A65GC015	ASSY=COVER VINYL 39.5X54.56	
AA,AB BA,BB	2	A65GC017	ASSY=COVER VINYL 23.38X54.56	
AA,BA	3	A65GC019	ASSY=COVER VINYL 19.75X44.12	
AC,BC	4	A65GC007	ASSY=COVER ALUM LF 40.97X52.11	
AC,BC	5	A65GC006	ASSY=COVER ALUM RT 40.97X52.11	
AA,AC BA,BC	6	A65GC018	ASSY=COVER VINYL 11.06X54.56	

Tunnel Feet & Shipping Brackets

1 of 2

76028 & 76039 G3 Tunnels

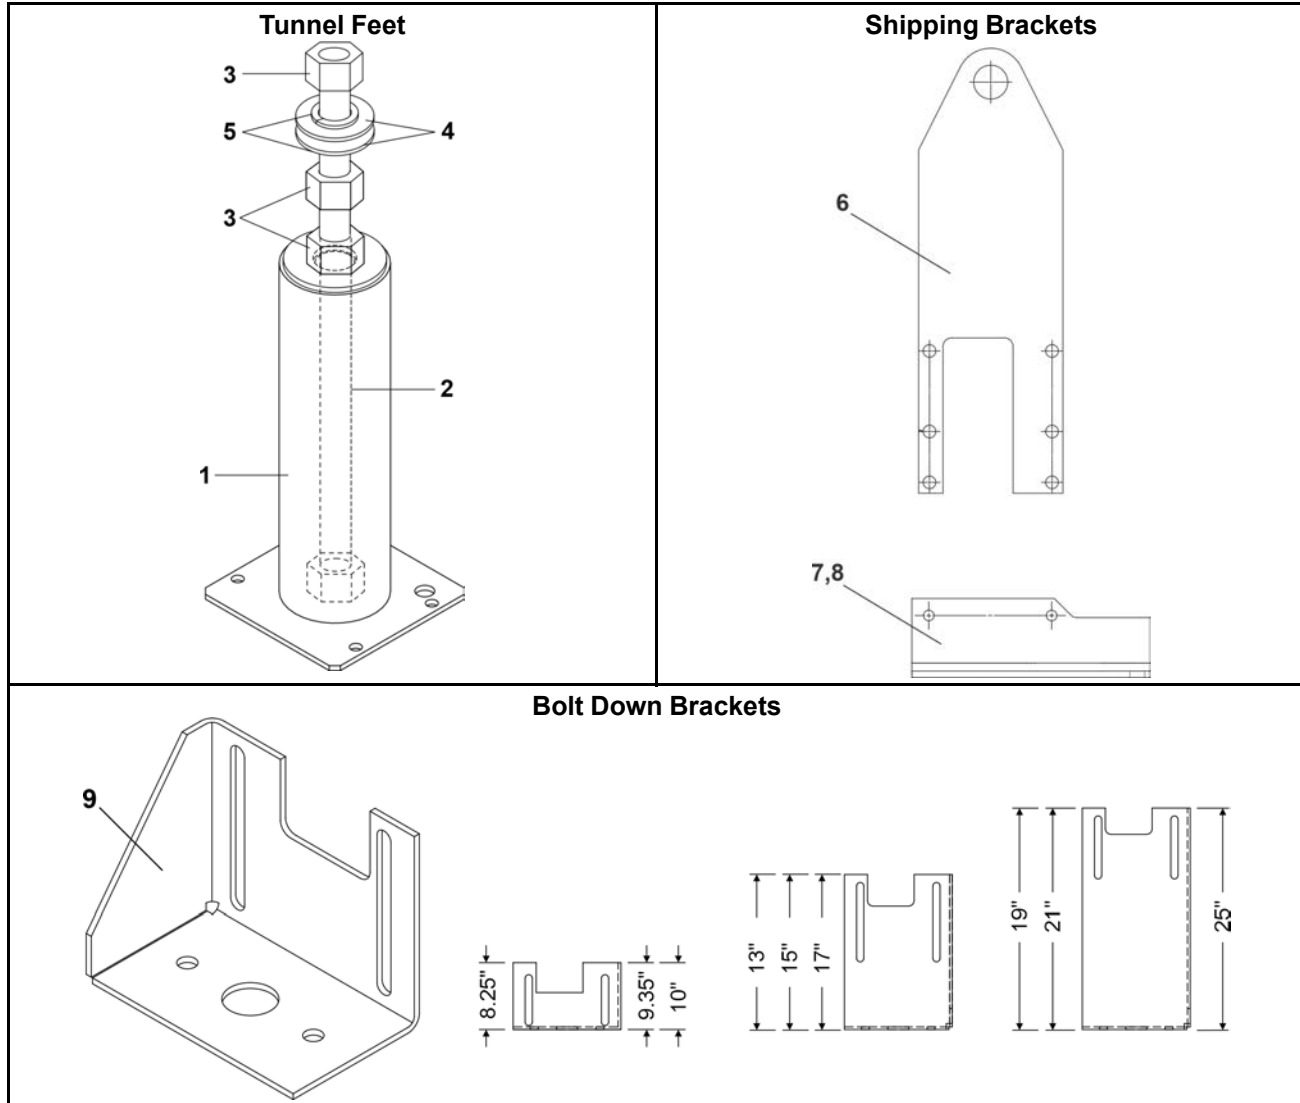


Table 1. Parts List—Tunnel Feet & Shipping Brackets

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Components				
A	1	W6 20408	CBW FOOT WLMT 11"-17" FLOOR TO BASE	11'–17" Floor to Base Tunnel Clearance
B	1	W6 20407	CBW FOOT WLMT	17'–24" Floor to Base Tunnel Clearance
A	2	17R125A18K	ROD=1.25X-8UNX18.5 ALLTHRD. ZN	
B	2	17R125A21K	STUD 1.25-8UNX21 ALLTHRD/ZN-B7	

Tunnel Feet & Shipping Brackets

2 of 2

76028 & 76039 G3 Tunnels

Parts List—Tunnel Feet & Shipping Brackets (cont'd.)

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
all	3	15G261	HVHXNUT 1+1/4-8UNC2B ZINC GR2H	
all	4	15U440	FLATWASH(USS STD) 1+1/8" STLHD	
all	5	15U425	LOCKWASHER MEDIUM 1+1/4"ZINC P	
all	6	06 70016B	G3 SHIPPING/LIFTING PLATE	
all	7	06 70016	BOLT DOWN BKT SHIPPING-RIGHT	
all	8	06 70016A	BOLT DOWN BKT SHIPPING-LEFT	
all	9	06 70016S	7639G3 FLOOR MNT BKT SHORT S/S	8.25"
all	9	06 70016G	FLOOR MNT BKT SHORT 9.35	9.35"
all	9	06 70016J	FLOOR MNT BKT SS 9.5 LG	10"
all	9	06 70016C	7639G3 FLOOR MNT BKT LONG 14.6	13"
all	9	06 70016Z	FLOOR MNT BRKT SS 15.00 LG	15"
all	9	06 70016W	FLOOR MNT BRKT S/S 17.00 LG	17"
all	9	06 70016X	FLOOR MNT BRKT S/S 19.00 LG	19"
all	9	06 70016T	FLOOR MNT BKT SS 21.00 LG	21"
all	9	06 70016U	FLOOR MNT BKT SS 25.00 LG	25"

BIUUUI02PL (Published) Book specs- Dates: 20170824 / 20170824 / 20170824 Lang: ENG01 Applic: PCL

Tag Guidelines for the Models Listed Below

76028L3F 76028L4F 76028L4S 76028L5F 76028L5S 76039L3F 76039L3S
76039L4F 76039L4S

Notice 1: This information may apply to models in addition to those listed above. It applies to paper tags. It does not apply to the vinyl or metal safety placards, which must remain permanently affixed to the machine and replaced if no longer readable.

Paper tags on the machine provide installation guidelines and precautions. The tags can be tie-on or adhesive. You can remove tie-on tags and white, adhesive tags after installation. Yellow adhesive tags must remain on the machine.

The following entries explain the installation tags. Each entry includes: 1) the tag illustration, 2) the tag part number displayed at the bottom of the tag, and 3) the meaning of the tag.

Display or Action



Explanation

Read the manuals before proceeding. This symbol appears on most tags. The machine ships with safety, operator, and routine maintenance guides for customer use. Milnor dealer manuals for installing, servicing, and commissioning this machine are also available from the Milnor Parts department.




B2TAG88005: This carefully built product was tested and inspected to meet Milnor® performance and quality standards by (identification mark of tester).




B2TAG94078: Do not forklift here; do not jack here; do not step here—whichever applies.



B2TAG94081: Motor must rotate in this direction. On single motor washer-extractors and centrifugal extractors, the drive motor must turn in this direction during draining and extraction. This tag is usually wrapped around a motor housing. If the motor turns in the opposite direction when the machine is first tested, the electrical hookup is incorrect and must be reversed as explained in the schematic manual.

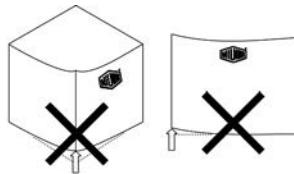


B2TAG94084: Do not lift from one corner of the machine, as this can cause the frame to rack, damaging it.

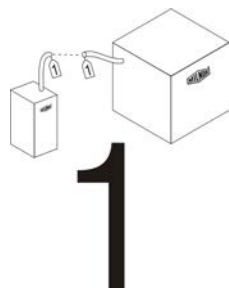


B2TAG94102 shown—others similar: Match up the components with this number. These tags are used to pair up electrical or hose connections between major components of a machine shipped dis-assembled.

Display or Action

Explanation

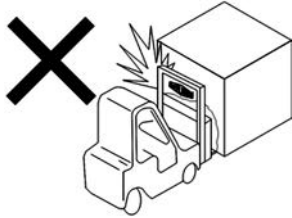


B2TAG94118: Do not strike shipping container during fork-lifting. Fragile components inside.

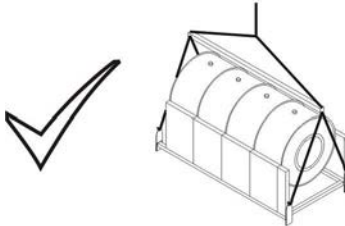

B2TAG94144: Lift tunnel units as shown, using the lifting eyes and spreader bar.




B2TAG94146: Fill with oil to this level.

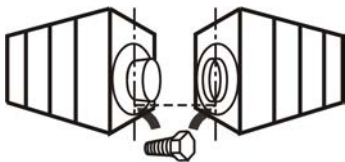

B2TAG98006: Align top dead center bolts when mating CBW tunnel washer units.




B2TAG99006: Do not loosen allen screws. Screws hold springs under tension which can fly out with great force.

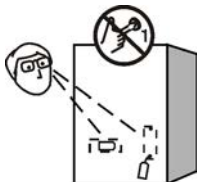

B2T2001028: Look for tags inside the machine. These tags may identify shipping restraints to be removed or components to be installed. Do not start the machine until these actions are completed.




B2T2002013: Do not start the machine until shipping restraints are removed. This tag will appear on the outside of the machine to alert you to the presence of internal shipping restraints. A tag will also appear on the restraint to help identify it. Most, but not all shipping restraints display the color red. Some shipping restraints are also safety stands. Do not discard these.



Tag Guidelines for the Models Listed Below

Display or Action

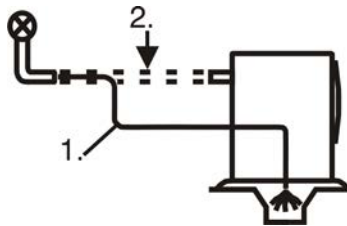

Explanation


B2T2002032: Flush incoming water lines before making connections.




B2T2003014: Make sure that you use the specified hydraulic oil.



B2T2004027: Steam connection (optional)

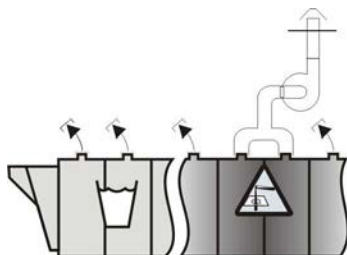

B2T2008001: Read the installation instructions. Remove temporary vent covers. Install a powered vent unit on the oxidation zone modules and a separate powered vent unit on the finish zone module and adjacent press, if there is one.

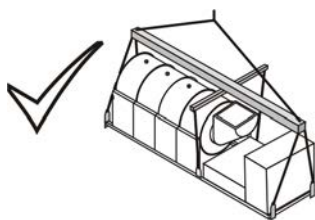


B2T2010018: Lift from all lifting points and use spreader bars as shown. (Used on PulseFlow machines only.)



B2T2010023: Set the press frame in accordance with this instruction and the installation manual.

Display or Action

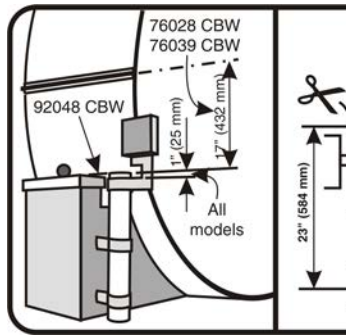

Explanation

B2T2011014: Set clips on level float rods as shown.

— End of BIUUUI02 —

Prevent Damage from Chemical Supplies and Chemical Systems

BNUUUR02.C01 0000160549 B.3 E.3 1/2/20 2:14 PM Released

All Milnor® washer-extractors and CBW® tunnel washers use stainless steel with the ANSI 304 specification. This material gives good performance when chemical supplies are correctly applied. If chemical supplies are incorrectly applied, this material can be damaged. The damage can be very bad and it can occur quickly.

Chemical supply companies usually:

- supply chemical pump systems that put the supplies in the machine,
- connect the chemical pump system to the machine,
- write wash formulas that control the chemical concentrations.

The company that does these procedures must make sure that these procedures do not cause damage. **Pellerin Milnor Corporation accepts no responsibility for chemical damage to the machines it makes or to the goods in a machine.**

1. How Chemical Supplies Can Cause Damage

BNUUUR02.R01 0000160548 B.4 E.3 1/2/20 2:14 PM Released

Dangerous Chemical Supplies and Wash Formulas — Some examples that can cause damage are:

- a very high concentration of chlorine bleach,
- a mixture of acid sour and hypo chlorite,
- chemical supplies (examples: chlorine bleach, hydrofluosilicic acid) that stay on the stainless steel because they are not quickly flushed with water.

The book “Textile Laundering Technology” by Charles L. Riggs gives data about correct chemical supplies and formulas.

Incorrect Configuration or Connection of Equipment — Many chemical systems:

- do not prevent a vacuum in the chemical tube (for example, with a vacuum breaker) when the pump is off,
- do not prevent flow (for example, with a valve) where the chemical tube goes in the machine.

Damage will occur if a chemical supply can go in the machine when the chemical system is off. Some configurations of components can let the chemical supplies go in the machine by a siphon ([Figure 1: Incorrect Configurations That Let the Chemical Supply Go In the Machine by a Siphon, page 2](#)). Some can let chemical supplies go in the machine by gravity ([Figure 2: Incorrect Configurations That Let the Chemical Supply Go In the Machine by Gravity, page 3](#)).

Figure 1. Incorrect Configurations That Let the Chemical Supply Go In the Machine by a Siphon

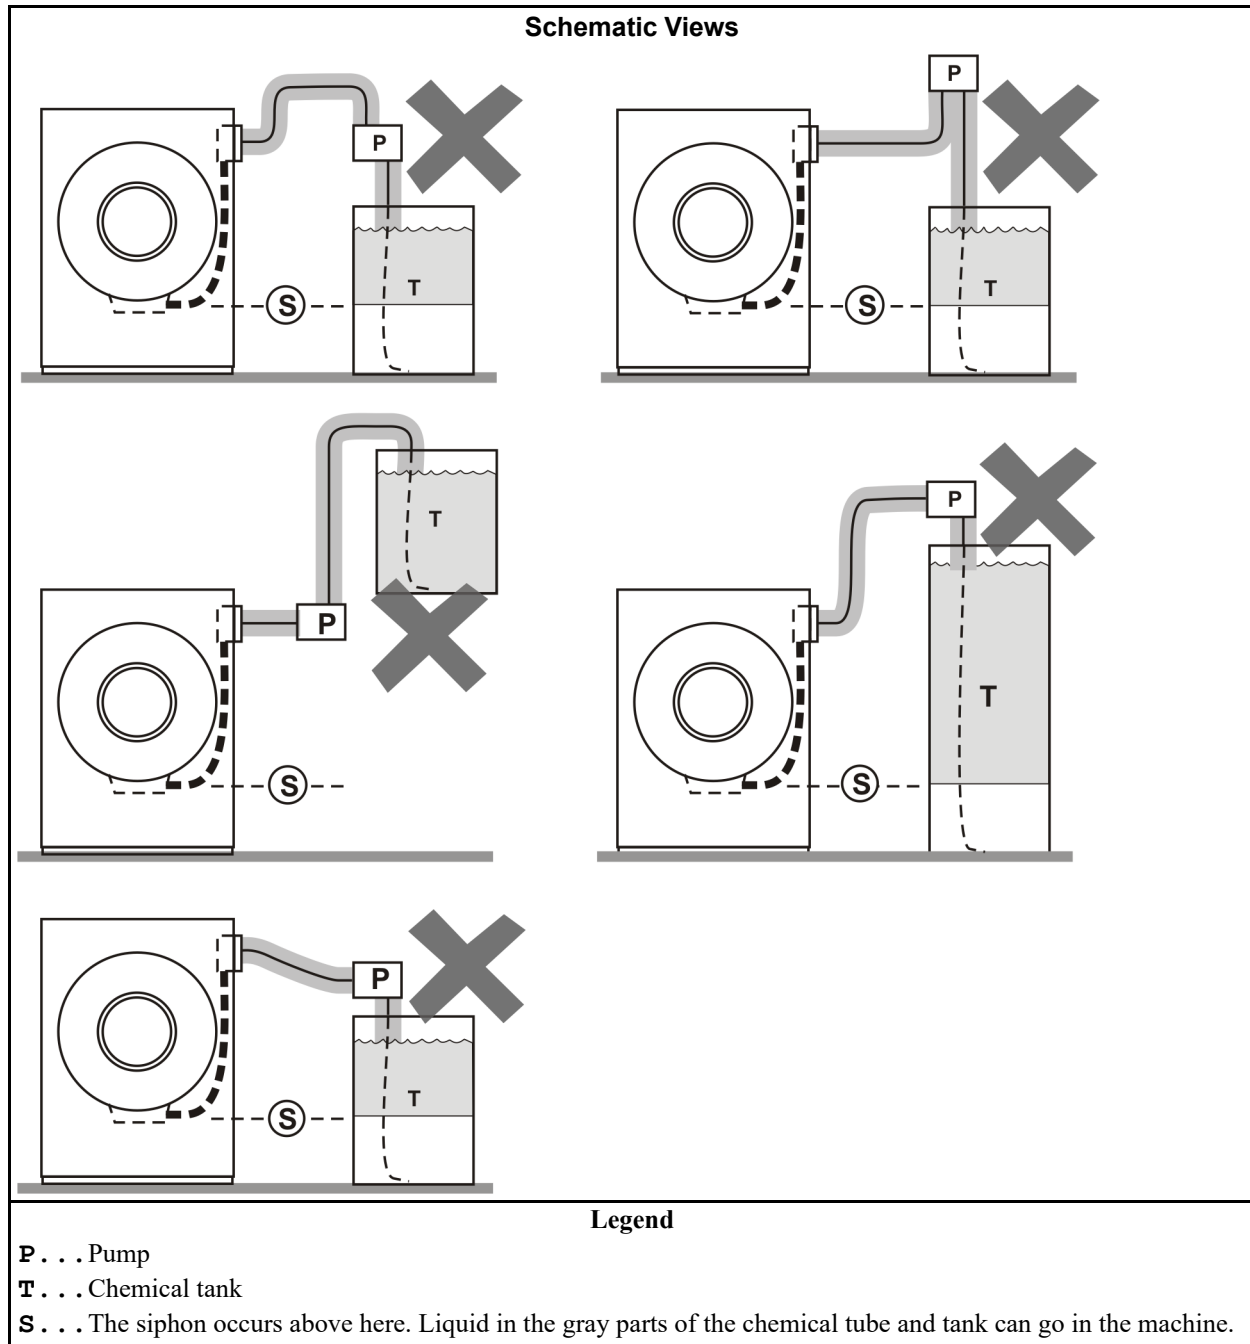
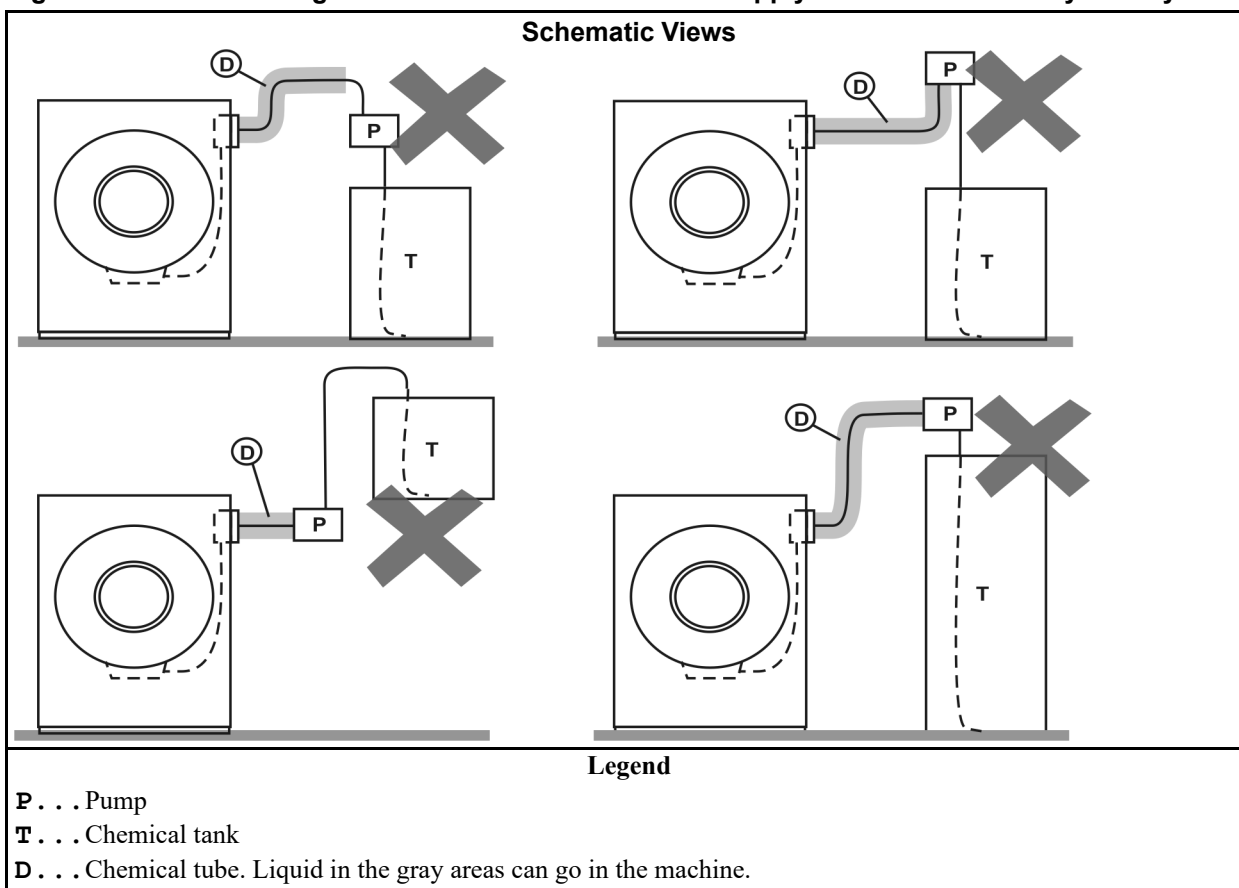
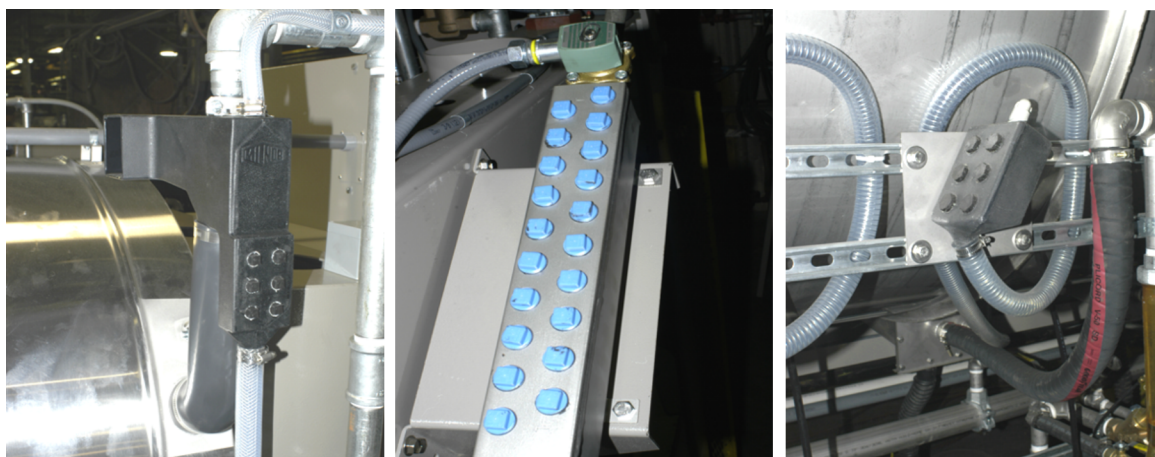


Figure 2. Incorrect Configurations That Let the Chemical Supply Go In the Machine by Gravity

2. Equipment and Procedures That Can Prevent Damage

BNUUUR02.R02 0000160545 B.3 E.3 1/2/20 2:14 PM Released

Use the chemical manifold supplied. — There is a manifold on the machine to attach chemical tubes from a chemical pump system. The manifold has a source of water to flush the chemical supplies with water.

Figure 3. Examples of Manifolds for Chemical Tubes. Your equipment can look different.


Close the line. — If the pump does not always close the line when it is off, use a shutoff valve to do this.

Do not let a vacuum occur. — Supply a vacuum breaker in the chemical line that is higher than the full level of the tank.

Flush the chemical tube with water. — If the liquid that stays in the tube between the pump and the machine can flow in the machine, flush the tube with water after the pump stops.

Put the chemical tube fully below the inlet. — It is also necessary that there is no pressure in the chemical tube or tank when the system is off.

Figure 4. A Configuration that Prevents Flow in the Machine When the Pump is Off (if the chemical tube and tank have no pressure)

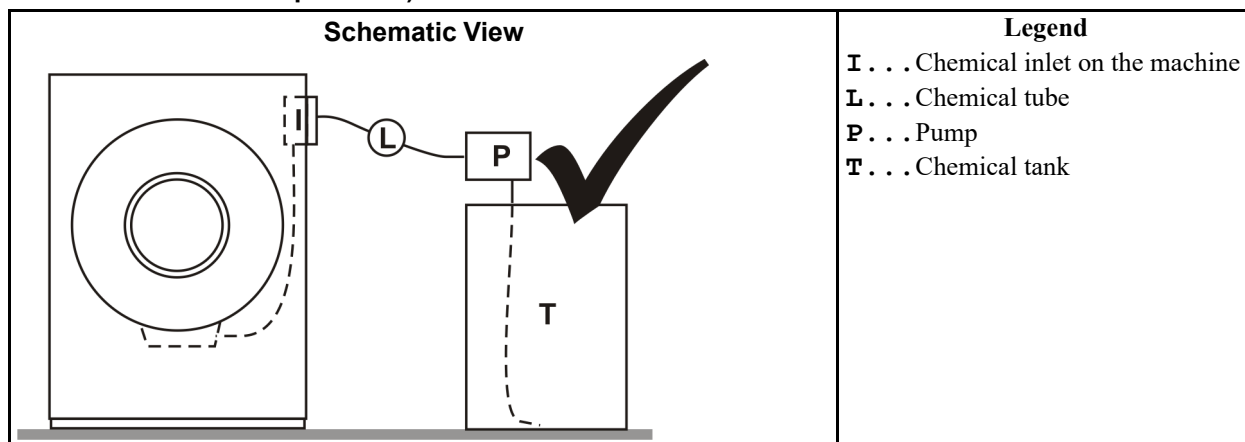

Prevent leaks. — When you do maintenance on the chemical pump system:

- Use the correct components.
- Make sure that all connections are the correct fit.
- Make sure that all connections are tight.

End of document: BNUUUR02

Torque Requirements for Fasteners



This document uses Simplified Technical English. Learn more at <http://www.asd-ste100.org>.

The document about the assembly gives the torque requirements for other fasteners. **If fastener torque specifications or threadlocker requirements in an assembly document are different from this document, use the assembly document.**

Figure 1: The Bolts in Milnor® Equipment

The Marks on Bolt Heads	Legend
	<p>A. SAE Grades 1 and 2, ASTM A307, and stainless steel</p> <p>B. Grade BC, ASTM A354</p> <p>C. SAE Grade 5, ASTM A449</p> <p>D. SAE Grade 8 and ASTM A354 BD</p>

1. Torque Values

These tables give the standard dimension, grade, threadlocker, and torque requirements for fasteners frequently used on Milnor® equipment.

Note 1: Data from the Pellerin Milnor® Corporation “Bolt Torque Specification” (bolt_torque_milnor.xls/2002096).

1.1. Fasteners Made of Carbon Steel

1.1.1. Without a Threadlocker

Table 1: Torque Values for Standard Fasteners with Maximum 5/16-inch Diameters and No Lubricant

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-Inches	N-m	Pound-Inches	N-m	Pound-Inches	N-m	Pound-Inches	N-m
1/4 x 20	66	7	101	11	143	16	126	14
1/4 x 28	76	9	116	13	163	18	--	--
5/16 x 18	136	15	209	24	295	33	258	29
5/16 x 24	150	17	232	26	325	37	--	--

Torque Requirements for Fasteners

Table 2: Torque Values for Standard Fasteners Larger Than 5/16-inch Diameters and No Lubricant

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m
3/8 x 16	20	27	31	42	44	59	38	52
3/8 x 24	23	31	35	47	50	68	--	--
7/16 x 14	32	43	49	66	70	95	61	83
7/16 x 20	36	49	55	75	78	105	--	--
1/2 x 13	49	66	75	102	107	145	93	126
1/2 x 20	55	75	85	115	120	163	--	--
9/16 x 12	70	95	109	148	154	209	134	182
9/16 x 18	78	106	121	164	171	232	--	--
5/8 x 11	97	131	150	203	212	287	186	252
5/8 x 18	110	149	170	231	240	325	--	--
3/4 x 10	172	233	266	361	376	510	329	446
3/4 x 16	192	261	297	403	420	569	--	--
7/8 x 9	167	226	429	582	606	821	531	719
7/8 x 14	184	249	473	641	668	906	--	--
1 x 8	250	339	644	873	909	1232	796	1079
1 x 12	274	371	704	954	994	1348	--	--
1 x 14	281	381	723	980	1020	1383	--	--
1 1/8 x 7	354	480	794	1077	1287	1745	1126	1527
1 1/8 x 12	397	538	891	1208	1444	1958	--	--
1 1/4 x 7	500	678	1120	1519	1817	2464	1590	2155
1 1/4 x 12	553	750	1241	1682	2012	2728	--	--
1 3/8 x 6	655	888	1469	1992	2382	3230	2085	2827
1 3/8 x 12	746	1011	1672	2267	2712	3677	--	--
1 1/2 x 6	869	1178	1949	2642	3161	4286	2767	3751
1 1/2 x 12	979	1327	2194	2974	3557	4822	--	--

Table 3: Torque Values for Plated Fasteners with Maximum 5/16-inch Diameters and No Lubricant

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-Inches	N-m	Pound-Inches	N-m	Pound-Inches	N-m	Pound-Inches	N-m
1/4 x 20	49	6	76	9	107	12	95	11
1/4 x 28	56	6	88	10	122	14	--	--
5/16 x 18	102	12	156	18	222	25	193	22
5/16 x 24	113	13	174	20	245	28	--	--

Table 4: Torque Values for Plated Fasteners Larger Than 5/16-inch Diameters and No Lubricant

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m
3/8 x 16	15	20	23	31	33	44	29	38
3/8 x 24	17	23	26	35	37	49	--	--
7/16 x 14	24	32	37	50	52	71	46	61
7/16 x 20	27	36	41	55	58	78	--	--
1/2 x 13	37	49	56	76	80	106	70	93
1/2 x 20	41	55	64	85	90	120	--	--
9/16 x 12	53	70	81	110	115	153	101	134
9/16 x 18	59	79	91	122	128	174	--	--
5/8 x 11	73	97	113	150	159	212	139	186
5/8 x 18	83	110	127	172	180	240	--	--
3/4 x 10	129	173	200	266	282	376	246	329
3/4 x 16	144	192	223	297	315	420	--	--
7/8 x 9	125	166	322	430	455	606	398	531
7/8 x 14	138	184	355	474	501	668	--	--
1 x 8	188	250	483	644	682	909	597	796
1 x 12	205	274	528	716	746	995	--	--
1 x 14	210	280	542	735	765	1037	--	--
1 1/8 x 7	266	354	595	807	966	1288	845	1126
1 1/8 x 12	298	404	668	890	1083	1444	--	--
1 1/4 x 7	375	500	840	1120	1363	1817	1192	1590
1 1/4 x 12	415	553	930	1261	1509	2013	--	--
1 3/8 x 6	491	655	1102	1470	1787	2382	1564	2085
1 3/8 x 12	559	758	1254	1672	2034	2712	--	--
1 1/2 x 6	652	870	1462	1982	2371	3161	2075	2767
1 1/2 x 12	733	994	1645	2194	2668	3557	--	--

1.1.2. With a Threadlocker

Table 5: Threadlocker by the Diameter of the Bolt (see Note 2)

LocTite Product	Dimension			
	1/4-inch	1/4- to 5/8-inch	5/8- to 7/8-inch	1-inch +
LocTite 222	OK			
LocTite 242		OK		
LocTite 262			OK	
LocTite 272			High temperature	
LocTite 277				OK

Note 2: The acceptable bolt size ranges for various LocTite® threadlocking products is the LocTite manufacturer's **general** recommendation. Specific applications sometime require that a LocTite product is applied to a bolt size outside the ranges shown here. For example, Milnor specifies LocTite 242 for use on certain 1" bolt applications and has confirmed this usage with the LocTite manufacturer. You may see variances such as this in the documentation for specific machine assemblies.

Torque Requirements for Fasteners

Table 6: Torque Values if You Apply LocTite 222

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-inches	N-m	Pound-inches	N-m	Pound-inches	N-m	Pound-inches	N-m
1/4 x 20	60	7	96	11	132	15	108	12
1/4 x 28	72	8	108	12	144	16	--	--

Table 7: Torque Values if You Apply LocTite 242

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m
5/16 x 18	11	15	17	23	25	34	22	30
5/16 x 24	13	18	19	26	27	37	27	37
3/8 x 16	20	27	31	42	44	60	38	52
3/8 x 24	23	31	35	47	50	68	--	--
7/16 x 14	32	43	49	66	70	95	61	83
7/16 x 20	36	49	55	75	78	106	--	--
1/2 x 13	49	66	75	102	107	145	93	126
1/2 x 20	55	75	85	115	120	163	--	--
9/16 x 12	70	95	109	148	154	209	134	182
9/16 x 18	78	106	121	164	171	232	--	--
5/8 x 11	97	132	150	203	212	287	186	252
5/8 x 18	110	149	170	230	240	325	--	--

Table 8: Torque Values if You Apply LocTite 262

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m
3/4 x 10	155	210	240	325	338	458	296	401
3/4 x 16	173	235	267	362	378	512	--	--
7/8 x 9	150	203	386	523	546	740	477	647
7/8 x 14	165	224	426	578	601	815	--	--

Table 9: Torque Values if You Apply LocTite 272 (High-Temperature)

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m
1 x 8	350	475	901	1222	1272	1725	1114	1510
1 x 12	383	519	986	1337	1392	1887	--	--
1 x 14	393	533	1012	1372	1428	1936	--	--
1-1/8 x 7	496	672	1111	1506	1802	2443	1577	2138
1-1/8 x 12	556	754	1247	1691	2022	2741	--	--
1-1/4 x 7	700	949	1568	2126	2544	3449	2226	3018
1-1/4 x 12	774	1049	1737	2355	2816	3818	--	--
1-3/8 x 6	917	1243	2056	2788	3335	4522	2919	3958
1-3/8 x 12	1044	1415	2341	3174	3797	5148	--	--
1-1/2 x 6	1217	1650	2729	3700	4426	6001	3873	5251
1-1/2 x 12	1369	1856	3071	4164	4980	6752	--	--

Table 10: Torque Values if You Apply LocTite 277

Dimension	The Grade of the Bolt							
	Grade 2		Grade 5		Grade 8		Grade BC	
	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m
1 x 8	325	441	837	1135	1181	1601	1034	1402
1 x 12	356	483	916	1242	1293	1753	--	--
1 x 14	365	495	939	1273	1326	1798	--	--
1-1/8 x 7	461	625	1032	1399	1674	2270	1464	1985
1-1/8 x 12	516	700	1158	1570	1877	2545	--	--
1-1/4 x 7	650	881	1456	1974	2362	3202	2067	2802
1-1/4 x 12	719	975	1613	2187	2615	3545	--	--
1-3/8 x 6	851	1154	1909	2588	3097	4199	2710	3674
1-3/8 x 12	970	1315	2174	2948	3526	4781	--	--
1-1/2 x 6	1130	1532	2534	3436	4110	5572	3597	4877
1-1/2 x 12	1271	1723	2852	3867	4624	6269	--	--

1.2. Stainless Steel Fasteners

Table 11: Torque Values for Stainless Steel Fasteners 5/16-inch and Smaller

Dimension	316 Stainless		18-8 Stainless		18-8 Stainless with Loctite 767	
	Pound-Inches	N-m	Pound-Inches	N-m	Pound-Inches	N-m
1/4 x 20	79	9	76	9	45	5
1/4 x 28	100	11	94	11	56	6
5/16 x 18	138	16	132	15	79	9
5/16 x 24	148	17	142	16	85	10

Table 12: Torque Values for Stainless Steel Fasteners Larger Than 5/16-inch

Dimension	316 Stainless		18-8 Stainless		18-8 Stainless with Loctite 767	
	Pound-feet	N-m	Pound-feet	N-m	Pound-feet	N-m
3/8 x 16	21	28	20	27	12	16
3/8 x 24	23	31	22	29	13	18
7/16 x 14	33	44	31	42	19	25
7/16 x 20	35	47	33	45	20	27
1/2 x 13	45	61	43	58	26	35
1/2 x 20	47	64	45	61	27	37
9/16 x 12	59	81	57	77	34	46
9/16 x 18	66	89	63	85	38	51
5/8 x 11	97	131	93	125	56	75
5/8 x 18	108	150	104	141	62	84
3/4 x 10	132	179	128	173	77	104
3/4 x 16	130	176	124	168	75	101
7/8 x 9	203	275	194	263	116	158
7/8 x 14	202	273	193	262	116	157
1 x 8	300	406	287	389	172	233
1 x 14	271	367	259	351	156	211
1-1/8 x 7	432	586	413	560	248	336
1-1/8 x 12	408	553	390	529	234	317
1-1/4 x 7	546	740	523	709	314	425
1-1/4 x 12	504	683	480	651	288	390
1-1/2 x 6	930	1261	888	1204	533	722
1-1/2 x 12	732	992	703	953	422	572

2. Preparation



WARNING [2]: Fire Hazard—Some solvents and primers are flammable.

- Use threadlocker and primers with sufficient airflow.
 - Do not use flammable material near ignition sources.
1. Clean all threads with a wire brush or a different tool.
 2. Remove the grease from the fasteners and the mating threads with solvent. Make the parts dry.

Note 3: Loctite 7649 Primer™ or standard solvents will remove grease from parts.

3. Apply a spray of Loctite 7649 Primer™ or equal on the fasteners and the mating threads. Let the primer dry for one minute minimum.

3. How to Apply a Threadlocker




CAUTION [3]: Malfunction Hazard—Heat, vibration, or mechanical shocks can let the fasteners loosen if you do not apply the threadlocker correctly. Loose fasteners can cause malfunctions of the equipment.

- Read the threadlocker manufacturer's instructions and warnings. Obey these instructions.

Apply the threadlocker only to the areas where the fastener threads and the mating threads engage.

Figure 2: Blind Hole

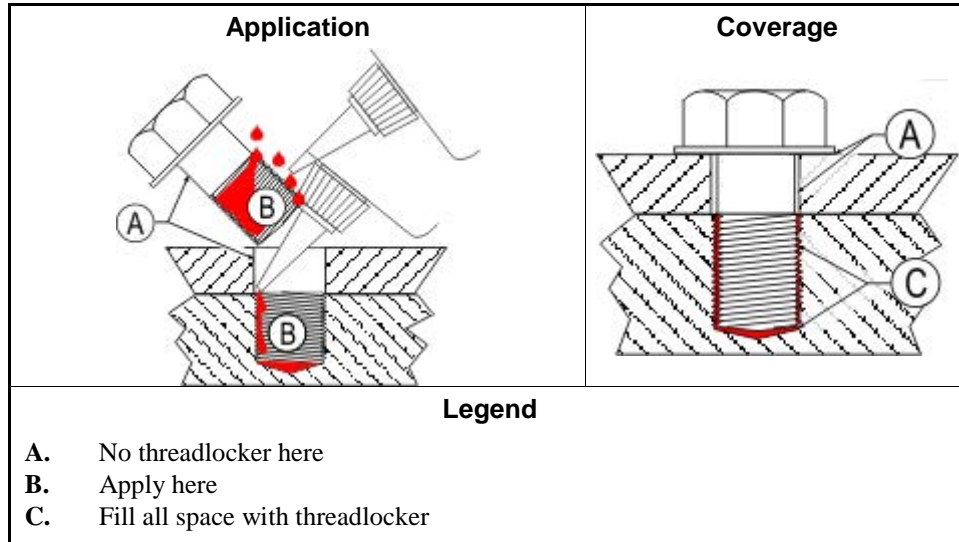


3.1. Blind Holes

1. Apply the threadlocker down the threads to the bottom of the hole.
2. Apply the threadlocker to the bolt.
3. Tighten the bolt to the value shown in the correct table ([Table 5](#) to [Table 11](#)).

3.2. Through Holes

1. Put the bolt through the assembly.
2. Apply the threadlocker only to the bolt thread area that will engage the nut.
3. Tighten the bolt to the value shown in the correct table ([Table 5](#) to [Table 11](#)).

Figure 3: Through Hole

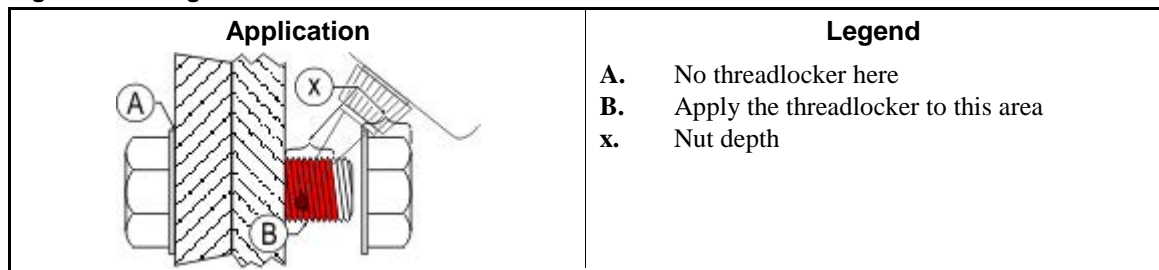


3.3. Disassembly

—For high-strength threadlocker, apply heat for five minutes. Disassemble with hand tools while the parts are hot.

For low-strength and moderate-strength threadlocker, disassemble with hand tools.

Figure 4: Disassembly

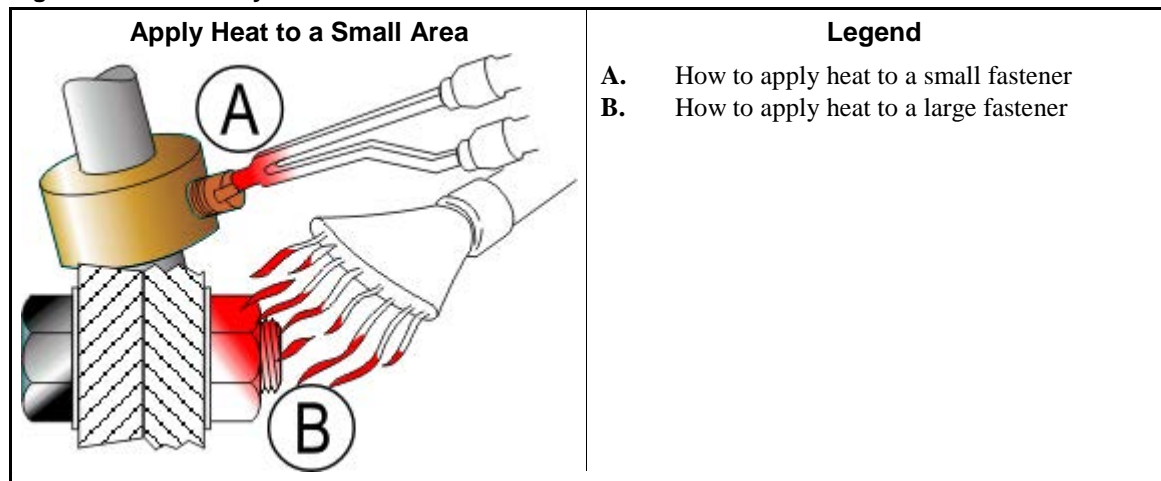

— End of BIUUUM04 —

Parts and Assemblies

2

2



Drive Assemblies

2.1



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

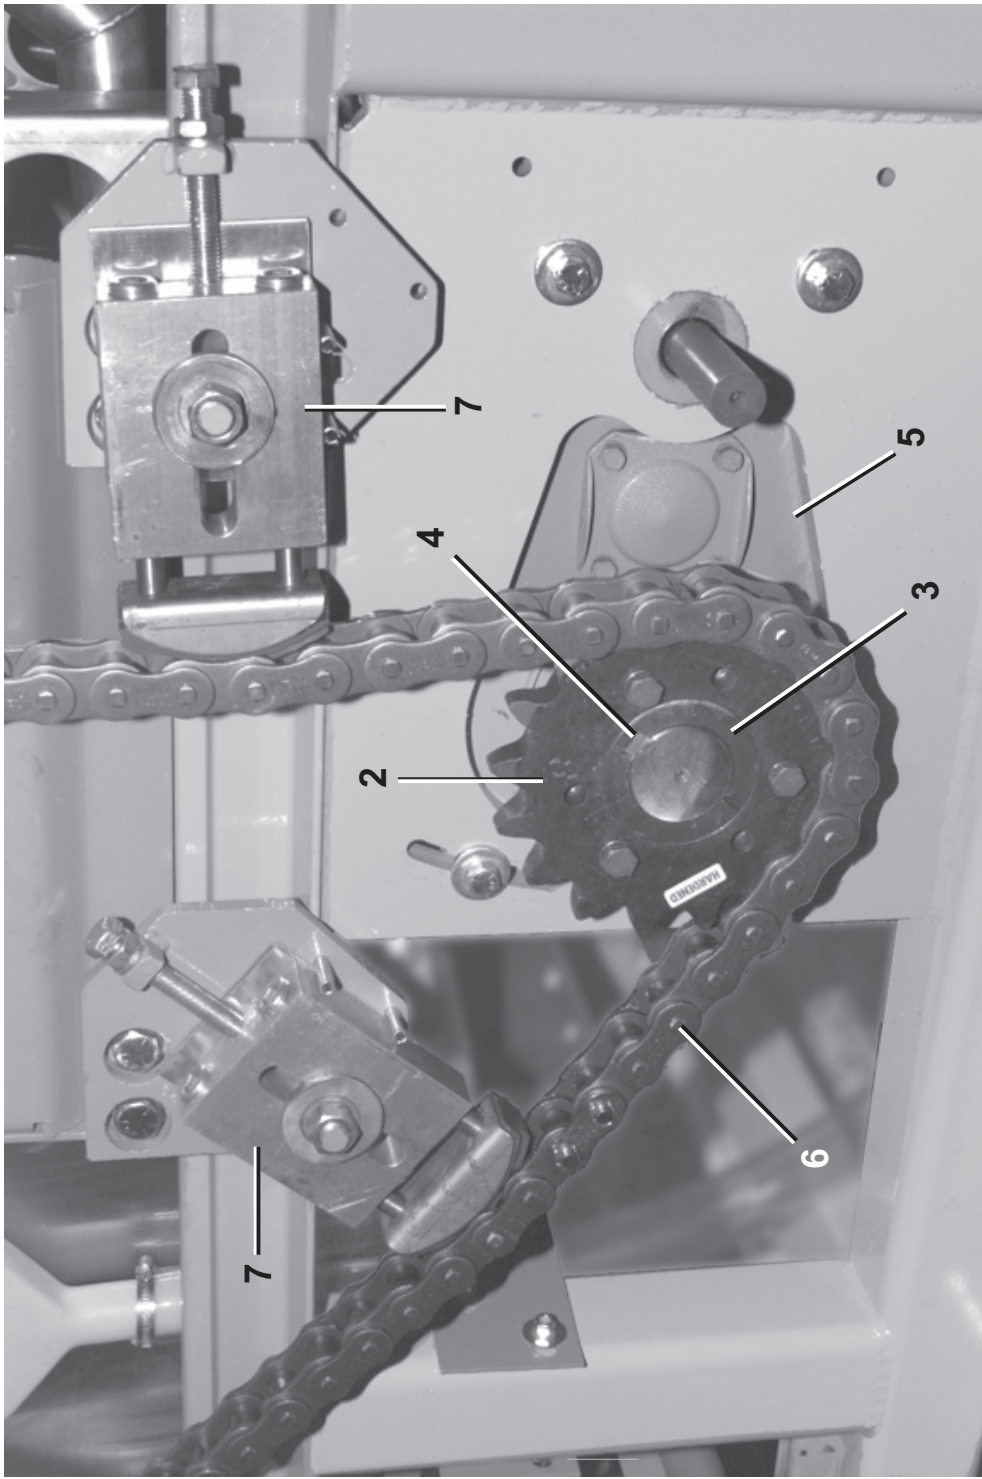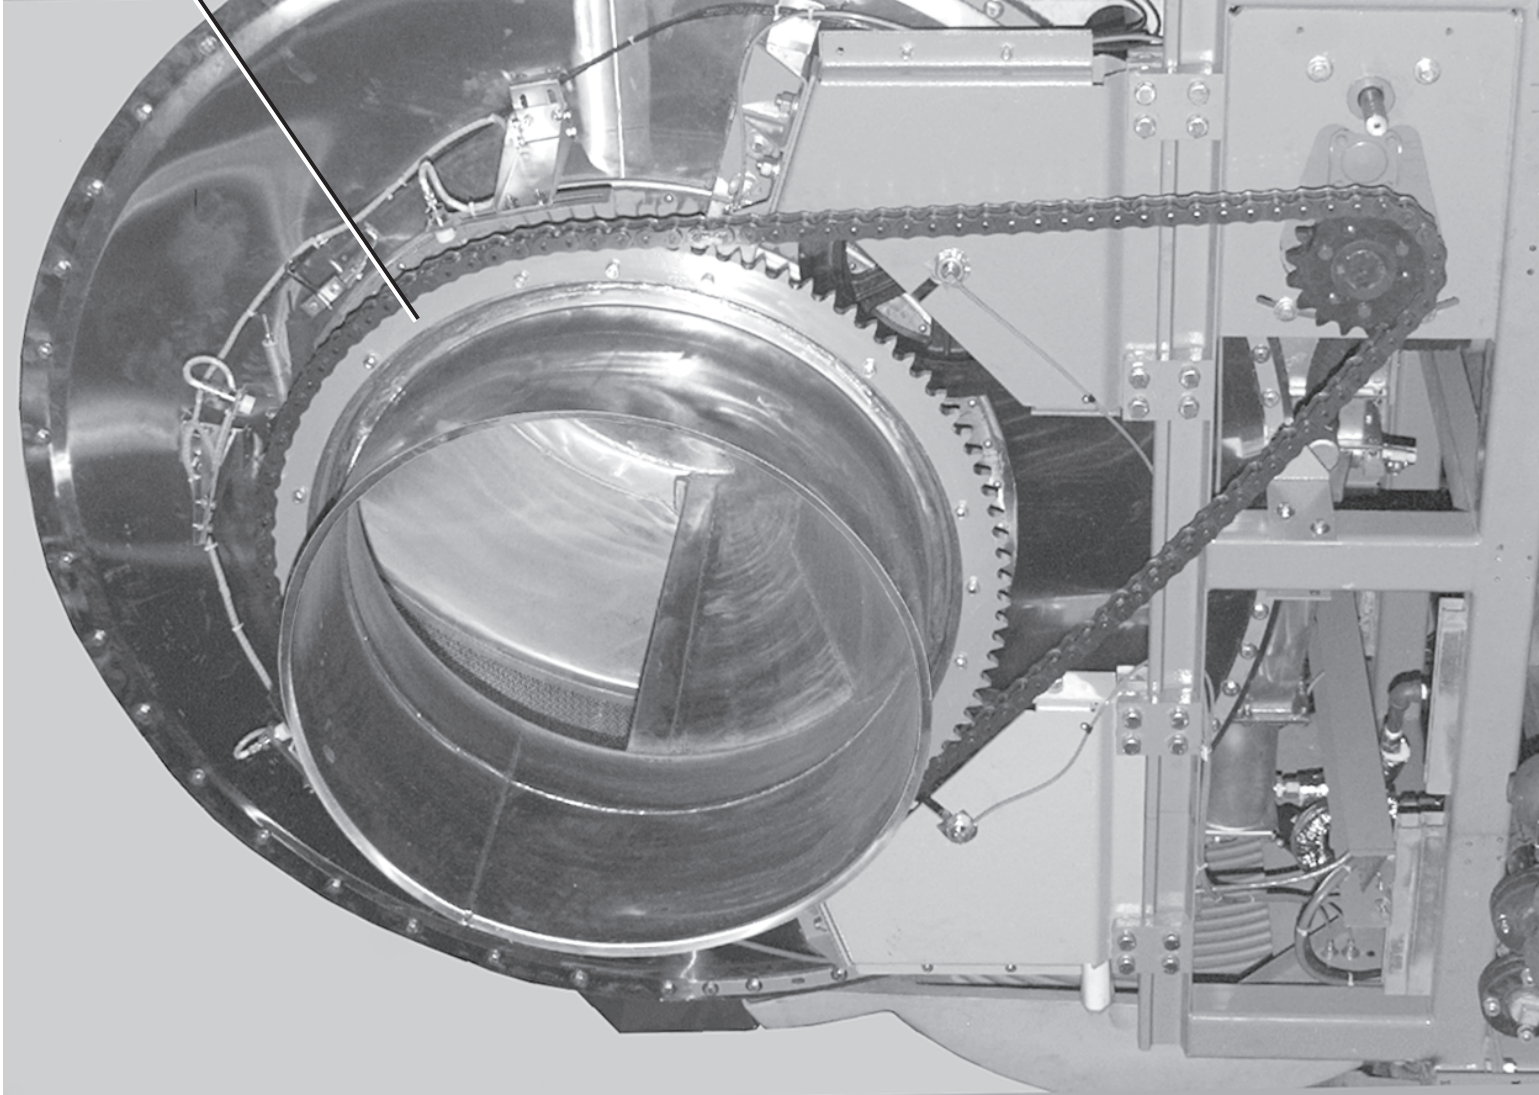

First and Last sections use one 10Hp motor with a 20Hp reducer per module.
Middle sections use two 5Hp motors each with 10Hp reducers. See parts list.


Drive Chart
76028 & 76039 G3 Tunnels

MILNOR[®]
Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

BMP000026/2023103B
(Sheet 2 of 2)

Drive Components

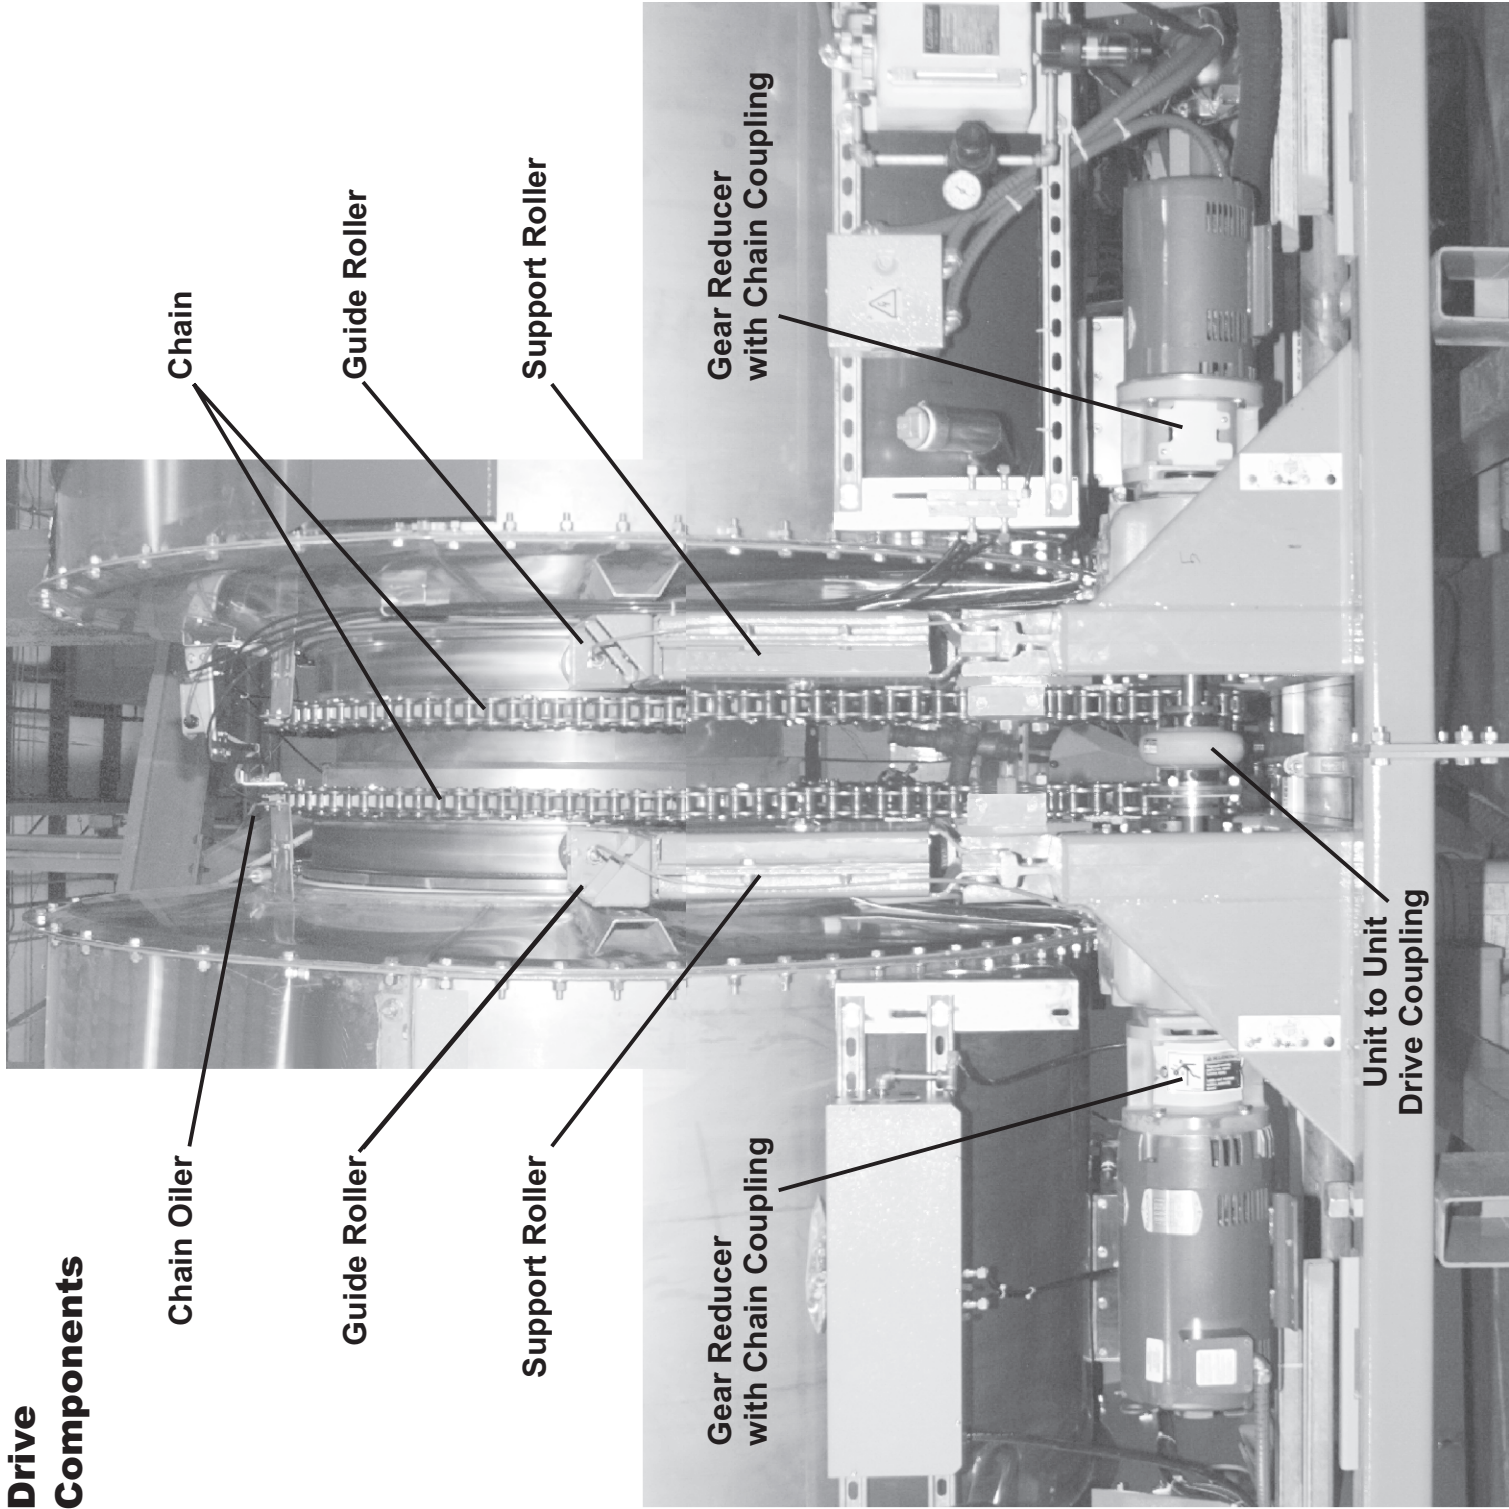

Parts List—Drive Chart

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	D62 00560	DRIVECHART 10HP	FIRST & LAST SECTIONS
	B	D62 00660	DRIVECHART 5 HP	MIDDLE SECTIONS
-----COMPONENTS-----				
all	1	X6 40104	MACH=7622CBW SPROCKET 120A96	
all	2	54N120E17H	SPRKT 120E17H QD HARDENEDTEETH	
all	3	56Q2KE	2+1/2" BUSH VPUL QD TYPE E	
all	4	15E241	SQMACHKEY 5/8X2+3/4	
A	5	54S029	RED 20HP 24.59:1 3325CF-CBW21	
B	5	54S027	RED 10HP.24 59:1 3325CF-CBW18	
all	6	54G120HK	ROLLCHAIN RC120HKR 15.75FT	
all	7	A65CH001	CHAIN TENSIONER ASSY	

Chain Tensioner
76028 & 76039 G3 Tunnels


BMP000027/2008184B
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

* Note: Do not remove the plugs (item 6) while chain guide is tensioned against the chain. The spring may jump out. Loosen the nut (item 11) on the slotted adjustment and the jacking bolt (items 13,14,15) to loosen chain tension.

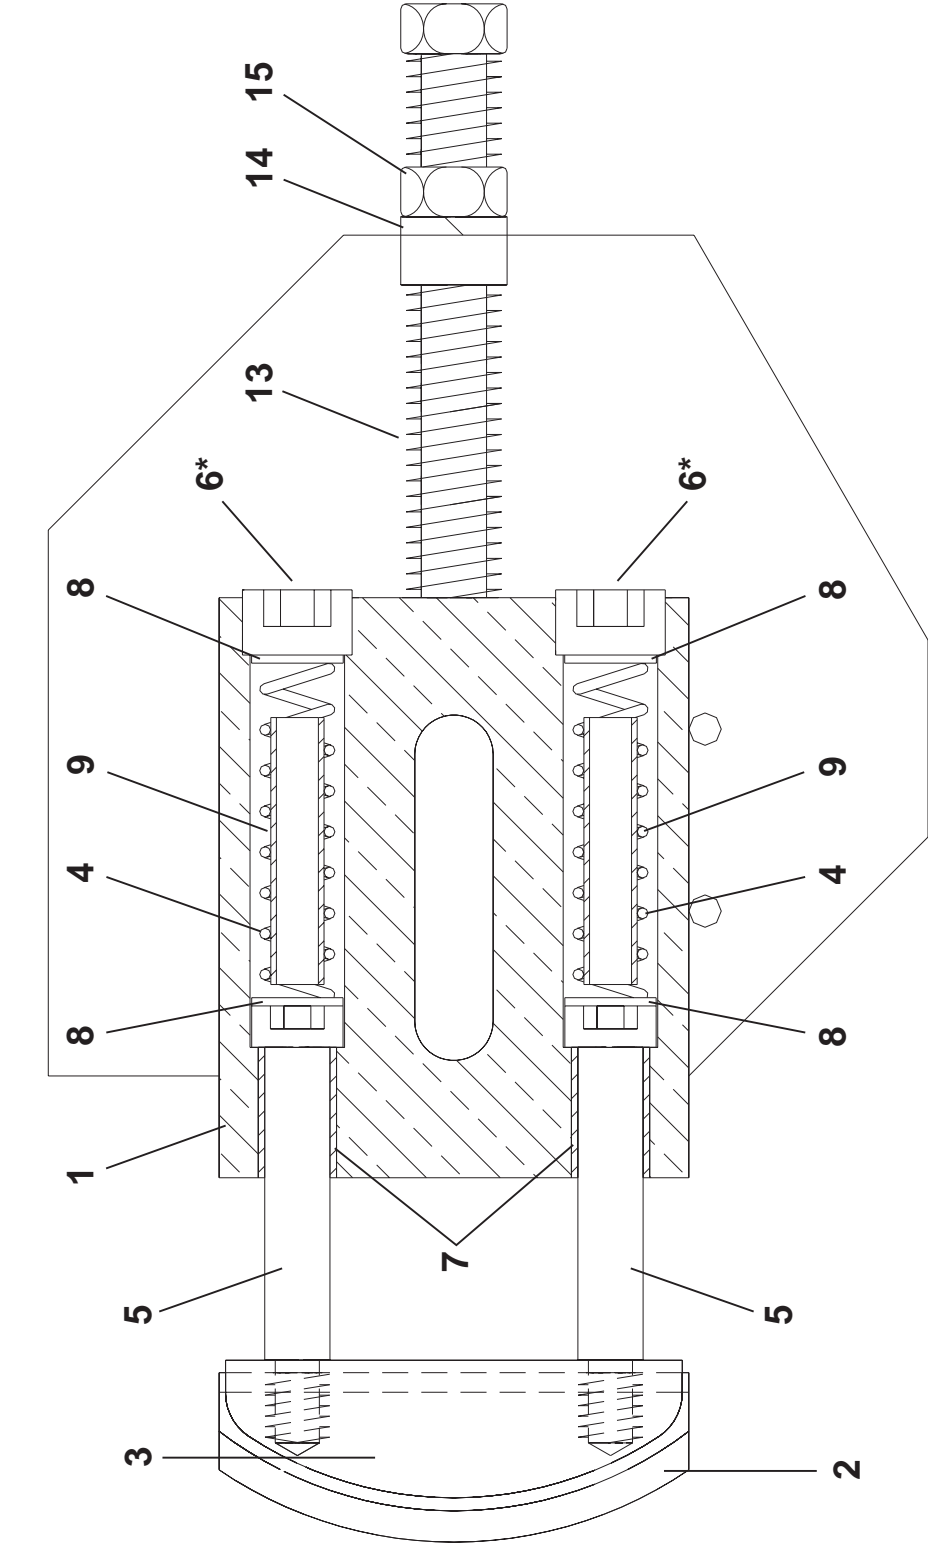

SECTION A-A
TYPICAL

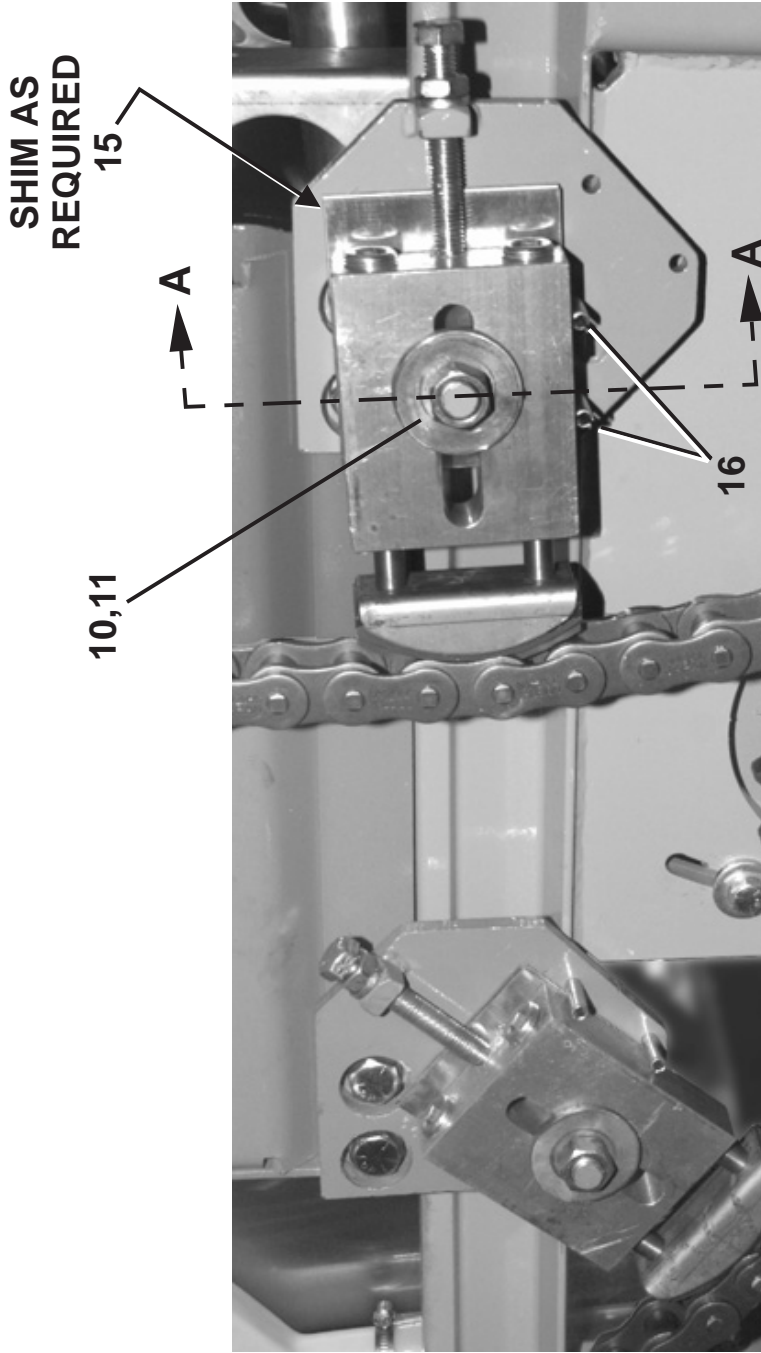



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Chain Tensioner

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	A65CH001	CHAIN TENSIONER ASSY	
-----COMPONENTS-----				
all	1	X6 70045	HOUSING=CHAIN GUIDE	
all	2	X6 70046	CHAIN GUIDE	
all	3	06 70047	SUPPORT=CHAIN GUIDE	
all	4	06 70048	SPRG/CH.GUIDE/.105 MUSIC WIRE	
all	5	15C070	HXSOCSTRIPBOLT 5/8"X3X1/2-13	
all	6	5SP0PCEHK	NPT PLUG 3/4 HEXSOCHD ZINC	
all	7	54E019	PLBRZBRG 5/8X3/4X1+1/4EP101220	
all	8	15U200	FLATWASHER(USS STD) 5/16"ZNC P	
all	9	06 70033	SPACER=CHAIN TENSIONER	
all	10	06 70032	WASHER=CHAIN TENSIONER	
all	11	15G240	HXNUT 3/4-10UNC2B SAE ZINC GR2	
all	12	15D125	HXTAPSCR 5/8-11X4CAD-FLTHRD GR	
all	13	15U315	LOKWASHER MEDIUM 5/8 ZINCPL	
all	14	15G236C	HXFINJAMNUT 5/8-11UNC2B ZINC G	
all	15	06 70049	SHIM=CHAIN GUIDE	
all	16	15H113	SPRINGPIN 3/8X2"LG ZINC	

Chain Oiler





76032, 76028G3 & 76039G3 Tunnels, 92048G4 Tunnels

BMP110071/2013102A
(1 / 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

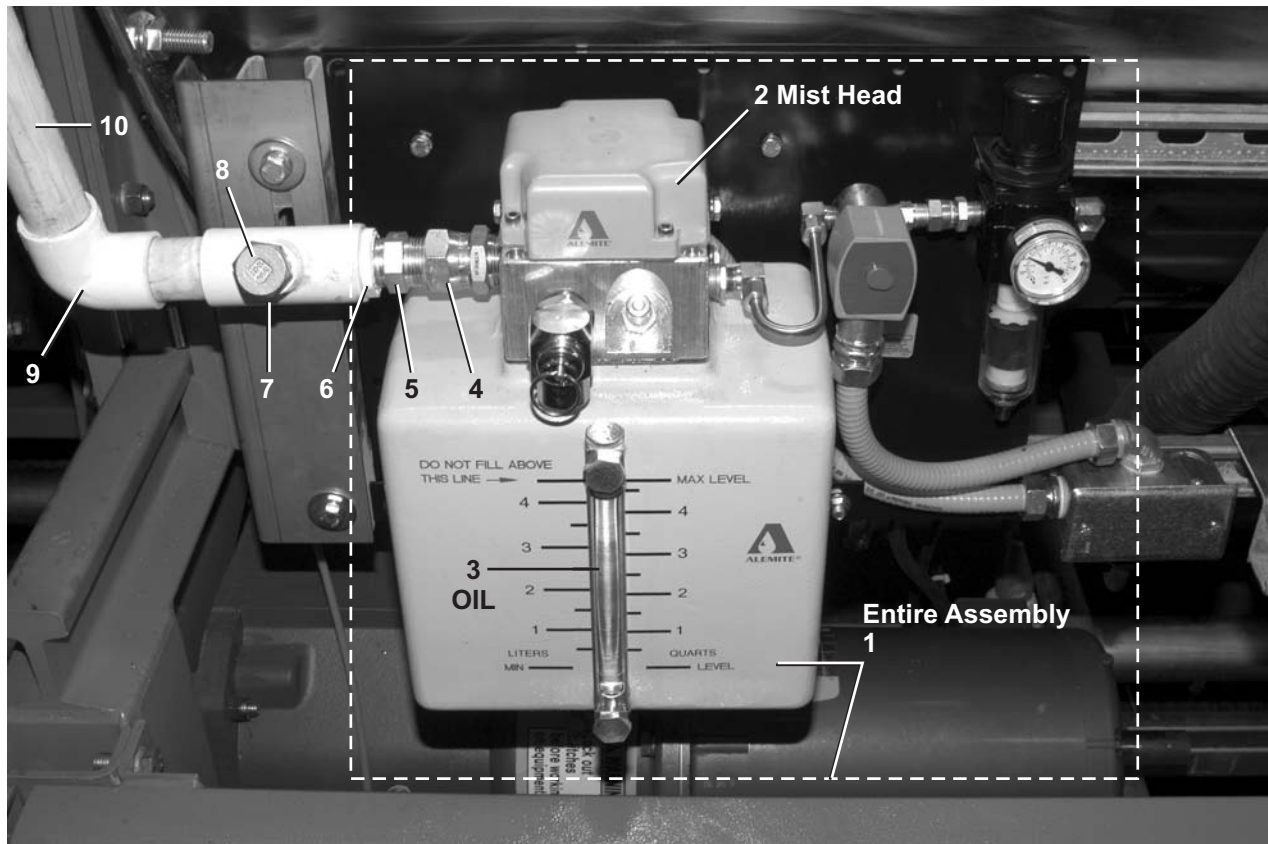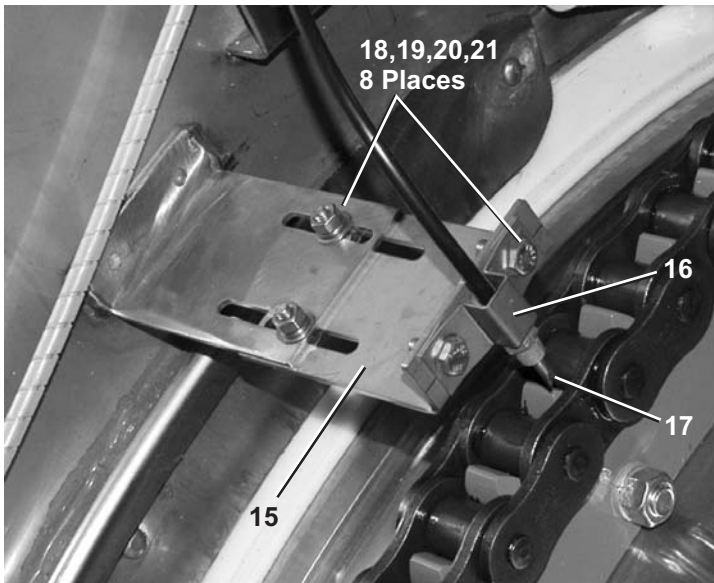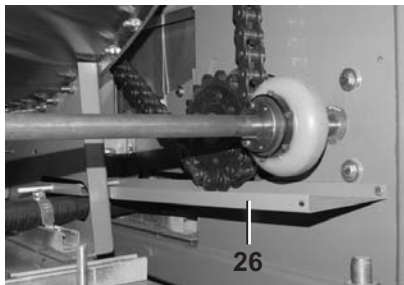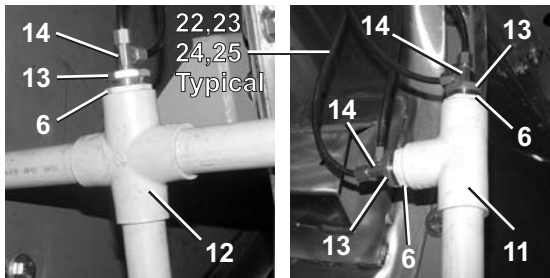



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Chain Oiler

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
	A	G67CL001	GEN ASSY OILER RESV G3	76028G3, 76039G3 & 92048G4 TUNNELS 76032 TUNNELS
	B	A67CL001	ASSY OILERRESV G3	
	C			
			-----COMPONENTS-----	
ABC	1	27E790E	ALEMITE OILMIST SYSTEM#3943BC	
ABC	2	27E790F	REPAIR PART-ALEMITE MIST HEAD	
all	3	20H000A	MILNOR CHAIN LUBRICANT	
all	4	52ZC0PS004	TUBEFITMALESW 3/4"#1404-12-12	
all	5	52ZC0PS003	TUBEFITMALECON 3/4"#2404-12-12	
all	6	5KC1AP4D0P	SOKADAPTER 1"SX3/4"FPT PVC S40	
all	7	5K1AP4A0K	TEE 1"SX1"SX1/2"FP PVC S40	
all	8	5SP0KDEHK	NPT PLUG 1/2 HXCTRSNK GALSTL	
all	9	5KL1AP4A	SOK ELBOW 90DEG 1" PVC SCH40	
all	10	5P1AP4EN	1" PIPE PVC SK40 20RML	
all	11	5K1AP8A	SOKTEE 1" PVC SCH40	
all	12	5KX1AP4	SOK CROSS 1" PVC SK40	
all	13	5SB0P0CNFA	NPTHEXBUSH 3/4X1/8GALV150#CORD	
all	14	53A043S	TEE=TUBEXMPXTUBE 1/4"#B71A-4B	
all	15	06 40199	7626 BRKT OILER BRUSH	
all	16	06 20187	BRKT BRUSH HOLDER OILER 1/MD	
all	17	27E790D	SPRAYFITT=ALEMITE #381288-8	
all	18	15K039	HXCAPSCR 1/4-20UNC2AX3/4 GR5 Z	
all	19	15G165	HXNUT 1/4-20UNC2BSAE ZC GR2	
all	20	15U180	LOCKWASHER MEDIUM 1/4 ZINCPL	
all	21	15U185	FLATWASHER(USS STD) 1/4" ZNC P	
all	22	53A509	TUBE INSERT 5/16"OD X .53"LG.	
all	23	53A059	SLEEVE 1/4"BRASS PH#60C-4	
all	24	53A059A	NUT 1/4"BR.HOLYOKE AND #61A-4	
all	25	60E004TE	1/4"OD X.170"ID NYL(BLK)TUBING	

Support Rollers


1 of 5

76028G3, 76039G3 Tunnels



NOTE: This drawing is for machines produced before 7/22/25 and after support roller clamp redesign 8/6/25. See parts list. For available support roller repair kits, see “Technical Knowledge Base” @www.milnor.com.

Figure 1. Exploded View of Support Roller and Installation of Roller

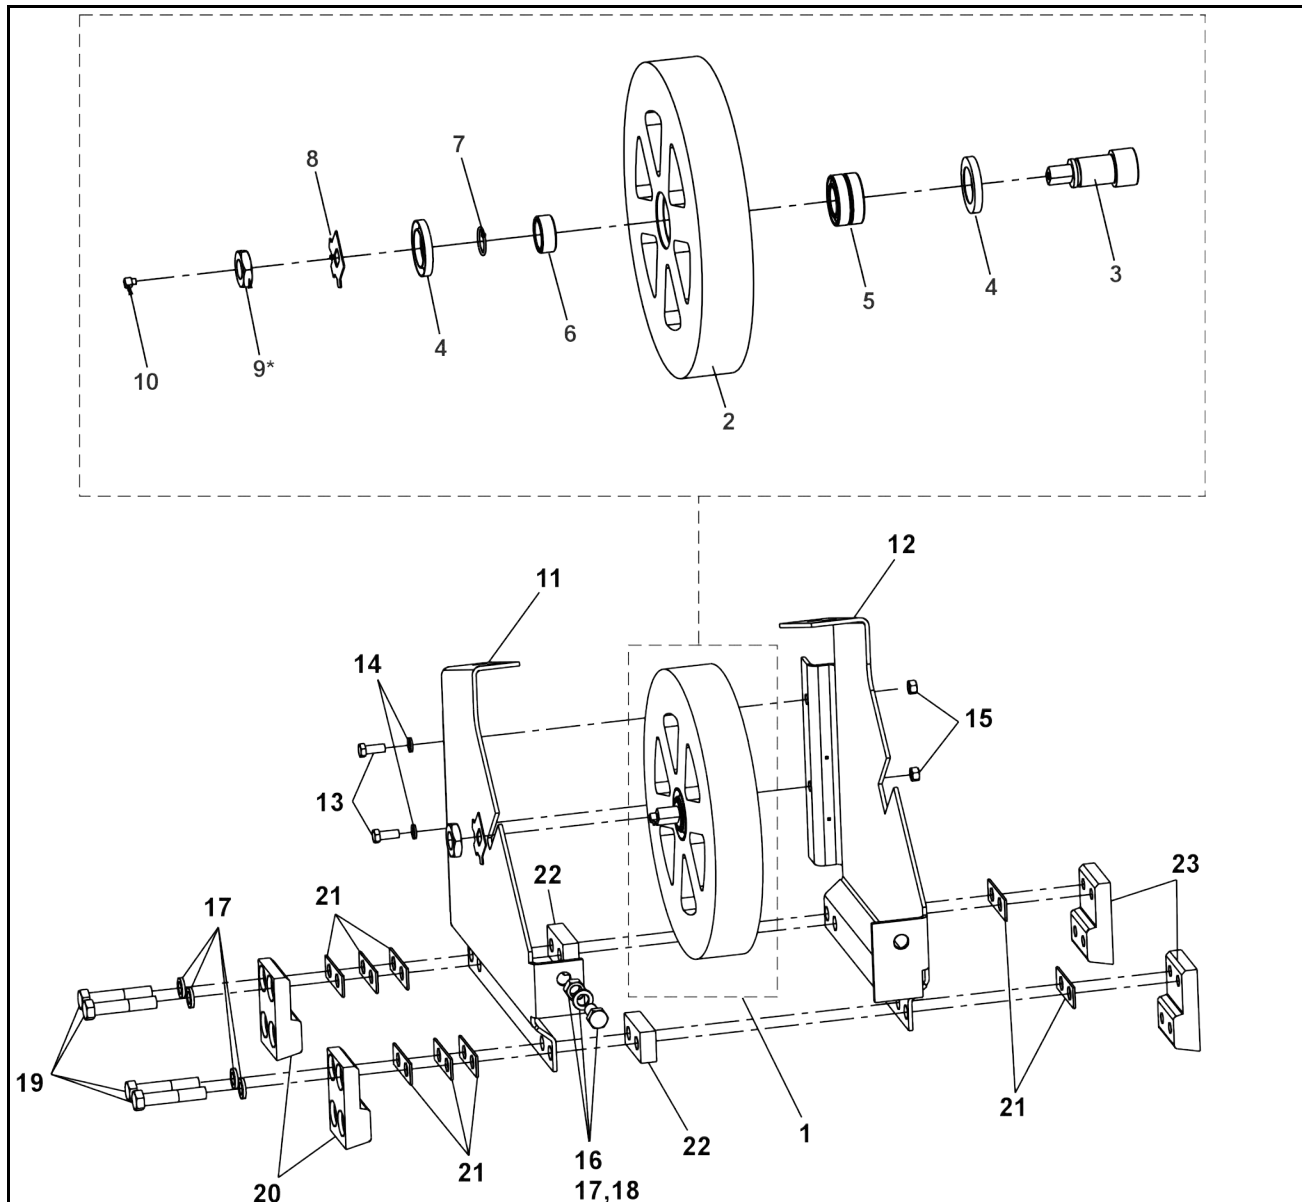


The Support Roller assembly is used in 4 places per tunnel section. Entry (left & right), Exit (left & right), see parts list. For tensioner mounting, items 31D & 31F(Entry), or 31E & 31G(Exit) are used instead of item 23.

Support Rollers

76028G3, 76039G3 Tunnels

2 of 5

Figure 2. Roller Installation

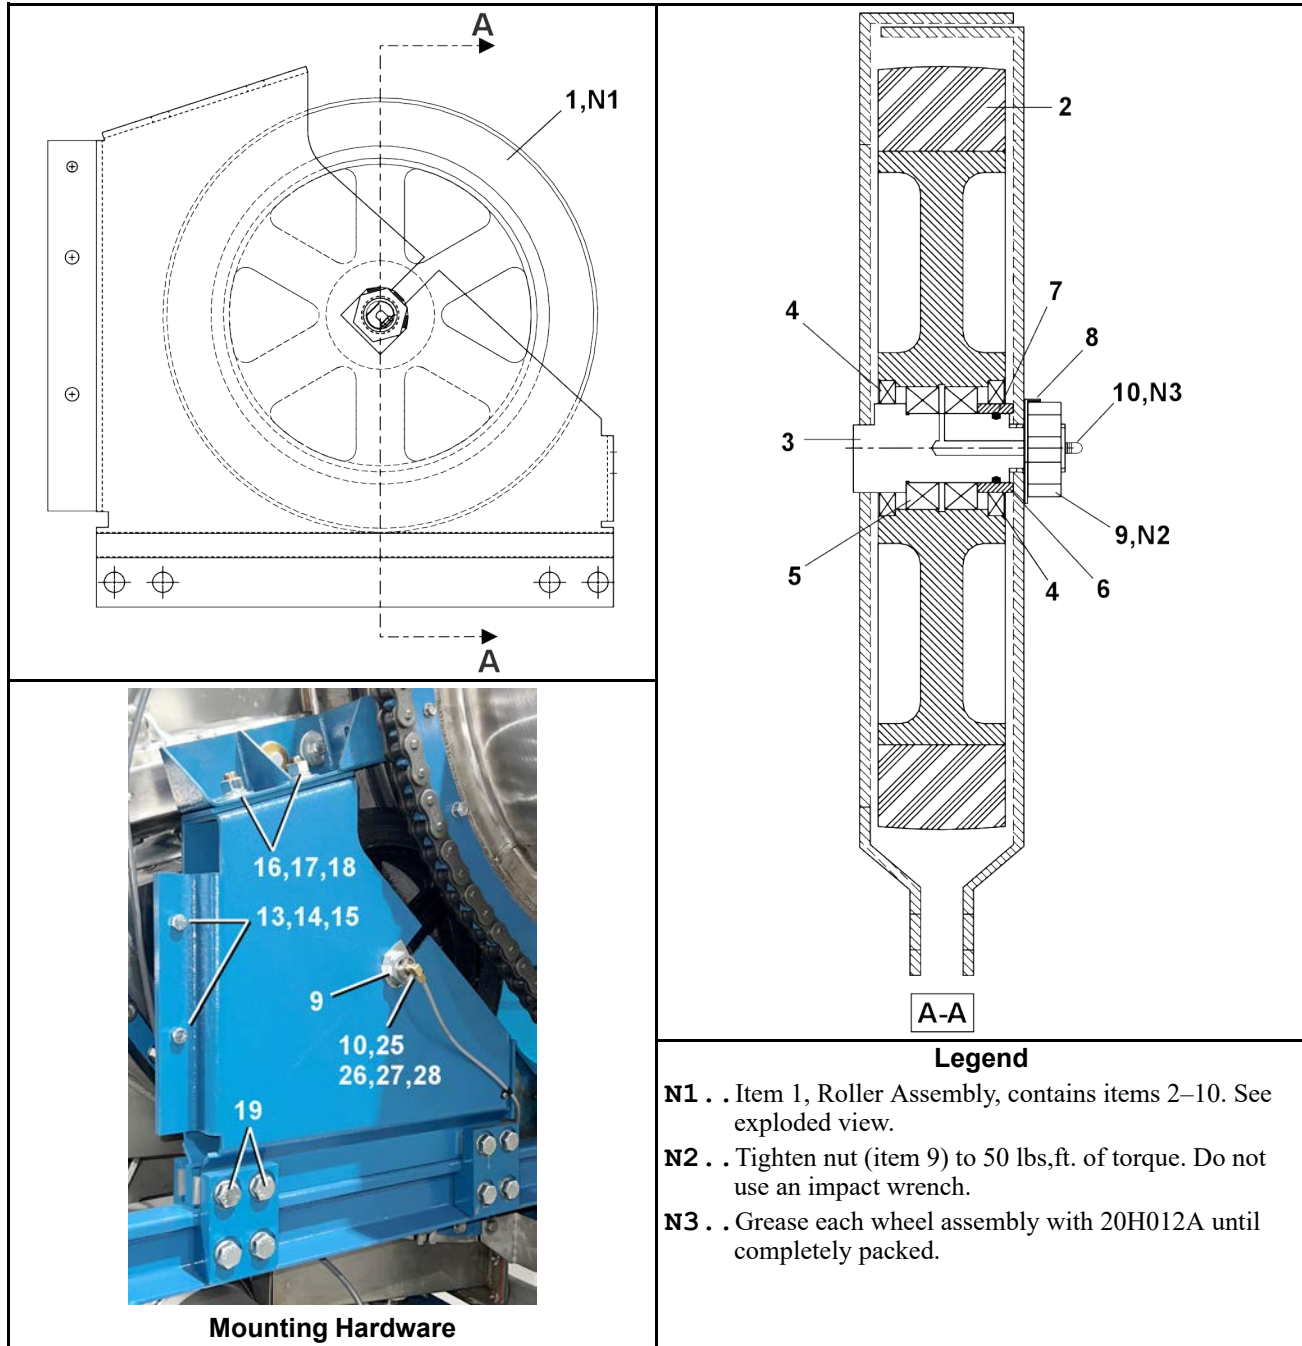

Support Rollers

76028G3, 76039G3 Tunnels

3 of 5

Figure 3. Roller Support Clamps for Tensioner Mounting

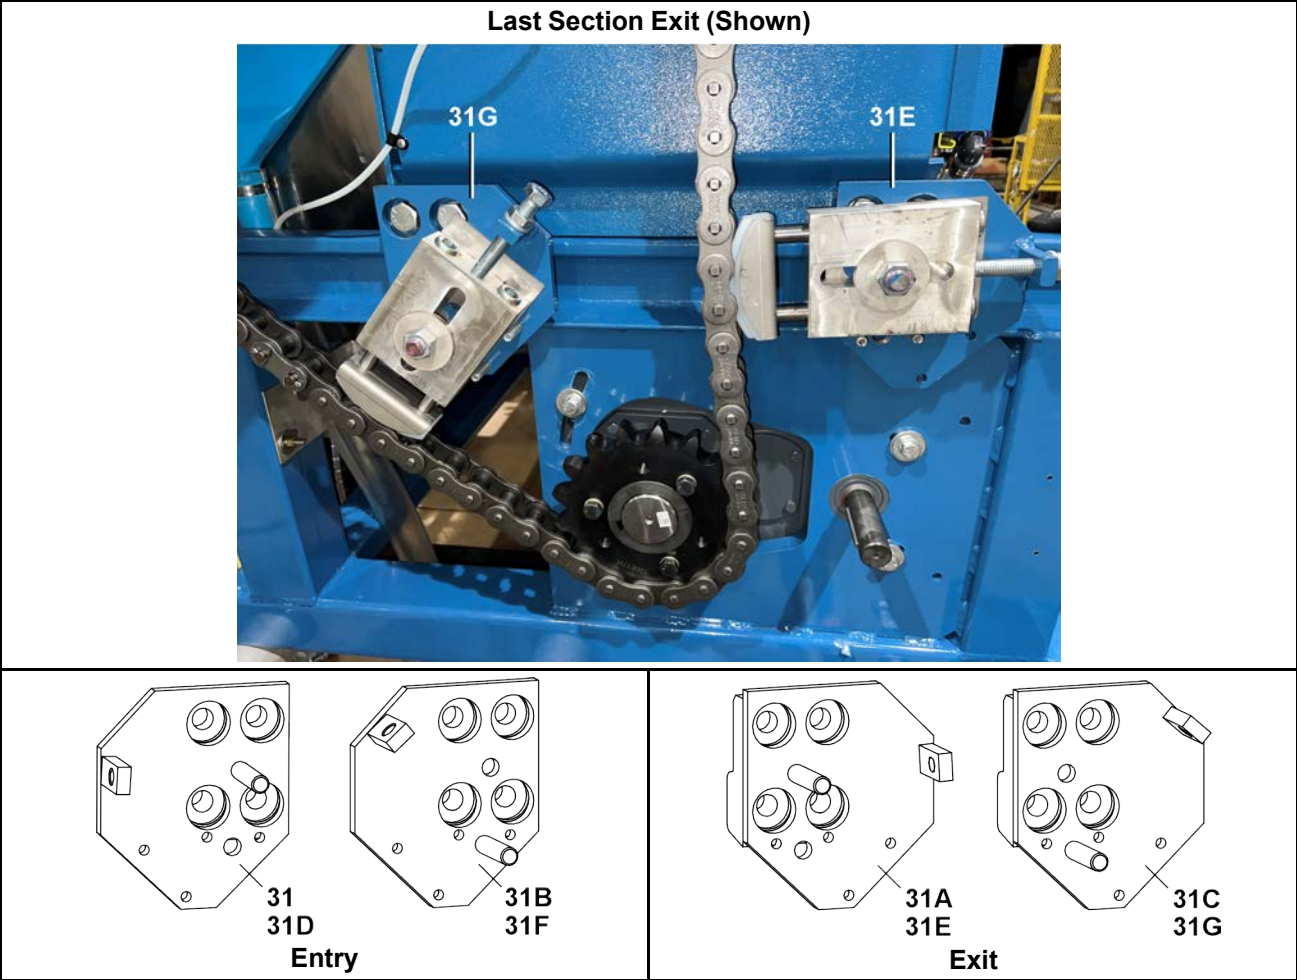


Table 1. Parts List—Support Roller

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Reference Assemblies				
	A	A64SR002	SUPROLLER W/O TENSIONER-LF	Reference only
	B	A64SR002R	SUPROLLER W/O TENSIONER -RT	Reference only
	C	A64SR002AL	SUPROLLER W/TENSIONER FT LF	Reference only
	D	A64SR002BL	SUPROLLER W/TENSIONER REAR-LF	Reference only
Components				
all	1	A64SR001R	7622/7639CBW SUP ROLLER REP	Roller Assembly
all	2	06 40040B	ROLLER 18X3 - 2" URETHANE	Part of item 1

Support Rollers

4 of 5

76028G3, 76039G3 Tunnels

Parts List—Support Roller (cont'd.)

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
all	3	X6 40041	MACH=SHAFT 18 X 3 ROLLER	Part of item 1
all	4	54AV41201	BRG TM#LM501349 ASSY 902B6 1BX	Part of item 1
all	5	06 40042	COLLAR=18X3 ROLLER	Part of item 1
all	6	24S055	SEAL 2.09X3.189X3/8 SS BUNA	Part of item 1
all	7	60C128	ORING 1+3/8IDX1/8CS BUNA70#220	Part of item 1
all	8	06 40043	LOCKING WASHER 18X3 ROLLER	Part of item 1
all	9	15G251	HEXJAMNUT 1+1/8-7UNC2 ZNC GR2	Part of item 1
all	10	53A031B	BODY-EL90MALE.25X1/8	Part of item 1
all	11	06 70013F	PLATE WHEEL SUPPORT OUTER LF	Reference Left
all	11	06 70013B	PLATE WHEEL SUPPORT OUTER RT	Reference Right
all	12	06 70013G	PLATE WHEEL SUPPORT INNER LF	Reference Left
all	12	06 70013A	PLATE WHEEL SUPPORT INNER RT	Reference Right
all	13	15K151	HXCAPSCR 1/2-13UNC2AX1.25 GR5	
all	14	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	15	15G230	HXNUT 1/2-13UNC2B SAE ZINC GR2	
all	16	15K228B	HEXCAPSCR 3/4-10 X 1+1/2 GR 5	
all	17	15U340	LOCKWASH MEDIUM 3/4 ZINCPL	
all	18	15G240	HXNUT 3/4-10UNC2B SAE ZINC GR2	
all	19	15K250	HXCAPSCR 3/4-10UNC2AX4 GR5 ZIN	
all	20	06 70030CM	CLAMP SUPPORT ROLLER OUTER CASTIC	Used after 8/6/25
all	20	06 70030	CLAMP SUPPORT ROLLER OUTER	Used before 7/22/25
all	21	06 70030F	SHIM = SUPPORT ROLLER MOUNT	
all	22	06 70013H	SPACER=SUPPORT ROLLER	
all	23	06 70030BCM	CLAMP SUPPORT ROLLER INNER CASTIC	Used after 8/6/25
all	23	06 70030A	CLAMP SUPPORT ROLLER INNER	Used before 7/22/25
all	24	60E004TE	1/4"OD X.170"ID NYL(BLK)TUBING	
all	25	53A059A	NUT 1/4"BR.HOLYOKE AND	
all	26	53A500	SLEEVE DELRIN 1/4"OD	
all	27	53A501	TUBE INSERT .163"OD	
all	31	W6 70031	WLMT=FRNT SUPPORT LH	Used before 7/22/25
all	31A	W6 70031A	WLMT=FRNT SUPPORT RH	Used before 7/22/25
all	31B	W6 70031B	WLMT=REAR SUPPORT LH	Used before 7/22/25
all	31C	W6 70031C	WLMT=REAR SUPPORT RH	Used before 7/22/25
all	31D	W6 70031D	FRONT SUPPORT LH WLMT	Used after 8/6/25

Support Rollers

5 of 5

76028G3, 76039G3 Tunnels

Parts List—Support Roller (cont'd.)

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
all	31E	W6 70031E	FRONT SUPPORT RH WLMT	Used after 8/6/25
all	31F	W6 70031F	REAR SUPPORT LH WLMT	Used after 8/6/25
all	31G	W6 70031G	REAR SUPPORT RH WLMT	Used after 8/6/25



Guide Roller Assembly
76028 & 76039 G3 Tunnels, 92048G4 Tunnels

BMP000031/2011474B
(Sheet 1 of 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

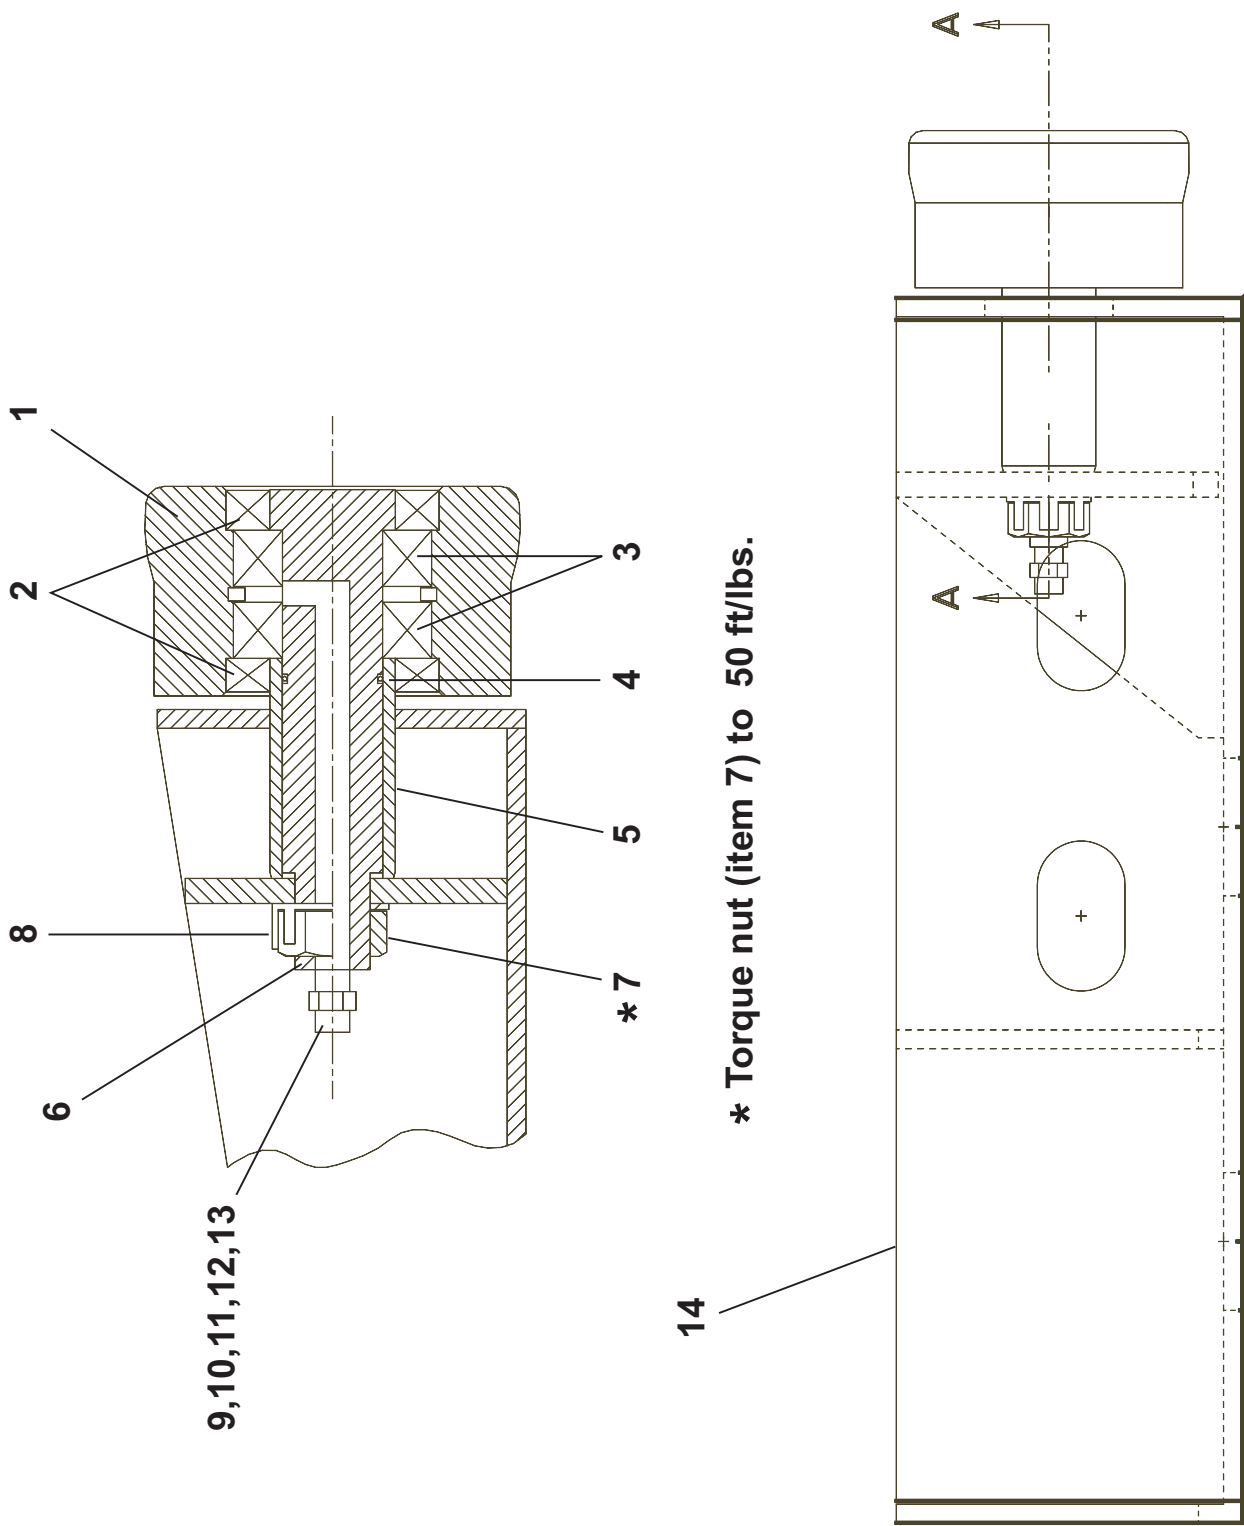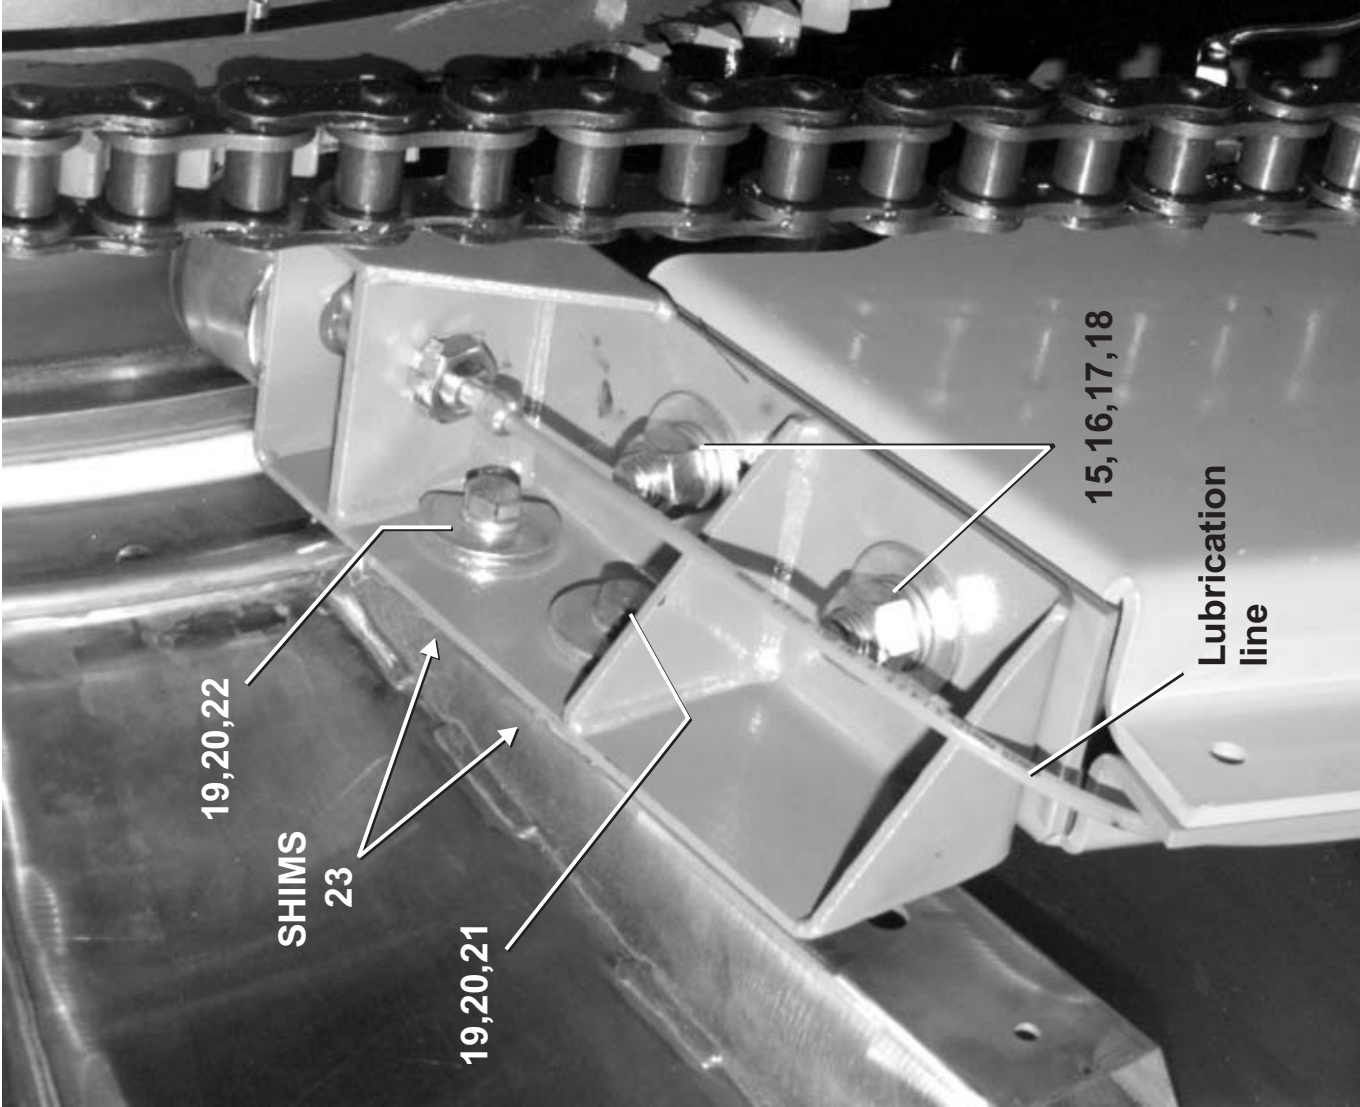



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Guide Roller Assembly

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	A64GR002	7639G3 GUIDE ROLLER ASSY RIGHT	7628/7639G3 RIGHT
	B	A64GR003	7639G3 GUIDE ROLLER ASSY LEFT	7628/7639G3 LEFT
	C	AGR63001	9248 GUIDE ROLLER RIGHT ASSY	9248G4 RIGHT
	D	AGR63001A	9248 GUIDE ROLLER LEFT ASSY	9248G4 LEFT
-----COMPONENTS-----				
all	1	06 40046	ROLLER=GUIDE 3.78 WIDE TRACK	
all	2	24S033A	SEAL 1.25X2.125X.375 JM# 19653	
all	3	54AV25401	BRG TIMK#L44643 ASSY 902A8 1BX	
all	4	60C120	ORING 7/8IDX1/16CS BUNA70 #020	
all	5	06 20068A	COLLAR=7622 CBW WHEEL SUPT	
all	6	06 20020B	SHAFT=7622 CBW GUIDE ROLLER	
all	7	15G245	HXFINJAMNUT 3/4-10UNC2 SS18-8	
all	8	06 20070	LOCKING WASHER ROLLER SHAFT	
all	9	53A031B	BODY-EL90MALE.25X1/8 #269C-42B	
all	10	53A059A	NUT 1/4"BR.HOLYOKE AND #61A-4	
all	11	53A500	SLEEVE DELRIN 1/4"OD#60PT-4	
all	12	53A501	TUBE INSERT .163"OD #63PT-4-40	
all	13	20H012	ALVANIA#71125/EPLF2 35# PAIL	
A	14	W6 70014G	WELD GUIDE ROLLER MNT MID RT	
B	14	W6 70014L	WELD GUIDE ROLLER MNT MID LF	
C	14	W6 30119	GUIDE RLLR SPPT BRKT RT WLMT	
D	14	W6 30119A	GUIDE RLLR SPPT BRKT LF WLMT	
all	15	15K232A	HEXCAPSCR 3/4-10X2 GR8 ZINC	
all	16	15U320P	FLATWASHER(USS STD) 3/4" ZNC P	
all	17	15U340	LOCKWASH MEDIUM 3/4 ZINCPL	
all	18	15G240	HXNUT 3/4-10UNC2B SAE ZINC GR2	
all	19	15K162	HXCAPSCR 1/2-13UNC2AX1.5 GR5 P	
all	20	15U286	FLATWASHER 2"ODX17/32"IDX1/4"	
all	21	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	22	02 11603A	WASHER DBLR=2" W/CUTOFF SIDE	
all	23A	06 20327A	SPACER 14 GA STN/STL	
all	23B	06 20327B	SPACER 16 GA STN/STL	
all	23C	06 20327C	SPACER 18 GA STN/STL	


Unit to Unit Drive Coupling
76028 & 76039 G3 Tunnel

BMP0000036/2001225V
(Sheet 1 of 2)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

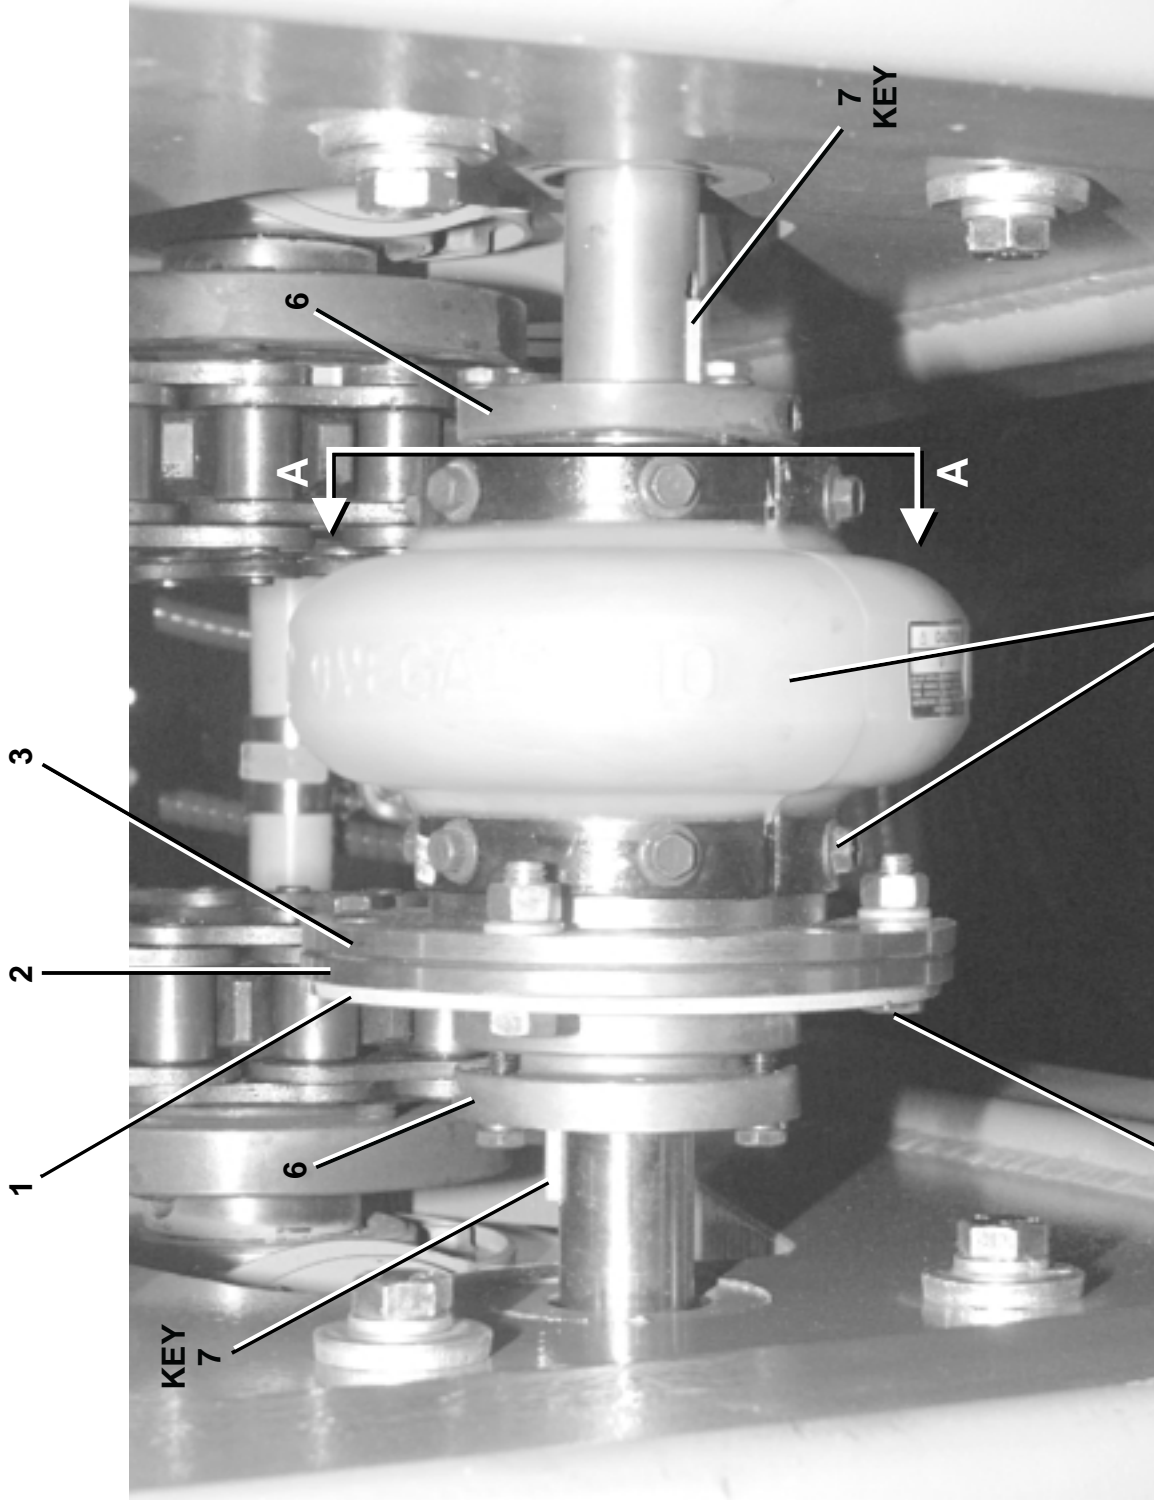

5
2 HALVES
INCLUDES
HARDWARE

8,9,10
3 PLACES

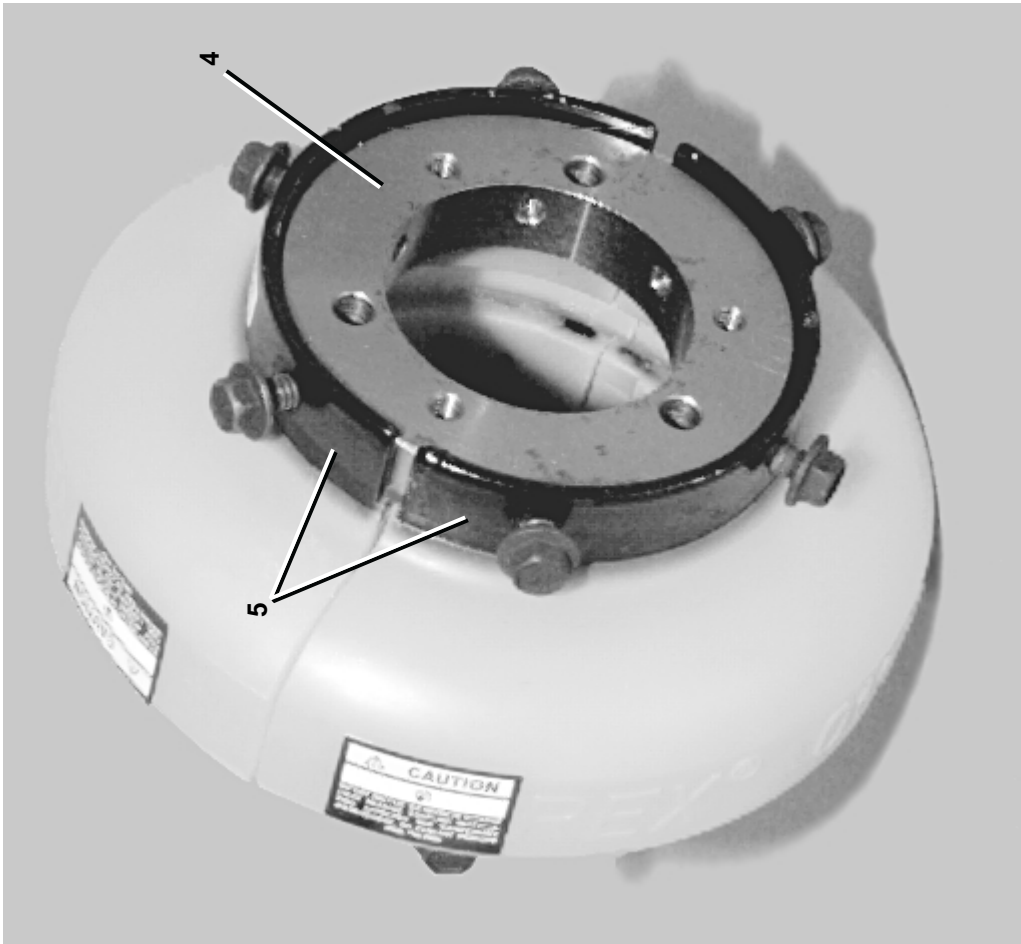

View A-A



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Unit to Unit Drive Coupling

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
<hr/>				
-----ASSEMBLIES-----				
	A	A64DB003	ASY=UNIT/UNIT DRIVEBASE CONN	
-----COMPONENTS-----				
all	1	06 40106A	COUPLING ADJUST WASHER PLT	
all	2	X6 40106	DRIVE COUPLING ADJUST SIDE	
all	3	X6 40107	DRIVE COUPLING FIXED SIDE	
all	4	54J227A	HUB,FLEX COUPLING TUN +TILTS	
all	5	54J227	FLEXCPLG REX#E10 (EA=2 HALVES)	
all	6	56Q1ESDS	1+1/4" BUSH VPUL QD TYPE SDS	
all	7	15E210	SQMACHKEY 1/4X2 NOTAPER-NOHEAD	
all	8	15K100	HEXCAPSCR 3/8-16X1+1/4 SS18-8	
all	9	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	10	15G206	HEXNUT 3/8-16 UNC2 SS 18-8	



Gear Reducer with Chain Coupling
76028 & 76039 G3 , **9248 G4** Tunnels

BMP000033/2010052B
(Sheet 1 of 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

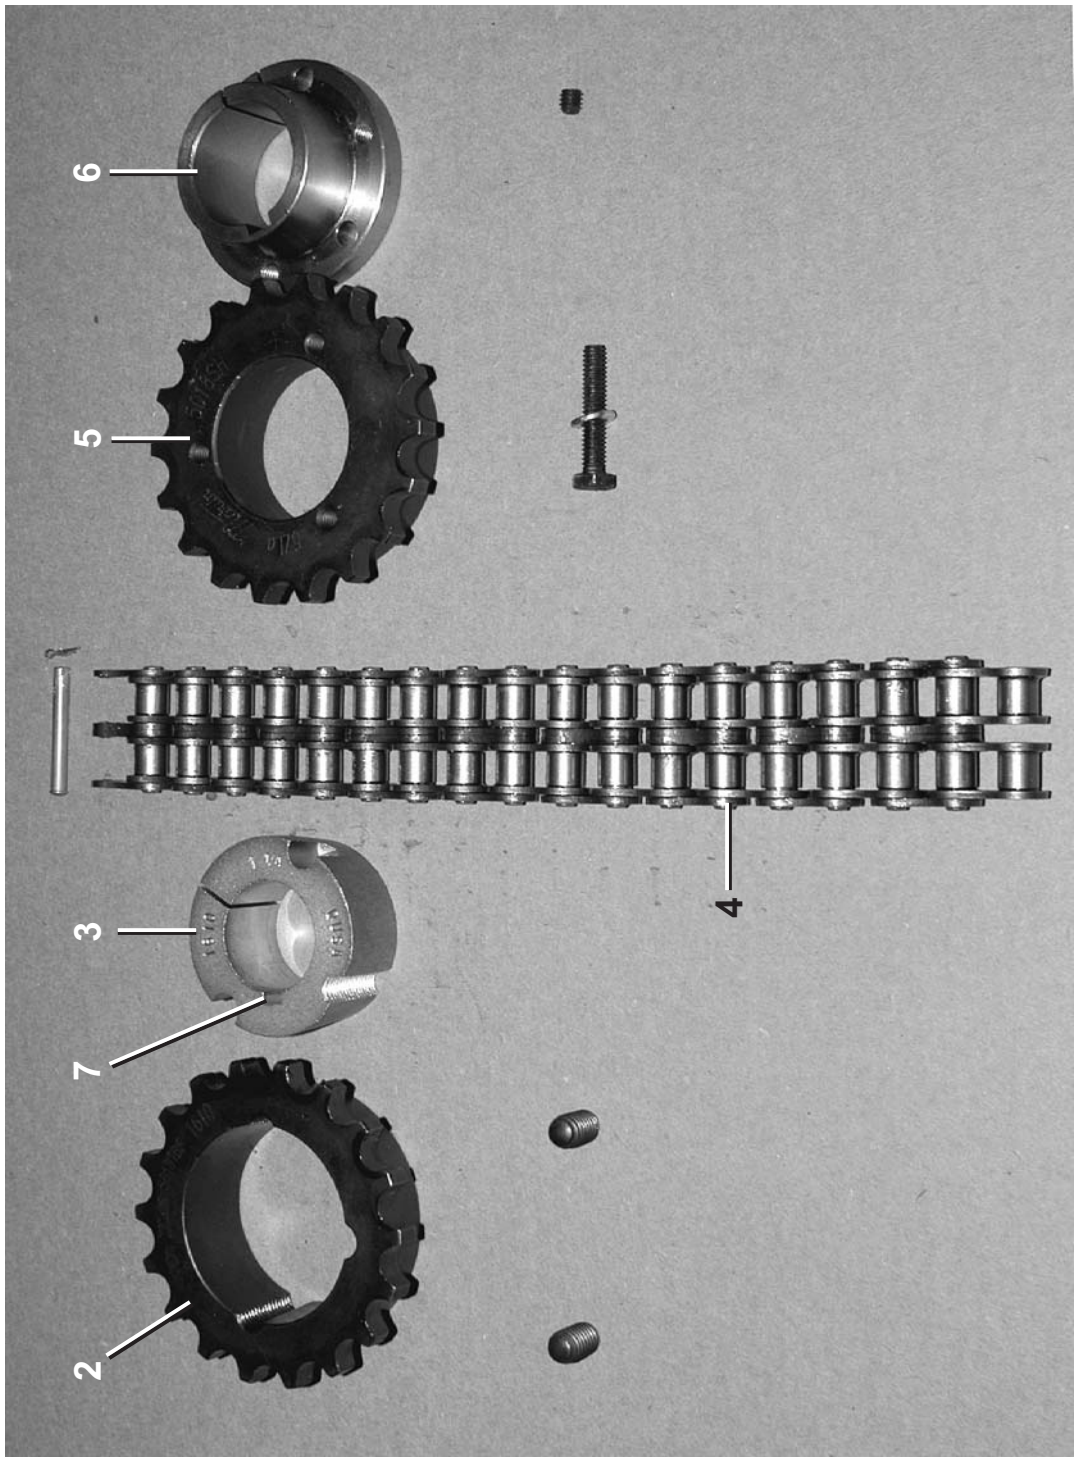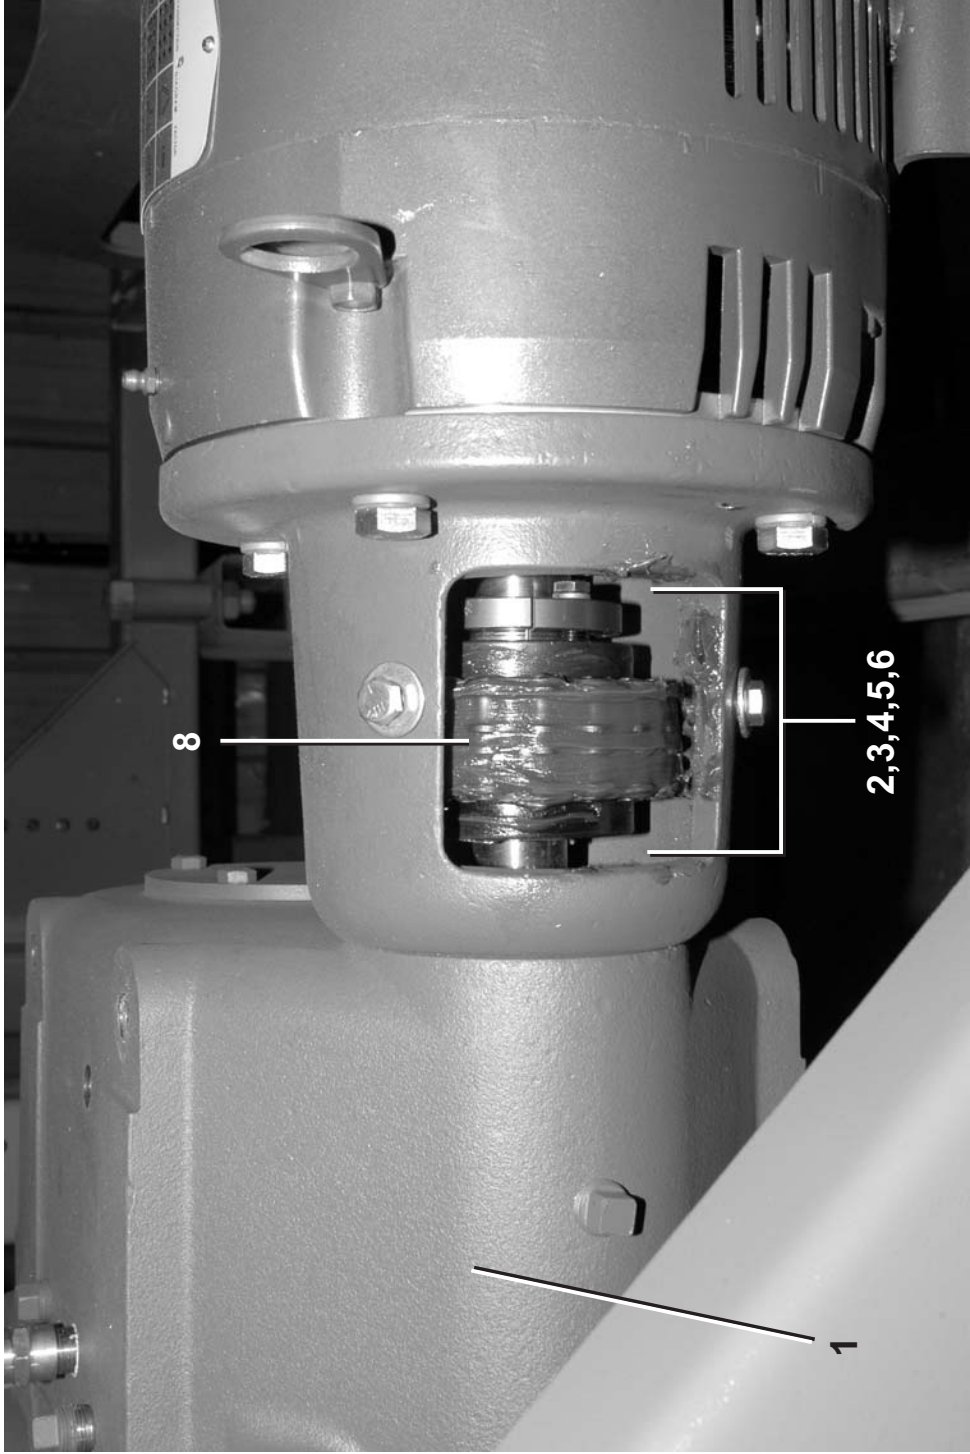

For detailed instructions of replacing the drive chain coupling, see document BIPCLM01, found within this manual.



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Gear Reducer with Chain Coupling

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	A67DB001	20HP REDUCER/10HP MOTOR ASSY	FIRST & LAST MODULES MIDDLE MODULES 9248
	B	A67DB002	10HP REDUCER/05HP MOTOR ASSY	
	C	A67DB003	10HP REDUCER/06HP MOTOR ASSY	
-----COMPONENTS-----				
A	1	54S029	MILNOR, 24.59:1 210TC 23HP	
BC	1	54S027	MILNOR, 24.59:1 180TC,12.5HP	
all	2	27E5511D	FLEX.COUP.=5018TBF COUPLING	
all	3	27E5511E	1610 1 1/4" BORE BUSHING	
all	4	27E5511C	FLEX.COUP.-CHAIN=5018CHN	
all	5	27E5511A	QD-FLEX.COUP.=5018SH 1+3/8MAX.	
A	6	56Q1GSH	1+3/8" BUSH VPUL QD TYPE SH	
BC	6	56Q1CSH	1+1/8" BUSH VPUL QD TYPE SH	
all	7	15E197	1/4X1/4X1SQMACHKEY N0 TAPR/HD	
all	8	20H011CG	ALVANIA CG1 GREASE EA=1 TUBE	

Instructions for Replacing G3 Drive Chain Couplings: Retrofit Kits KTG3SCR001 and KTG3SCR002

Milnor engineers recently re-engineered the motor-to-gear reducer drive chain couplings to ensure longer life and greater reliability for these components. These new couplings can be easily retrofitted to existing G3 Continuous Batch Washers as detailed below.



WARNING 1: Entangle and Crush Hazard—Gears and chains can entangle and crush body parts

- Lock OFF and tag out power at the wall disconnect before servicing.

1. Place the key in shaft. Check for proper fit. Key must fit snugly. If not, replace the key or bushing.
2. Slide the taper bushing on the motor shaft (Figure 1).
3. Position taper bushing on motor shaft as follows:
 - For 10 horsepower motors, place the bushing flush with motor shaft end (Figure 2).
 - For 5 horsepower motors, place the bushing slightly back from motor shaft end so that 1/8" (3 mm) of the motor shaft extends beyond the bushing.
4. Apply Loctite® 242 (or equivalent) to set screw (Figure 3). Tighten set screw (Figure 4).
5. Prevent the shaft key from moving by notching the edges of the keyway (Figure 5).
6. Install the motor sprocket on the bushing (Figure 6).
7. Gradually tighten the bushing bolts in an alternating pattern until the sprocket seats on the bushing. Repeat the tightening pattern at least three times. Torque bushing bolts to 108 inch-pounds (1.25 kg/cm) (Figure 7). Use a pipe wrench on the bushing to prevent the sprocket from turning during the tightening procedure.
8. Install the gear reducer sprocket. Position sprocket on shaft but do not tighten set screw. The final position is determined when the double drive chain is installed (Figure 8).
9. Place wooden boards on the machine frame to support the motor as shown in Figure 9. Slide motor into place and bolt up.
10. Install a wire wrap or wire leader through the first chain link pair (Figure 10). Note the three chain plates, and master link assembly.
11. Align motor sprocket teeth with the gear reducer sprocket teeth so that the chain links will fit between both sets of teeth.
12. Thread chain into sprockets (Figure 11). Use the leader to help feed chain around sprockets.
13. Ensure that the double drive chain is perfectly seated on both sprockets by adjusting the position of gear reducer sprockets. Tighten the set screw after determining the optimum gear reducer sprocket position (Figure 13).
14. Cut off leader and partially insert the master link (Figure 14).
15. Install the center plates between the adjoining links (Figure 15).
16. Push the master link through the center plates (Figure 16). Install end plate and lock clip.

Figure 1: Sliding taper bushing on motor sprocket

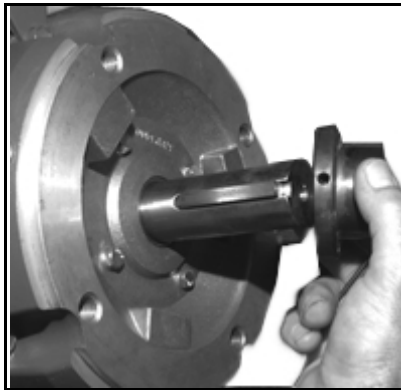


Figure 2: Aligning taper bushing with motor drive shaft (10 HP motor installation shown)

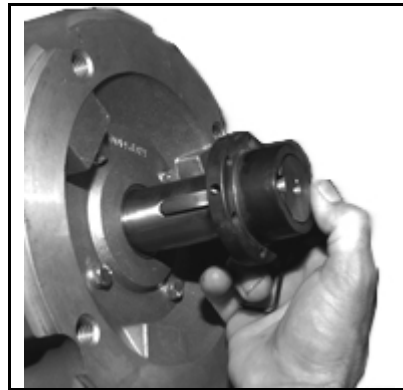


Figure 3: Applying Loctite® to taper bushing set screw

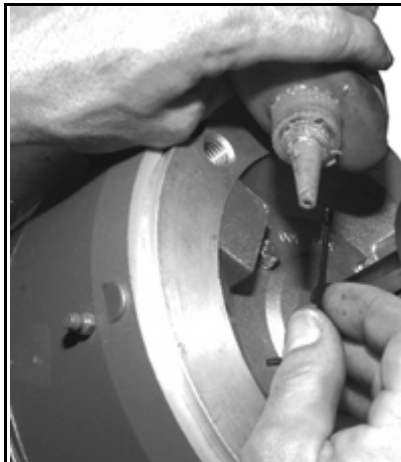


Figure 4: Securing taper bushing

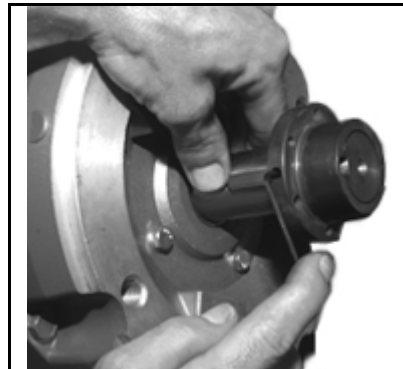


Figure 5: Notch motor shaft keyway

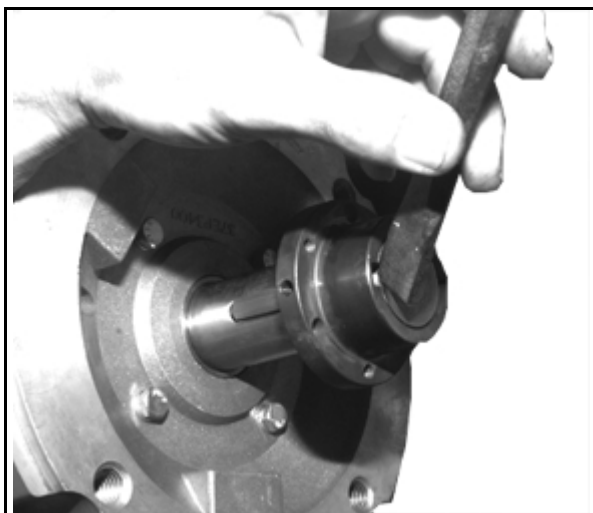


Figure 6: Fitting motor sprocket to bushing

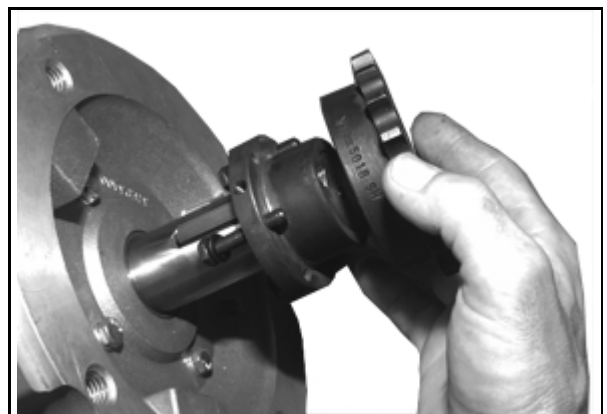


Figure 7: Tightening the motor sprocket

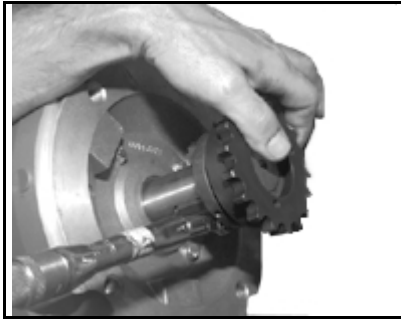


Figure 8: Positioning the gear reducer sprocket

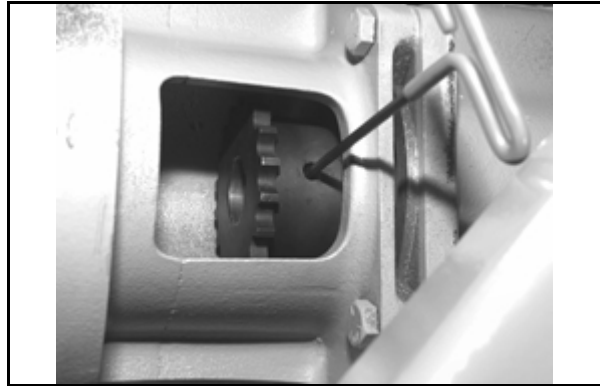


Figure 9: Sliding motor into gear reducer



Figure 10: Attaching wire wrap leader to drive chain for threading

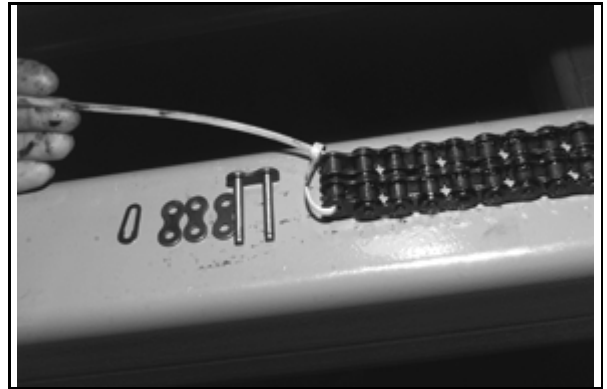


Figure 11: Starting chain into sprockets



Figure 12: Feeding chain through sprockets

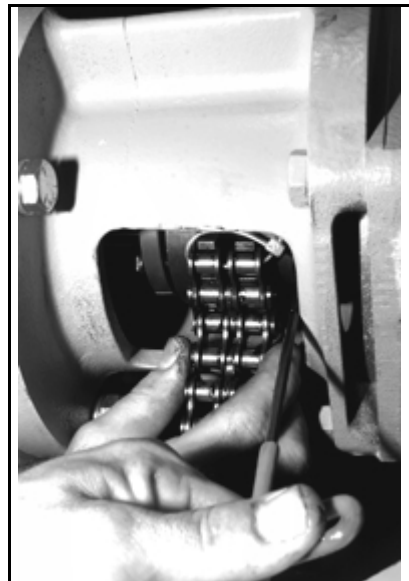


Figure 13: Double drive chain seated on sprockets

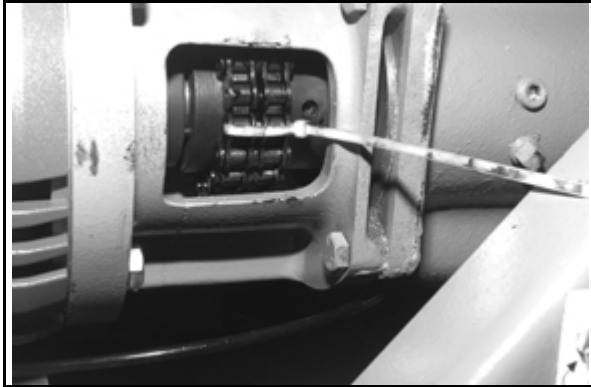


Figure 14: Partially installed master link

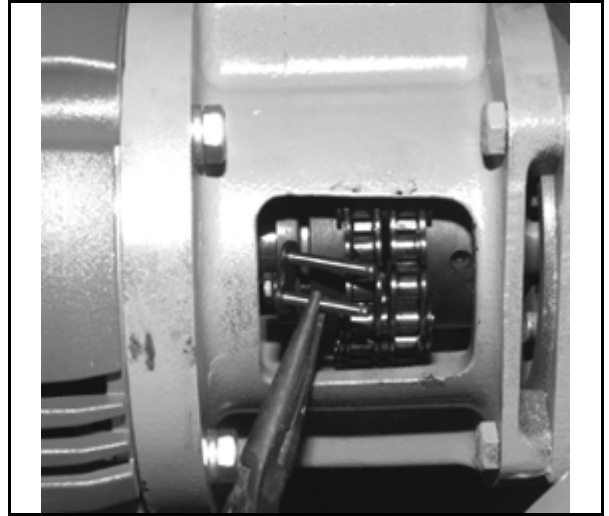


Figure 15: Installing center plates


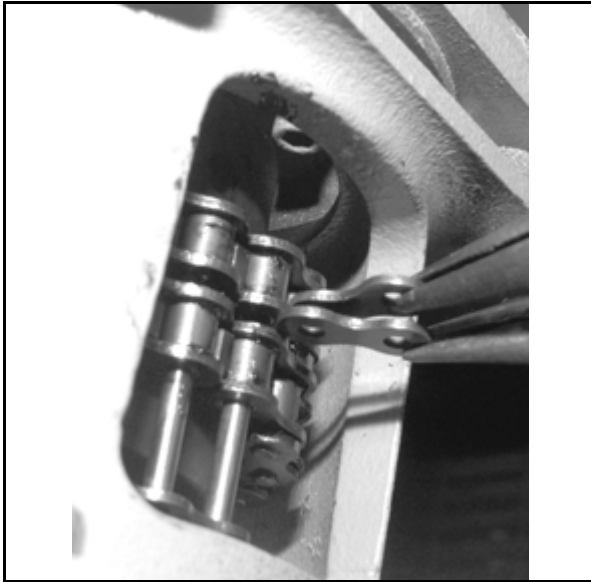


Figure 16: Center plates in position

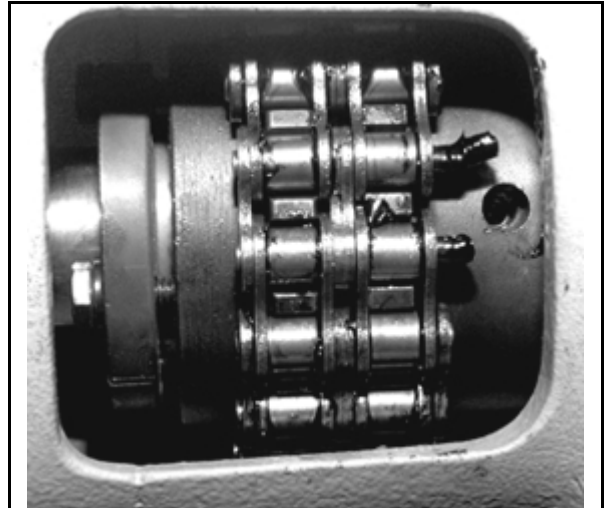

— End of BIPCLM01 —

Drive Train Service

This document covers two major areas of drive train service: drive chain adjustment and support roller replacement.

1. Drive Chains

Each section is equipped with roller chains which operate outside the wet area of the machine. If properly maintained, chains will have a long life in continuous use. Check chains periodically for proper chain tension and lubrication as called for in the preventive maintenance checklist.

As the tunnel reverses, one half of the chain tightens, while the other half goes slack. A pair of chain tensioners are fitted to each chain to keep slack at a minimum during reversals (Figure 2). All chain measurements are taken from the slack side. An Oiler and Drive Test Panel (Figure 1, located on the electric box door under the load chute), is provided with a switch that allows manual actuation of the drive motors, so slack can be measured at each tensioner in turn.

The key switch on this panel allows the chain oiler to be checked and adjusted. See “ABOUT THE OIL MIST SYSTEM...MSSMD401BE” in the Table of Contents for additional information.

Note 1: All chains must have the same amount of tension. If a chain is tighter than an adjacent chain, it will drive the adjacent cylinder and could lead to premature failure of chains, support rollers, or gear reducers.


1.1. Preparations for Testing Chain Tension



WARNING 1: Crush and Entrap Hazards—Guards, covers, and panels—Operating the machine with any guard, cover, or panel removed exposes moving components.

- Lock out and tag out power at the main machine disconnect before reaching into the cylinder.

Figure 1: Manual Chain Controls

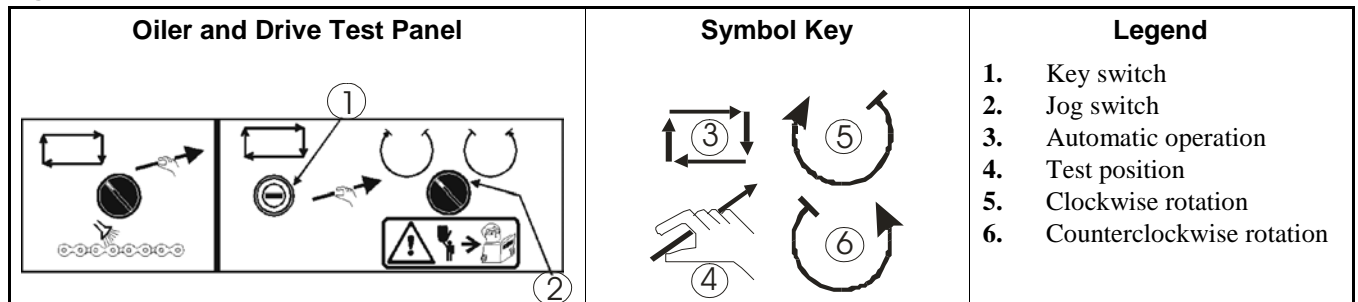


1.2. Chain Tension Testing Procedure—Follow instructions carefully to prevent the tunnel washer from starting while testing or adjusting chain tension. At the Mentor™ console, provide power to the drive test system by turning console power ON and tunnel power ON. Do not start rotation.

1. At the Oiler and Drive Test Panel, disable Mentor control of the drive motors and prevent inadvertent manual drive motor actuation as follows:
2. Turn key switch to the position. This disables the drive motor contactors, preventing personnel from starting the machine from the Mentor™ console during testing or adjustment.
3. Turn the rotation switch momentarily to the position.
4. Lock out and tag out power at the wall disconnect.

5. Measure the distance between the chain guide and the chain guide housing at the slack side of the chain (Figure 2). This span should measure 3/4" (19) - 1" (25).
6. Restore power to machine.
7. Turn the rotation switch momentarily to the \curvearrowright position.
8. Repeat steps 4 and 5 above.
9. If both measurements are between 3/4" (19) - 1" (25):
 - Chain tension is within specifications.
 - Check chain oiler nozzle function and aim. See "ABOUT THE OIL MIST SYSTEM."
10. If one (or both) measurements are greater than 3/4" (19) - 1" (25):
 - Chain tension is not within specifications.
 - See "Adjusting Chain Tension" below.

Figure 2: Chain Tensioner Assembly



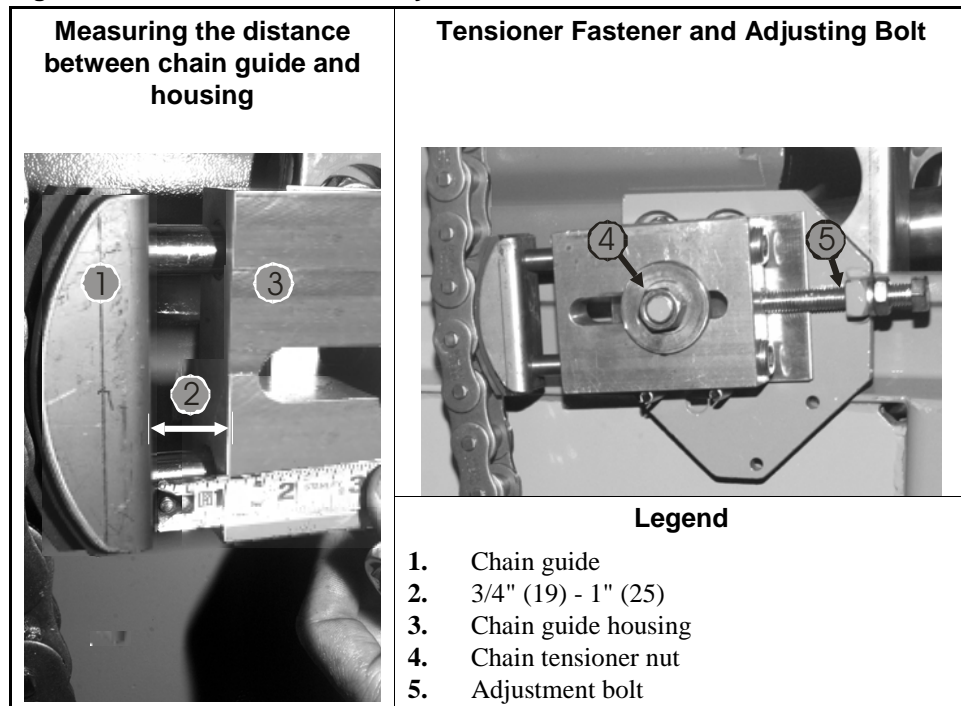


2. Adjusting Chain Tension

After determining that chain slack exceeds specifications:

1. Lock out and tag out power at the wall disconnect.
2. Loosen the chain tensioner nuts, back out the adjusting bolts and slide both tensioners away from chain (Figure 2).
3. Remove coupling flange bolts (Figure 4).
4. Loosen the four gear reducer mounting bolts (Figure 3). This frees the gear reducer to pivot about the coupling shaft.
5. Insert a lever between the coupling and sprocket shaft (Figure 3). Carefully pry between these shafts to adjust chain slack to between 3/4" (19) - 1" (25).
6. Temporarily tighten one of the gear reducer mounting bolts to hold the reducer in place.

7. Recheck chain tension, then tighten the rest of the gear reducer mounting bolts.
8. Locate the Top Dead Center bolt on the large cylinder sprocket (Figure 5). This is the only cap head bolt on the sprocket and is usually installed under a target.
9. Rotate cylinder as necessary to align the Top Dead Center bolt with the Top Dead Center bolt on the adjacent sprocket. If adjusting an end chain in an multi-section unit, align the Top Dead Center bolt on the other end of the unit with the Top Dead Center bolt on the adjacent unit.
10. Reinstall flange coupling bolts (Figure 4).
11. Reinstall chain tensioners. Set guide-to-housing clearance for 3/4"-1" (Figure 2).

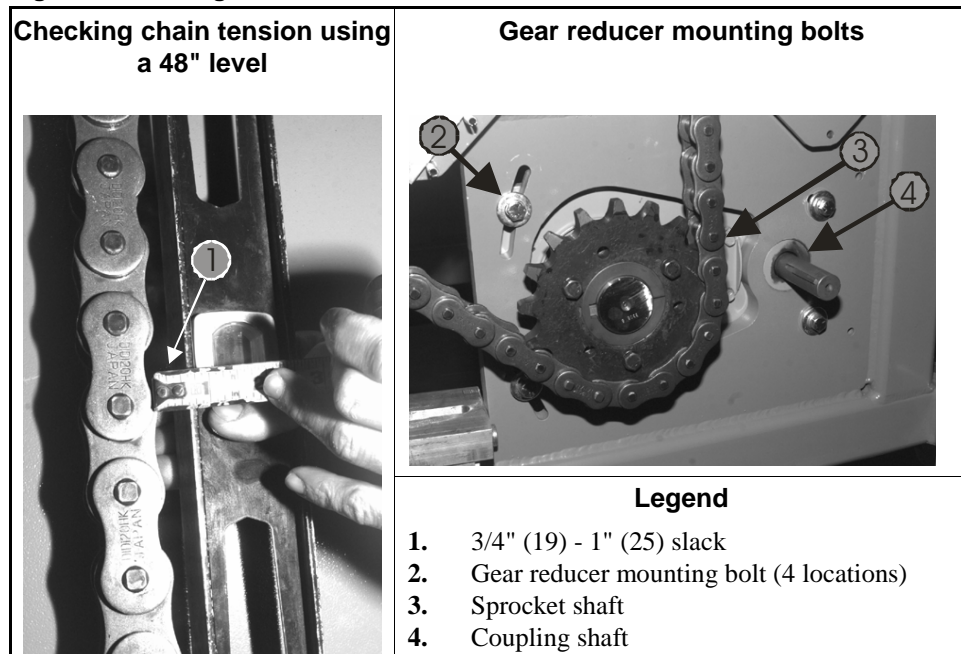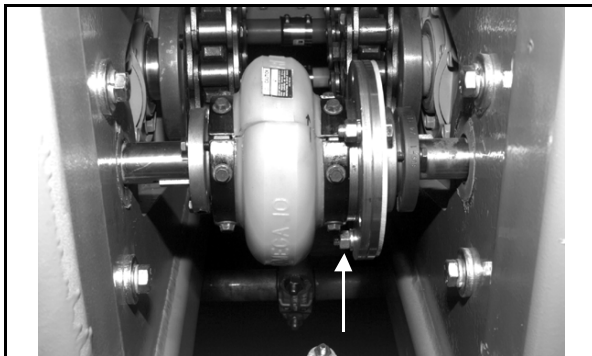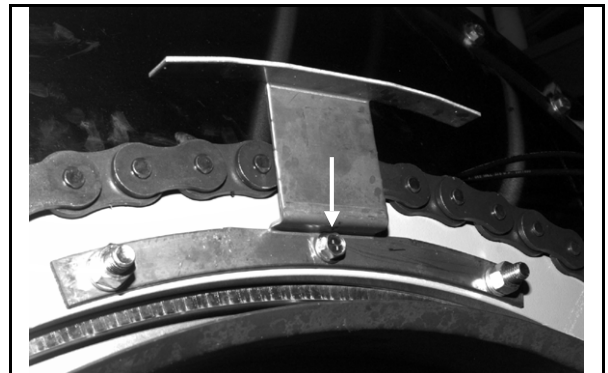Figure 3: Checking Chain Tension**Figure 4: Coupling Flange Bolts****Figure 5: Top Dead Center Bolt**

3. Replacing a Support Roller Assembly

Note 2: Support roller assemblies weigh approximately 110 pounds (43 Kg). Use at least two technicians and/or suitable lifting aids (forklifts or chain hoists) to lift and install assemblies.

The support roller assemblies on every batch washer are factory set for correct alignment and weight distribution. With proper lubrication, these components should provide long service life under continuous use. The following procedure requires at least two technicians and/or suitable lifting aids (forklifts or chain hoists) to remove and install assembly. To replace support roller assembly:

1. Loosen the drive chain (see “Adjusting Chain Tension”).
2. Remove drip tray and drain. Use a hydraulic jack under the cylinder (shown in Figure 6) and raise the cylinder until it is suspended just above the rollers. The rollers should turn freely.
3. Remove the grease fitting attached to the center of the roller and secure it out of the way.
4. Remove the clamp-to-rail fasteners (Figure 6).
5. After taking appropriate weight precautions, slide assembly off the rail.
6. Remove clamp-to-plate fasteners from the old support roller plate after carefully noting the number of alignment flat washers used between the clamps and each side of the support roller plate (Figure 6). These alignment flat washers determine where the wheel tracks on the cylinder and must be reinstalled exactly as removed. See “Support Roller Assembly...BMP000030,” in this manual, for additional information.
7. Install the grease fitting on the roller. Slowly lower the cylinder and remove the jack. Check that the cylinder makes contact with the roller.
8. Tighten chain to specifications (see “Adjusting Chain Tension”).
9. After installation is complete, run the batch washer and observe the rollers as the cylinder rotates (Figure 7). The rollers should not rub the sides of the support track, the shell front, or drip tray. If rubbing occurs, then add or subtract alignment flat washers between the clamps and wheel support plate, as necessary.
10. It is not necessary to lubricate the new support rollers after installation. They were pre-lubricated at the factory. However, after one week of operation they should be re-lubricated as explained in “PREVENTIVE MAINTENANCE FOR CONTINUOUS BATCH WASHERS.” Check all bolts for tightness.

Figure 6: Support Roller Assembly Installation

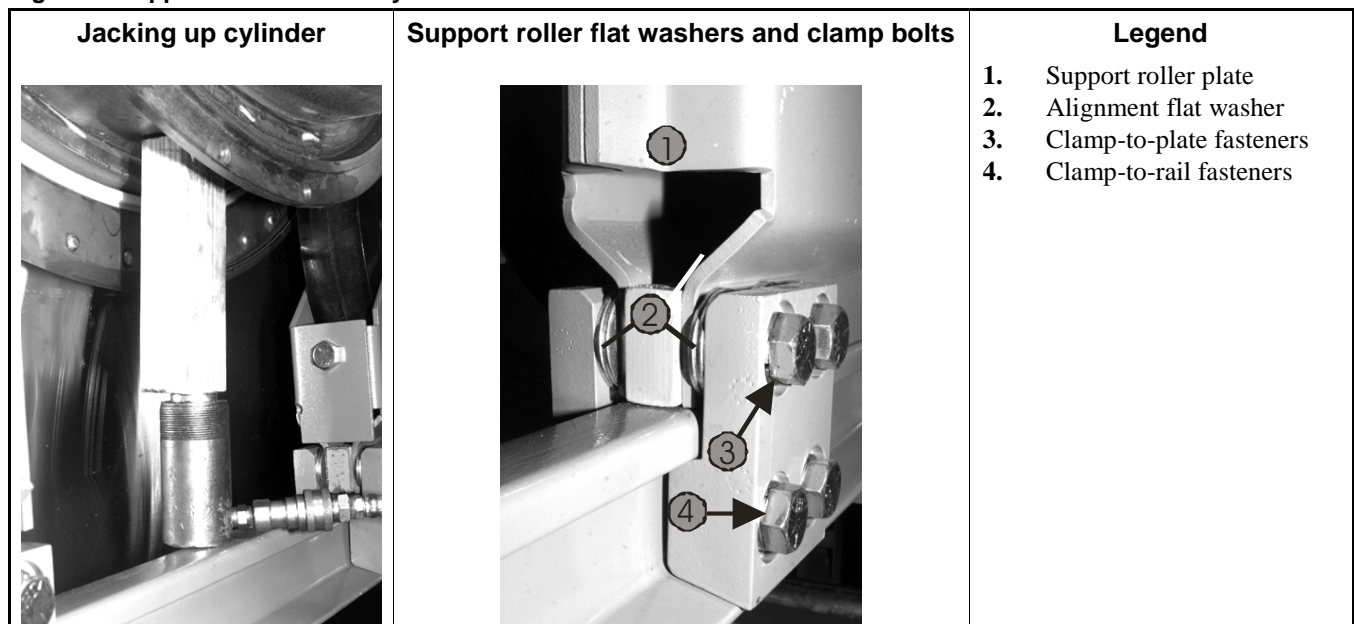


Figure 7: Support Wheel Tracking



— End of BIPCLM02 —

Proximity Switch & Target Settings

76028 & 76039 G3 Tunnels





Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


BMP000034/2025183B
(Sheet 1 of 3)

Litho in U.S.A.

Safety Limit Switch (B)

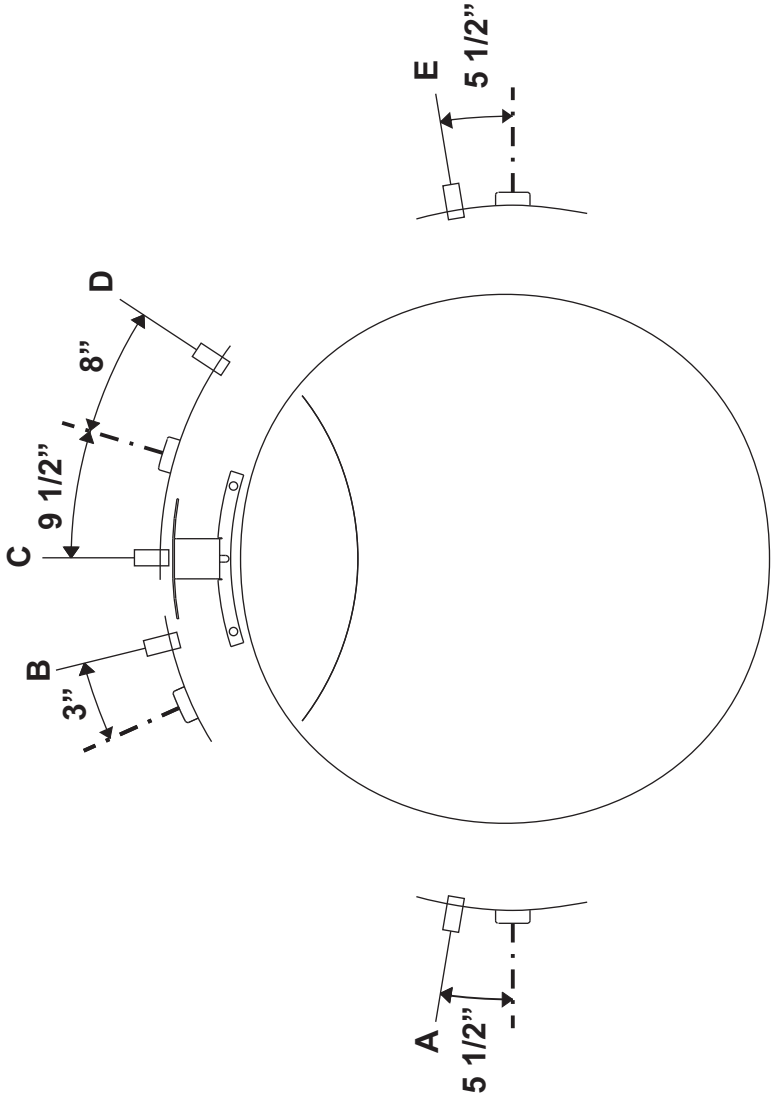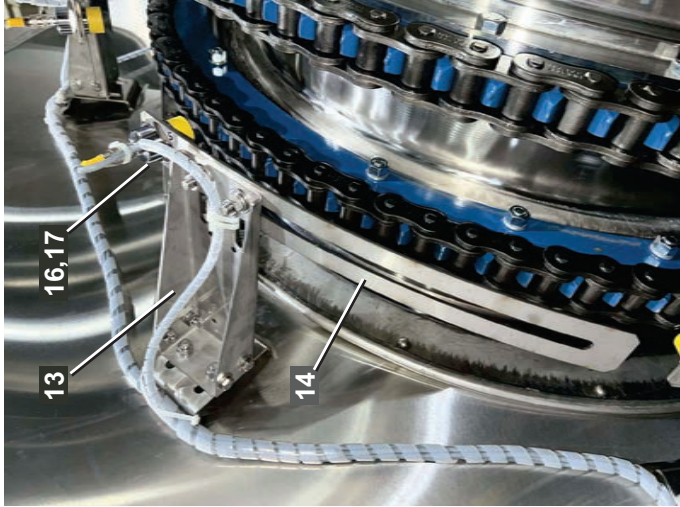


Alignment Proximity Switches (C)

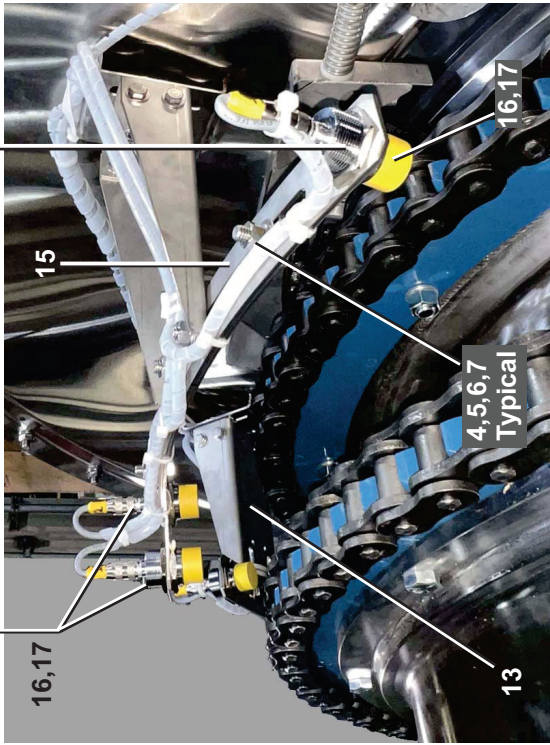


Top-Dead-Center Limit Switches (C)

Clockwise Limit Switch (A)

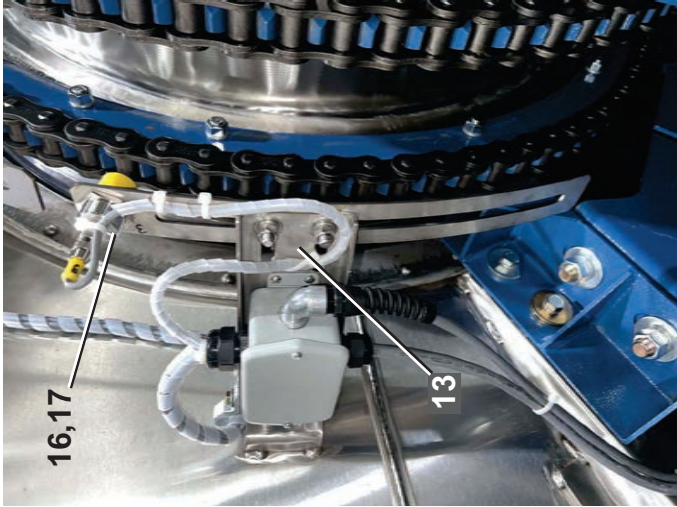

Counter-Clockwise Limit Switch (E)

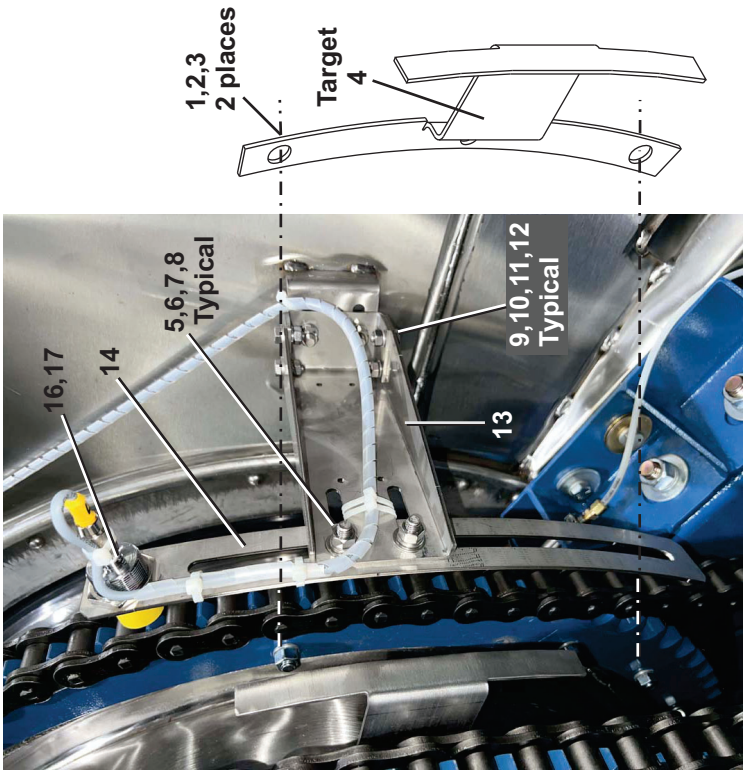

Proximity Switch Settings:

All of the switch settings above reference the center line of their shell bracket. The shell bracket is welded to the shell. The holding bracket is bolted to the shell bracket and holds the proximity switch adjustment bracket.

A) Clockwise Limit Switch is set approximately 5-1/2" above the center line of the bracket.

B) Safety Switch is 3-1/2" above the center line of the bracket.

C) Alignment Proximity Switches are 9-1/2" to the left of the center of the bracket.

D) Top-Dead-Center Switch is 8" to the right of the bracket.

E) Counter Clockwise Limit Switch is set approximately 5-1/2" above the centerline of the bracket.

Proximity Switch & Target Settings
76028 & 76039 G3 Tunnels

BMP000034/2025183B
(Sheet 2 of 3)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

ALL POSITIONS ARE VIEWED FROM REAR (DISCHARGE END)


(NOTE: PHOTOS OF G2 WELDED TUNNEL, NOT G3 TUNNEL)

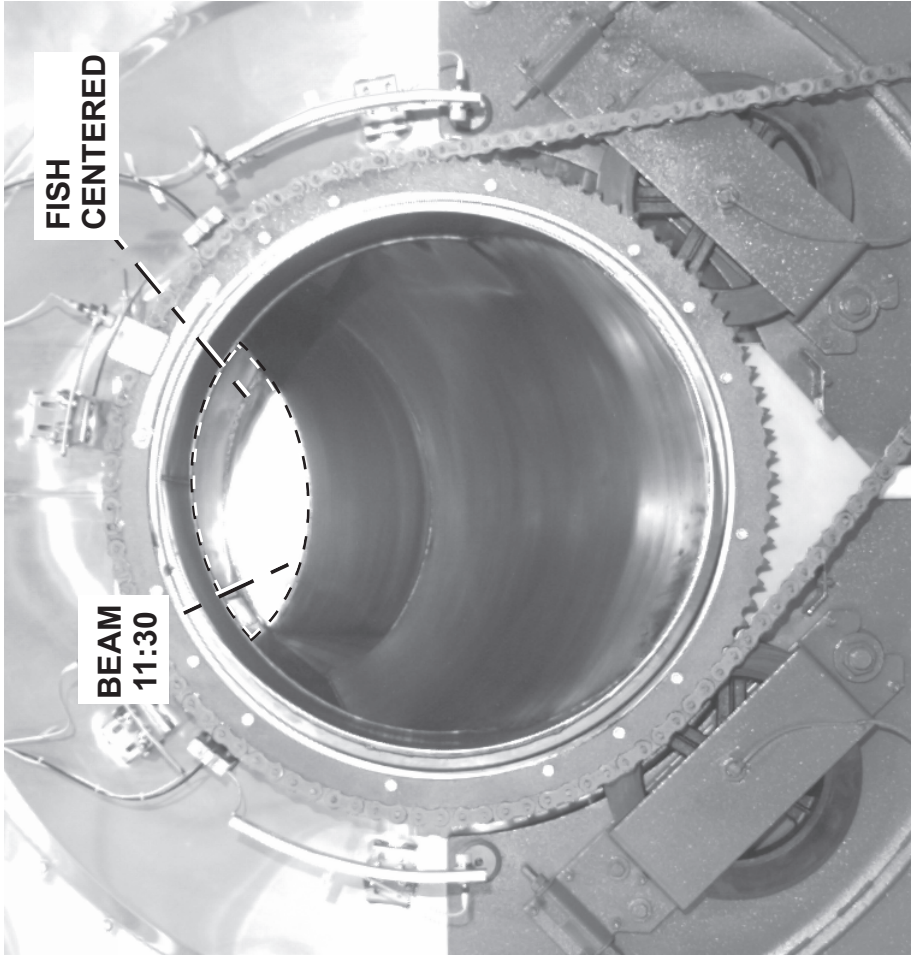

TOP DEAD CENTER
(11:30 POSITION)

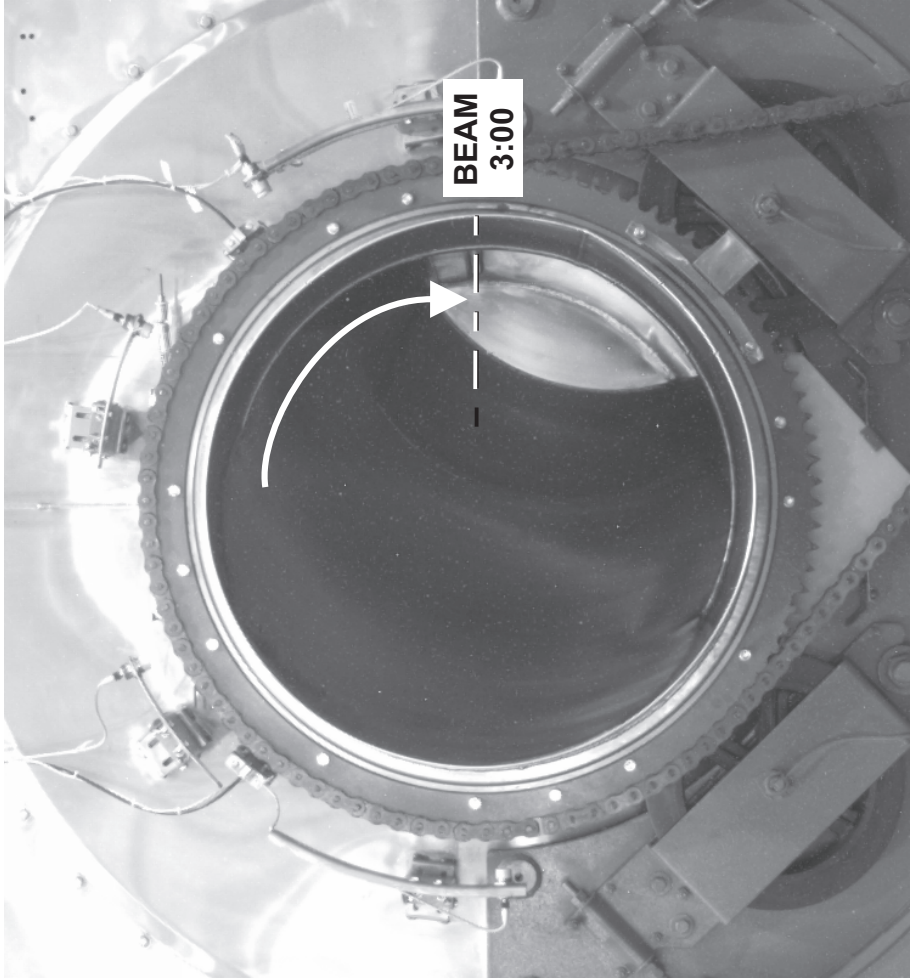

MAXIMUM COUNTERCLOCKWISE ROTATION
(3:00 POSITION)

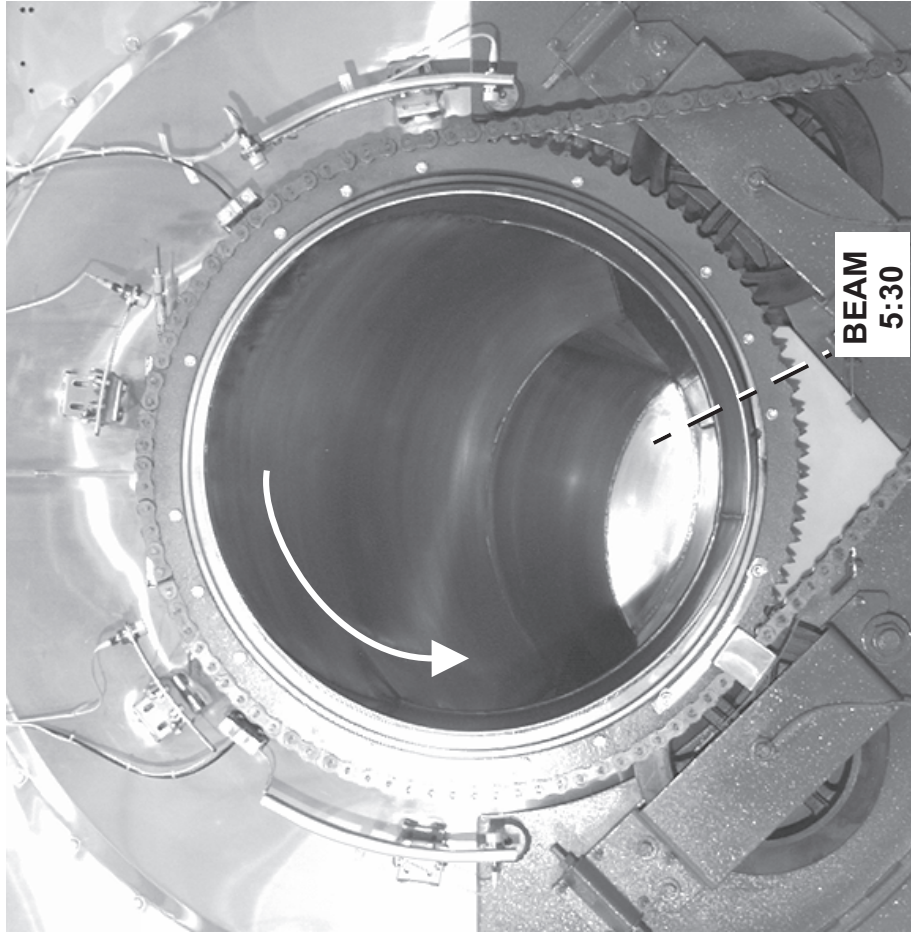

MAXIMUM CLOCKWISE ROTATION
(5:30 POSITION)

Proximity Switch & Target Settings

BMP0000034/2025183B
(Sheet 3 of 3)

Parts List—Proximity Switch & Target Installation			
Used In	Item	Part Number	Description
Comments			
-----REFERENCE ASSEMBLIES-----			
	A	G64PS002	PROX SW&TARGET INST EXIT G2
	B	G64PS003	ALIGNMENT SWITCH INST 1ST SECT
	C	G64PS003A	ALIGNMENT SWITCH INST MIDSECT
-----COMPONENTS-----			
all	1	15K173A	HXCAPSCR 1/2-13UNC2AX1.75 GR5
all	2	15U300	LOKWASHER REGULAR 1/2 ZINC PLT
all	3	15G230	HXNUT 1/2-13UNC2B SAE ZINC GR2
all	4	06 20619	TARGET.ENTRY&EXIT PROX SW II
all	5	15K095	HXCPSCR 3/8-16UNC2AX1 GR5 ZINC
all	6	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL
all	7	15G205	HXNUT 3/8-16UNC2B ZINC GR2
all	8	15U245	FLTWASH 3/8 STD COMM 18-8 SS
all	9	15K055	SOKCAPSCR 5/16-18X3/4 SS18-8
all	10	15G186	HEXNUT 5/16-18UNC2 SS18-8
all	11	15U200S	FLATWASHER US STD 5/16 SS18-8
all	12	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS
all	13	06 40149	PROX SWITCH LATERAL ADJUSTER
all	14	06 20644	PROX SW MTG RING-EXIT END
all	15	06 20644A	PROX SW BRKT=TIMING
all	16	09RPS30ADU	PRXSW.QK CONN.30M NO-DC UNSHLD
all	17	09RPSPDC003	CONN.STR FEMALE DC 3A 300V 3M RK4T-3



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

SETTING ROTATION LIMIT SWITCH POSITIONS ON 76028 AND 76039 TUNNEL WASHERS

Four limit switches control tunnel cylinder rotation angle and additional switches monitor the rotational alignment of adjoining tunnel units. Slotted switch mounting brackets permit adjusting the angular position of each switch. However, fixed switch locations have been established for the models covered by this instruction and it is merely necessary to assure that the switches are located at these positions. These models use an inverter with a controlled deceleration time, which substantially eliminates variations in cylinder coast times due to varying load sizes and other factors.

⚠ DANGER ⚠



ENTANGLE AND SEVER HAZARDS—Contact with moving components normally isolated by guards, covers, and panels, can entangle and crush your limbs. These components move automatically. Even with power off, the tunnel cylinder can rotate by gravity.

- ☞ **Do not service machine unless qualified and authorized.**
- ☞ **Lock off and tag out power at the main machine disconnect before servicing.**
- ☞ **Immobilize the cylinder (see MSSM0921AE in the reference manual).**


NOTE: These switches have the same angular relationship as those on 76032 tunnel models (covered by MSSMD410AE). All models share the same rotation control circuitry.

When Switch Positions Must be Checked—Switches are properly positioned at the factory and should not need to be adjusted in the field unless symptoms indicate an improper rotation angle. Symptoms include portions of separate loads becoming intermixed in the tunnel and/or a large volume of water splashing out of the discharge end during transfer. Verify that switches are located in the positions specified herein. If resetting the switch positions does not correct the problem, contact the factory.

Switch Function and Identification—On these models, all four rotation-control switches and one alignment-monitoring switch are operated by the same target. Each additional alignment switch has its own target. The *clockwise limit switch* (RPX1) and *counterclockwise limit switch* (RPX2) control the angle of rotation of the cylinders during reversals. The *transfer limit switch* (RPX4) controls the angle of rotation during transfer. The *safety limit switch* (RPX3) is a backup to the *transfer limit switch*. Should the Miltron controller detect any of these switches operating out of sequence, it will immediately stop tunnel rotation and display an error message.

Additional limit switches (one per tunnel unit) are furnished on these models to ensure all units are turning synchronously. Two of these switches (RPX5 and RPX6) are installed at the same location (between the same two units) as the rotational limit switches. One additional switch is installed at every other location where units mate together. Since the alignment switches function in series, all such switches (and their targets) must be located at the same angular position so that all inputs are made at the same time. Should the Miltron controller detect a misalignment between units, it will immediately stop tunnel rotation and display an error message.


FIGURE 1, next page, identifies all limit switches.

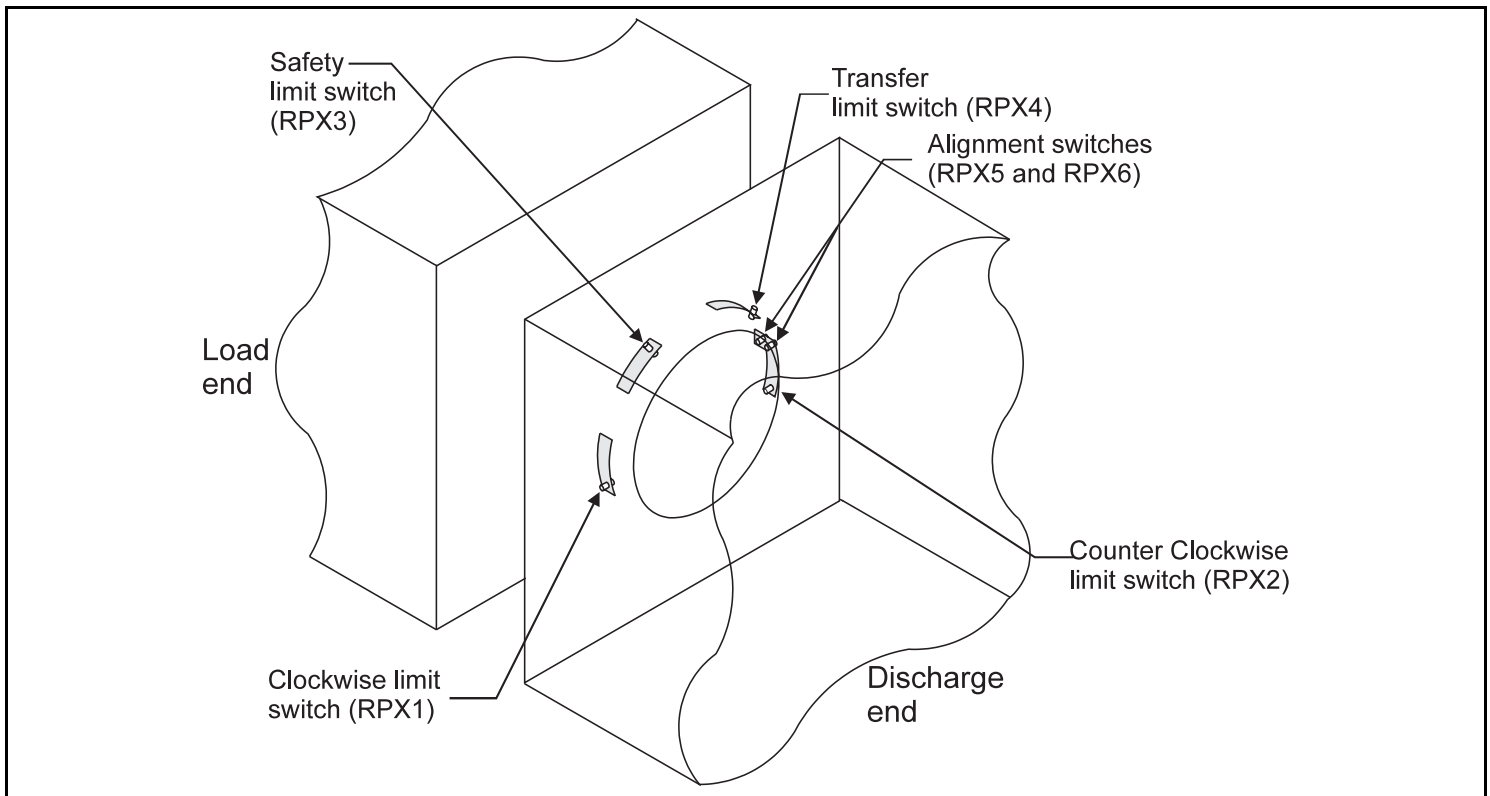


**FIGURE 1 (MSSMD446AE)
Switch Locations**

Adjusting Switch Positions

—Switches are mounted on slotted brackets. Move the slotted bracket on its support bracket to achieve the specified switch position, as shown in FIGURES 2 through 5. Make certain that switches, switch wires and brackets are secure and cannot become entangled when the cylinder is turning.

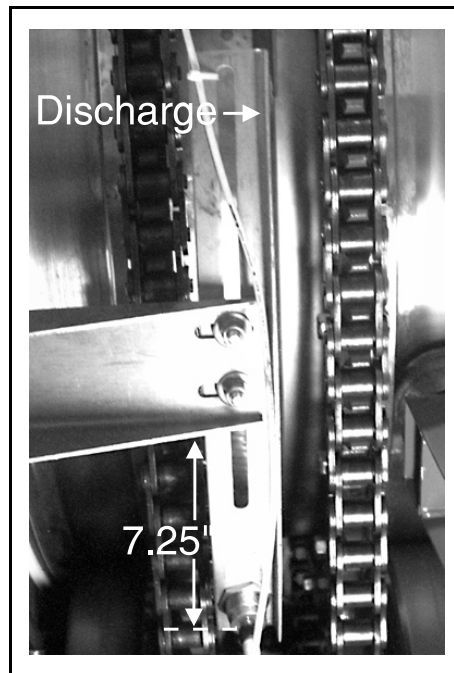

**FIGURE 2 (MSSMD446AE)
Clockwise Limit
Switch(RPX1)**

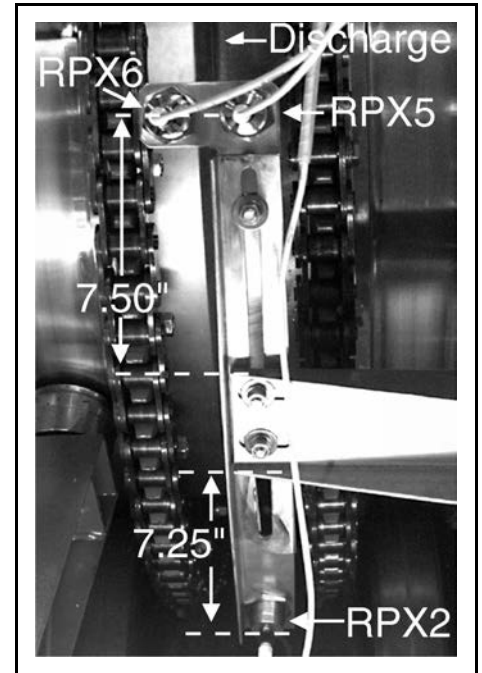

**FIGURE 3 (MSSMD446AE)
Counterclockwise Limit
Switch (RPX 2). Alignment
Switches (RPX5 and RPX6)**

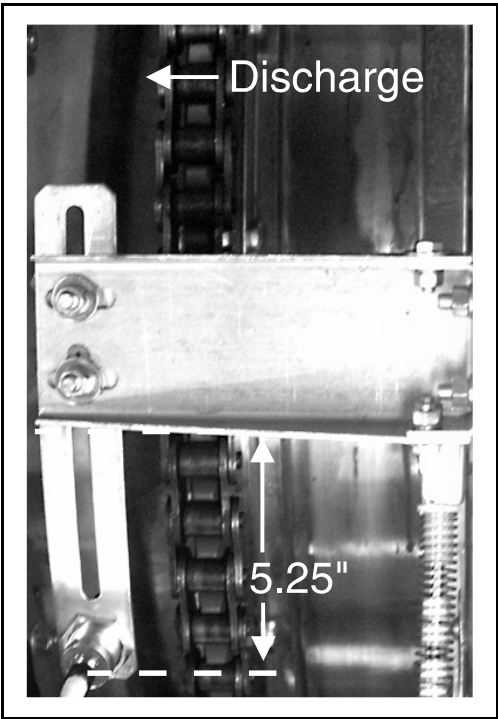


FIGURE 4 (MSSMD446AE)
Transfer Limit Switch
(RPX4)

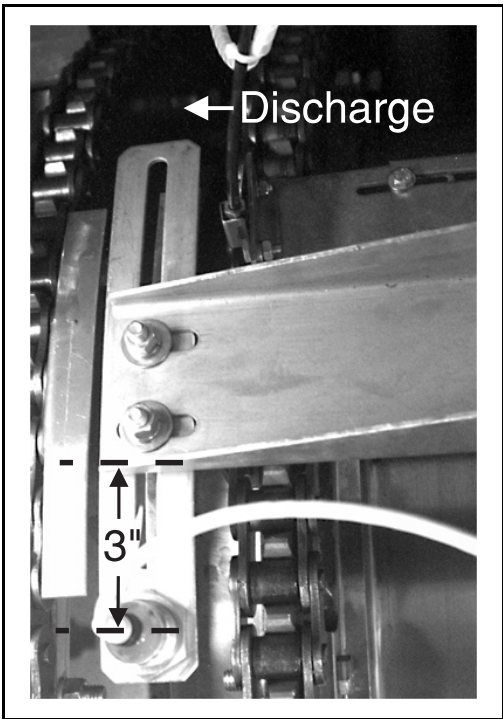


FIGURE 5 (MSSMD446AE)
Safety Limit Switch (RPX3)

2

Load Chute and Seals

2.2


Load Chute and Seal Installation
76028G3, 76039G3, & 92048G4 Tunnels

BMP110060/2011483B
(Sheet 1 of 4)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

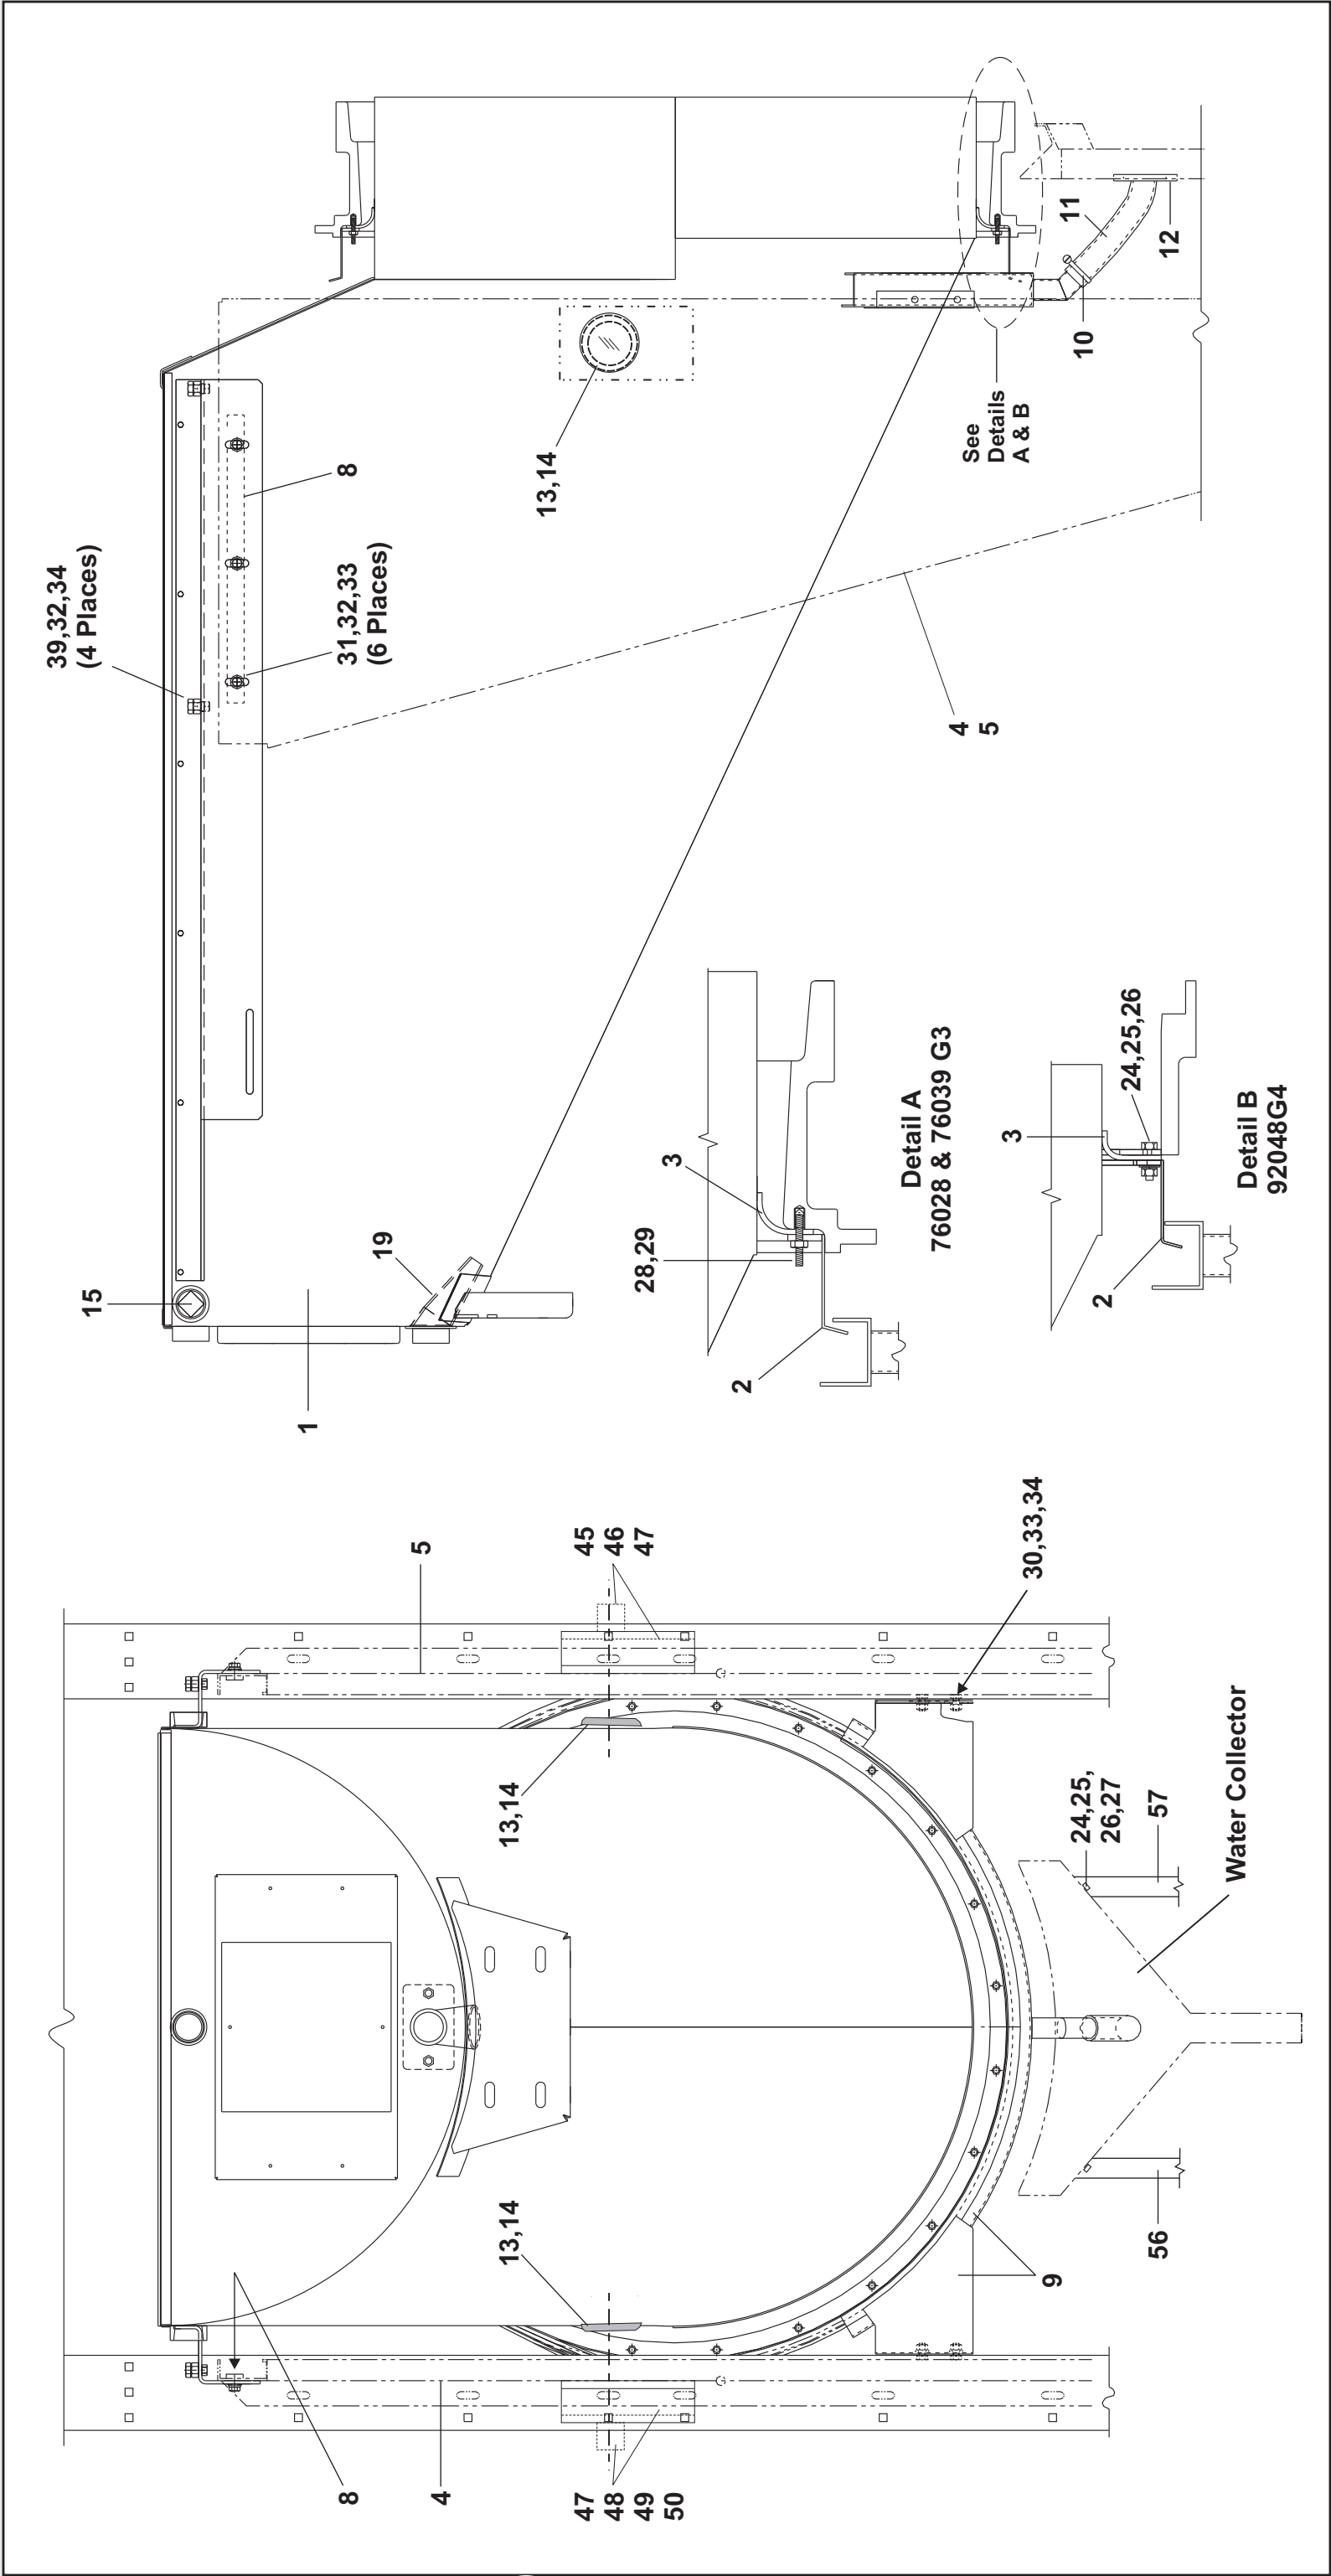





Load Chute and Seal Installation **76028G3, 76039G3, & 92048G4 Tunnels**

BMP110060/2011483B
 (Sheet 2 of 4)





Pellerin Milnor Corporation
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

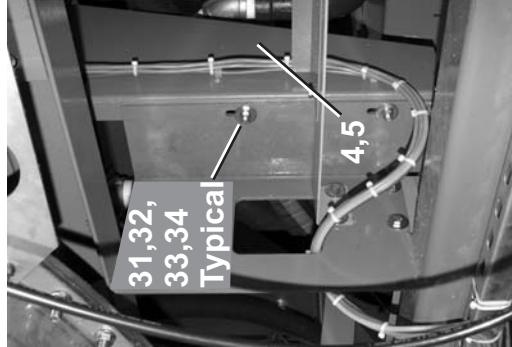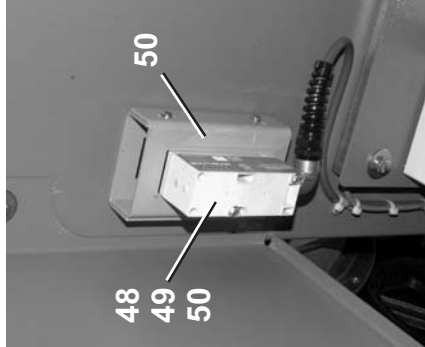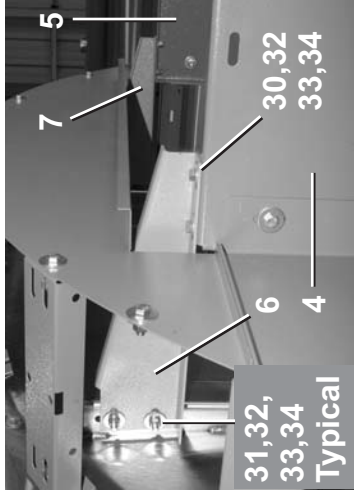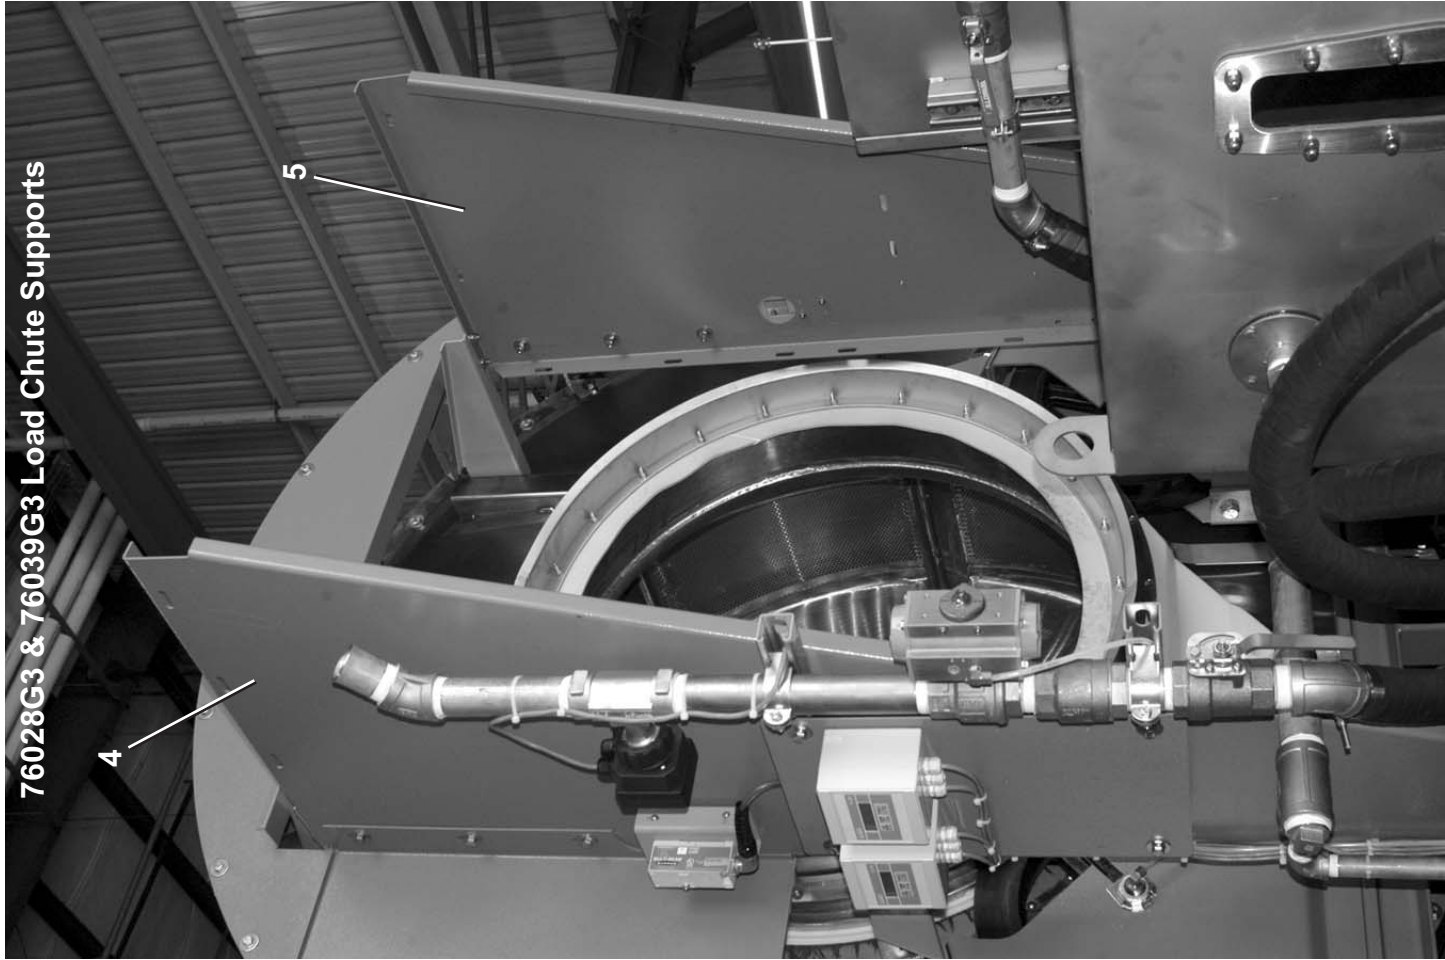

Typical Hardware Connections

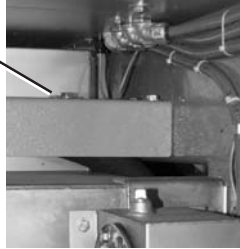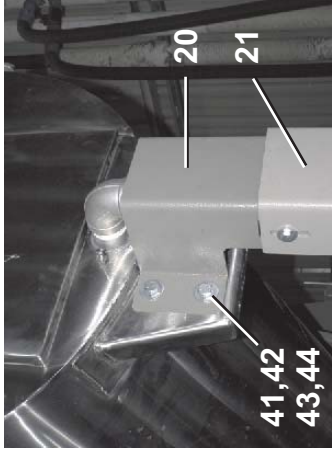

Load Chute and Seal Installation


76028G3, 76039G3, & 92048G4 Tunnels

MILNOR
Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

BMP110060/2011483B
(Sheet 3 of 4)

Parts List—Load Chute and Seal Installation				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.				
Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	G65GC002	LG-LD SCOOP/SEAL INSTALL=Y2KCB	76028G3, 76039G3
	B	GLC63001A	9248 W/PULSEFLOW LOAD CHUTE INSTALL	92048G4
-----COMPONENTS-----				
A	1	W6 20731B	BAG LOAD CHUTE WLMT	
B	1	W6 30071B	9248 W/PULSEFLOW LOAD CHUTE WLMT	
A	2	W6 20732	*LG CHUTE FLARE-RING WLMT	
B	2	06 30112	9248 LOAD CHUTE FLARE RING	
A	3	06 20212U	LG CBW-LOAD CHUTE SEAL	
B	3	06 30088	LOAD CHUTE SEAL	
A	4	06 40132C	LOAD COS SCOOP SIDE LF G3	
A	5	06 40132D	LOAD COS SCOOP SIDE RT G3	
A	6	06 40132G	BRKT=LOAD SCOOP SUPPORT-LFT	
A	7	06 40132H	BRKT=LOAD SCOOP SUPPORT-RGT	
A	8	06 20316	TAP BAR LOAD FUNNEL 2/TUNNEL	
B	8	06 30089	LOAD CHUTE SUPT TAP BAR	
A	9	W6 40117E	G3 H20 CATCHER/CHAIN PROT WLT	
B	9	W6 30145	LOAD CHUTE H20 CATCHER WLMT	
all	10	27A060	HOSECLAMP1+5/16-2.25CADSC#HS28	
all	11	60E014R	TUBING NYLOBRAID 1.25X1.75	
all	12	60E010	TUBINGPOLYBRAID 1"X1.312	
all	13	06 20739	EXTRUSION GLASS PROXSW	
all	14	06 20739A	GLASS=3.06 DIA PROXSW	
all	15	5SP1EDESC	NPT PLUG 1.25 SQCORDED GALV CI	
all	16	5N1ECLSG42	NPT NIP 1.25XCLS TBE GALSTLS40	
A	17	5SL1ENFA	NPT ELB 90DEG 1.25 GALMAL 150#	
B	17	5SL1KNFA1E	NPTELB 90D 1.5X1.25GALMAL 150#	
all	18	5N1E02KG41	NPT NIP 1.25X2.5 TOE GALSTL S4	
all	19	W6 70262	CBW LOAD CHUTE FLUSH PIPE	
A	20	06 70247	7639 PULSEFLOW CHUTE SUPPORT	
B	20	06 70249	9248 CHUTE SUPPORT W/PULSEFLOW	
A	21	06 70246	G3 LOADCHUTE SUPPORT BRKT	
B	21	06 70255	LOADCHUTE SUPPORT BRKT	

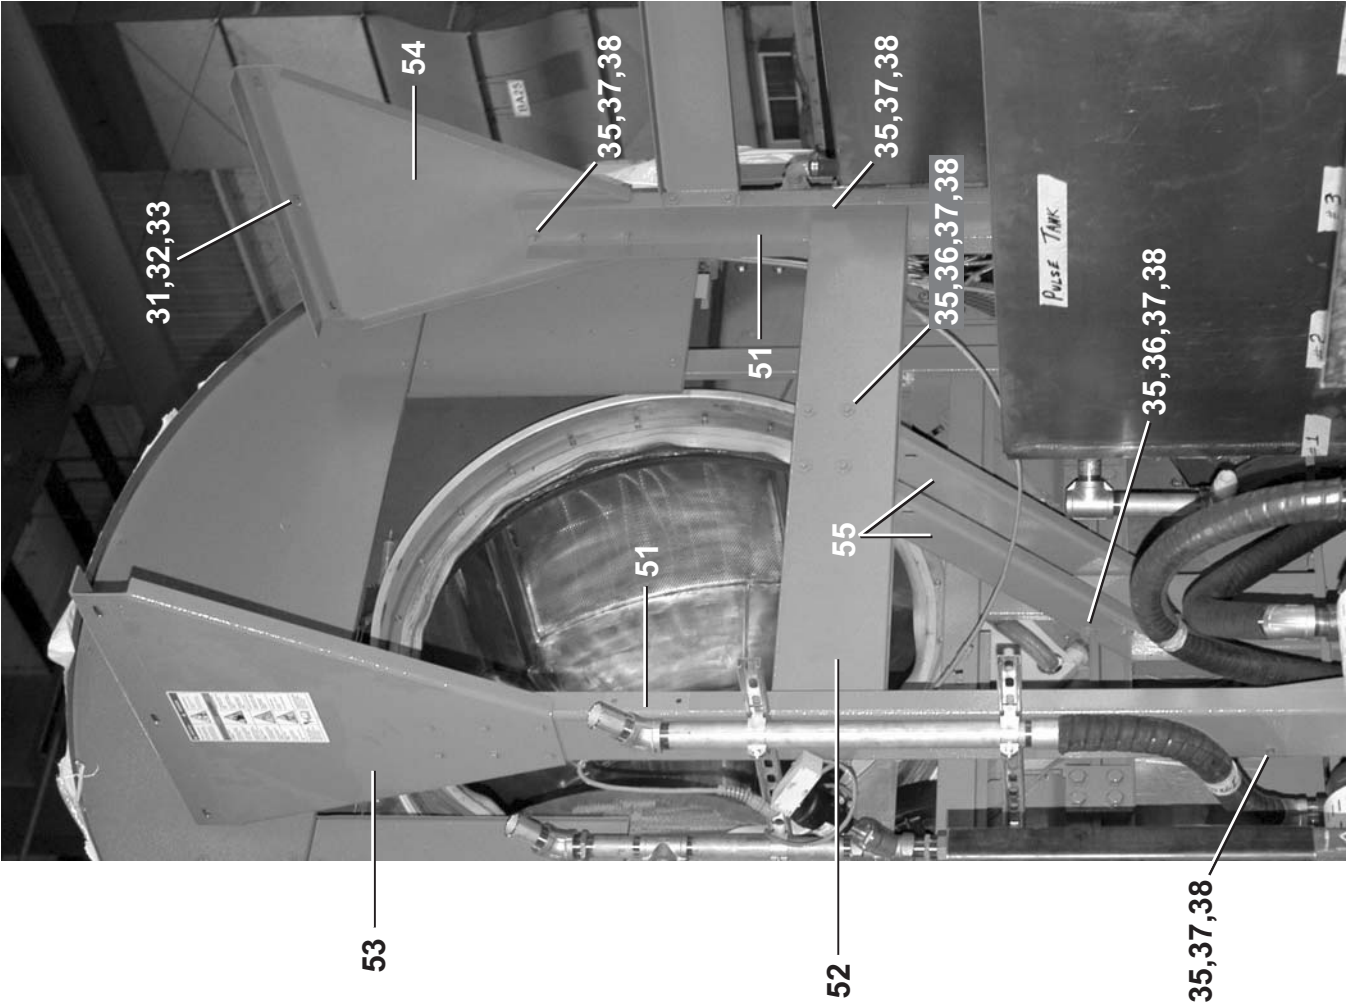

92048G4 Tunnel Load Chute Supports



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Load Chute and Seal Installation					Parts List, cont.—Load Chute and Seal Installation				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.					Used In	Item	Part Number	Description	Comments
B		54	06 30090A	LD CHUTE TOP MNT BRKT RT					
B		55	06 30169	LOAD CHUTE ANGLE SPPT BRKT					
.									

Parts List—Load Chute and Seal Installation				Comments
Used In	Item	Part Number	Description	
all	22	06 20737	FLUSH COVER PLATE	
all	23	15N186	HXCAPSCR 1/4-20X3/4 SS18-8	
all	24	15U181	LOCKWASHER MEDIUM 1/4 SS18-8	
all	25	15U188	FLTWASH 1/4 STD COMM SS18-8	
all	26	15G170	HEXNUT 1/4-20UNC2 SS18-8	
all	27	15K033	BUTSOKCAPSCR 1/4-20X5/8 SS18-8	
all	28	15Q041	SOKSETSCR 5/16-18X1+3/4 SS18-8	
all	29	15G188	HEXLOKNUT 5/16-18 BRASS	
all	30	15K096	HEXCAPSCR 3/8-16UNC2X1SS18-8	
all	31	15K100	HEXCAPSCR 3/8-16X1+1/4 SS18-8	
all	32	15U245A	FLTWASH 25/64IDX1.25ODX3/32 S/	
all	33	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	34	15G206	HEXNUT 3/8-16 UNC2 SS 18-8	
all	35	15K105	HXCAPSCR 3/8-16UNC2A1.25 GR5 P	
all	36	15U240	FLATWASHER(USS STD) 3/8" ZNC P	
all	37	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
all	38	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
all	39	15K122A	HEXCAPSCREW 3/8-16X2.25 SS FT	
all	41	15K162	HXCAPSCR 1/2-13UNC2AX1.5 GR5 P	
all	42	15U280	FL+WASHER(USS STD)1/2 ZNC PL+D	
all	43	15U300	LOKWASHER REGULAR 1/2 ZINC PLT	
all	44	15G230	HXNUT 1/2-13UNC2B SAE ZINC GR2	
all	45	09RPE006A	PHOTOEYE EMITTER 24/120V AC	
all	46	09RPE007A	P.E. PWR.BLK. NO-OUT 120V-IN	
all	47	03 BC6X66	BRKT: CBW PHOTOEYE-LOAD SCP	
all	48	09RPE006B	PHOTOEYE RECEIVER 24/120V AC	
all	49	09RPE007B1	P.E. PWR.BLK. 120V-OUT 120V-IN	
all	50	09RPE006B2	PHOTOEYE ON/OFF LOGICMOD #LM3	
B	51	06 30079	LOAD CHUTE VERTICAL MOUNT	
B	52	06 30081	LD CHUTE HORZ BRACE	
B	53	06 30090	LD CHUTE TOP MOUNT BRKT LF	

G3 Retractable Load Chute Option

1 of 2

76028 & 76039 G3 Tunnels

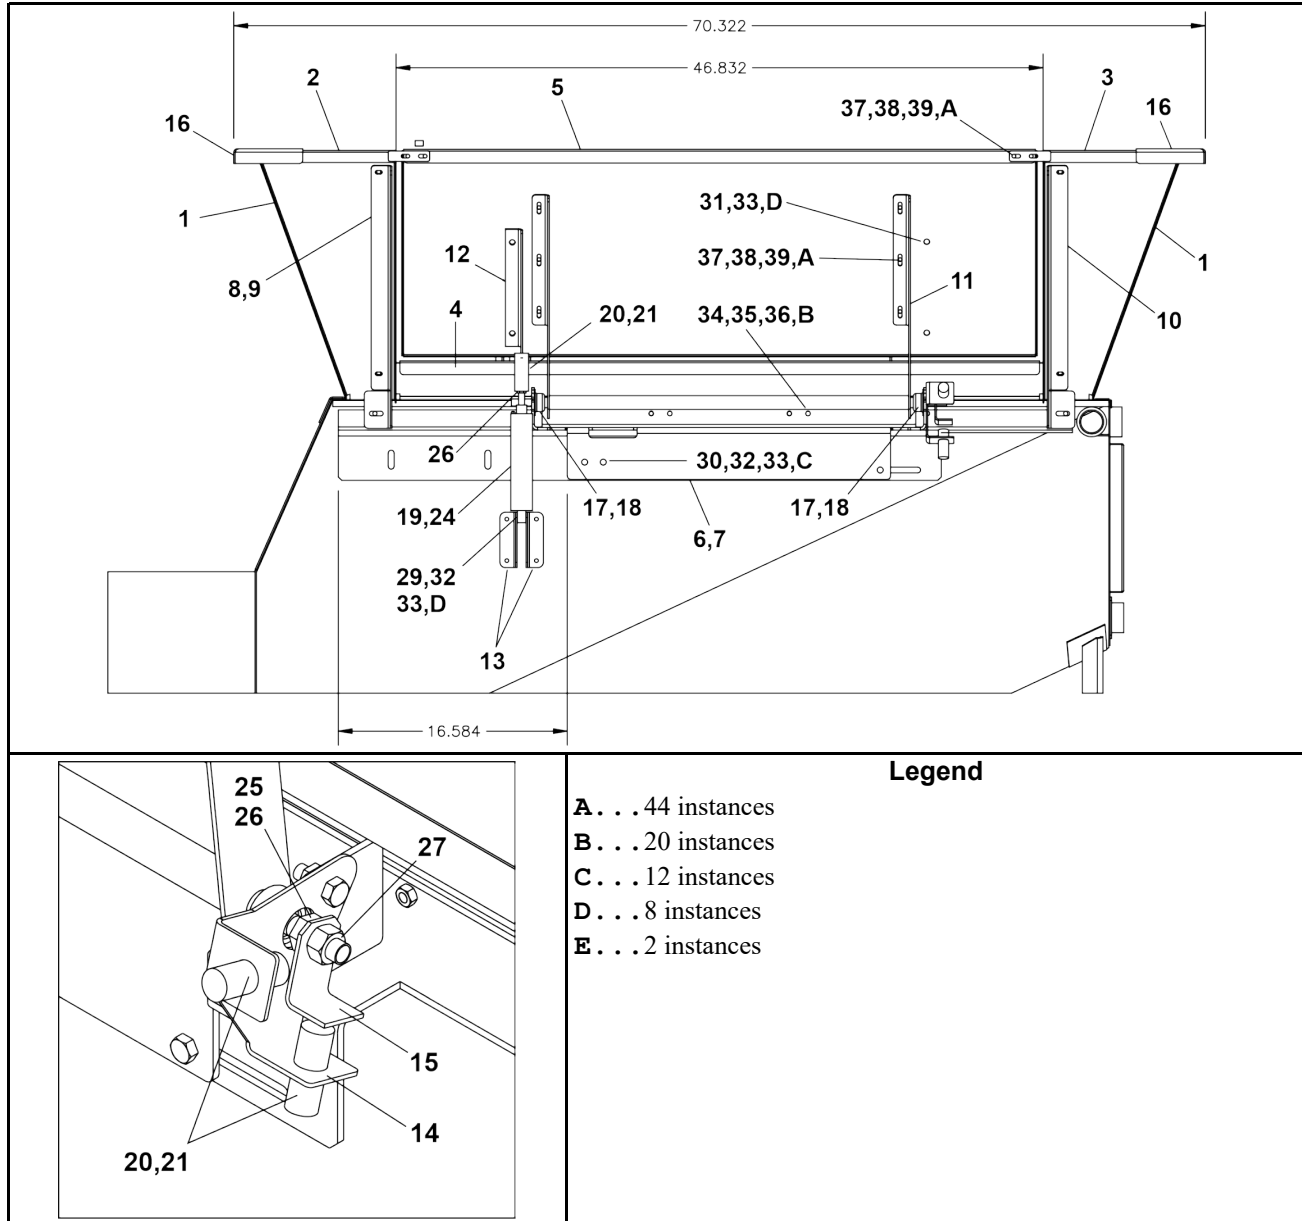


Table 1. Parts List—G3 Retractable Load Chute

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
Components				
all	1	04 20196	LDCHT FLAIRSIDE FR/BK-G3 SLING	
all	2	04 20197C	RETRACTABLE LDCHT-LF	
all	3	04 20197D	RETRACTABLE LDCHT-RT	

G3 Retractable Load Chute Option

2 of 2

76028 & 76039 G3 Tunnels

Parts List—G3 Retractable Load Chute (cont'd.)

Find the assembly for your machine and the letter shown in the "Item" column. The components for your machine will show this letter or the word "all" in the "Used In" column. The numbers shown in the "Item" column are those shown in the illustrations.				
Used In	Item	Part Number	Description/Nomenclature	Comments
all	4	04 20197E	RETRACTABLE LDCHT-BOTTOM	
all	5	04 20197F	RETRACTABLE LDCHT-PANEL	
all	6	04 24203	RETRACTABLE LDCHT TILT BRKT-LT	
all	7	04 24203A	RETRACTABLE LDCHT TILT BRKT-RT	
all	8	04 20198B	RETRACTABLE LDCHT STFNR-LF	
all	9	04 20198C	RETRACTABLE LDCHT STFNR-RT	
all	10	04 24497	FOLDING DOOR STOP BAR	
all	11	W4 24202	RETRACTABLE LDCHT SHAFT WLMT	
all	12	04 24573	DOOR ACTUATOR-CBW CHUTE	
all	13	04 24201A	RETRACTABLE LDCHT AIRCYL BRKT	
all	14	04 24201C	PROX SWTCH BRKT	
all	15	04 24201D	PROX SWTCH TARGET	
all	16	04 24200	RETRACTABLE LDCHT CORNER COVER	
all	17	54E015BM	FLMTBRG 3/4"ALL BRZ T#FL7190.	
all	18	15U348	FLTWASH 101NYL 1.25"ODX.781"ID	
all	19	27C104A	AIRCYL 1.5"BORE X 4"STROKE(PIVOT)	
all	20	17A018	7/16-20 ADJ YOKE END DROPFORGE	
all	21	17A011	7/16X1+11/32"OAL CLEVISPIN SAE	
all	22	09RPS18ADU	PRXSW QK CONN 18M NO-DC UNSHLD EUROFAST	
all	23	09RPSCD095	CON.90DEG FEMALE DC 3A300V 5M WK4T-6	
all	24	96J026	3/8"FLOW REG-SMC AS3000-N03	
all	25	15U285	FLATWASHER 1/2 STD COMM SS18-8	
all	26	15G231S	HXFINJAMNUT 1/2-13UNC2B SS18-8	
all	27	15G234NS	HXLOCKNUT NYL 1/2-13UNC2 SS18-	
all	29	15K122	HEXCAPSCR 3/8-16UNCX2 SS18-8	
all	30	15K112	HXCAPSCR 3/8-16X1+1/2 SS18-8	
all	31	15K091E	BUTSOKCAPSCR 3/8-16NCX 1" SS18	
all	32	15U245	FLTWASH 3/8 STD COMM 18-8 SS	
all	33	15G207	HEXLIGHTLOKNUT 3/8-16 18-8SS N	
all	34	15U200S	FLATWASHER US STD 5/16 SS18-8	
all	35	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS	
all	36	15G186	HEXNUT 5/16-18UNC2 SS18-8	
all	37	15U181	LOCKWASHER MEDIUM 1/4 SS18-8	
all	38	15U188	FLTWASH 1/4 STD COMM SS18-8	
all	39	15G170	HEXNUT 1/4-20UNC2 SS18-8	





Water Collectors
76028G3, 76039G3, & 92048G4



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

BMP000035/2011444B
(Sheet 1 of 2)

Litho in U.S.A.

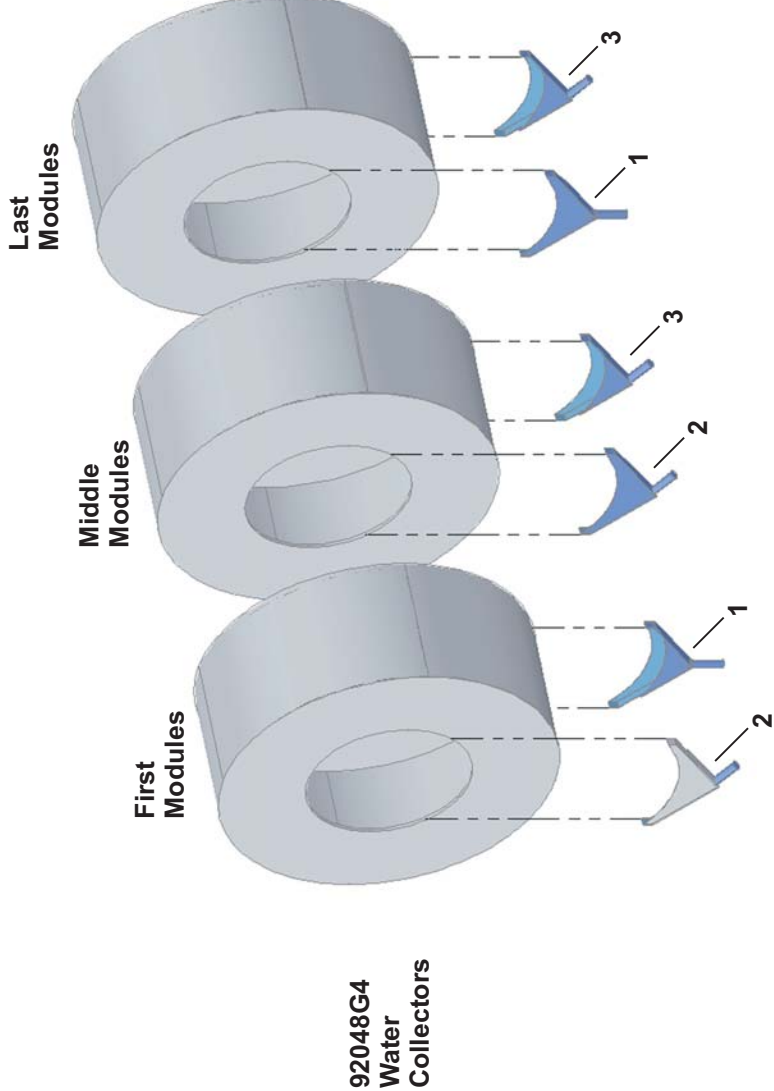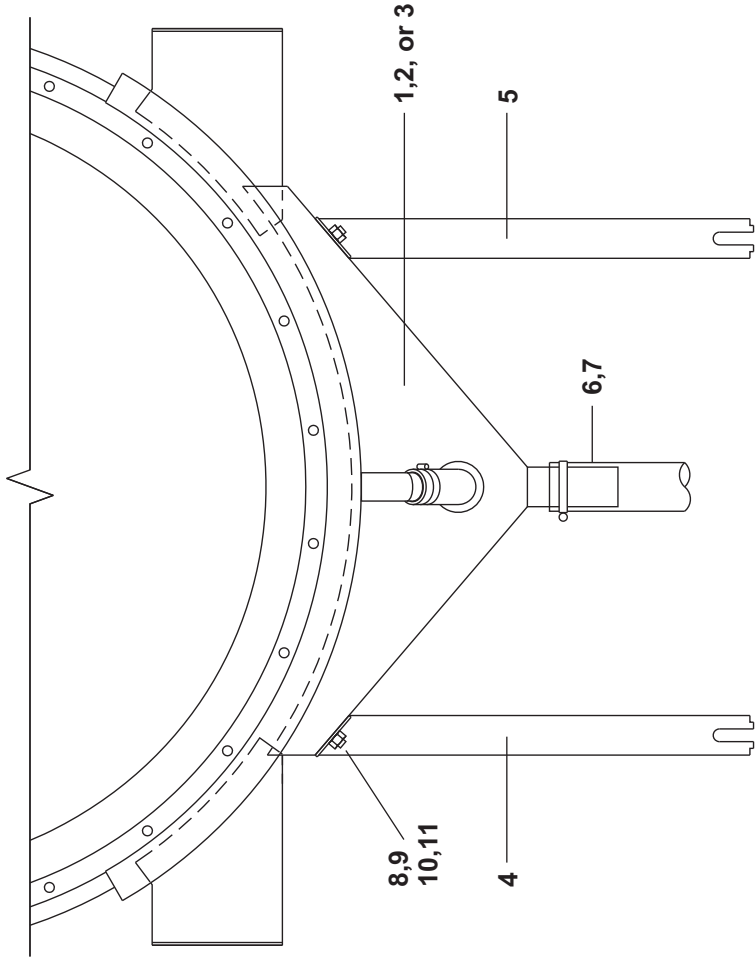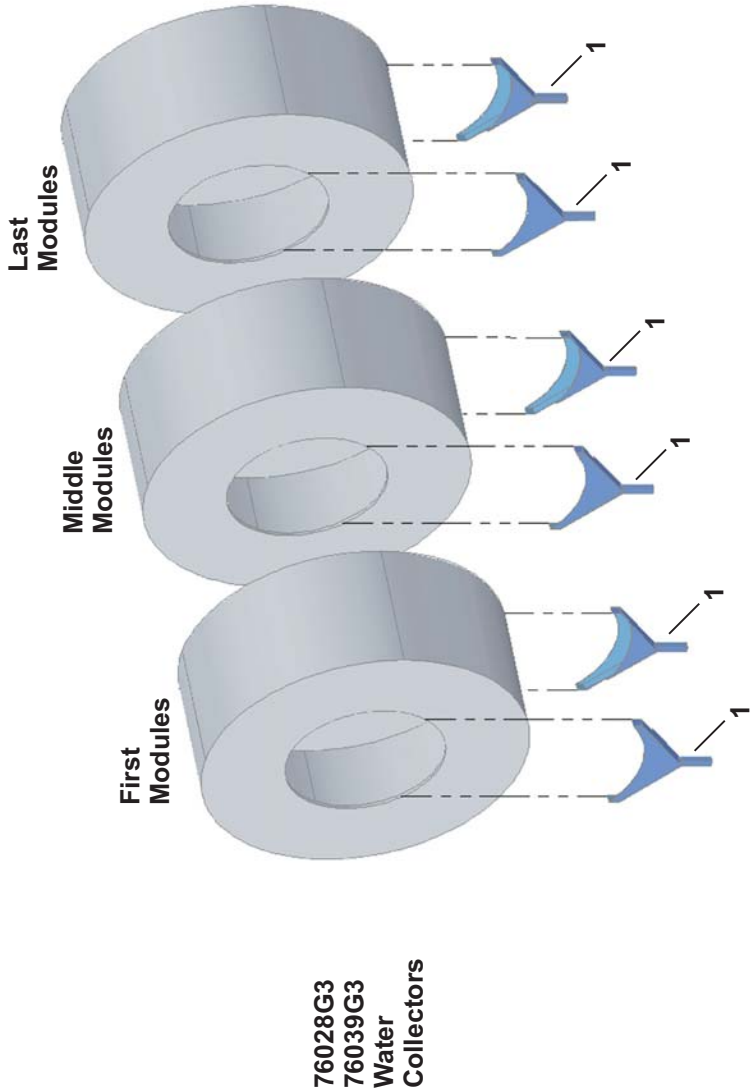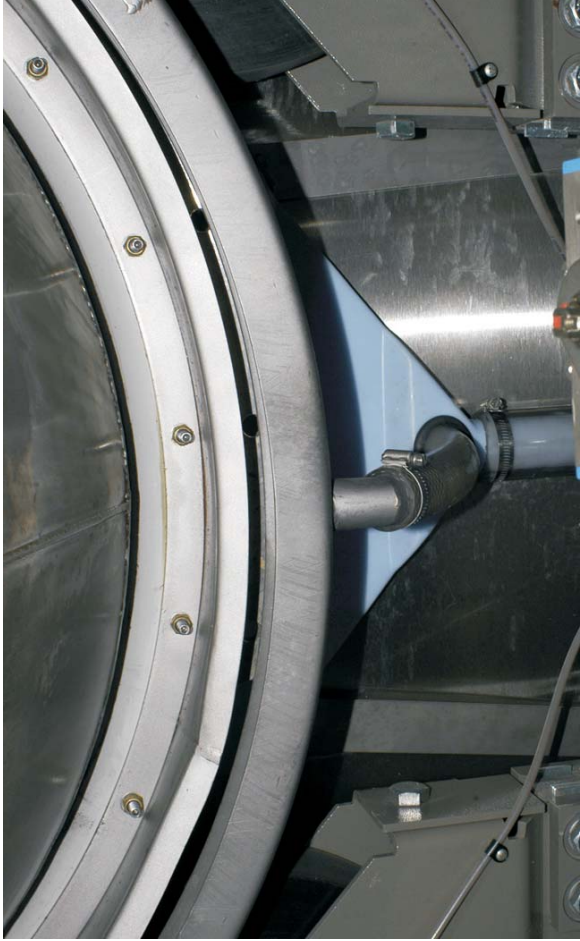



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Water Collectors

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	G67WC001	G3 WATER COLLECTOR ASSY	76028G3, 76039G3 92048G4
	B	G63WC003	9248 LOAD CHUTE H2O CATCH INST	92048G4
	C	G63WC002A	WATER CATCHER ANGLE OUT RT INS	92048G4
	D	G63WC002	WATER CATCHER ANGLE OUT INST	92048G4
-----COMPONENTS-----				
all	1	06 20629D	ENTRY&EXIT H2O COLLECT-TARG	SEE ILLUSTRATION
all	2	06 20629C	INLET WATER COLLECT NO-TARG	SEE ILLUSTRATION
all	3	06 20629B	EXIT SIDE-WATER COLL NO-TARG	SEE ILLUSTRATION
AB	4	06 20632B	SCUPPER BRKT LEFT SIDE	G3
AB	4	06 20232D	SCUPPER BRKT LEFT 9248	G4
AB	5	06 20632A	SCUPPER BRKT RIGHT SIDE	G3
AB	5	06 20232C	SCUPPER BRKT RIGHT 9248	G4
all	6	60E016B	CLEAR TUBING 1.75"ID X 2.25"OD	
all	7	27A065S	HOSECLAMP 1.56"-2.5"SSSCR#32	
all	8	15K033	BUTSOKCAPSCR 1/4-20X5/8 SS18-8	
all	9	15U188	FLTWASH 1/4 STD COMM SS18-8	
all	10	15U181	LOCKWASHER MEDIUM 1/4 SS18-8	
all	11	15G170	HEXNUT 1/4-20UNC2 SS18-8	


Unit To Unit Transition Seal Installation
76028 & 76039 CBW (G2 & G3)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


BMP940101/2014094B
(Sheet 1 of 1)

Litho in U.S.A.

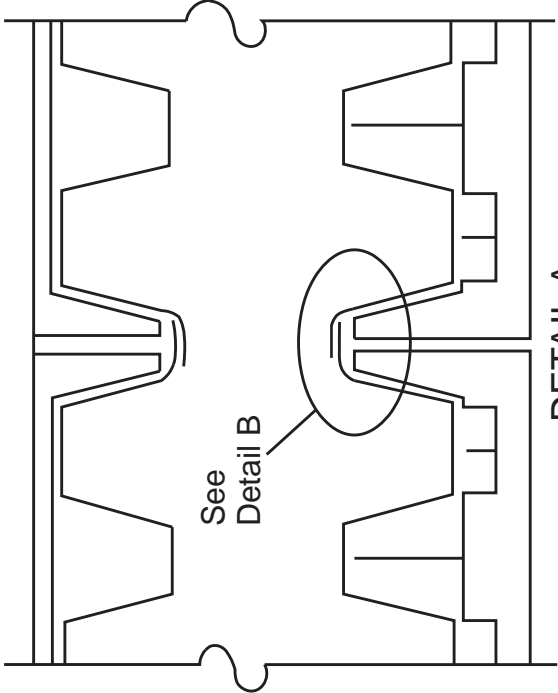

See
Detail B

DETAIL A

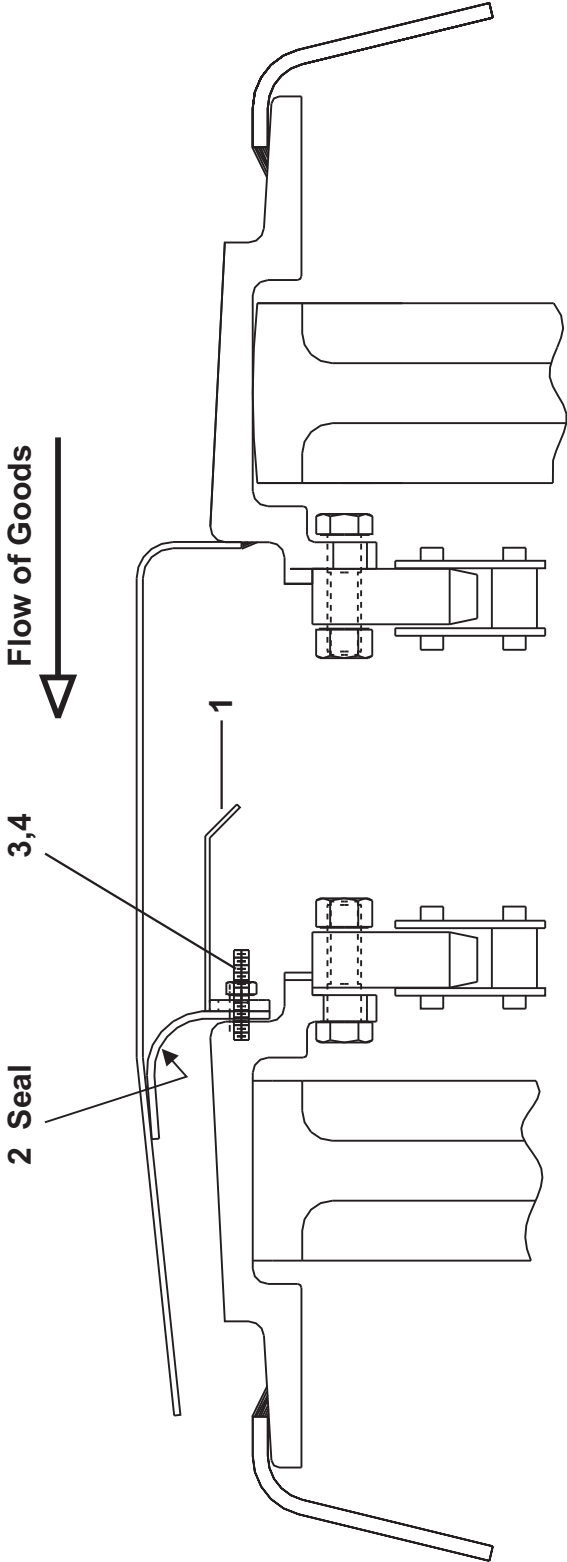

2 Seal

3,4

1

Flow of Goods

DETAIL B: Unit-Unit Seal

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
	00A	G64TS001	96232C 7628 CONNECT TRANS SEAL ASSY	REFERENCE ASSEMBLY
	001	W6 40048G	96241E*WLMT=DRIP RING M/M CONN RETR	
	002	06 40048A	96273B UNIT/UNIT TRANS RING SEAL	
	003	15Q041	SOKSETSCR 5/16-18X1+3/4 SS CUP PNT	
	004	15G188	HEXLOKNIUT 5/16-18 BRASS	

Tension Seal Assembly


76028G2/G3 & 76039G2/G3 Tunnels, 92048G4 Tunnels

BMP840026/2011474B
(Sheet 1 of 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

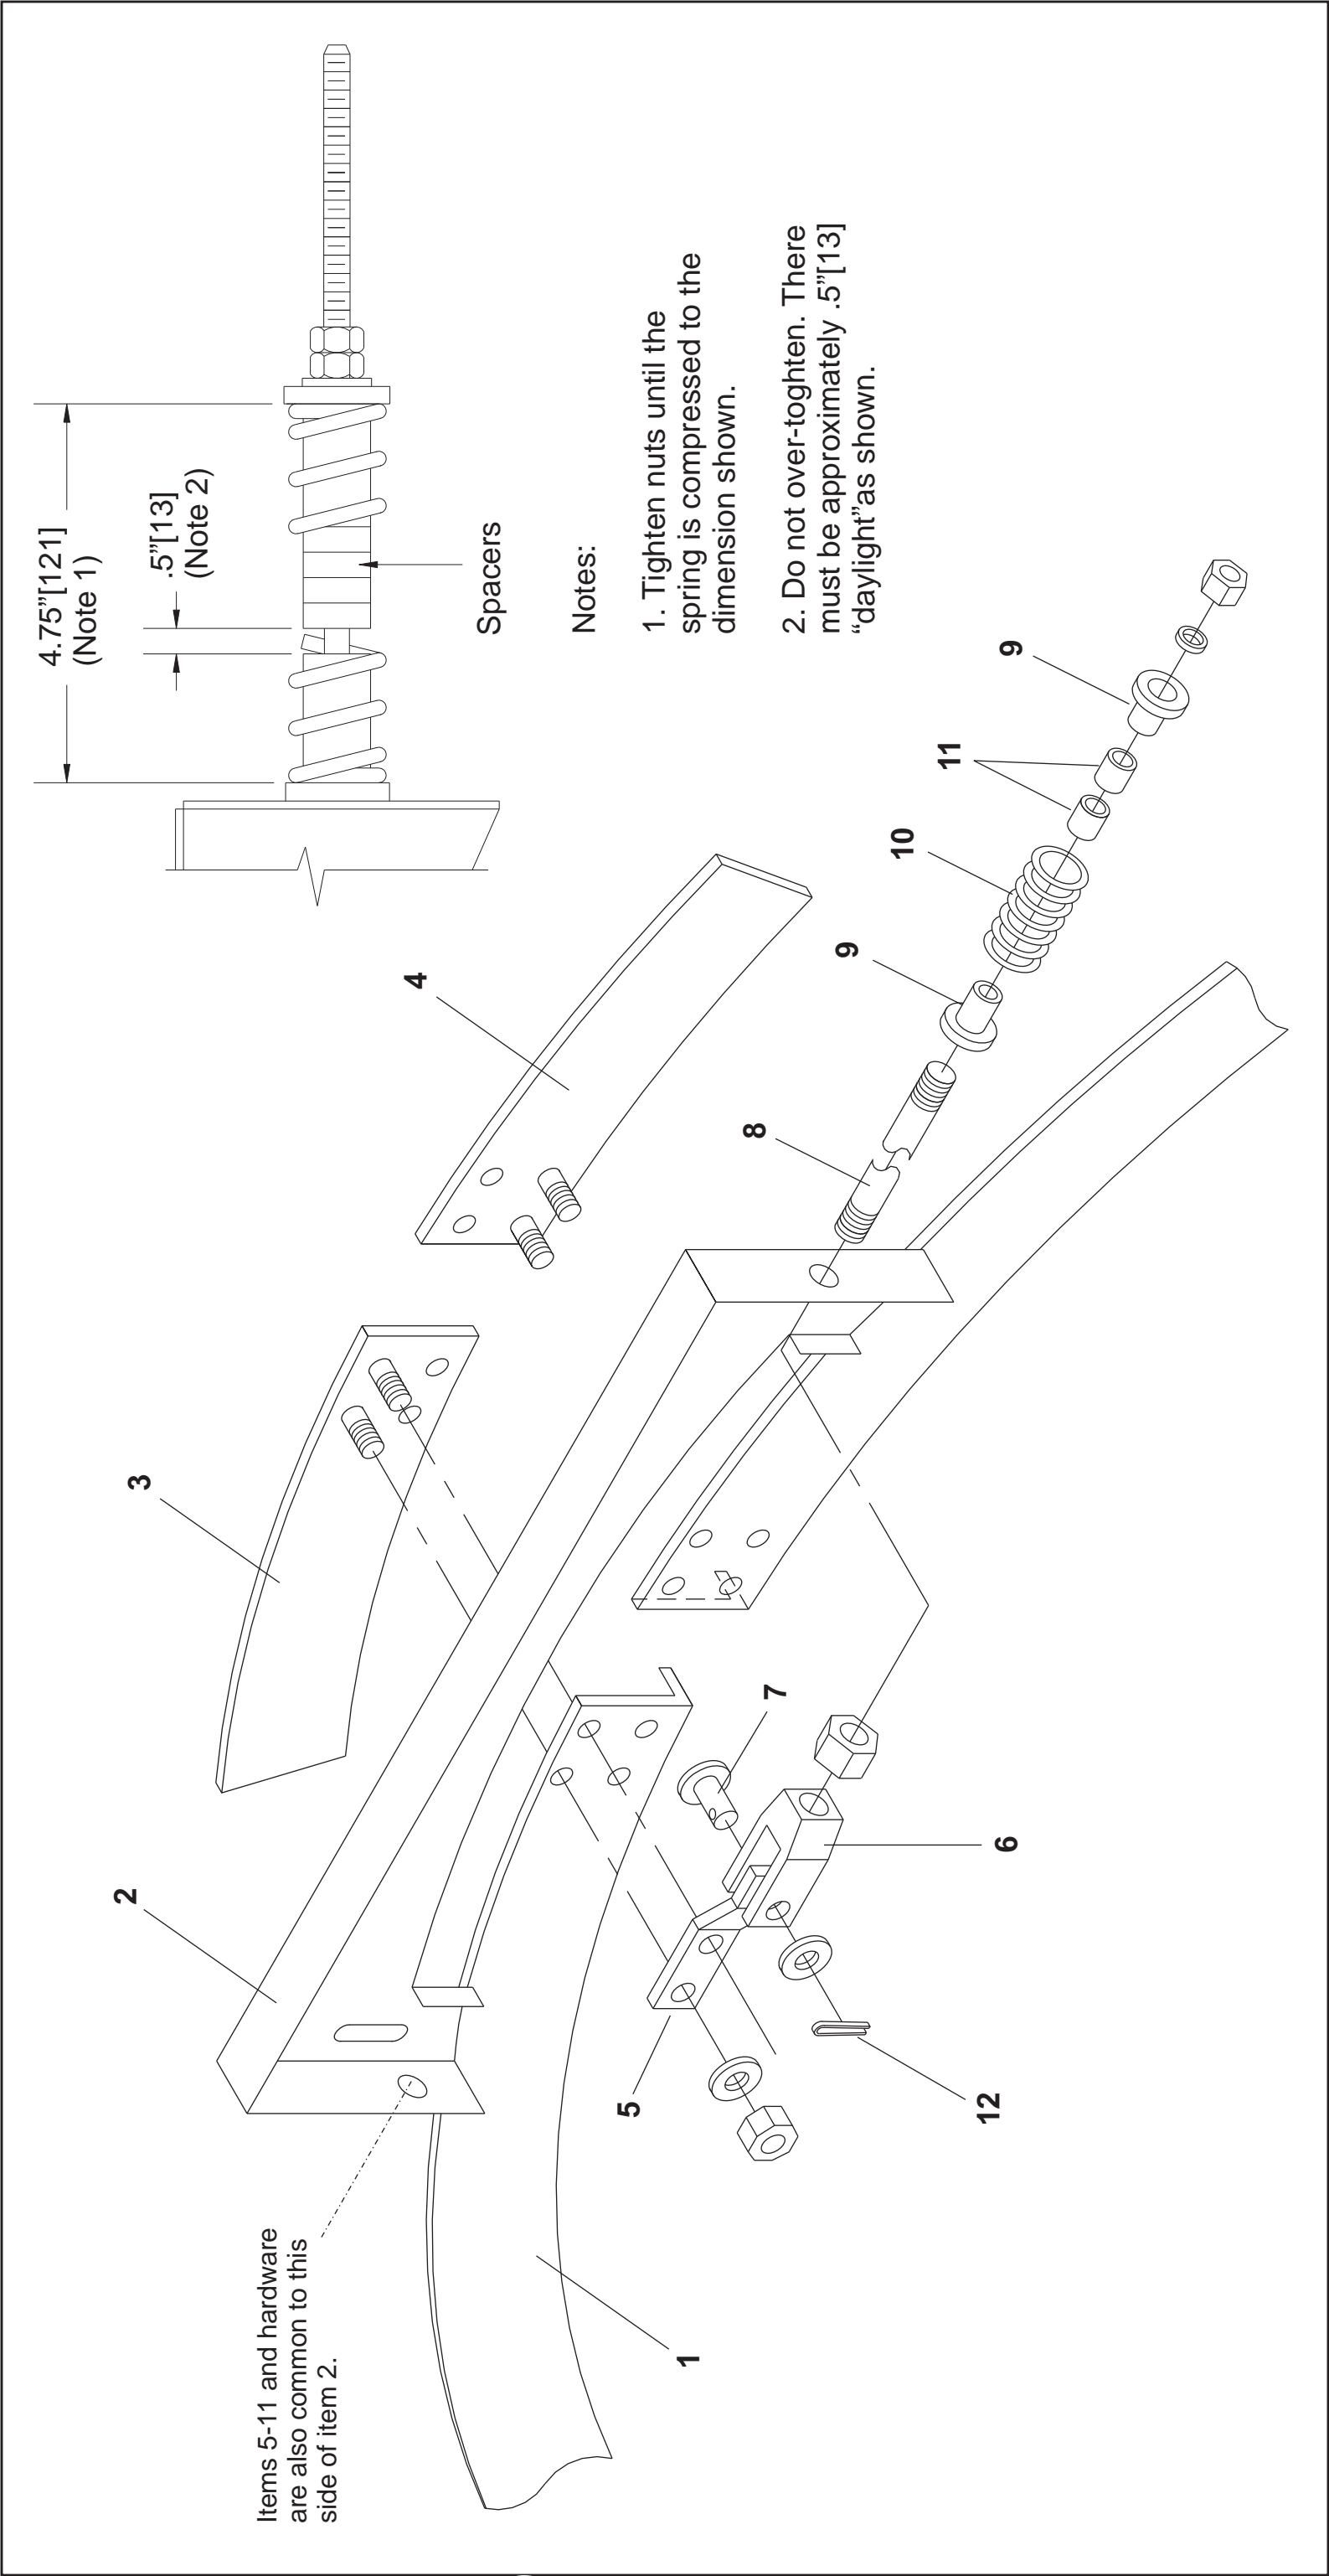



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Tension Seal Assembly

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	G62 00400H	INST SPLIT SEAL-ENTRY&EXIT	76028G2/G3 76039G2/G3
	B	GSS63001	SPLIT -LSEAL INSTALL	92048G4
-----COMPONENTS-----				
A	1	X6 20615	SEAL=OPEN CUT&DRILL	
B	1	X6 30038	SEAL OPEN,CUT&DRILL-8648CBW	
all	2	W6 20639	*L-SEAL CVR IN-LIP EXIT WLMT	
all	3	W6 20638	PLT=REINF-SPLT-SL-LG-LF-WLMT	
all	4	W6 20637	PLT=REINF-SPLT-SL-LG-RT-WLMT	
all	5	06 20416A	BRKT YOKE CONN.SPLIT SEAL	
all	6	17A004	ADJ YOKE END 1/4-28 XYLAN COAT	
all	7	17A004A	CLEVIS PIN 1/4"X3/4"DRILLED SS	
all	8	06 20416C	ROD=SPRING TENSION SPLITSEAL	
all	9	06 20416D	BUSHING=SPRING ALIGNMENT	
all	10	06 20162B	SPRING COMP.SPLIT SEAL TENS	
all	11	27B17006HN	SPCR .281ID.613OD.500L	
all	12	15H019	STDCOTTERPIN 1/16X1/2 SS18-8	

2

Water, Steam and Peristaltic

2.3


Level Box Drain Options
76028 & 76039 G3 Tunnels

BMP000077/2022144B
(1 / 3)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

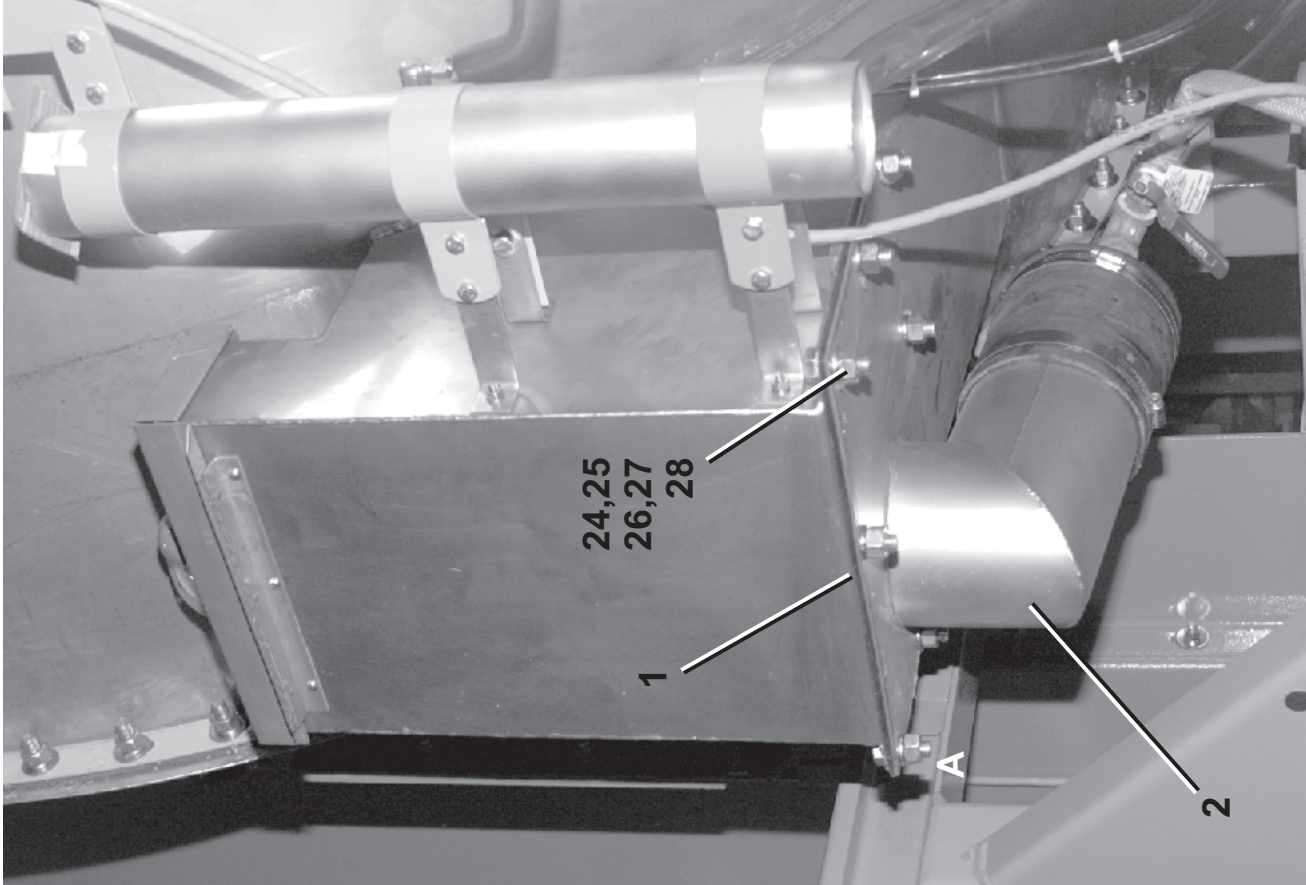

Flow to Sewer Load

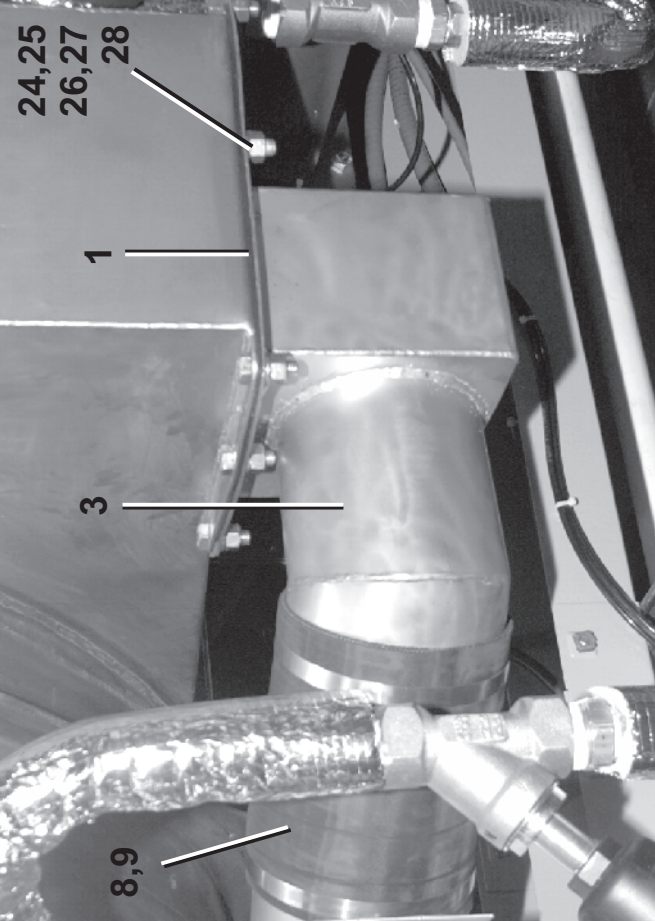

Level Box Flow to Next

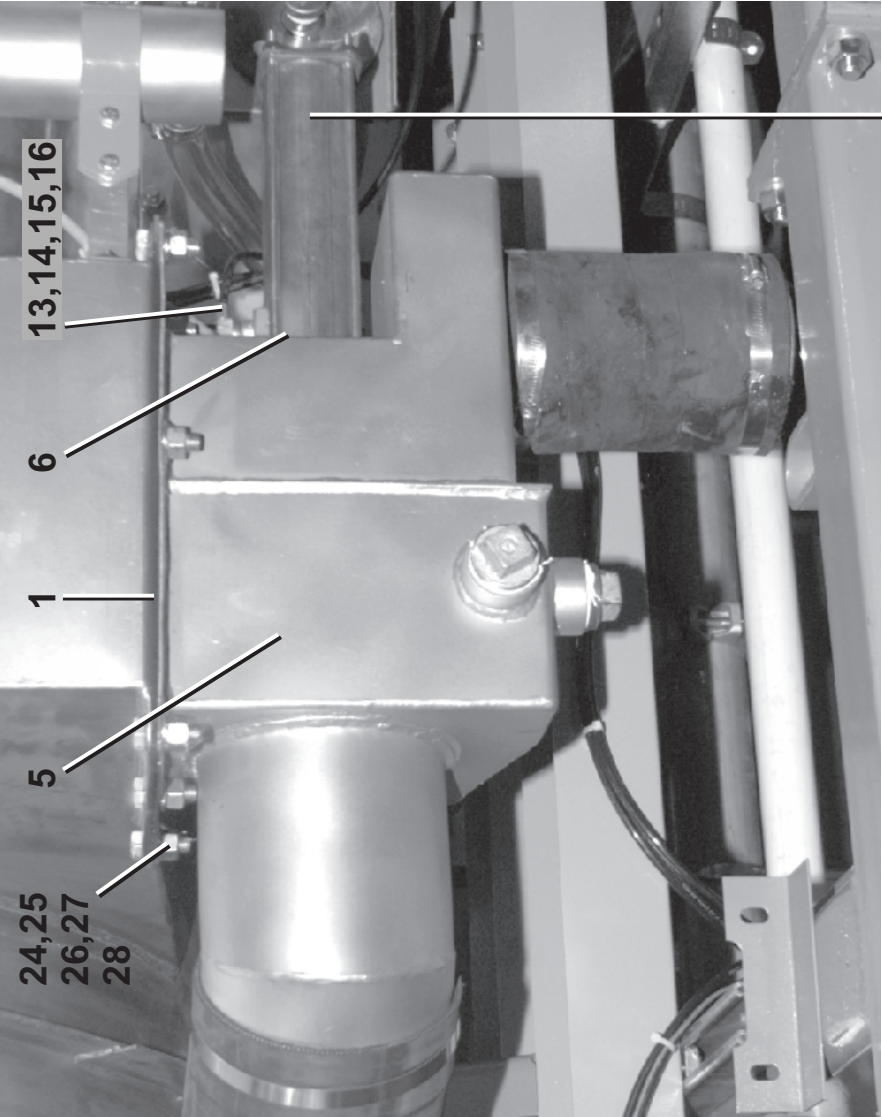

Flow Not Valve at Load

Air Cylinder
See BMP970001.




Level Box Flow to Flowsplitter

Level Box Drain Options **76028 & 76039 G3 Tunnels**

BMP000077/2022144B
 (2 / 3)



MILNOR
 Pellerin Milnor Corporation
 P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

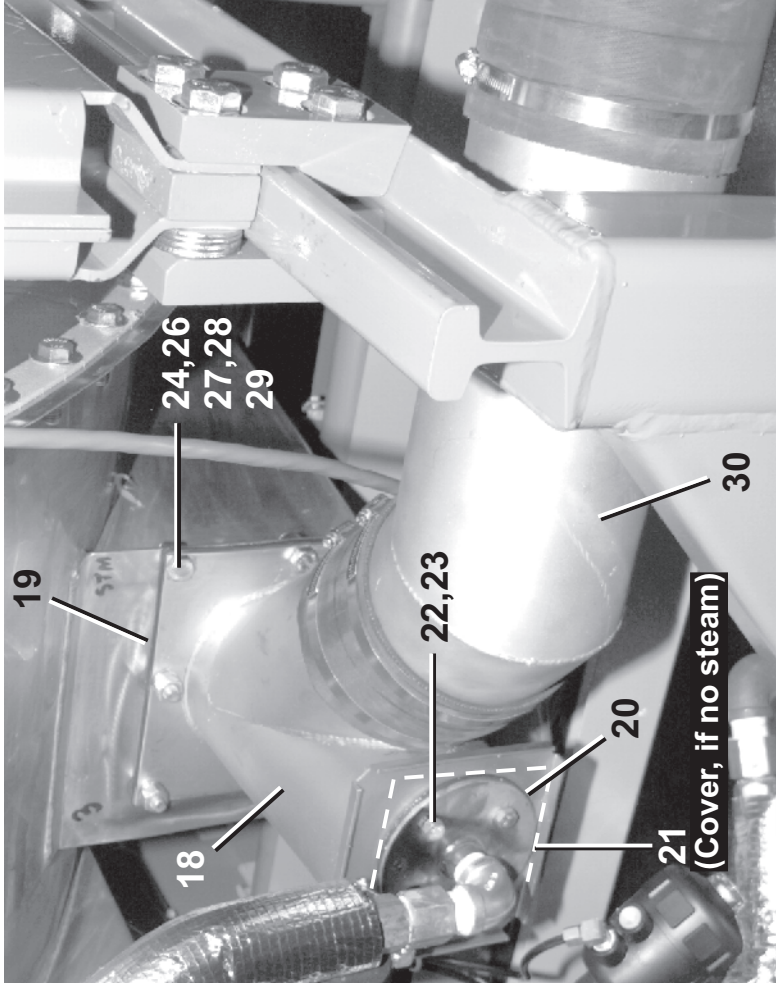


**Steam & Water
Y-branch**

Unit-to-unit Counter flow

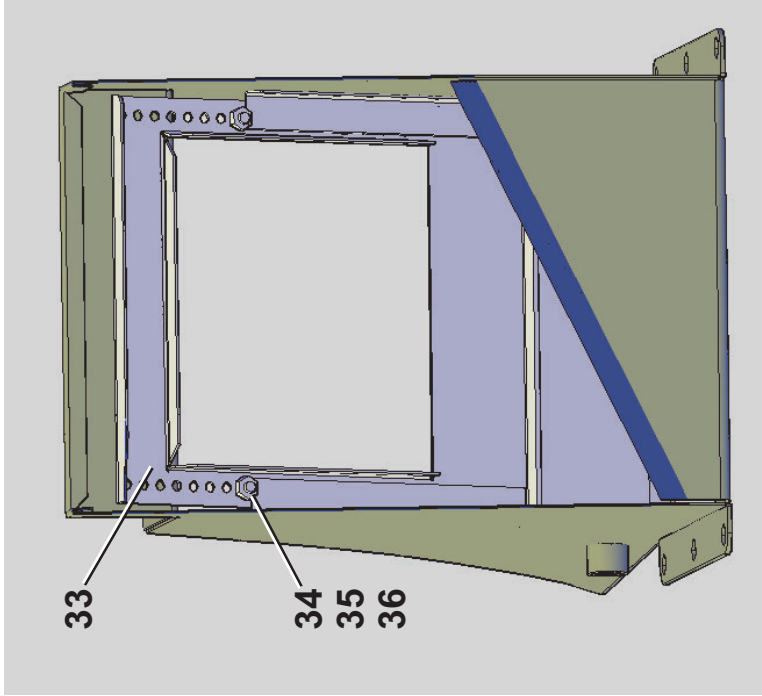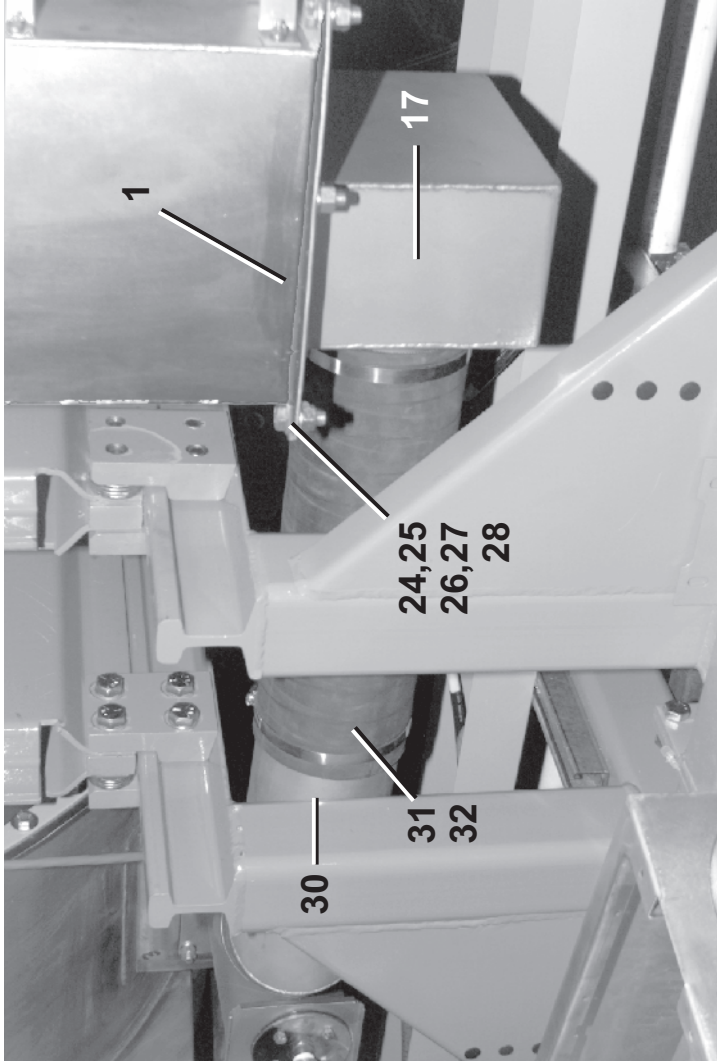

**Level Box Adjusting Plate
Section A-A**

**Level Box Lid
See BMP000079.**

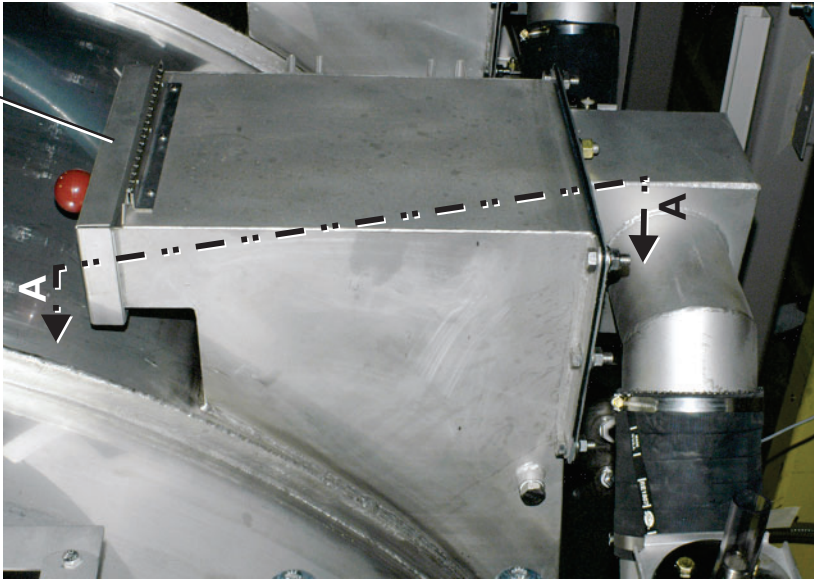


Air Cylinder Flow Not Valve
76028, 76032, 76039 CBW®

BMP970001/2002272V
(Sheet 1 of 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

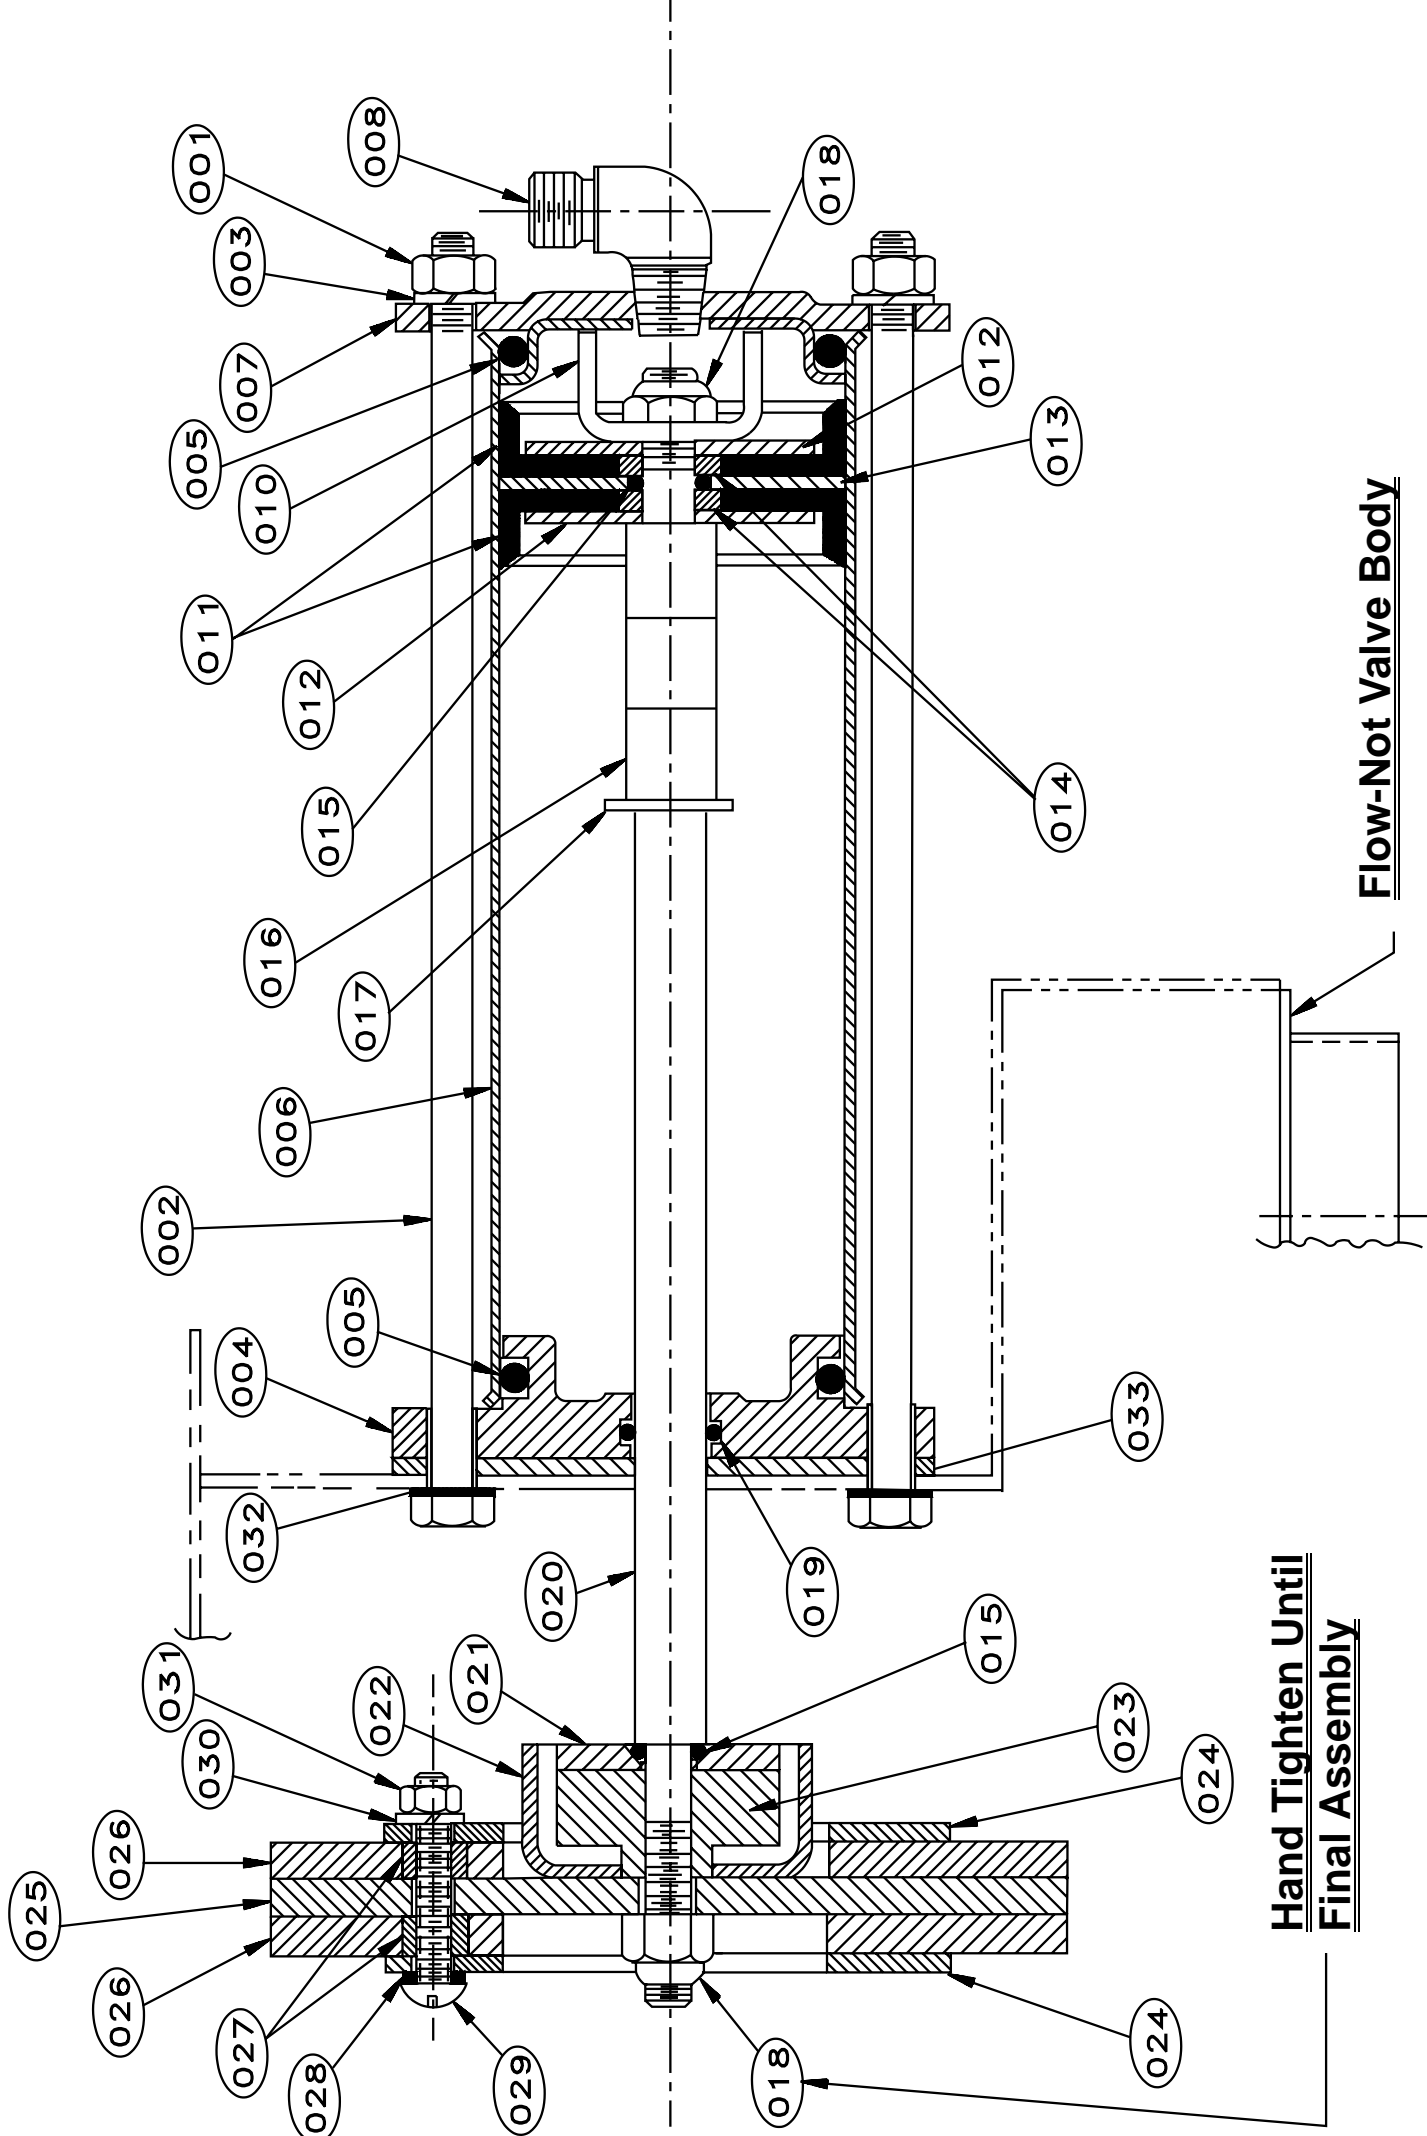



Parts List—Air Cylinder Flow Not Valve				Parts List, cont.—Air Cylinder Flow Not Valve				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.				Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----								
	A	A62 06000	90472U AIR CYL.-FLOW NOT VALVE				93093B 7639=FLOW NOT VLV GSKT RET	
	B	A65AC001	93093T 7639=AIR-CYL FLOWNOT VLV ASY				87391B FLOW NOT VALVE GASKET CUP 93093B 7639=FLOW NOT VALVE GSKT CUP 87391B FLOW NOT VALVE GASKET 93093B 7639=FLOW NOT VALVE GASKET SPACER SLD.26ID.375OD.156L 316S/S ROLLED WASHER .252"ID NYLTITE #25W PHILRDMACSCR 1/4-20UNC2X1+1/4SS18-8 LOCKWASHER MEDIUM 1/4 SS18-8 01Z HX THIN LOCKNUT NYL1/4-20 SS ROLLED WASHER .312"ID NYLTITE #31W DUMP VALVE AIR CYL GASKET	
-----COMPONENTS-----								
all	1	15G186	HEXNUT 5/16-18UNC2 SS18-8		24	06 50083A		
A	2	W6 20702F	90293B*FLOW NOT VLV=AIR-CYL ROD WLD		25	06 20702B		
B	2	W6 50081	93093B*7639=AIR CYL ROD WLMT		25	06 50084		
all	3	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS		26	06 20702C		
all	4	06 20702E	91227B FLOW NOT ACTUATOR CYL HEAD		26	06 50083		
all	5	60C132	ORING 2"ID 3/16CS BUNA 70 DURO #329		27	27B260156S		
A	6	W2 18646	93344L*CYLINDER-AIR=DOUBLEACT BRAKE		28	24G020N		
B	6	W6 50080A	93083B*7639=CYLINDER-AIR		29	15N196		
all	7	02 02101S	88531B CYLINDER HEAD TAP.HOLE (SS)		30	15U181		
all	8	53A031XB	BODY=MAL90EL 1/4X1/4COMP #269C-4-4B		31	15G164		
all	9	53A500	SLEEVE DELRIN 1/4"OD#60PT-4		32	24G027N		
all	10	03 01313S	85506B+STOP=AIRCYL W/2+11/16STR.SS		33	02 18660A		
all	11	02 02194	93217B PISTONCUP=DUMPPVALVE 2+3/8"					
all	12	02 02085	75161A UP WASHER=2"OD=PISTONCUP					
all	13	02 02105B	92253B 2.38"ACYL BRASS PISCUP WASHR					
all	14	02 02185	79237A WASHER=PISTON CUP COMP LIMIT					
all	15	60C106	ORING 5/16ID 1/16CS BN 70 DURO #011					
all	16	27B34010SS	SPACERROLL .51ID.625L.062T SS					
all	17	15U243S	FLAWASHER 7/8ODX33/64IDX16GA 18-8SS					
all	18	15G220	02Z LTHX THIN LOKNUT 3/8-24 SSNTE					
all	19	60C110	ORING 1/2 ID 3/32CS BN 70 DURO #112					
A	20	06 20702	96426B FLOW NOT VALVE STEM					
B	20	06 50082	93093B 7639=FLOW NOT VALVE STEM					
all	21	02 16021E	94323B WASHER 3/8IDX1.250D DUMPPVAL					
all	22	02 16021D	92632B DUMP VALVE BUMPER RETAINER					
all	23	02 16021C	92051B BUMPER=DUMP VALVE BONNET					
A	24	06 20702A	87391B FLOW NOT VALVE GASKET RET.					



Level Switch Assembly **76028G3, 76039G3, & 92048G4 Tunnel**



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

BMP000048/2011494B
(Sheet 1 of 2)

Litho in U.S.A.

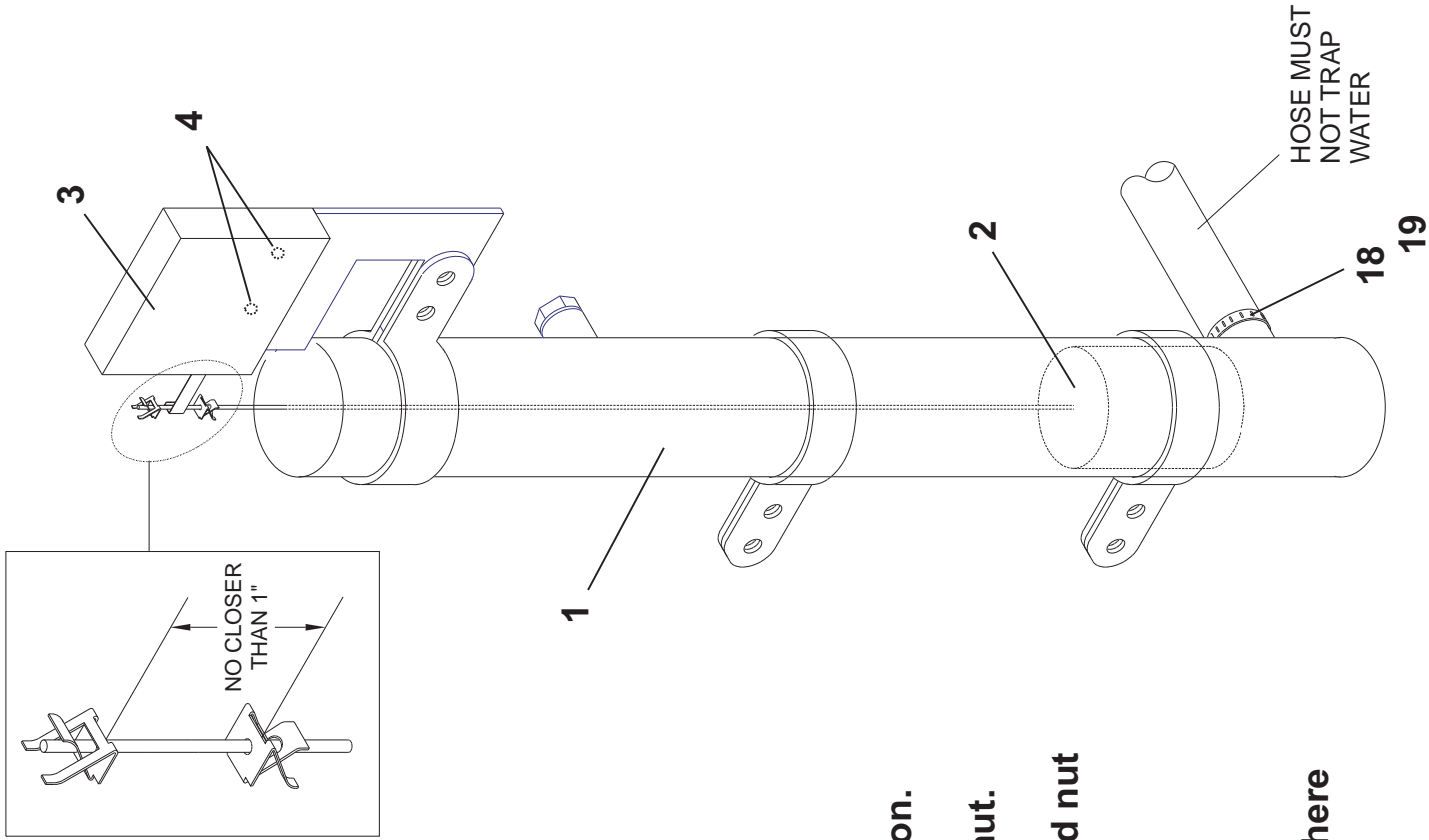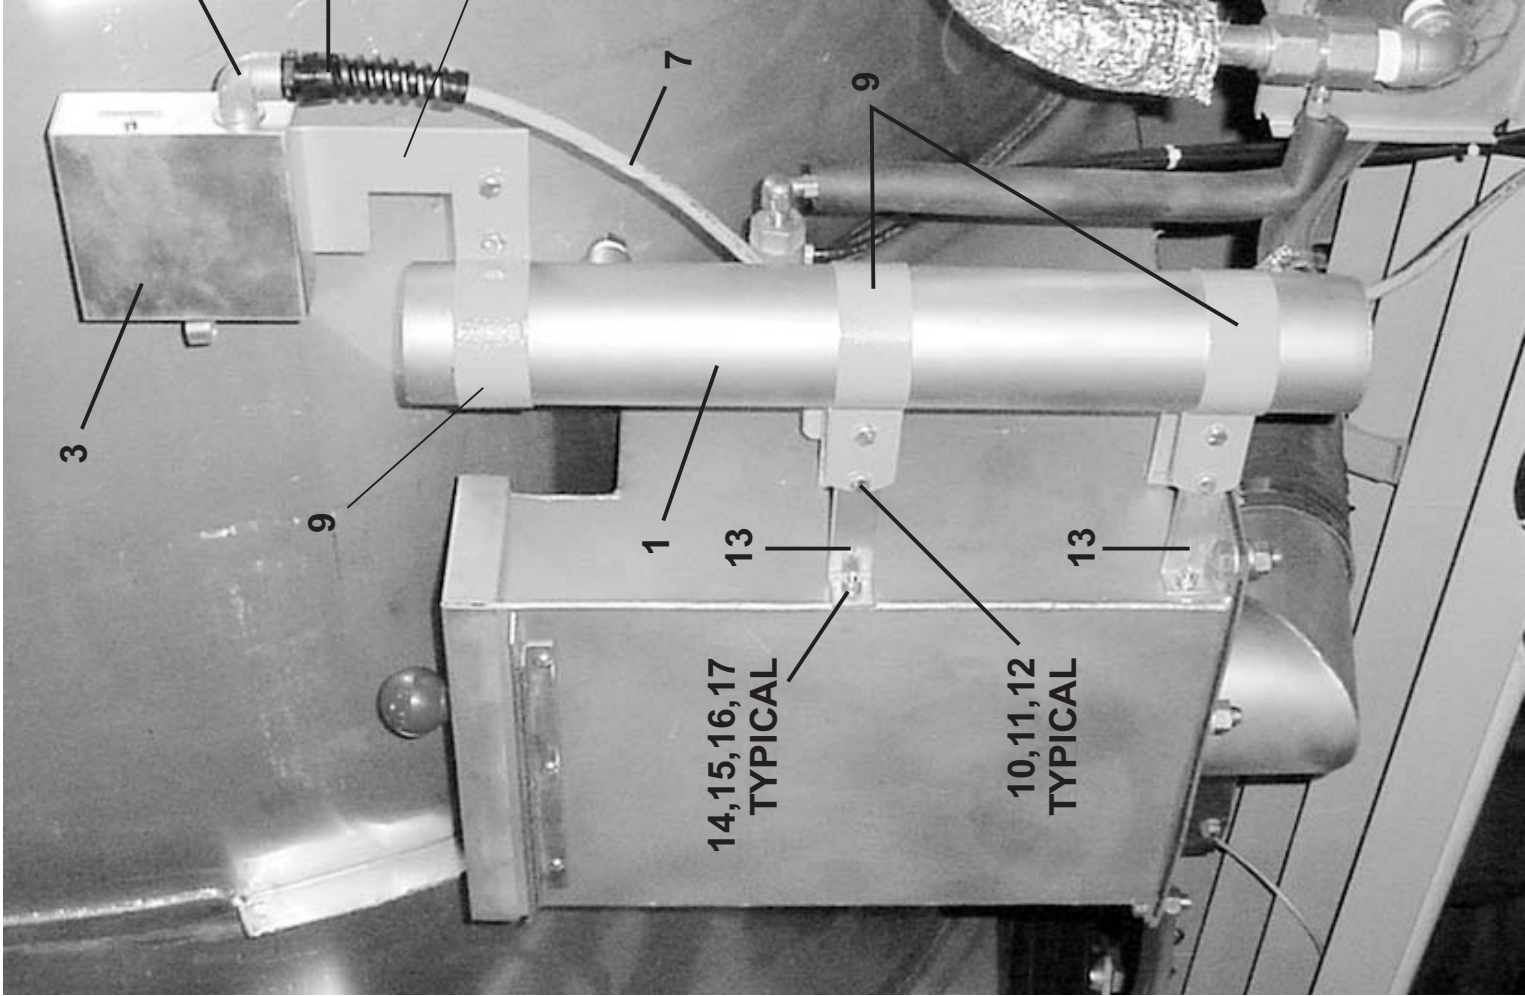

Speed Nut Adjustments

- 1) To adjust speed nut, pinch ends together and slide in desired direction.
- 2) Do not use tools to move speed nut.
- 3) To raise low level, move top speed nut down on rod.
- 4) To raise high level, move bottom speed nut down on rod.

See level setting instructions elsewhere for more information.



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Level Switch Installation

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
			-----ASSEMBLIES-----	
	A	G67LS001	ADD LEVEL SW ASSY	
			-----COMPONENTS-----	
all	1	W2 14432X	WELD=FLOAT TUBE 20"SS	
all	2	SA 02 011	*FLOAT ASSY L=25"-STD LEVEL	
all	3	ELL000MK2	*WATER LEV SW ASSY: 1 UP+ 1LO	
all	4	15P175	TRDCUT-F HXHD 1/4-20UNC2AX1/2	
all	5	12M036L	1/2" 90-DEG SHORT ELLS	
all	6	12M043A	FLX STRAIN PIGTAIL .197-.348	
all	7	09V290A	CABLE #18/4 SJTO 7/16"OD 250'	
all	8	02 15097C	BRACKET LEVCONT PER PRINT	
all	9	02 15642A	CLAMP-3"FLOAT CHAMBERED	
all	10	15K039	HXCAPSCR 1/4-20UNC2AX3/4 GR5 Z	
all	11	15U180	LOCKWASHER MEDIUM 1/4 ZINCPL	
all	12	15G165	HXNUT 1/4-20UNC2BSAE ZC GR2	
all	13	02 14170B	PIPE CLAMP BRACKET CBW	
all	14	24G020N	ROLLED WASH.252ID NYLTITE 25W	
all	15	15K032	BUTSOKCAPSCR 1/4-20X3/8 SS18-8	
all	16	15G170	HEXNUT 1/4-20UNC2 SS18-8	
all	17	15U181	LOCKWASHER MEDIUM 1/4 SS18-8	
all	18	60E013	TYGON TUBING 1"IDX1.25"OD	
all	19	27A090S	HOSECLAMP 13/16-1.5"SS#225-016	


Level Box Lid
76028G3, 76039G3, & 92048G4 Tunnels

MILNOR
Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

BMP000079/2011503B
(1 / 1)

Parts List—Level Box Lid				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.				
Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	A65LL001	7639=LEVELBOX LID ASSY	76028G3 & 76039G3 92048G4
	B	ALL63001	9248 LEVEL BOX LID ASSY	
-----COMPONENTS-----				
A	1	06 50101	7639=LEVELBOX LID ASSY COVER	
B	1	06 30105	9248 LEVEL BOX LID COVER	
A	2	06 50102	7639=LEVELBOX LID WEIGHT PLT	
B	2	06 30103	LEVEL BOX LID WEIGHT	
A	3	06 50100	7639=LEVELBOX LID EXT	
B	3	06 30102	9248 LEVEL BOX LID	
all	4	20C018	ADHESIVE-3M #1357-QT CN	
A	5	06 50105	7639=LEVELBOX LID GASKET	
B	5	06 30104	9248 LEVEL BOX LID GASKET	
A	6	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
A	7	06 50117	7639 LVL BOX GASKET SUPPT	
B	7	06 30114	9248 LEVEL BOX GASKET SPPT	
all	8	15K086B	HEXCAPSCR 3/8-24X1 SS18-8	
B	9	15U245	FLTWASH 3/8 STD COMM 18-8 SS	
all	10	06 50104	7639=SOAP CHUTE HINGE	
all	11	06 50103	7639=BRACKET=SOAP CHUTE HNGE	
all	12	15J004	TUBULAR RIVET TRS#40988 3/16"	
all	13	12P100	BALLKNOB RD PLASTIC DAVIES#45H	

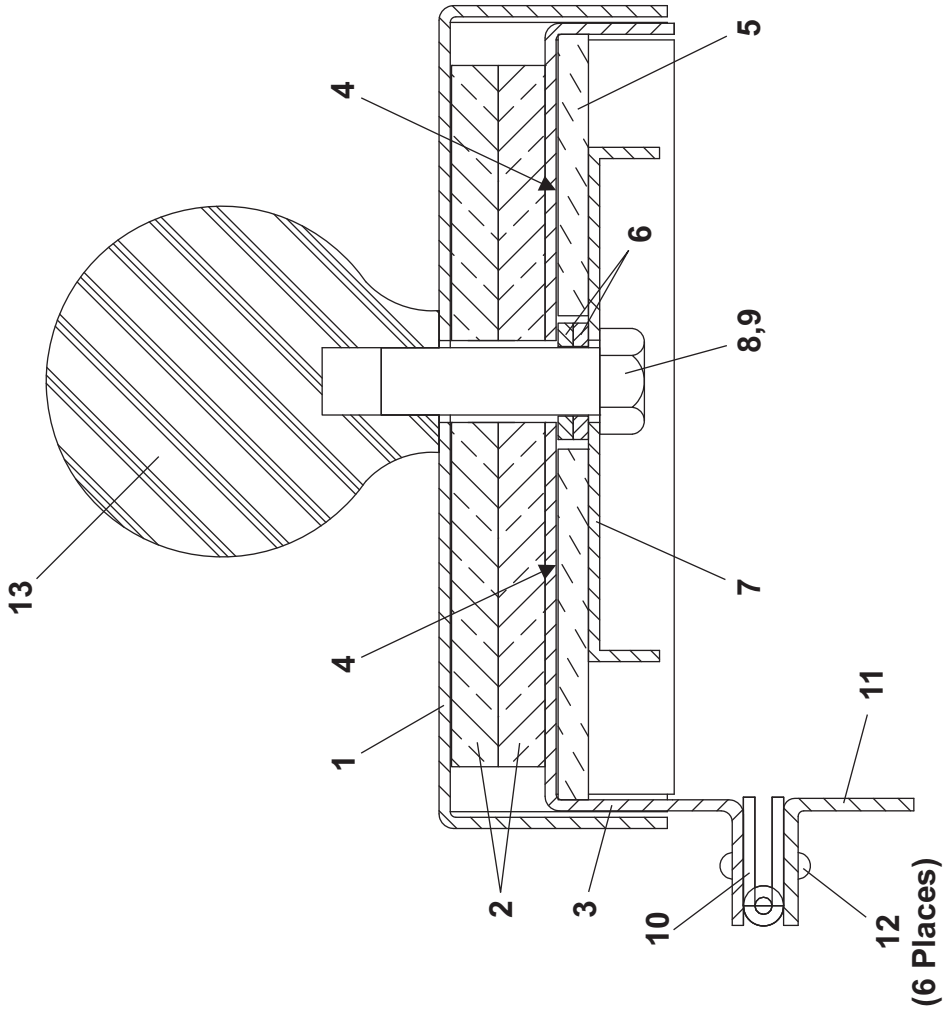

Drain Stops

76028 & 76039 G3 Tunnels, 92048 G4 Tunnels




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


BMP100024/2011494B
(Sheet 1 of 1)

Litho in U.S.A.

Parts List—Drain Stops				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.				
Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	G64DV005	INST=DRAIN/STOP WEIR TO SEWER	
	AA	A64DV005	ASSY=DRAIN/STOP WEIR TO SEWER	
	B	G64DV006	INST=DRAIN/STOP WEIR TO FLOWSP	
	BB	A64DV006	ASSY=DRAIN/STOP WEIR TO FLOWSP	
	C	G64DV007	INST=DRAIN/STOP F/N TO SEWER	
	CC	A64DV007	ASSY=DRAIN/STOP F/N TO SEWER	
-----COMPONENTS-----				
all	1	06 50092	7639=FLOWNOT VLV. LEVBX GSKT	
AA	2	W6 70021A	WLMT=DRAIN/WEIR TO SEWER	
BB	2	W6 70021	WLMT=DRAIN/WEIR TO SPLITTER	
CC	2	W6 70020	WLMT=DRAIN STOP F/N TO SEWER	
all	3	AVD48701	4"DUMP BONNET&AIRCYL DBL-ACT	
all	4	15G206B	HEXNUT 3/8-16UNC2 BRASS	
all	5	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	6	60E312A75	HOSE 5"IDX7.5"LG GATES75W4175E	
all	7	27A077D	T-BOLT HOSECLAMP 5.31-5.62"SS	

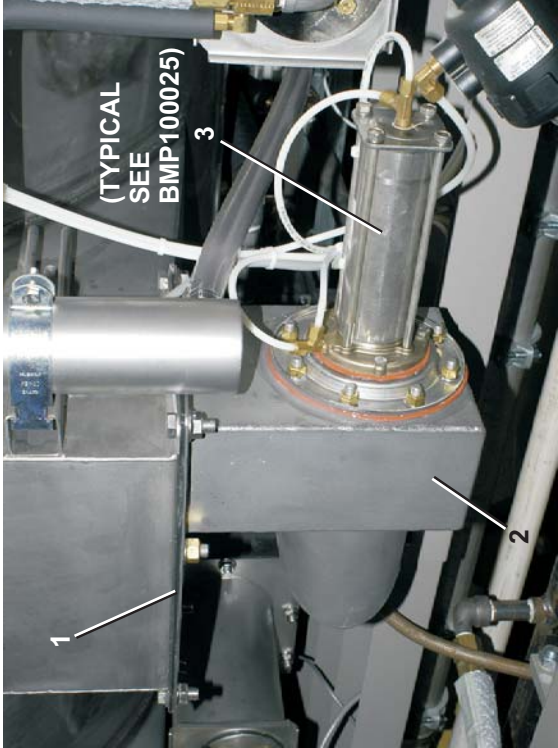

(A) Drain Stop: Flow to Sewer

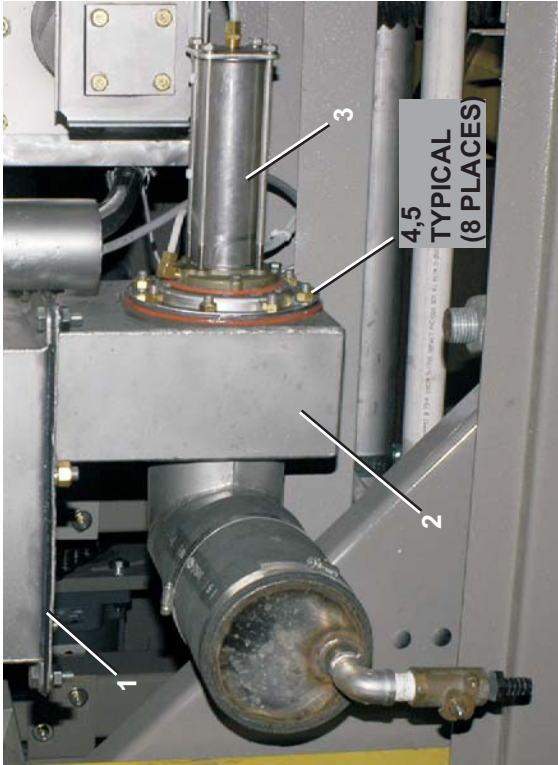

(B) Drain Stop: Flow to Flow Splitter



(C) Drain Stop: Flow Not to Sewer


Drain Stop Bonnet, 4" Double Acting

BMP100025/2010203B
(Sheet 1 of 1)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

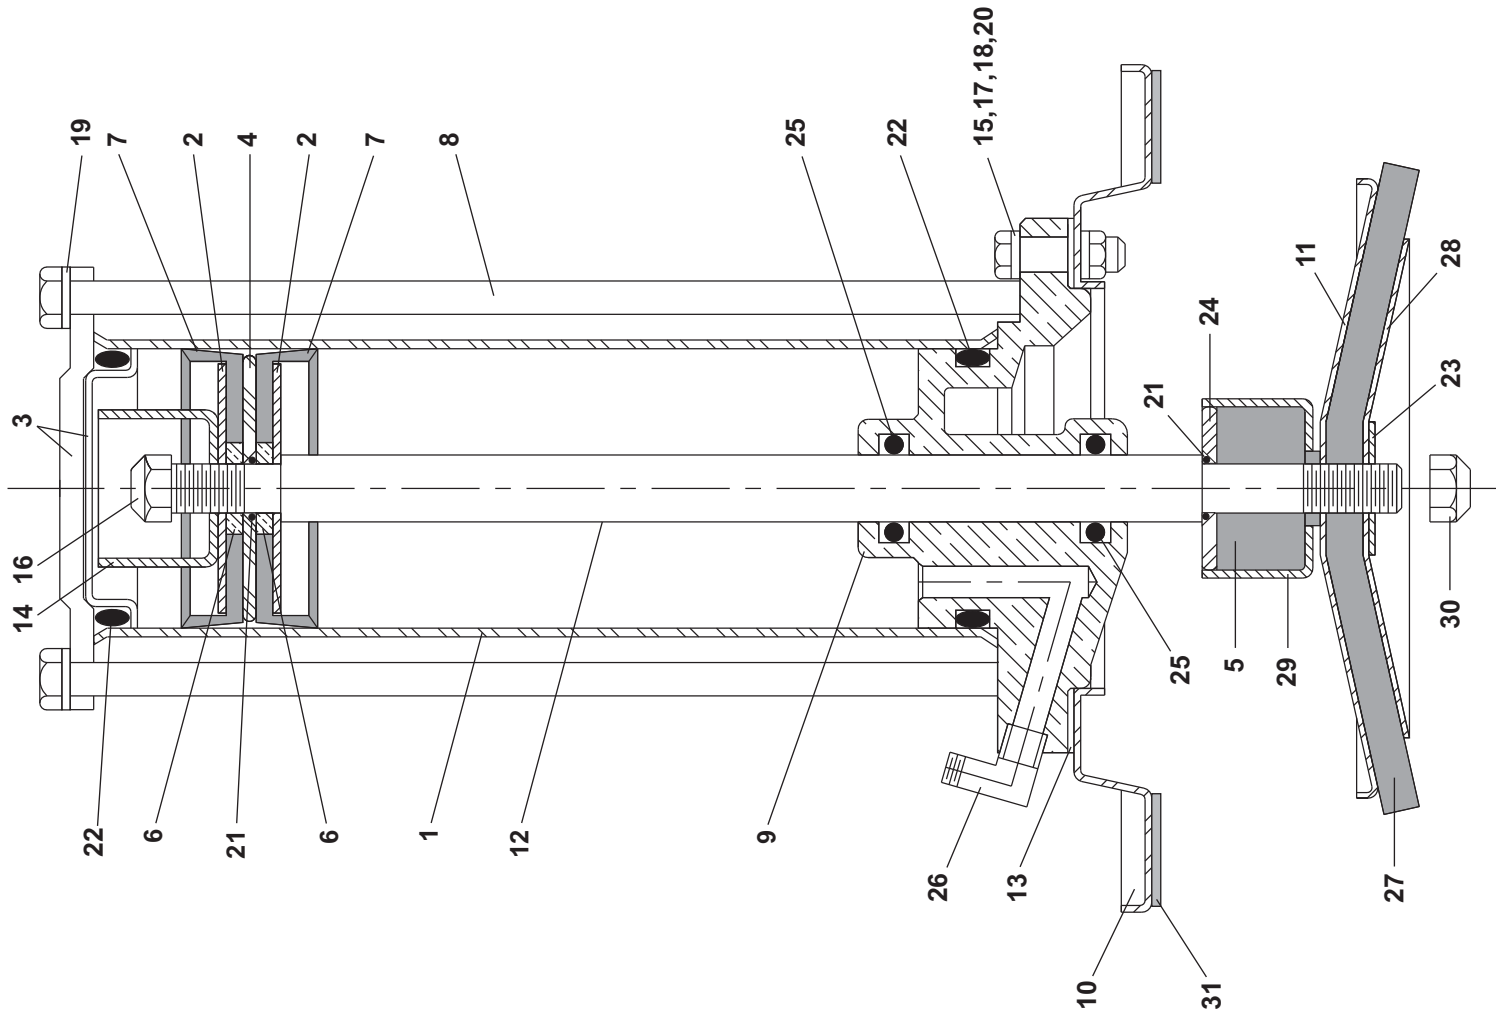

Parts List—Drain Stop Bonnet, 4" Double Acting

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
	A	AVD48701	4"DUMP BONNET&AIRCYL DBL-ACT	
			ASSEMBLIES	
			COMPONENTS	
All	1	02 02068	AIRCYL-STAINLESS=DUMP VALVE	
all	2	02 02085	UP WASHER=2"OD=PISTON CUP	
all	3	02 02101S	CYLINDER HEAD TAPHOLE (SS)	
all	4	02 02105B	2.38"ACYL BRASS PISTONCUP WSHR	
all	5	02 16021H	BUMPER=DMPVAL BONT RED SILC	
all	6	02 02185	WASHER=PISTON CUP COMP LIMIT	
all	7	02 02194	PISTON CUP=DUMPVALVE 2+3/8"	
all	8	02 10585	TIE BOLT=5/16-18X7.875LG SS	
all	9	X6 20708A	DOUBLE ACTING VALVE BONNET	
all	10	02 14447	BONNET=4"S/S DUMP VALVE	
all	11	02 14446	DISC-4"S/S DUMP VALVE	
all	12	02 16021I	DUMPVAL STEM-4"+8"316SS	
all	13	02 18932B	GASKET=DUMPVAL 1/8"RED SILIC	
all	15	15G168	SQNUIT 1/4-20UNC2 SS18-8	
all	16	15G220	NUTLOK THINHX 3/8-24 SS/NYL	
all	17	15K041S	HEXCAPSCR 1/4-20UNC2AX1 SS18-8	
all	18	15U181	LOCKWASHER MEDIUM 1/4 SS18-8	
all	19	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS	
all	20	24G020N	ROLLED WASH.252ID NYLTITE 25W	
all	21	60C106V	ORING 5/16IDX1/16CSVITON#011	
all	22	60C132V	ORING 2"ID3/16CS VITON75 #329	
all	23	15U245	FLTWASH 3/8 STD COMM 18-8 SS	
all	24	02 16021E	WASHER 3/8IDX1.250D DUMPVAL	
all	25	60C108V	ORING 1/2IDX3/16CS VITON #310	
all	26	53A031B	BODY-EL90MALE.25X1/8 #269C-42B	
all	27	02 11740D	SEAT=4"S/S VENT=RED SILICONE	
all	28	02 14446B	DISC=4"S/S DV=VENT	
all	29	02 16021D	DUMP VALVE BUMPER RETAINER	
all	30	15G219A	LOKNUT 3/8-24 NF2 18-8 SS	
all	31	02 14447B	GASKET=BON 4"S/S DPVAL RED	

Water Assemblies and Schematics



76028 & 76039 G3 Tunnels

BMP000070/2001444V
(Sheet 1 of 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

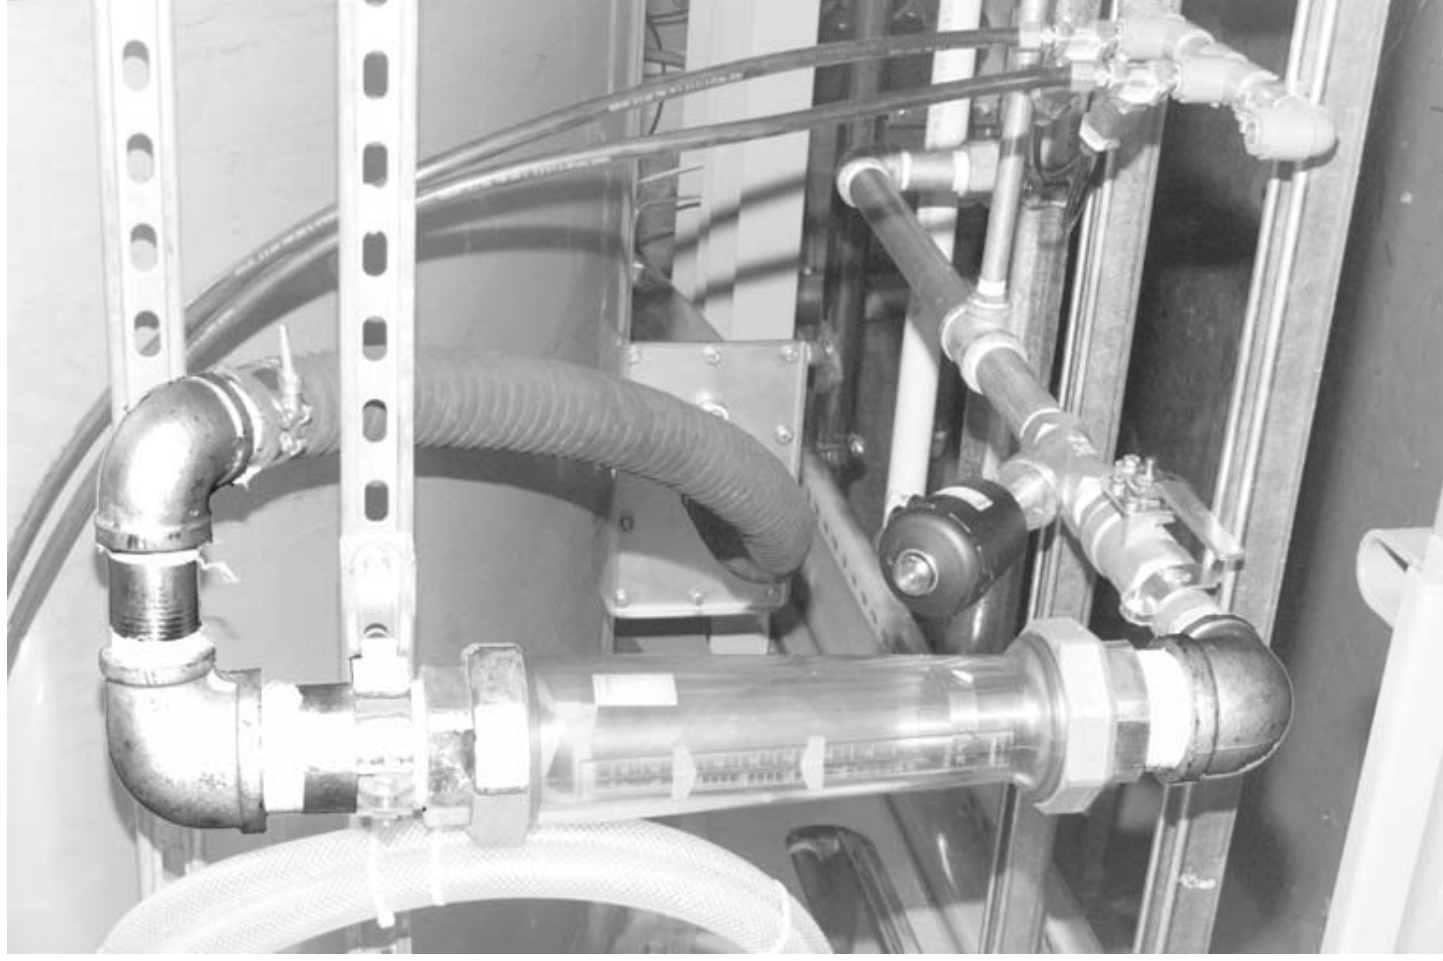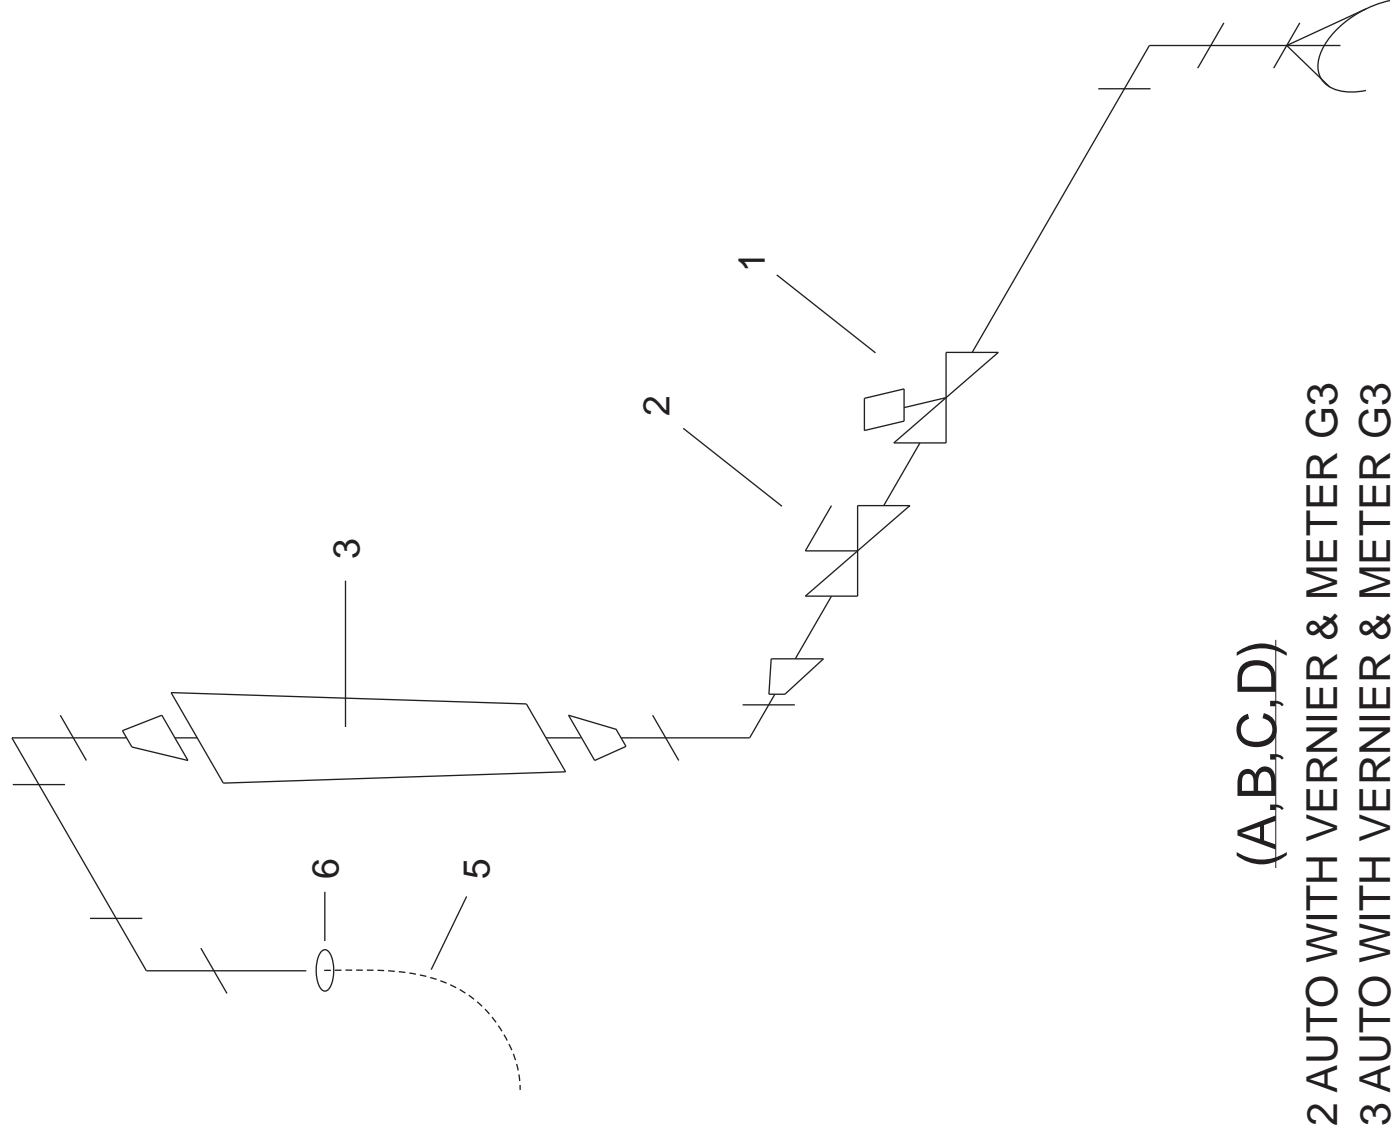


Water Assemblies and Schematics
76028 & 76039 G3 Tunnels

BMP000070/200144V
(Sheet 2 of 7)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

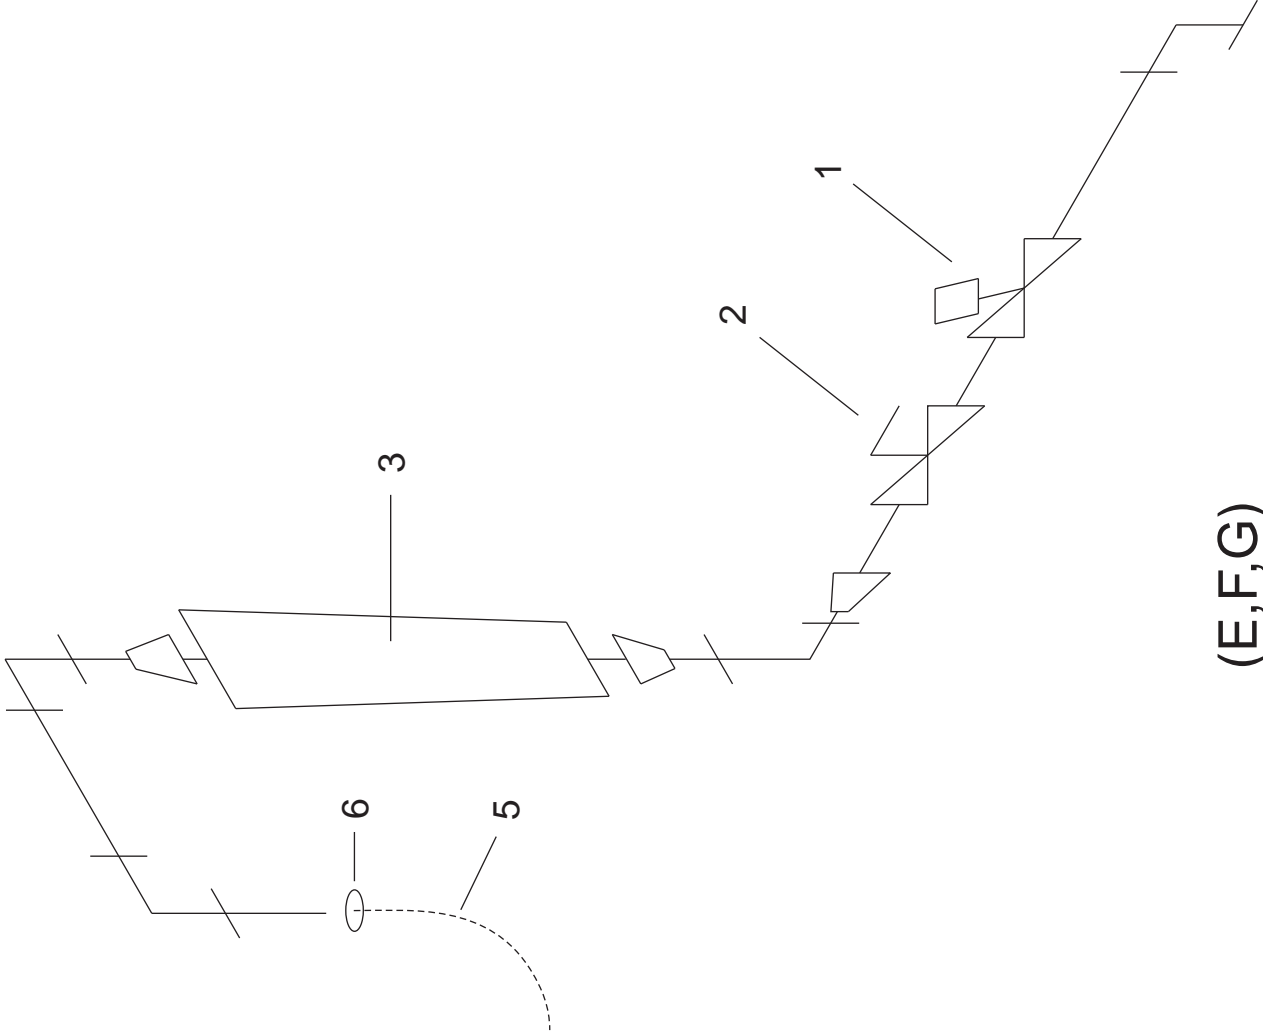


(E,F,G)
#1 AUTO VERNIER & METER FOR REUSE G3 11GPM
#2 AUTO VERNIER & METER FOR REUSE G3 45GPM

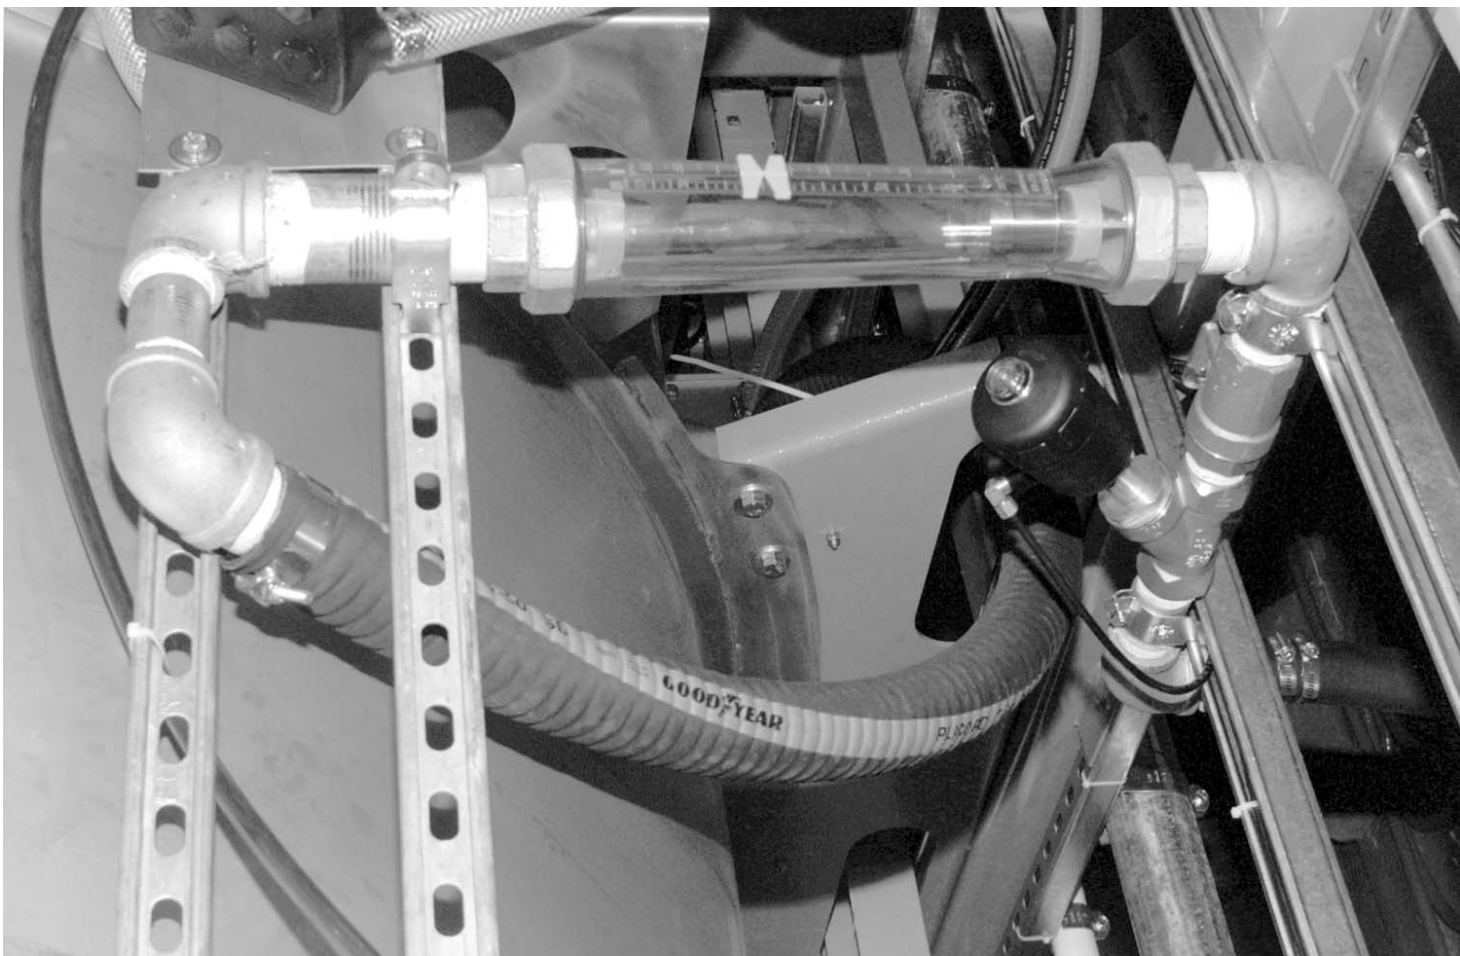



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

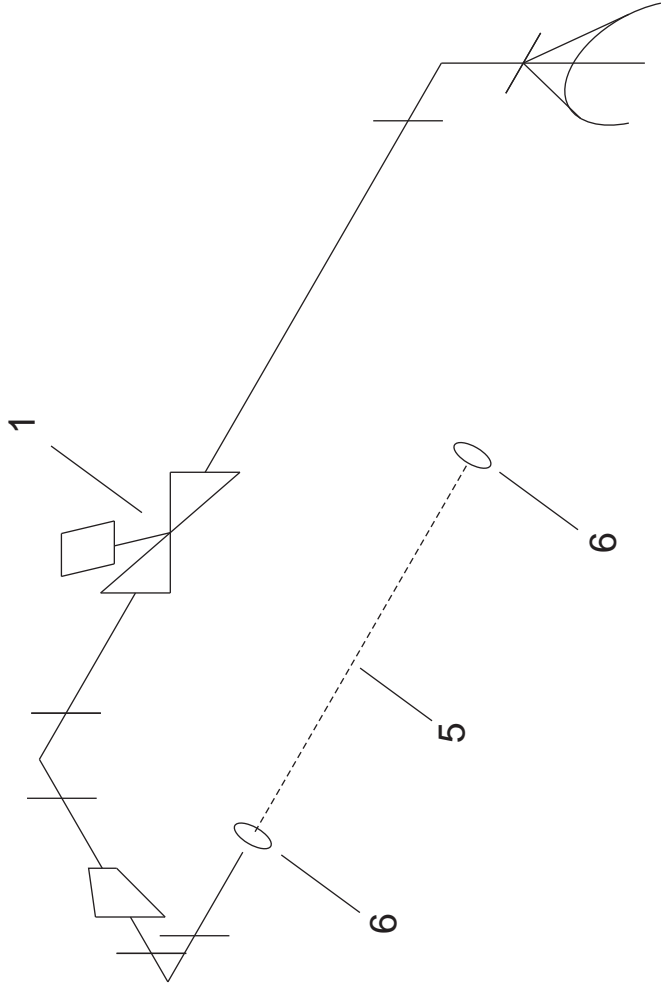


(H,J)
#2 AUTO NO VERNIER OR METER (FAST FILL)







Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

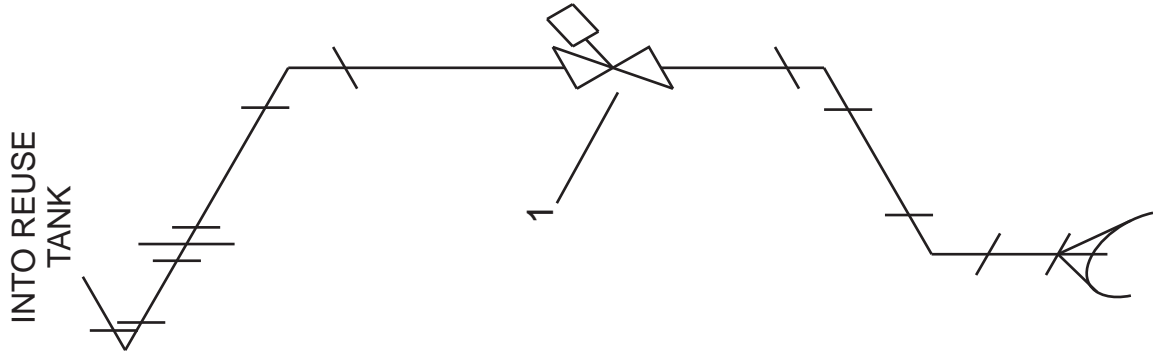

(K)
REUSE MAKE-UP G3

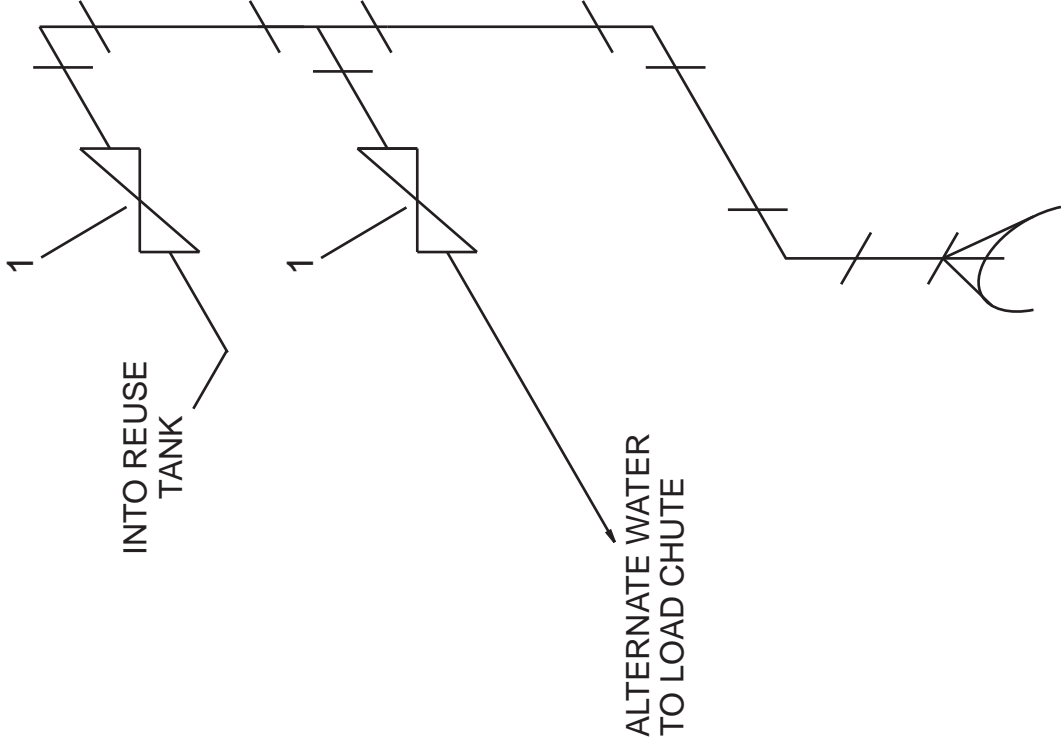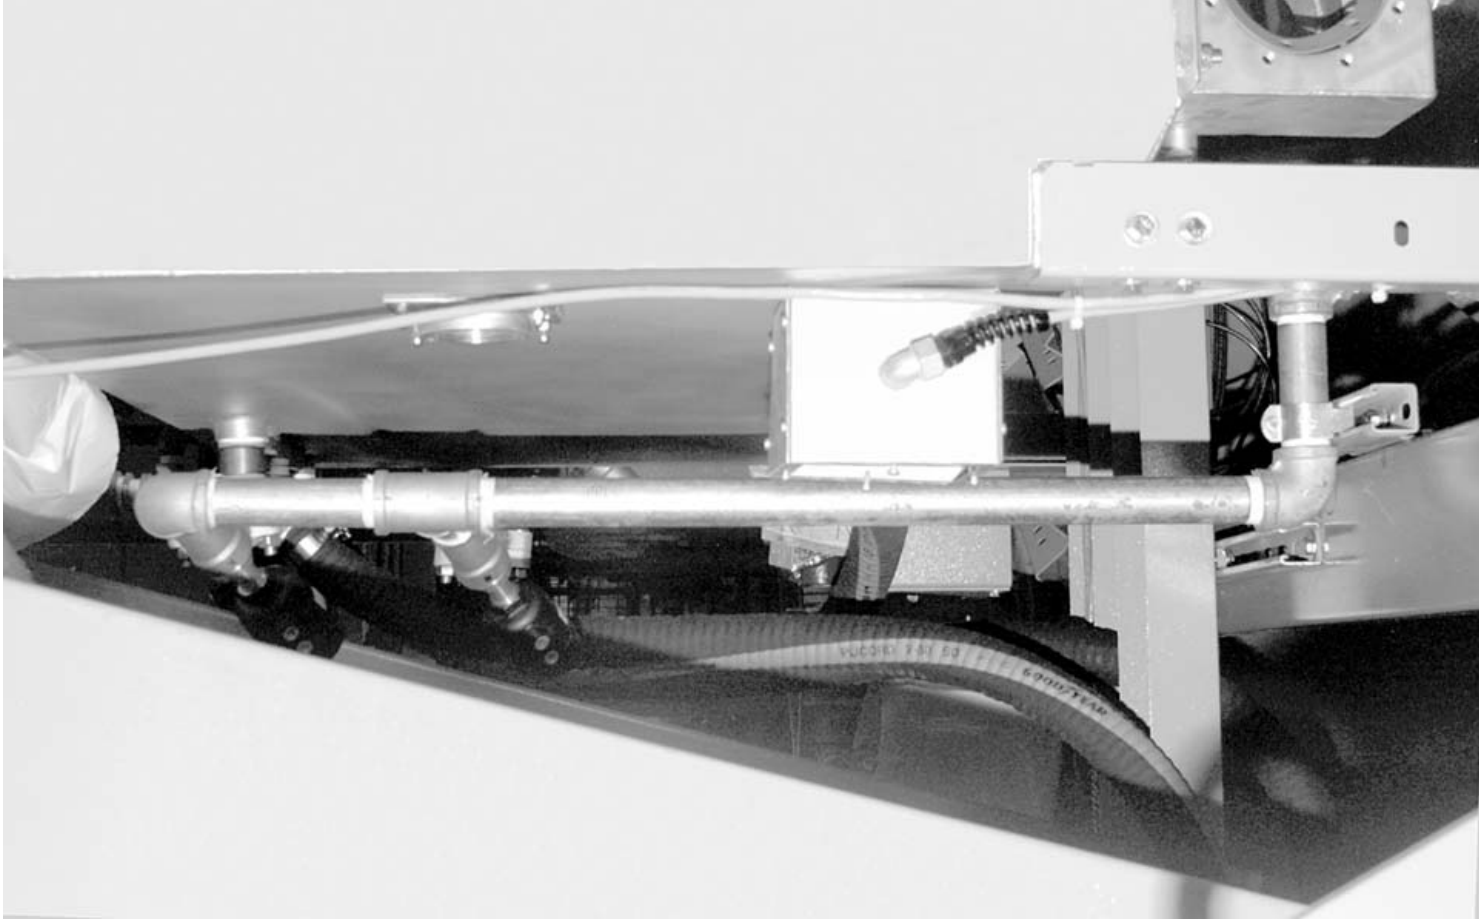

(L)
OPTIONAL REUSE MAKE-UP G3
WITH ALTERNATE WATER



Water Assemblies and Schematics
76028 & 76039 G3 Tunnels

BMP000070/2001444V
(Sheet 5 of 7)




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

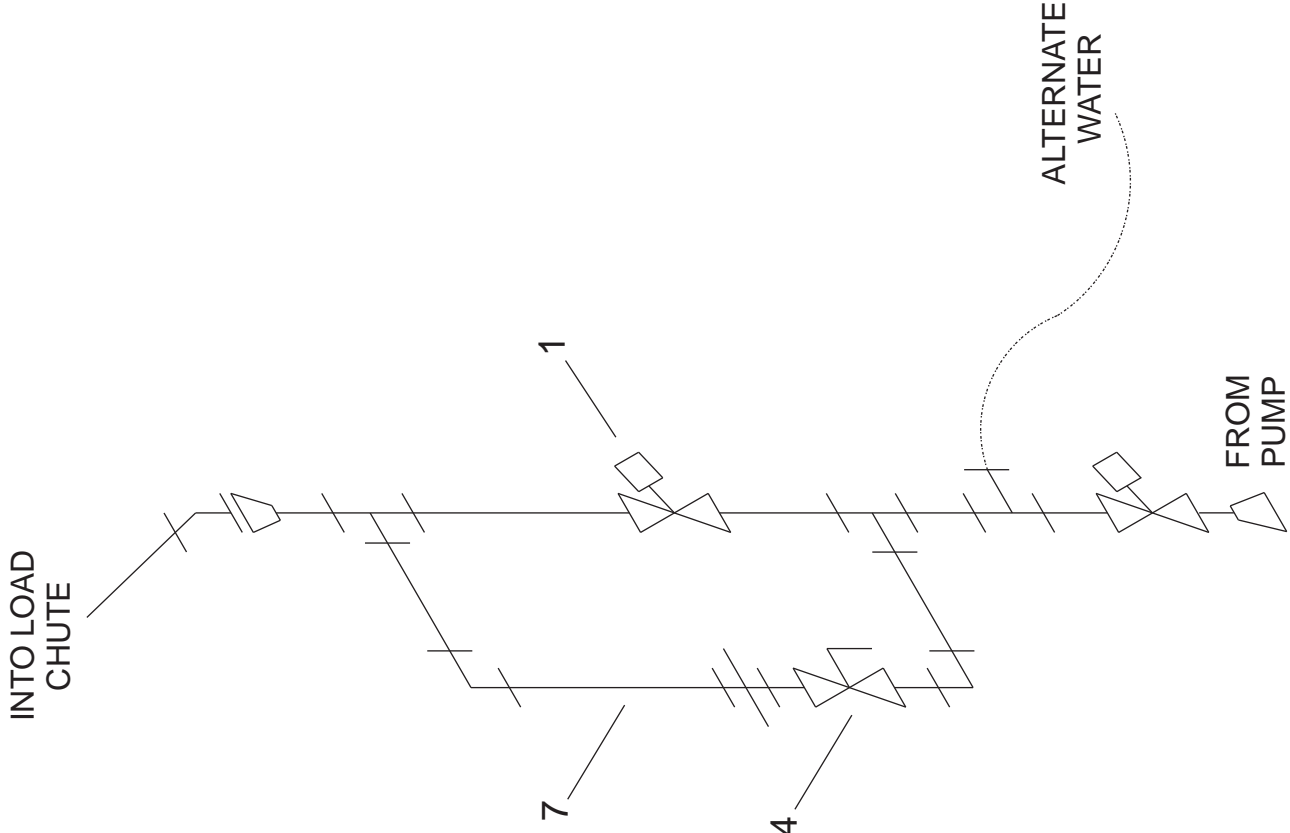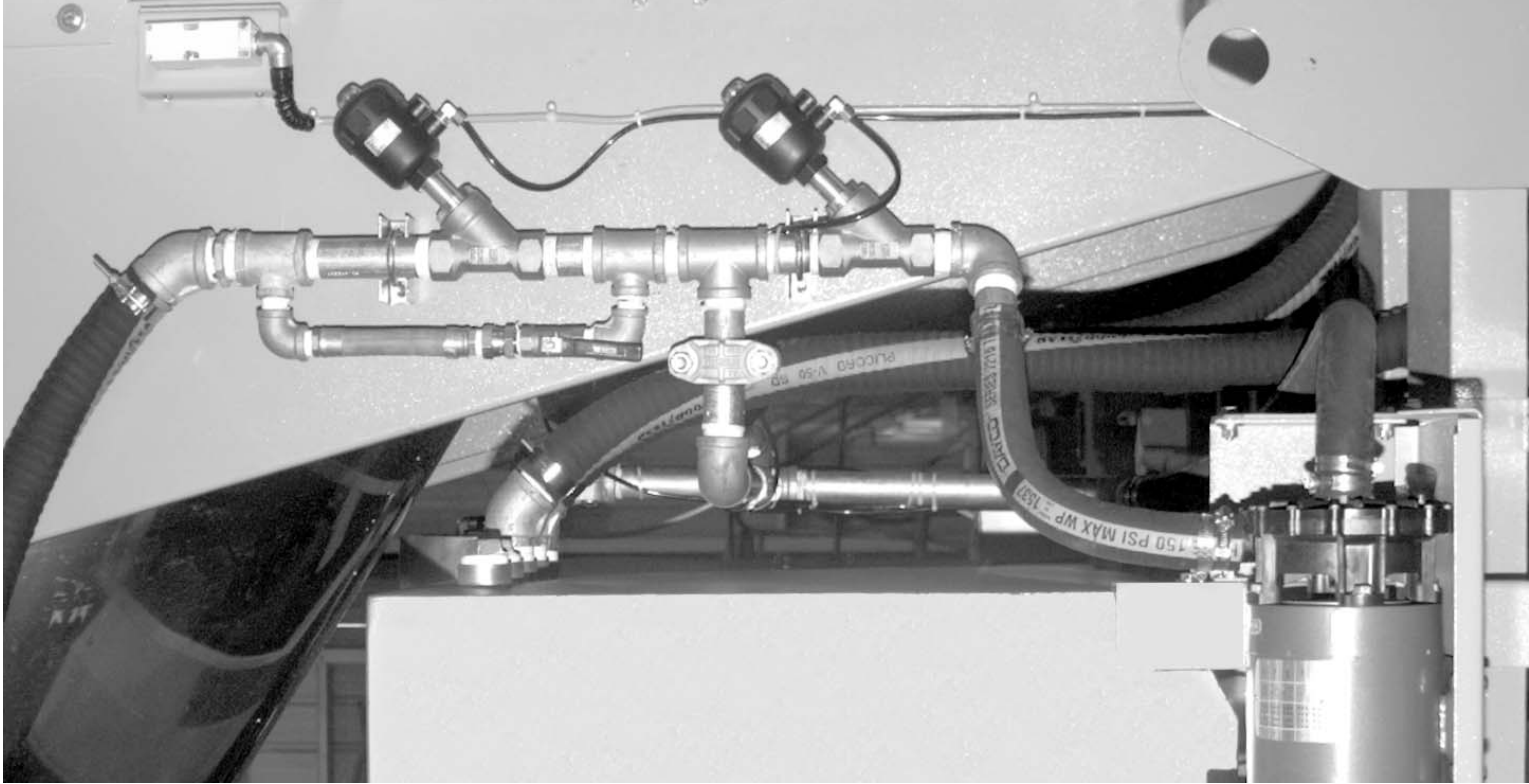


(N)
OPTIONAL REUSE INLET & FUNNEL FLUSH G3
WITH ALTERNATE WATER

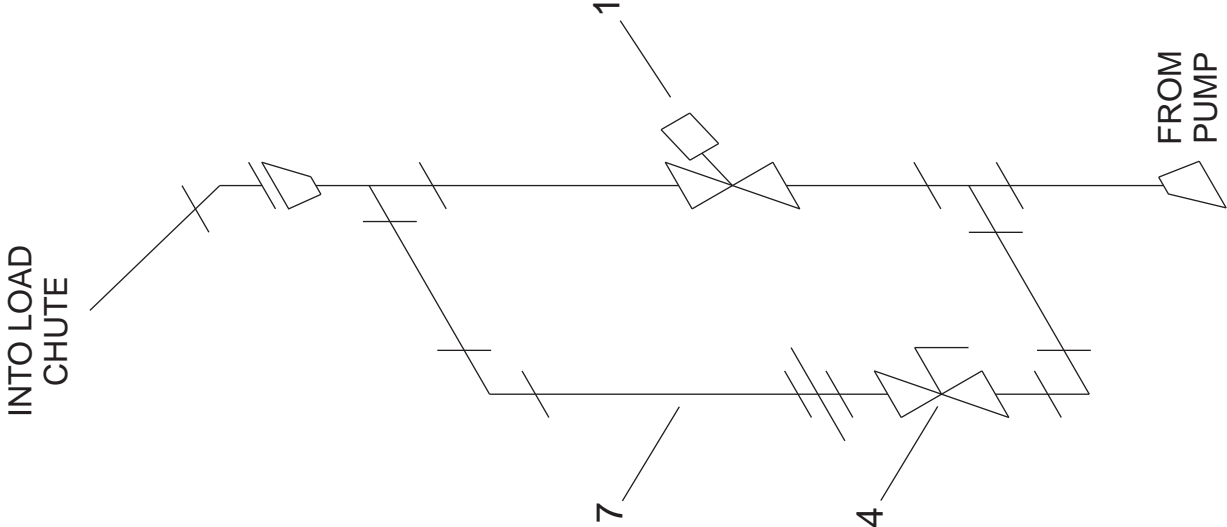

(M)
REUSE INLET & FUNNEL FLUSH G3

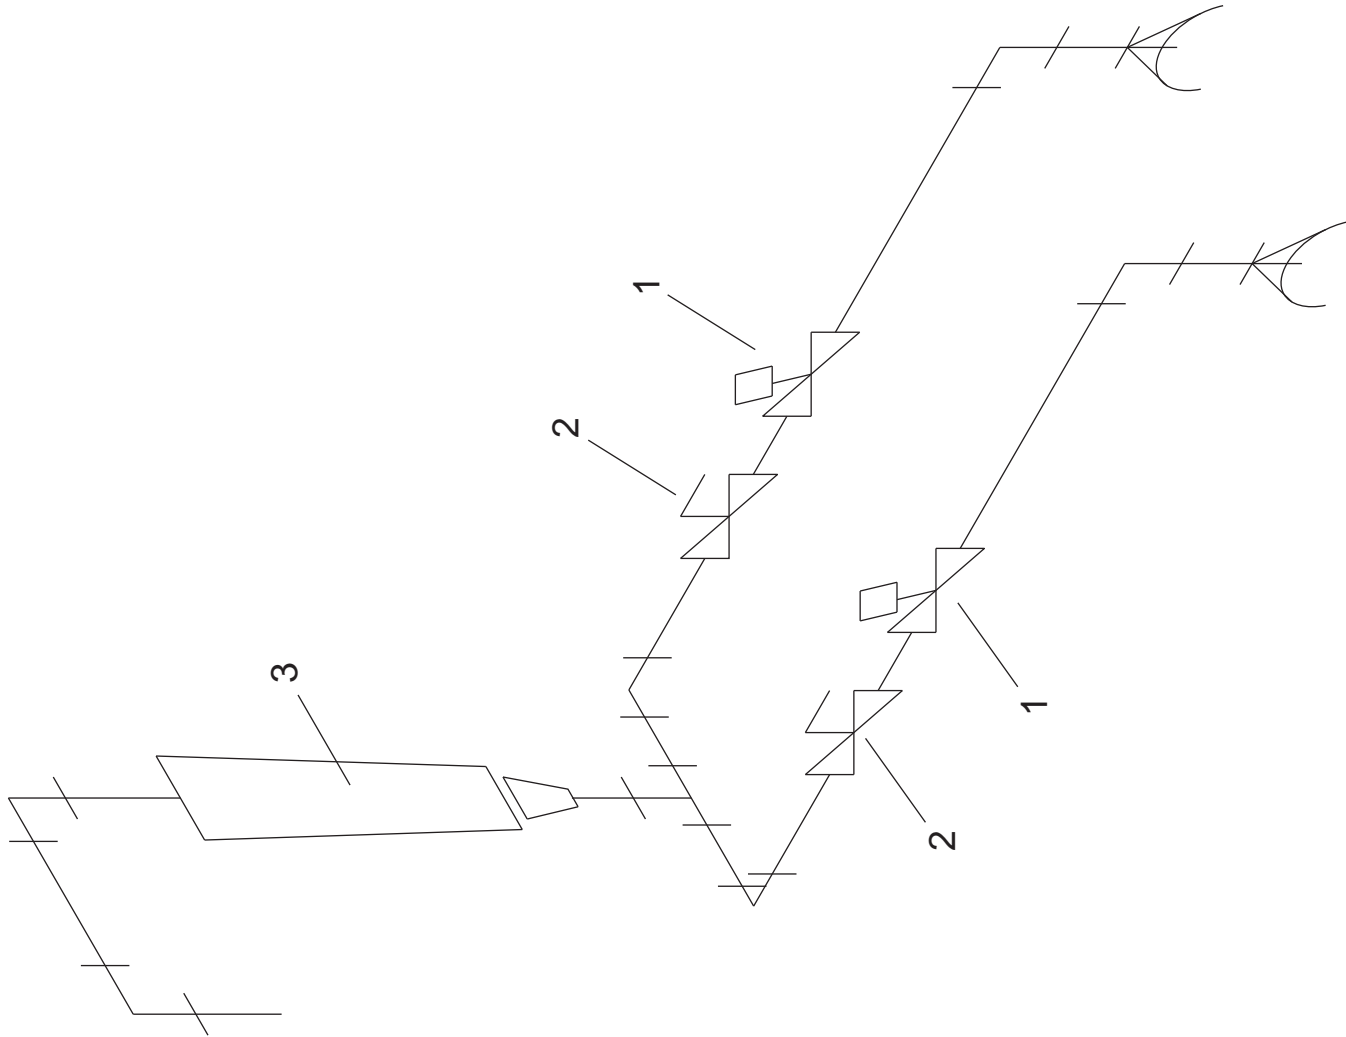

#3 AUTO INLET WITH ENHANCE, VERNIER, AND METER G3
(P,Q)

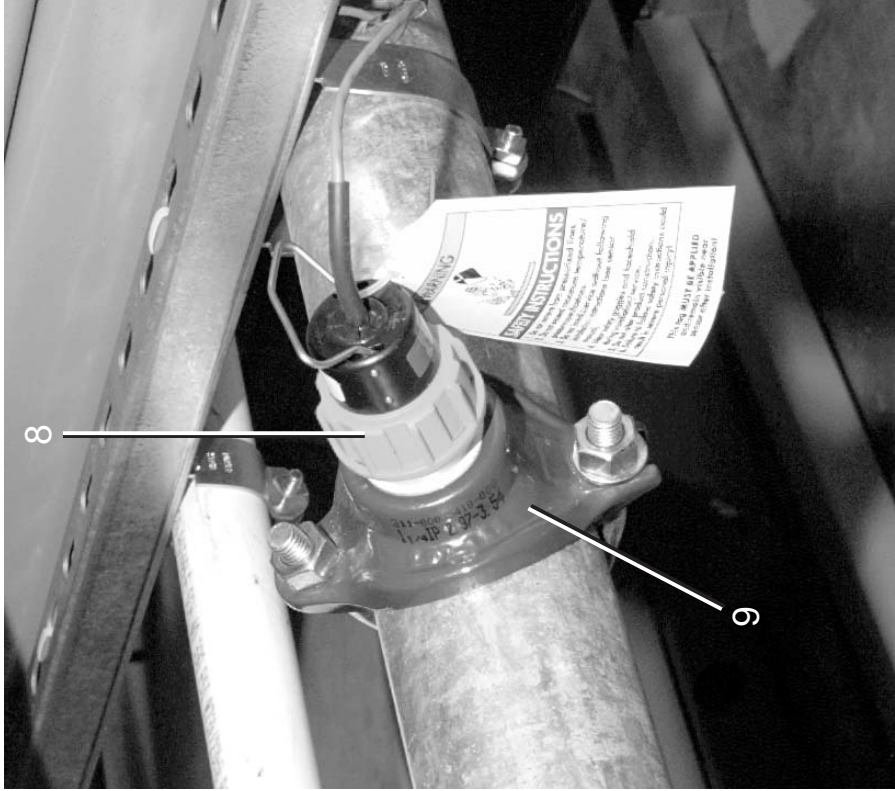

FLOWMETER ON MAIN WATER MANIFOLD




Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List, cont.—Water Schematics & Assemblies

Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	A67WV004	#2 AUTO W/VERNIER&METR G3	
	B	A67WV004S	#2 AUTO W/VERNIER&METR S/S G3	
	C	A67WV005	#3 AUTO W/VERNIER&METR G3	
	D	A67WV005S	#3AUTO W/VERNIER&METR S/SG3	
	E	A67WV060	#1 AUTO VER/MR/REUSE G3	
	F	A67WV061	#2 AUTO VER/MR/REUSE G3	
	G	A67WV062	#3 AUTO VER/MR/REUSE G3	
	H	A67WV009	#2 AUTO NO VERNIER/MTR G3	
	J	A67WV009S	#2AUTO NOVERN/MTG S/S	
	K	A67WV070	1.25 REUSE MAKE-UP G3	
	L	A67WV072	REUSE=1.5 MAKEUP ALT H20 G3	
	M	A67WV071	REUSE INT & FUNNEL FLUSH G3	
	N	A67WV073	REUSE+FUNNEL FLUSH ALT H20 G3	
	P	A67WV101	#2 AUTO INLT & ENHANCE G3	
	Q	A67WV102	#3 AUTO INLET + ENHANCE G3	
-----COMPONENTS-----				
ACEFGH KLMNPQ BDJ	1	96D086WE	ANGBODVLV 1.25"NC H20 BURK BRZ	
	1	96D086WESS	ANGBODVLV 1.25"N/C H20 BURK SS	
ACEFGPQ BD	2	96D086WEXA	BALVAL 1.25"WATTS W/THROTTLE L	
	2	96D086WEYA	BALVAL 1.25"WATS W/HTTLE L SS	
AP	3	30F201	FLOWMETER 2"FNPT 45GPM	
B	3	30F201S	FLOWMTRMULLER 2"FNPT S/S 45GPM	
CQ	3	30F250	FLOWMETER MULLER 2.5FNPT 90GPM	
D	3	30F250S	FLOWMETER 2.5"FNPT SS 90GPM	
E	3	30F125	FLOWMETER 1.25FNPT 11GPM	
all	4	96D050A	3/4"BALLVALVE BRZ WATTS#B6100	
all	5	60E255	HOSE 2" WATER CORRUGATED(V50)	
all	6	27A072	T-BOLT HOSECLAMP2.16-2.47SSSCR	
all	7	60E086C08A	*WATERHOSE 3/4X8"LG+ENDS	
all	8	30F515	FLOW SENSOR SIGNET #P51530-PO	
	9	30F519A	2" SADDLE FITTING #IR8S020	2"
	9	5R3A1ECI	NPT SADDLE 3X1.25 CI 300# SB	3"
	10	30F201T	03Z POLYSUL TUBE KIT 2"FNPT 45GPM	KIT 30F201 & 30F201S
	10	30F250T	04Z POLYSULTUBEKIT 2.5"FNPT 90GPM	KIT 30F250 & 30F250S
	10	30F125T	03Z POLYSULTUBEKIT 1.25"FNPT11GPM	KIT 30F125



Parts List—Magmeter				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.				
Used In	Item	Part Number	Description	Comments
			ASSEMBLIES	
			COMPONENTS	
all	1	30F580	8041 BLIND UNIT MAG SENSOR	
all	2	30F580A	8025 LOWFLOW WALL-MNT TRANSMIT	
all	3	30F568	MAGMETER FITTING 316SS 1.5" S.S.TEE	

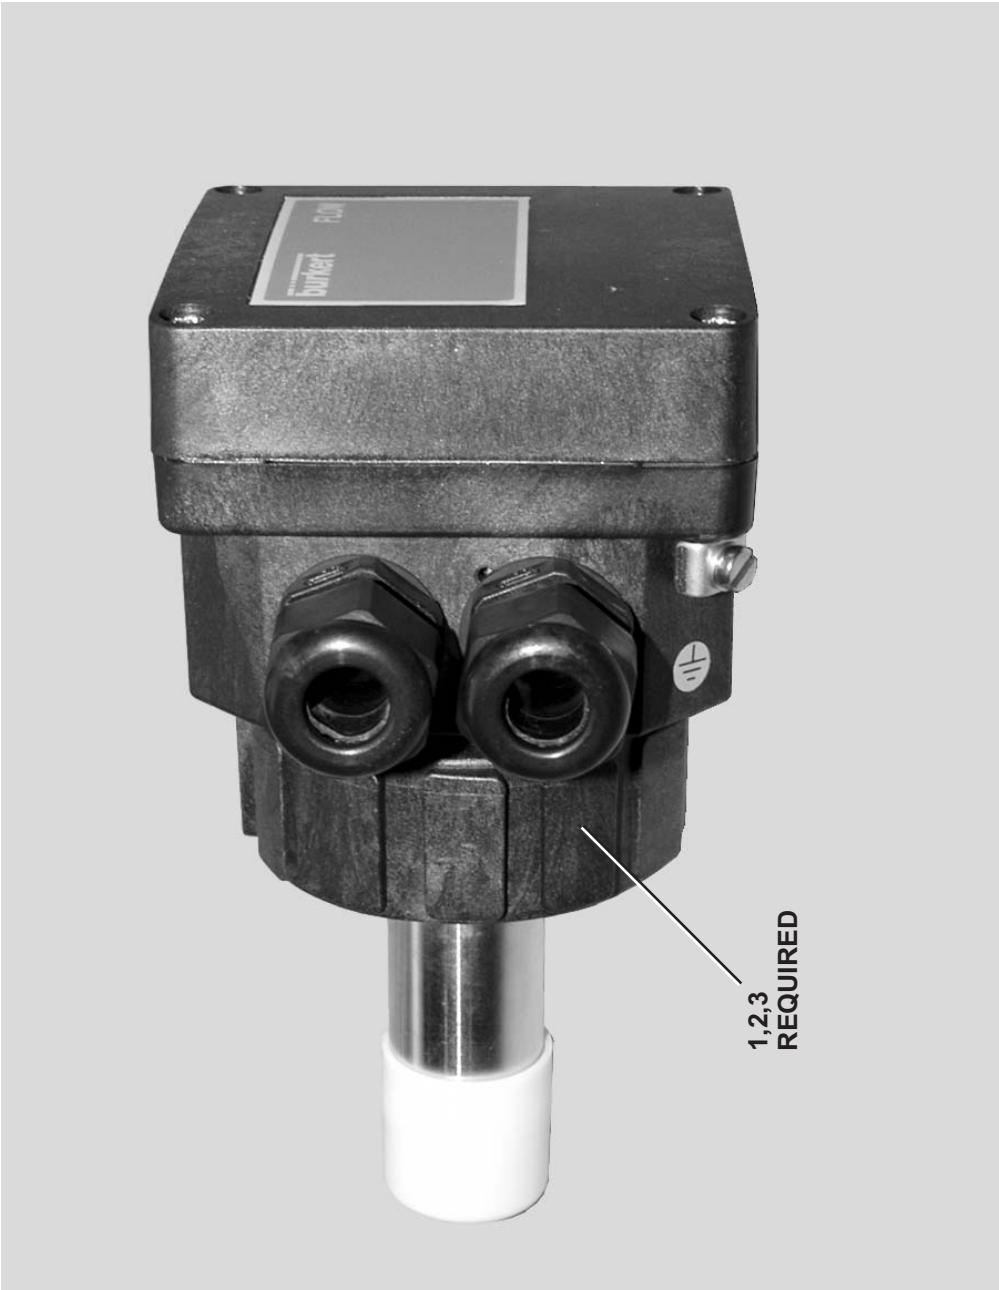


Steam Components with No-Air Sparger

76028G3, 76039G3 Tunnels


Figure 1: Steam Inlet with 1.25" No-Air Sparger

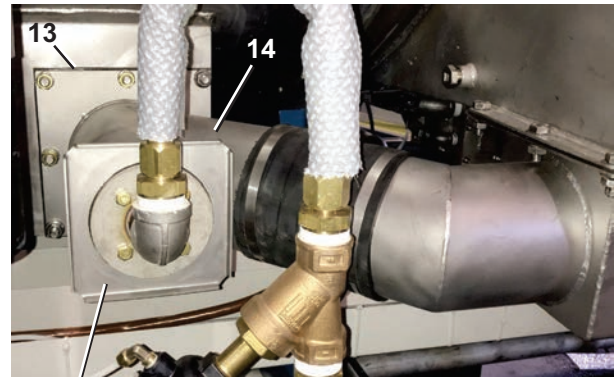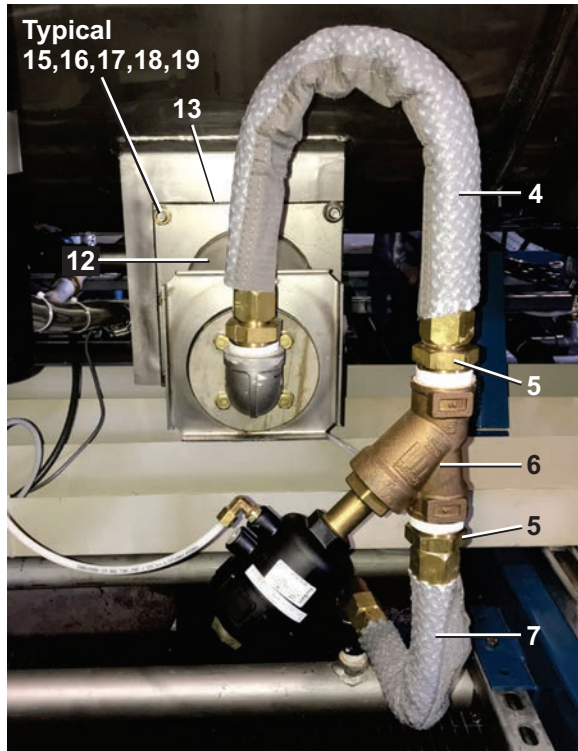


20,21
Cover here
if no steam

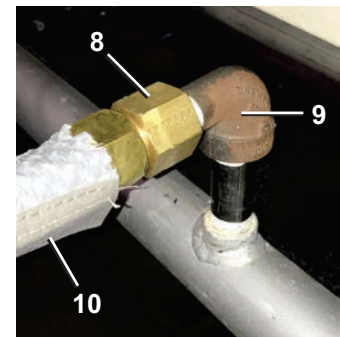

2" Manifold

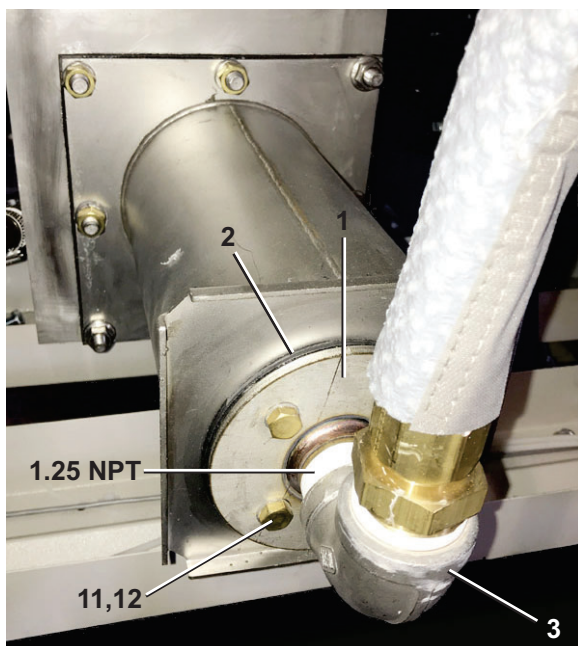

1.25" No-Air Sparger

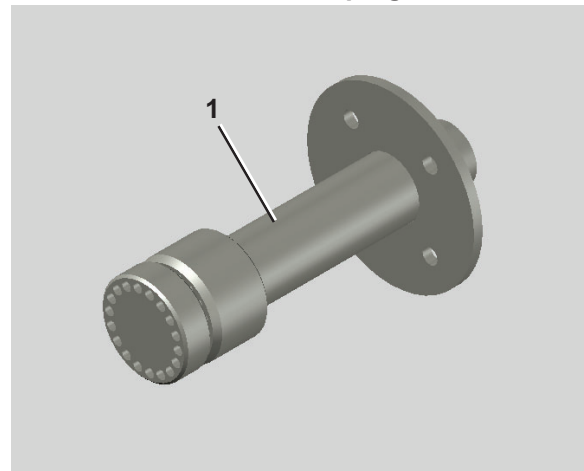


Steam Components with No-Air Sparger

76028G3, 76039G3 Tunnels


Figure 2: Steam Manifold Inlet and Steam Trap

Steam Manifold Inlet 2"

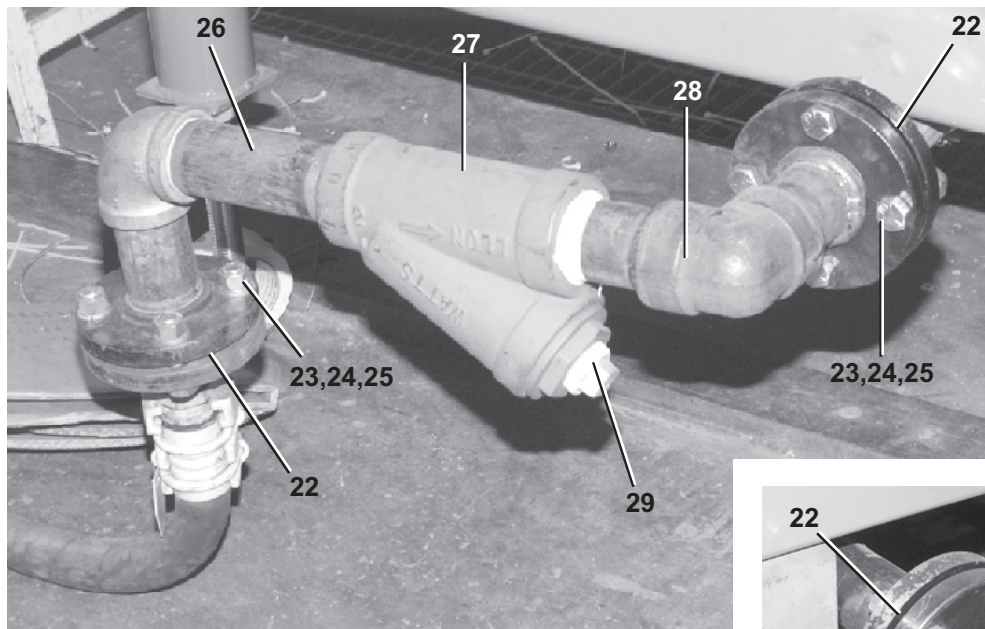

Steam Manifold - Last Module

1/2" Steam Trap Assembly (under last module)

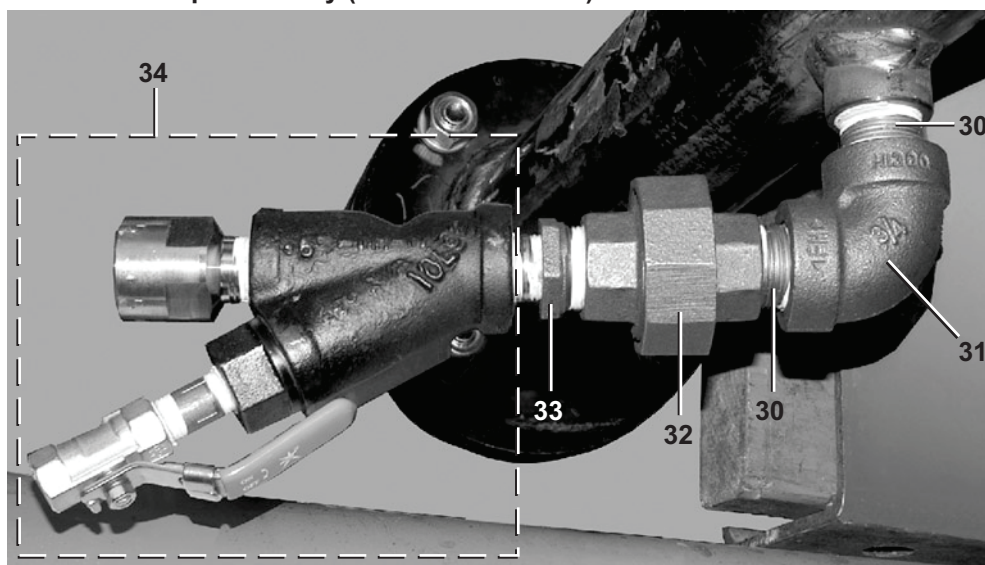

Steam Components with No-Air Sparger

76028G3, 76039G3 Tunnels

Parts List				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.				
Used In	Item	Part Number	Description	Comments
			-----REFERENCE ASSEMBLIES-----	
	A	G67SV001J	G3 STM INLET NON AIR STEAM SPARGER	BRASS COMPONENTS
	B	G67VS001A	INST=7639 PF2 CAP FLOWINLET W/STEAM	
	C	G67VS002	INST=PF2 STM+H2O Y-BRANCH	
	D	A67SV005	7639/28G3 STM INLET ASSY	STEAM OPTION
	E	A67SV004B	7628/39G3 STM TRAP ASSY	
	F		REFERENCE	
			-----COMPONENTS-----	
all	1	W6 20298D	WLMT=7639 STEAM SPARGER	
all	2	06 20297C	GASKET=CBW SPRGR INLET FLNG	
all	3	5SL1ESFA	NPT ELB 90DEG 1.25 304SS 150#	
all	4	06 40093D	7/8 TUBE=U-SHAPE STEAM	
A	5	52ZK00S001	TUBEFITMALCN7/8X1.25 #14-20 FTX-B	
F	5	52ZK00S002	TUBEFITMLCN7/8X1.25 #14-20 FTX-SS	
all	6	96D0011E	1.25"NPTBRZ N/C STEAMVALANGBD	
all	6	96D0011S	1.25"NPT S/S N/C STEAMVAL ANGBODY	
all	7	06 40093C	7/8 TUBE=90 DEG STEAM	
all	8	52ZL00S001	TUBEFITFEMCN7/8 X 3/4#14-GTX-B	
all	9	5SL0PFSC	NPTELB 90DEGSTRT 3/4BLKSTL3000	
all	10	98P450	INSUL.STEAM 7/8"OD SPEEDWRAP	
A	11	15K095	HXCPSCR 3/8-16UNC2AX1 GR5 ZINC	
F	11	15K095A	HEXCAPSCR 3/8-16X1" BRASS	
all	12	24G030N	ROLLED WASH.379ID NYLTITE 37W	
all	13	06 50095	FLANGE GASKET=8" TUBE 7639 PF2	
all	14	W6 80095A	8" Y-BRANCH SPARGER TUBE WLMT-PF2	
all	15	15K153	HXCAPSCR 1/2 -13 X 1 +1/4 SS	
all	16	24G032N	ROLLED WASH.500ID NYLTITE 50W	
all	17	15U310	LOKWASHER REGULAR 1/2 SS18-8	
all	18	15G234B	HEXNUT 1/2-13UNC2B BRASS	
all	19	15G225	HEXNUT 1/2-13UNC2 SS18-8	
all	20	06 20298A	PLATE FLANGE NO STEAM	
all	21	06 20297B	GASKET=DYE CBW STEAM FLANGE	
all	22	51KE2ANASA	2" SPIRAL GASKET #FGCCG-1GG	
all	23	15K225	HEXCAPSCR 5/8-11X2+1/2	
all	24	15U315	LOKWASHER MEDIUM 5/8 ZINCPL	
all	25	15G238	HXNUT 5/8-11UNC2B SAE ZINC GR2	
A	26	W6 40442	2" MAIN STM MNFLD INLET	

Steam Components with No-Air Sparger

76028G3, 76039G3 Tunnels




Parts List

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
F	26	W6 40442S	2" MAIN STM INLET S/S	
all	27	51T062	Y-STRAINER 2" NPT CAST IRON	
A	28	W6 20740B	ADPT=Y-STRAINER	
F	28	W6 20740S	ADPT=Y-STRAINER S/S	
all	29	5SP1ESFSS	NPT PLUG 1.25 SQ SOLID 304SS	
all	30	5N0PCLSF82	NPT NIP 3/4XCLS TBE BLKSTL S80	
A	31	5SL0PMIA	NPTLNB 90DEG 3/4 BLKMAL 300#	
F	31	5SL0KSFA	NPTLNB 90DEG 1/2 304SS 150#	
all	32	5SU0PMI	NPT UNION 3/4" BLKMAL 300#	
A	33	5SB0P0KMFO	NPTHEXBUSH 3/4X1/2 BLKMAL 150#	
F	33	5SB0P0KSFO	NPTHEXBUSH 3/4X1/2 SS304 150#	
all	34	51T60B00QJ	1/2"STMTRP LPA-MILNOR-05 VENTURI	

Peristaltic Chemical Inlets

76028G3, 76039G3, 92048G4 Tunnels

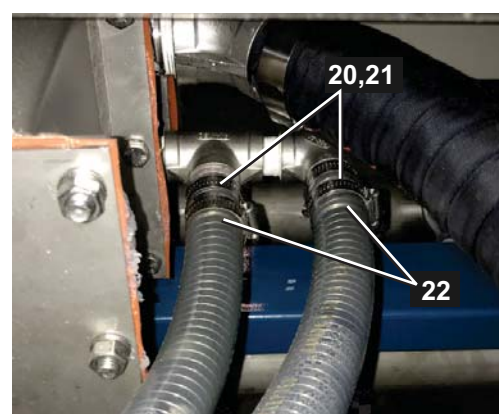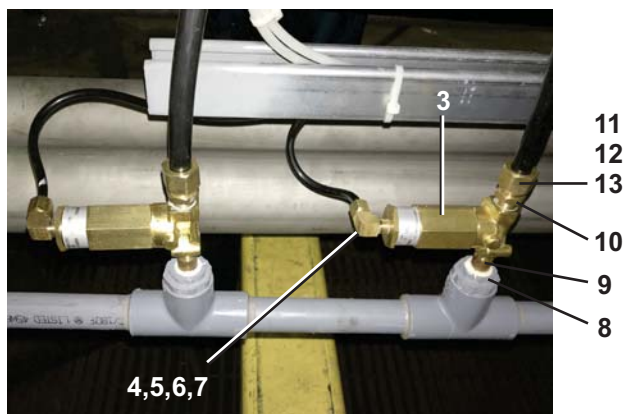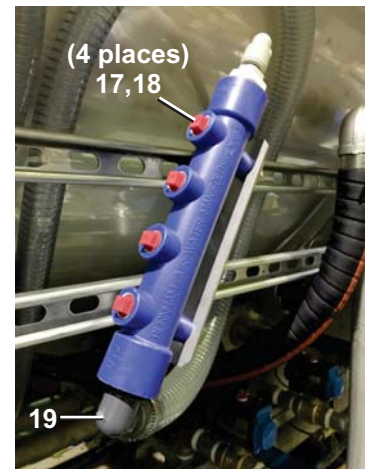

Peristaltic Chemical Inlets

76028G3, 76039G3, 92048G4 Tunnels


Parts List

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.



Used In	Item	Part Number	Description	Comments
			-----COMPONENTS-----	
all	1	06 70196	PERISTALTIC TUBE MNT	
all	2	02 03590C	CHEM INJ MANIFOLD 4-PORT MOLDED	
all	3	96TBC2AA01	1/4" N/C 1WAY AIR-OP VALVE POLYPRO (NO COIL)	
all	4	60E004TE	1/4"OD X.170"ID NYL(BLK)TUBING	
all	5	53A059A	NUT 1/4"BR.HOLYOKE AND #61A-4	
all	6	53A500	SLEEVE DELRIN 1/4"OD#60PT-4	
all	7	53A501	TUBE INSERT .163"OD #63PT-4-40	
all	8	5KB0K0EP82	BUSHING 1/2"SOKX1/4FPT CPVCS80	
all	9	5N0ECLSBE2	NPT NIP 1/4XCLS TBE BRASS 125#	
all	10	53ACM0KEB	ASSY MALECON.5TX.25MP BRASS 68	
all	11	53A3000KB	SLEEVE 1/2"OD TUBE #60AP-8	
all	12	53A4000KB	TUBE INSERT 1/2"OD #60AE-8	
all	13	53A10SSKB	.5T COMPNUT 11/16-20 AND#61A-8	
all	14	60E005F	TUBING NYL.BLK.1/2"ODX.375ID	
all	15	53AEM9KKBC	MAL90ELSW1/2"TXM PARK#A8MES8MG	
all	16	5SB1A0KP4O	NPTHEXBUSH 1X1/2 PVC SK40	
all	17	51PB0GNA	3/8" PVDF THRD PLUG	
all	18	20C005EA	LOCTITE TREAD SEALANT #1537780	
all	19	51ET1AE02	HOSEADAPT PVC 1"X1" INSERT 90 DEG	
all	20	60E010B	TUBING,POLYWIRECLR 1"IDX1.375"	
all	21	27A090S	HOSECLAMP 13/16-1.5"SS#64016B	
all	22	5N0P02GS41	NPT NIP 3/4X2.375TOE 304SS SK4	
all	23	27A0626NUT	CLAMP NUT 3/8-16 W/SPRING	
all	24	15K096	HEXCAPSCR 3/8-16UNC2X1SS18-8	
all	25	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	26	15U245A	FLTWASH 25/64IDX1.25ODX3/32 S/	
all	27	15K145D	HXCAPSCR 1/2-13UNC2AX3/4 SS18-	
all	28	15U310S	FLATWASH-SS .53 X 1.37 .187T	
all	29	15U310	LOKWASHER REGULAR 1/2 SS18-8	

Dump Valve Installation

76032, 76028, 76039, 92048 Tunnels

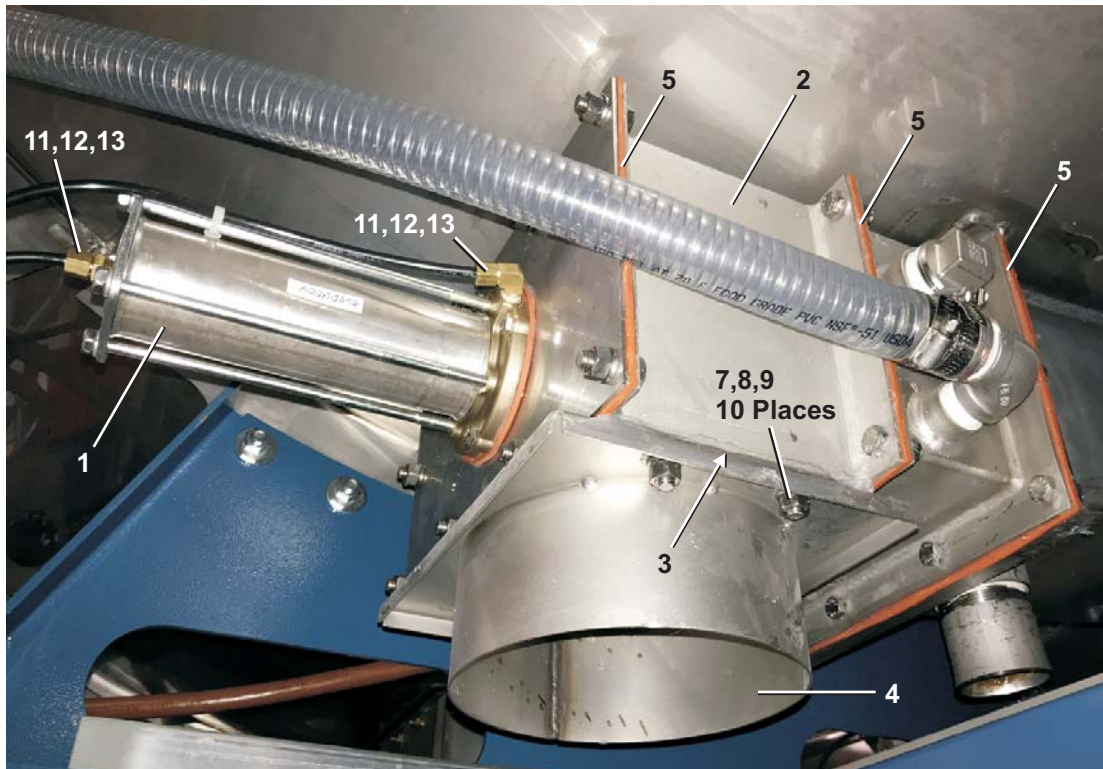

76028, 76039, 92048 Tunnels

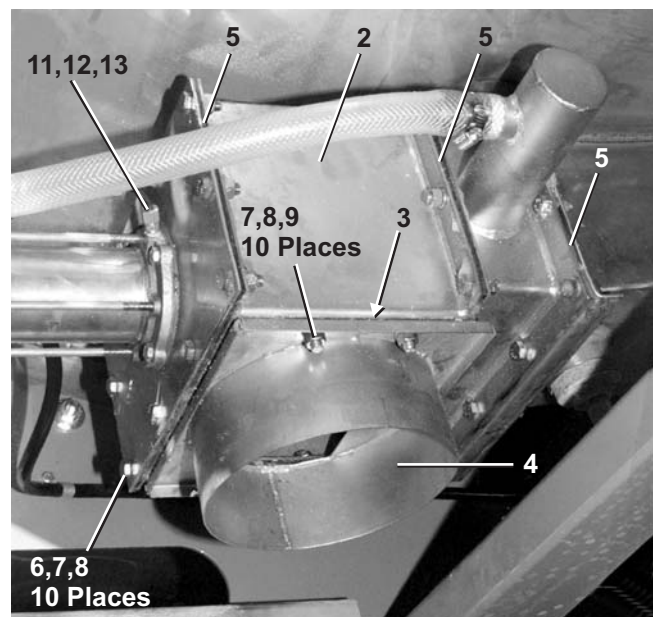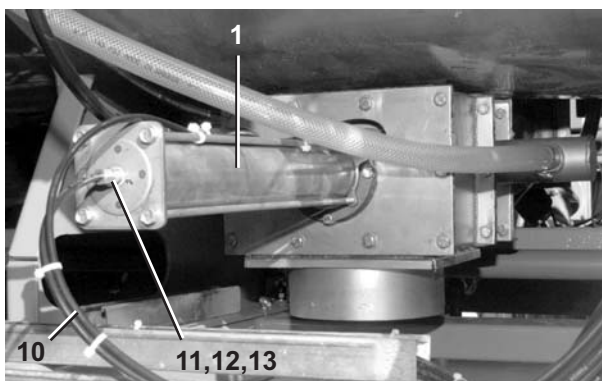

76032 Tunnels

Dump Valve Installation

76032, 76028, 76039, 92048 Tunnels

Parts List				
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.				
Used In	Item	Part Number	Description	Comments
-----ASSEMBLIES-----				
	A	G64DV001A	N/C 4+1/2X8 DUMP VALVE ASSY	76032 G1 NORMALLY CLOSED
	B	G64DV004	8"DUMPVAL NC SHORT G3	76028G3, 76039G3 & 92048G4 TUNNELS NORMALLY CLOSED- SHORT
-----COMPONENTS-----				
A	1	A64AC001A	N/C DUMP VAL AIR CYL 4+1/2X8	
B	1	A64DV004	BONNET DUMPVAL NC G3	
A	2	W6 40055	*DUMP VALVE BODY WLDT 4+1/2X8	
B	2	W6 40055A	DUMP VALVE WLMT SHORT G3CBW	
A	3	06 40069F	DYE DUMPVALVE ADAPT GASKET G1	
B	3	06 40069J	DUMPVAL ADAPT GASKET G3	
A	4	W6 40076	*STRAIGHT DUMP V.ADAPT WLMT	
B	4	W6 40072	WLMT=DUMP VALVE HOSE CONN ADAPT	
A	5	06 40069E	4-1/2X8 DYE DUMPVALVE GASKET	
B	5	06 40069K	4+1/2 X 8 DUMP VALVE GASKET RED SILICONE	
all	6	15K096	HEXCAPSCR 3/8-16UNC2X1SS18-8	
all	7	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	8	15G206	HEXNUT 3/8-16 UNC2 SS 18-8	
all	9	15K086D	HXCAPSCR 3/8-16 UNC2A X 7/8"	
all	10	15G206	HEXNUT 3/8-16 UNC2 SS 18-8	
all	11	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	12	60E004TE	1/4"OD X.170"ID NYL(BLK)TUBING	
all	13	53A059A	NUT 1/4"BR.HOLYOKE AND #61A-4	
all	14	53A500	SLEEVE DELRIN 1/4"OD#60PT-4	
all	15	53A501	TUBE INSERT .163"OD #63PT-4-40	


Dump Valve Bonnet
76028G3, 76039G3, & 92048G4 Tunnel

BMP000073/2011494B
(Sheet 1 of 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

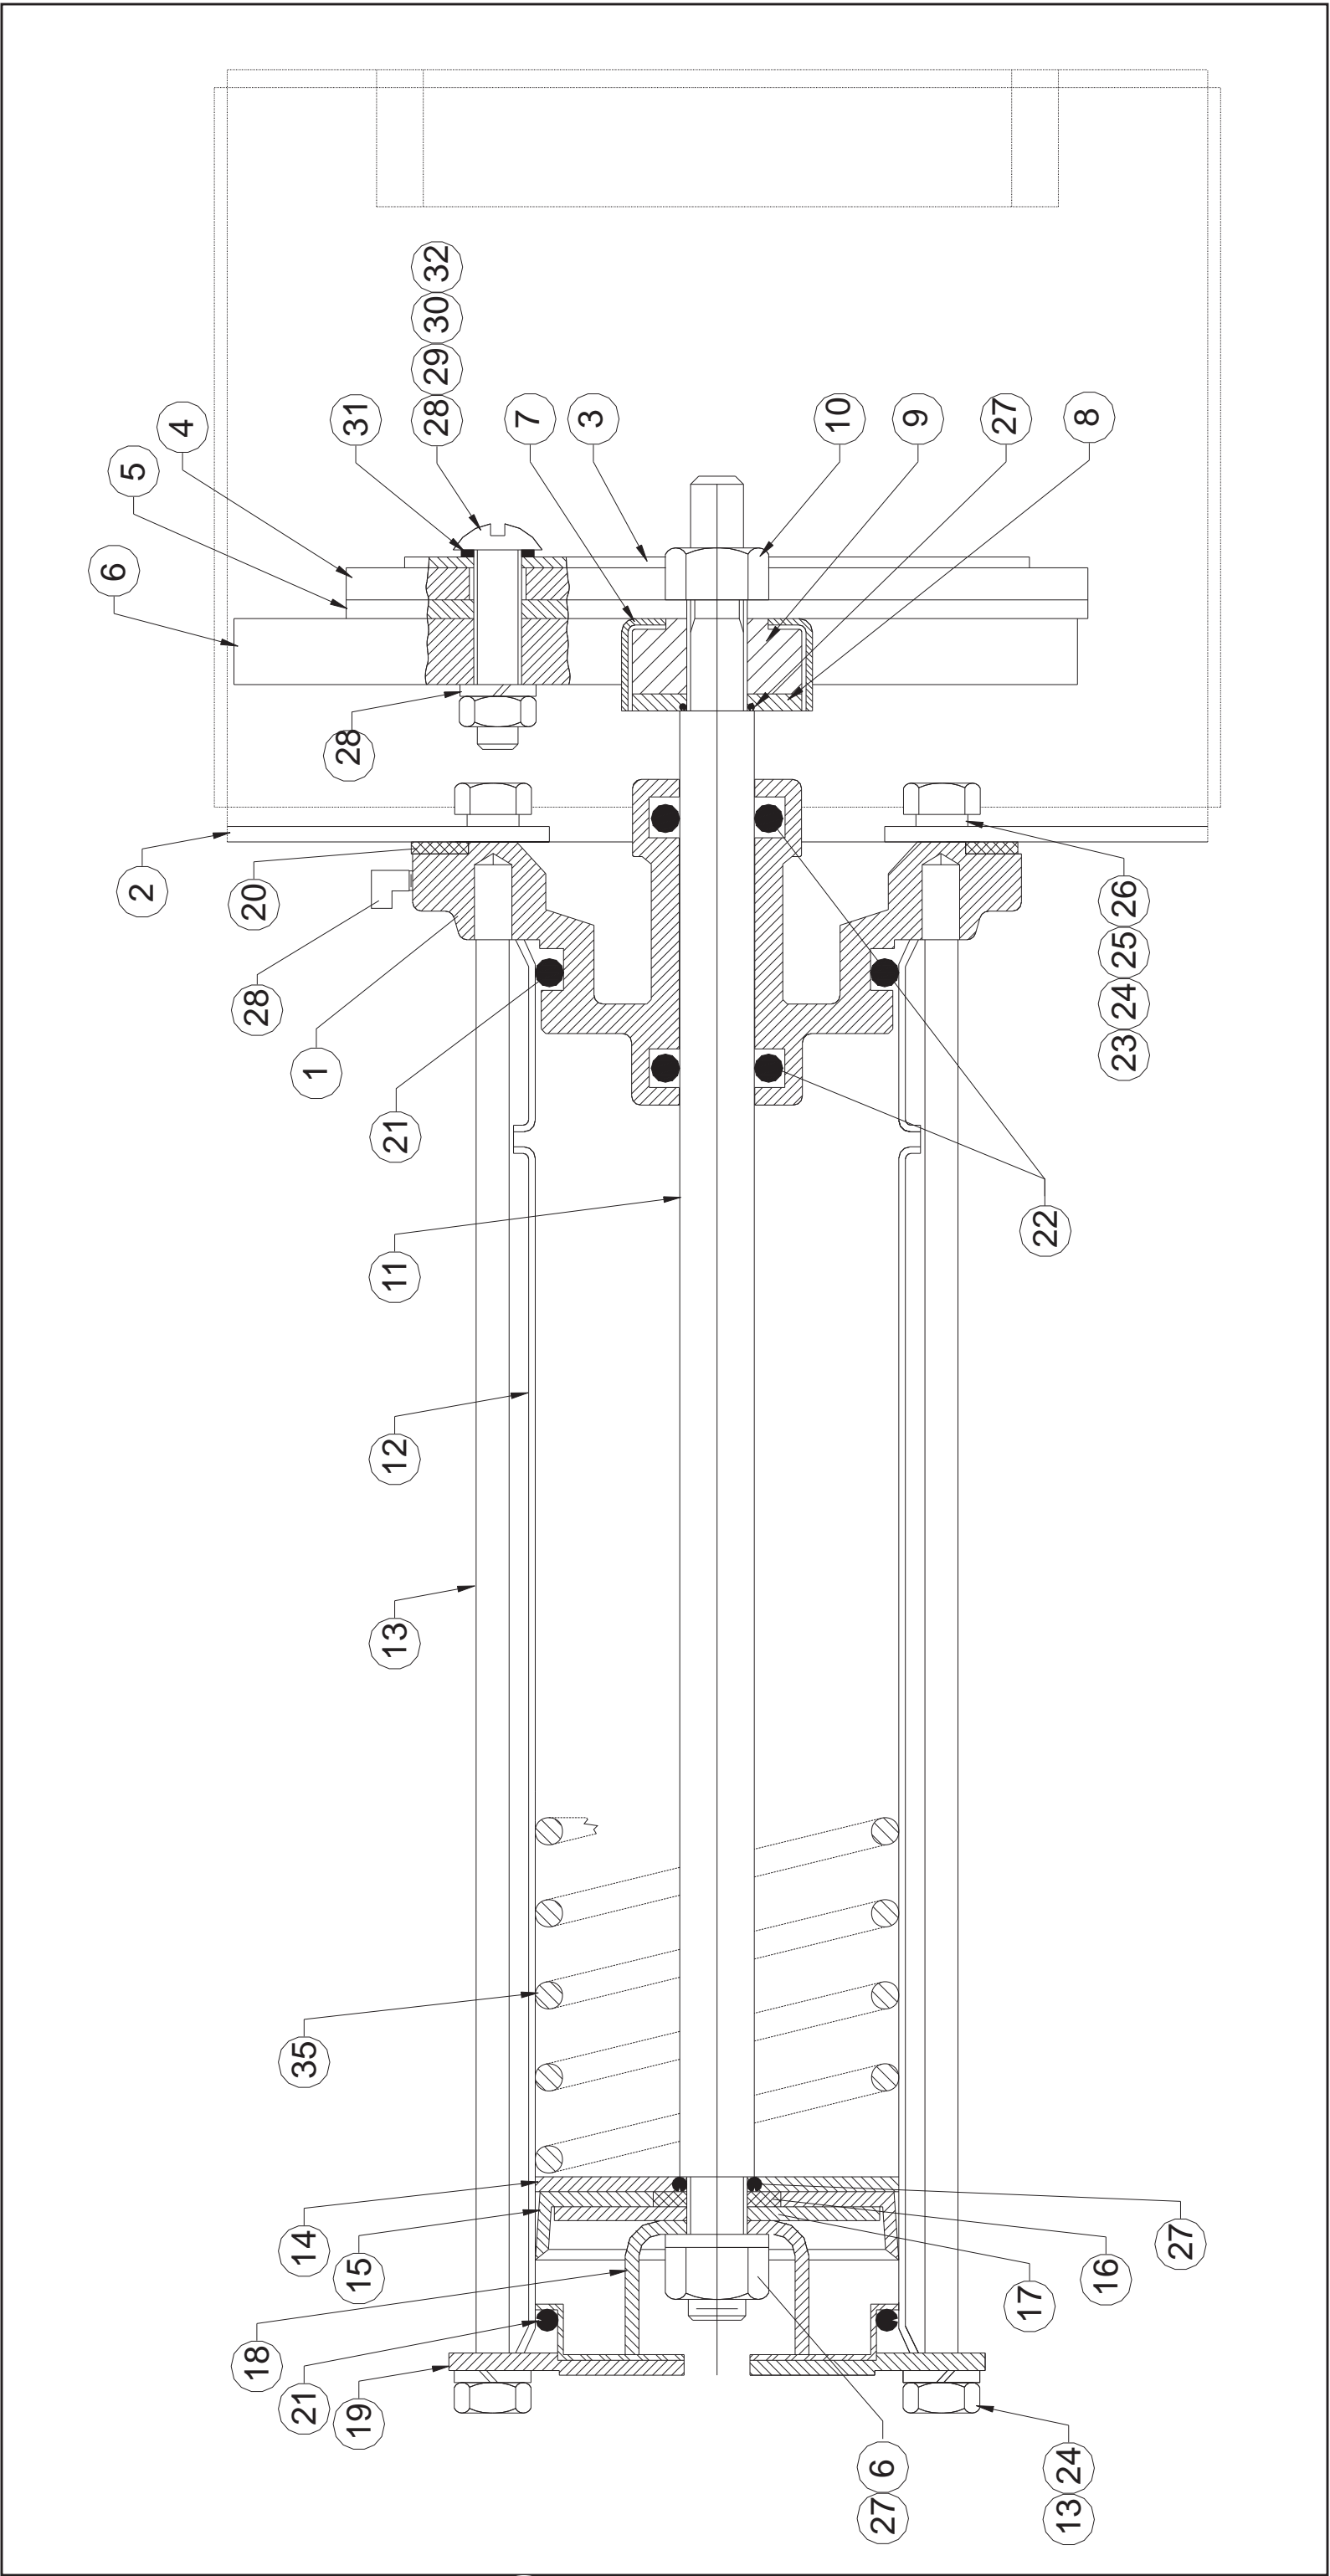



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Dump Valve Bonnet							
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.							
Used In	Item	Part Number	Description	Comments			
			-----ASSEMBLIES-----	-----			
	A	A64DV004	BONNET DUMPVAL NC G3	-----COMPONENTS-----			
all	1	X6 20708A	DOUBLE ACTING VALVE BONNET				
all	2	06 40063B	DUMP VALVE COVER PLT G3CBW				
all	3	06 40064	DUMP VALVE GASKET RETAINER				
all	4	06 40065	DUMP VALVE CUP GASKET				
all	5	06 40066	DUMP VALVE CUP				
all	6	06 40067	CUP ALIGNMENT STRIP				
all	7	02 16021D	DUMP VALVE BUMPER RETAINER				
all	8	02 16021E	WASHER 3/8IDX1.250D DUMPVAL				
all	9	02 16021C	BUMPER=DUMP VALVE BONNET				
all	10	15G220	NUTLOK THINX 3/8-24 SS/NYL				
all	11	02 16021K	DUMPVAL STEM 9" G3				
all	12	02 02068	AIRCYL-STAINLESS=DUMPVALVE				
all	13	02 10585D	TIE BOLT=5/16-18X7.875 PLTD				
all	14	02 02105B	2.38"ACYL BRASS PISCUP WASHR				
all	15	02 02194	PISTONCUP=DUMPVALVE 2+3/8"				
all	16	02 02185	WASHER=PISTON CUP COMP LIMIT				
all	17	02 02085	UP WASHER=2"OD=PISTON CUP				
all	18	03 01313	STOP=AIR CYL W/2+11/16STROKE				
all	19	02 02101	CYLHEAD W/TAPPED HOLE				
all	20	02 18931F	GASKET=DUMPVALVE-1/60+72WEHU				
all	21	60C132	ORING 2"IDX3/16CS BUNA70 #329				
all	22	60C108V	ORING 1/2IDX3/16CS VITON #310				
all	23	15K042K	BUTSOKCAPSCR 1/4-20UNCX1+1/4 S				

Used In	Item	Part Number	Description	Comments			
all	24	15U210	LOKWASHER MEDIUM 5/16 ZINCPL				
all	25	15G168	SQNUT 1/4-20UNC2 SS18-8				
all	26	24G020N	ROLLED WASH.252ID NYLTITE 25W				
A	27	60C106V	ORING 5/16IDX1/16CSVITON 11011				
B	27	60C106	ORING 5/16ID 1/16CS BUNA70#011				
all	28	53A031B	BODY-EL90MALE.25X1/8 #269C-42B				
all	29	15G164	HX THIN LOCKNUT NYL1/4-20 SS				
all	30	15U181	LOCKWASHER MEDIUM 1/4 SS18-8				
all	31	15N196S	RDMACHSCR 1/4-2OUNC2 X 1-1/2 S				
all	32	24G020N	ROLLED WASH.252ID NYLTITE 25W				
all	33	53A031	MALE90ELL 1/4X1/8 COMPFIT WH#6				
all	34	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS				
all	35	03 06429	SPRING=2.11ODX6.5FL 64#/"				

Dump Valve Bonnet - Normally Closed


76032 G1 Tunnels

BMP970067/2023103B
(Sheet 1 of 2)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

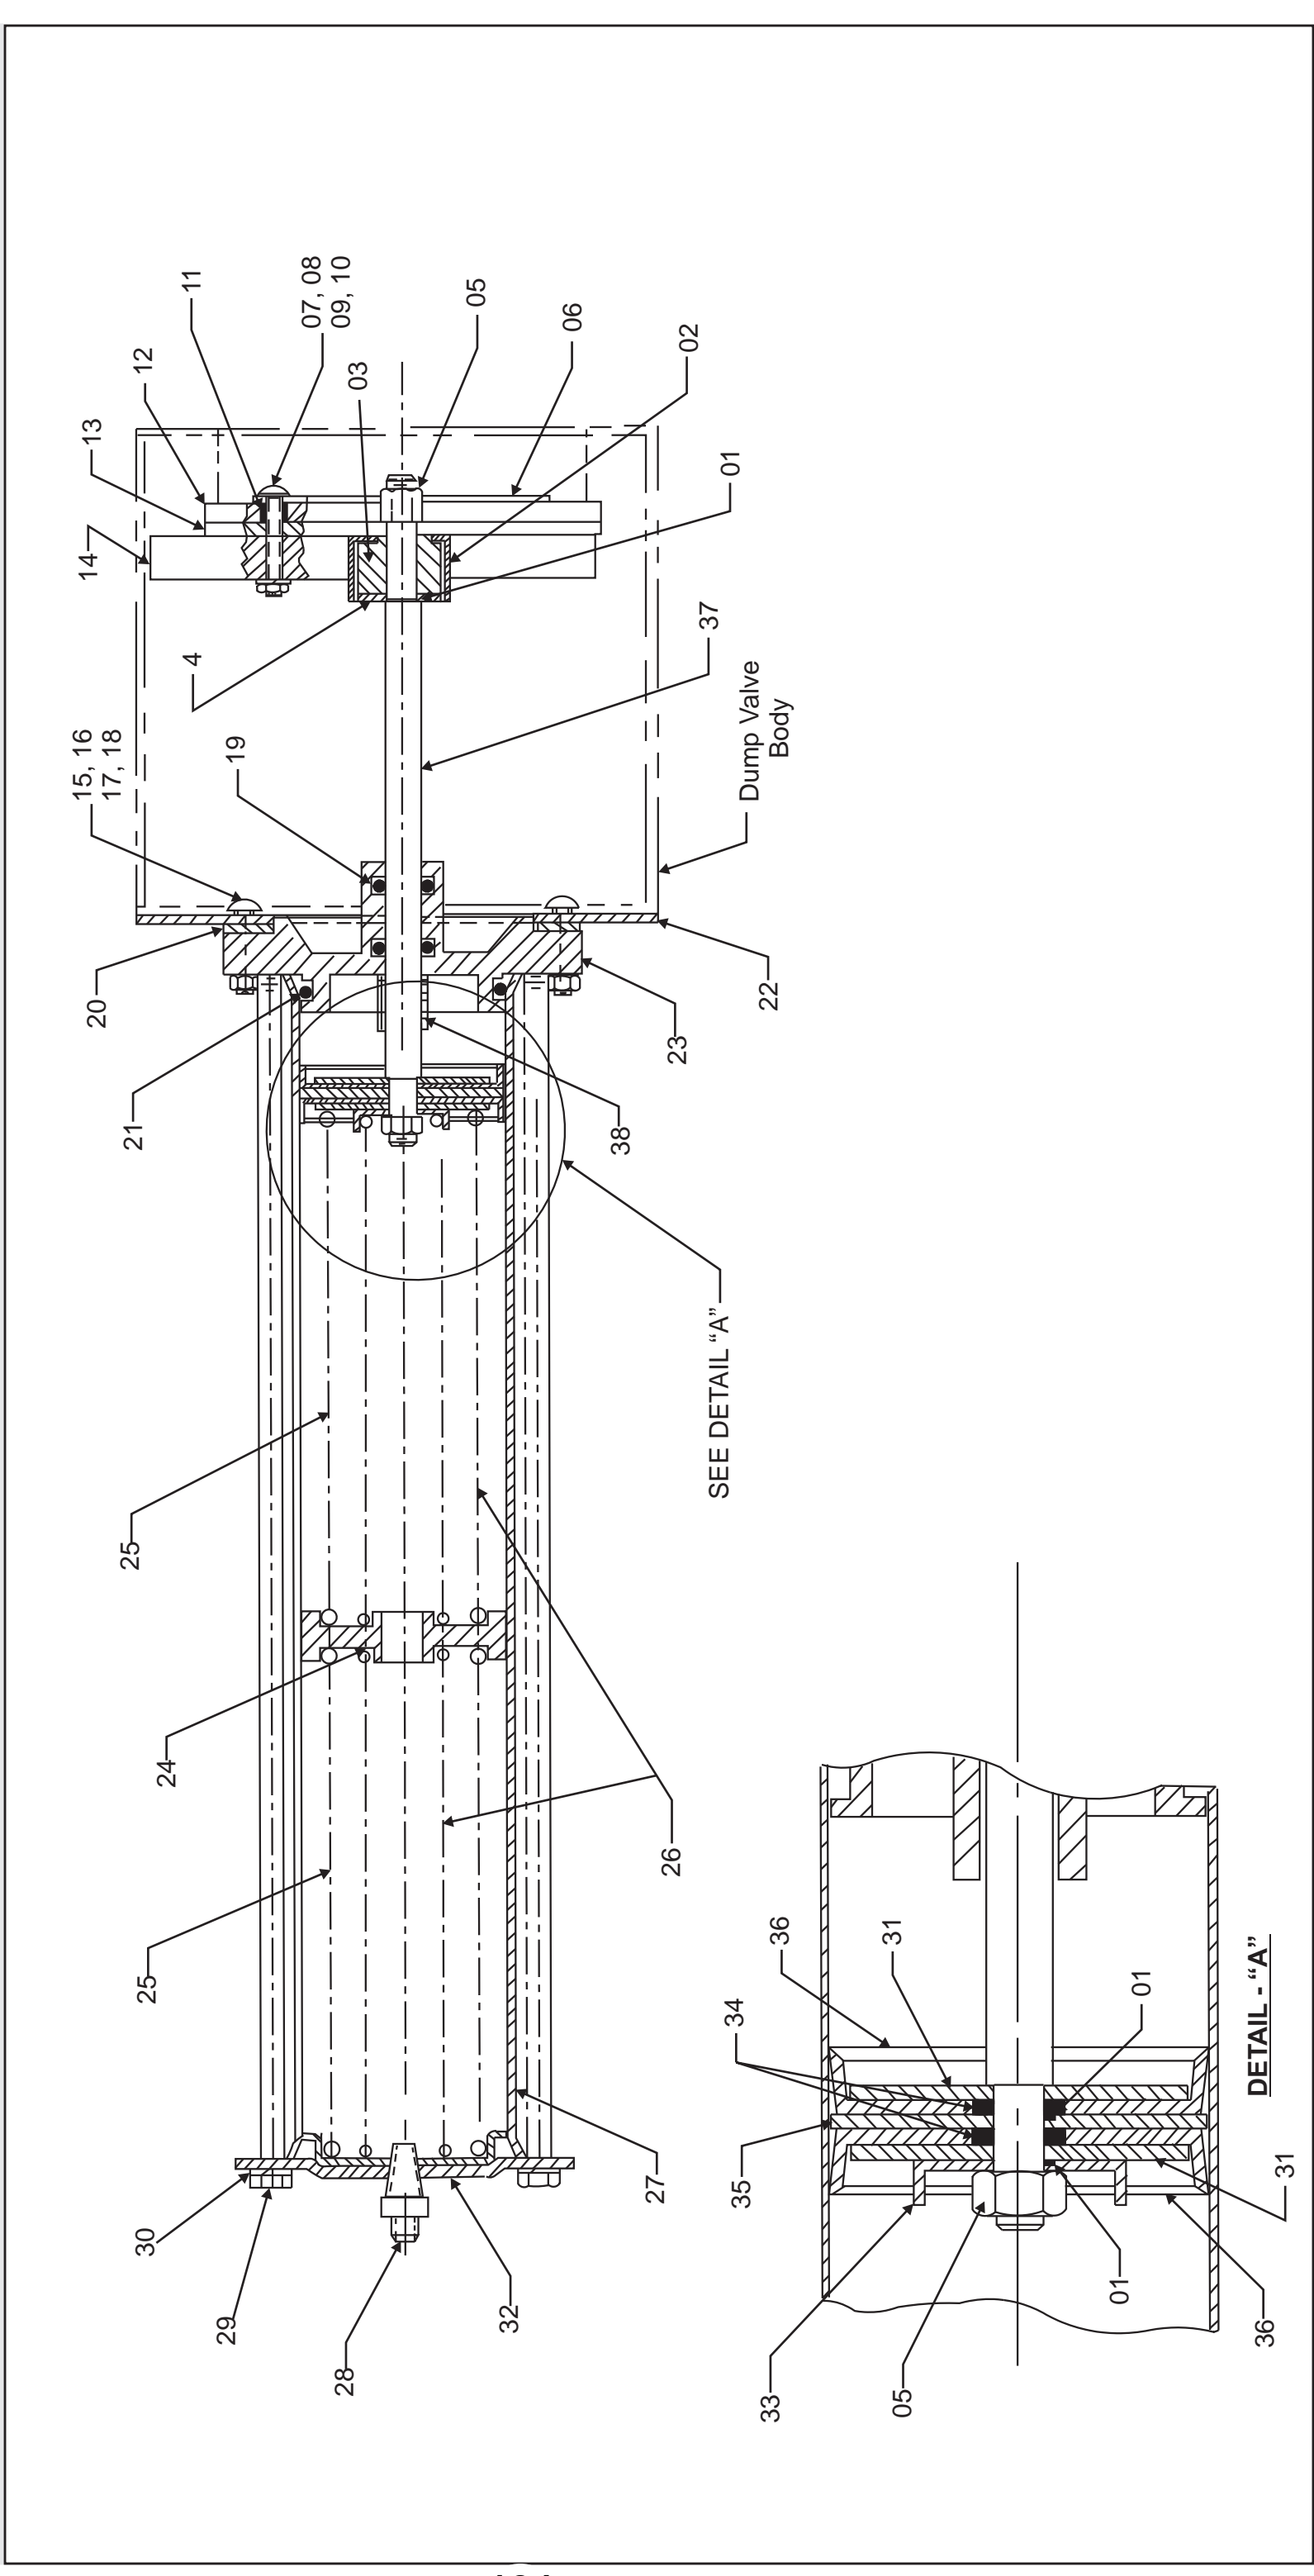



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.

Parts List—Dump Valve Bonnet - Normally Closed				Parts List, cont.—Normally Closed - Dump Valve Assembly			
Used In	Item	Part Number	Description	Used In	Item	Part Number	Comments
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.							
	A	A64AC001A	91183C N/C DUMP VAL AIR CYL 4+1/2X8				
			-----ASSEMBLIES-----				
			-----COMPONENTS-----				
all	1	60C106	ORING 5/16ID 1/16CS BUNA70#011	all	29	02-10585I	91142#TIE BOLT=5/16-18X17 .188 S/S
all	2	02-16021D	92632B DUMP VALVE BUMPER RETAINER	all	30	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS
all	3	02-16021C	92051B BUMPER=DUMP VALVE BONNET	all	31	03-01618	91522B PISTON CUP WASHER 3"AIR CYL
all	4	02-16021E	94323B WASHER 3/8IDX1.250D DUMPVAL	all	32	03-01622A	88531# CYLHEAD TAPHOLE - 3" ARCYL S/S
all	5	15G220	02Z LTHX THIN LOKNUT 3/8-24 SSNTE	all	33	02-18651	73171A WASHER=2 WAY BRAKE CYL
all	6	06-40064	87037B DUMP VALVE GASKET RETAINER	all	34	03-01630	87506B 3" AIRCYL PSTN CUP COMPLMTWSH
all	7	15G164	01Z HX THIN LOCKNUT NYL1/4-20 SS	all	35	X3-01619A	92066#MACH=3" ACYL BRASS PISCUP WSH
all	8	15U181	LOCKWASHER MEDIUM ¼ SS18-8	all	36	02-19302	97327B PISTON CUP 2+7/81D CYLINDER
all	9	15N196S	RDMACHSCR 1/4-2OUNC2 X 1-1/2 SS18-8	all	37	06-40068A	96426B N/C DBL ACT DUMP VALVE STEM
all	10	24G020N	ROLLED WASH.252ID NYLTITE 25W	all	38	27B240SS	SPACERROLL .51ID .813L.062T SS
all	11	27B260156S	SPCRSLD.26ID.375OD.156L 316SS				
all	12	06-40065	92371B DUMP VALVE CUP GASKET				
all	13	06-40066	94271B DUMP VALVE CUP				
all	14	06-40067	96372B CUP ALIGNMENT STRIP				
all	15	15K062	HEXCAPSCR 5/16-18X1 18-8SS				
all	16	15G186	HEXNUT 5/16-18UNC2 SS18-8				
all	17	15U205	LOCKWASHER MEDIUM 5/16" 18-8SS				
all	18	24G027N	ROLLED WASH.312ID NYLTITE 31W				
all	19	60C108	ORING 1/2IDX3/16CS BUNA70 #310				
all	20	06-40069G	91441B N/C DBL ACT DYE DMP VLV GSKT				
all	21	60C134	ORING 2.5ID3/16CS BUNA70 #333				
all	22	06-40063A	91142B N/C DUMP VALVE COVER PLATE				
all	23	X6-20708B	90516#-C DBLE ACTING VALVE BONNET				
all	24	06-20537	91183B 2+7/8 AIR CYL SPRING DIVIDER				
all	25	06-20529S	96471#C DRAIN VALVE-INNER SPRINGSS				
all	26	06-20528S	96471#C DRAIN VALVE-OUTER SPRINGSS				
all	27	03-01621A	94266# TUBE 2+7/8 AIR CYL 16.63"				
all	28	53A008B	BODYMALECON .25X.25 COMP #B68A-4B				



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

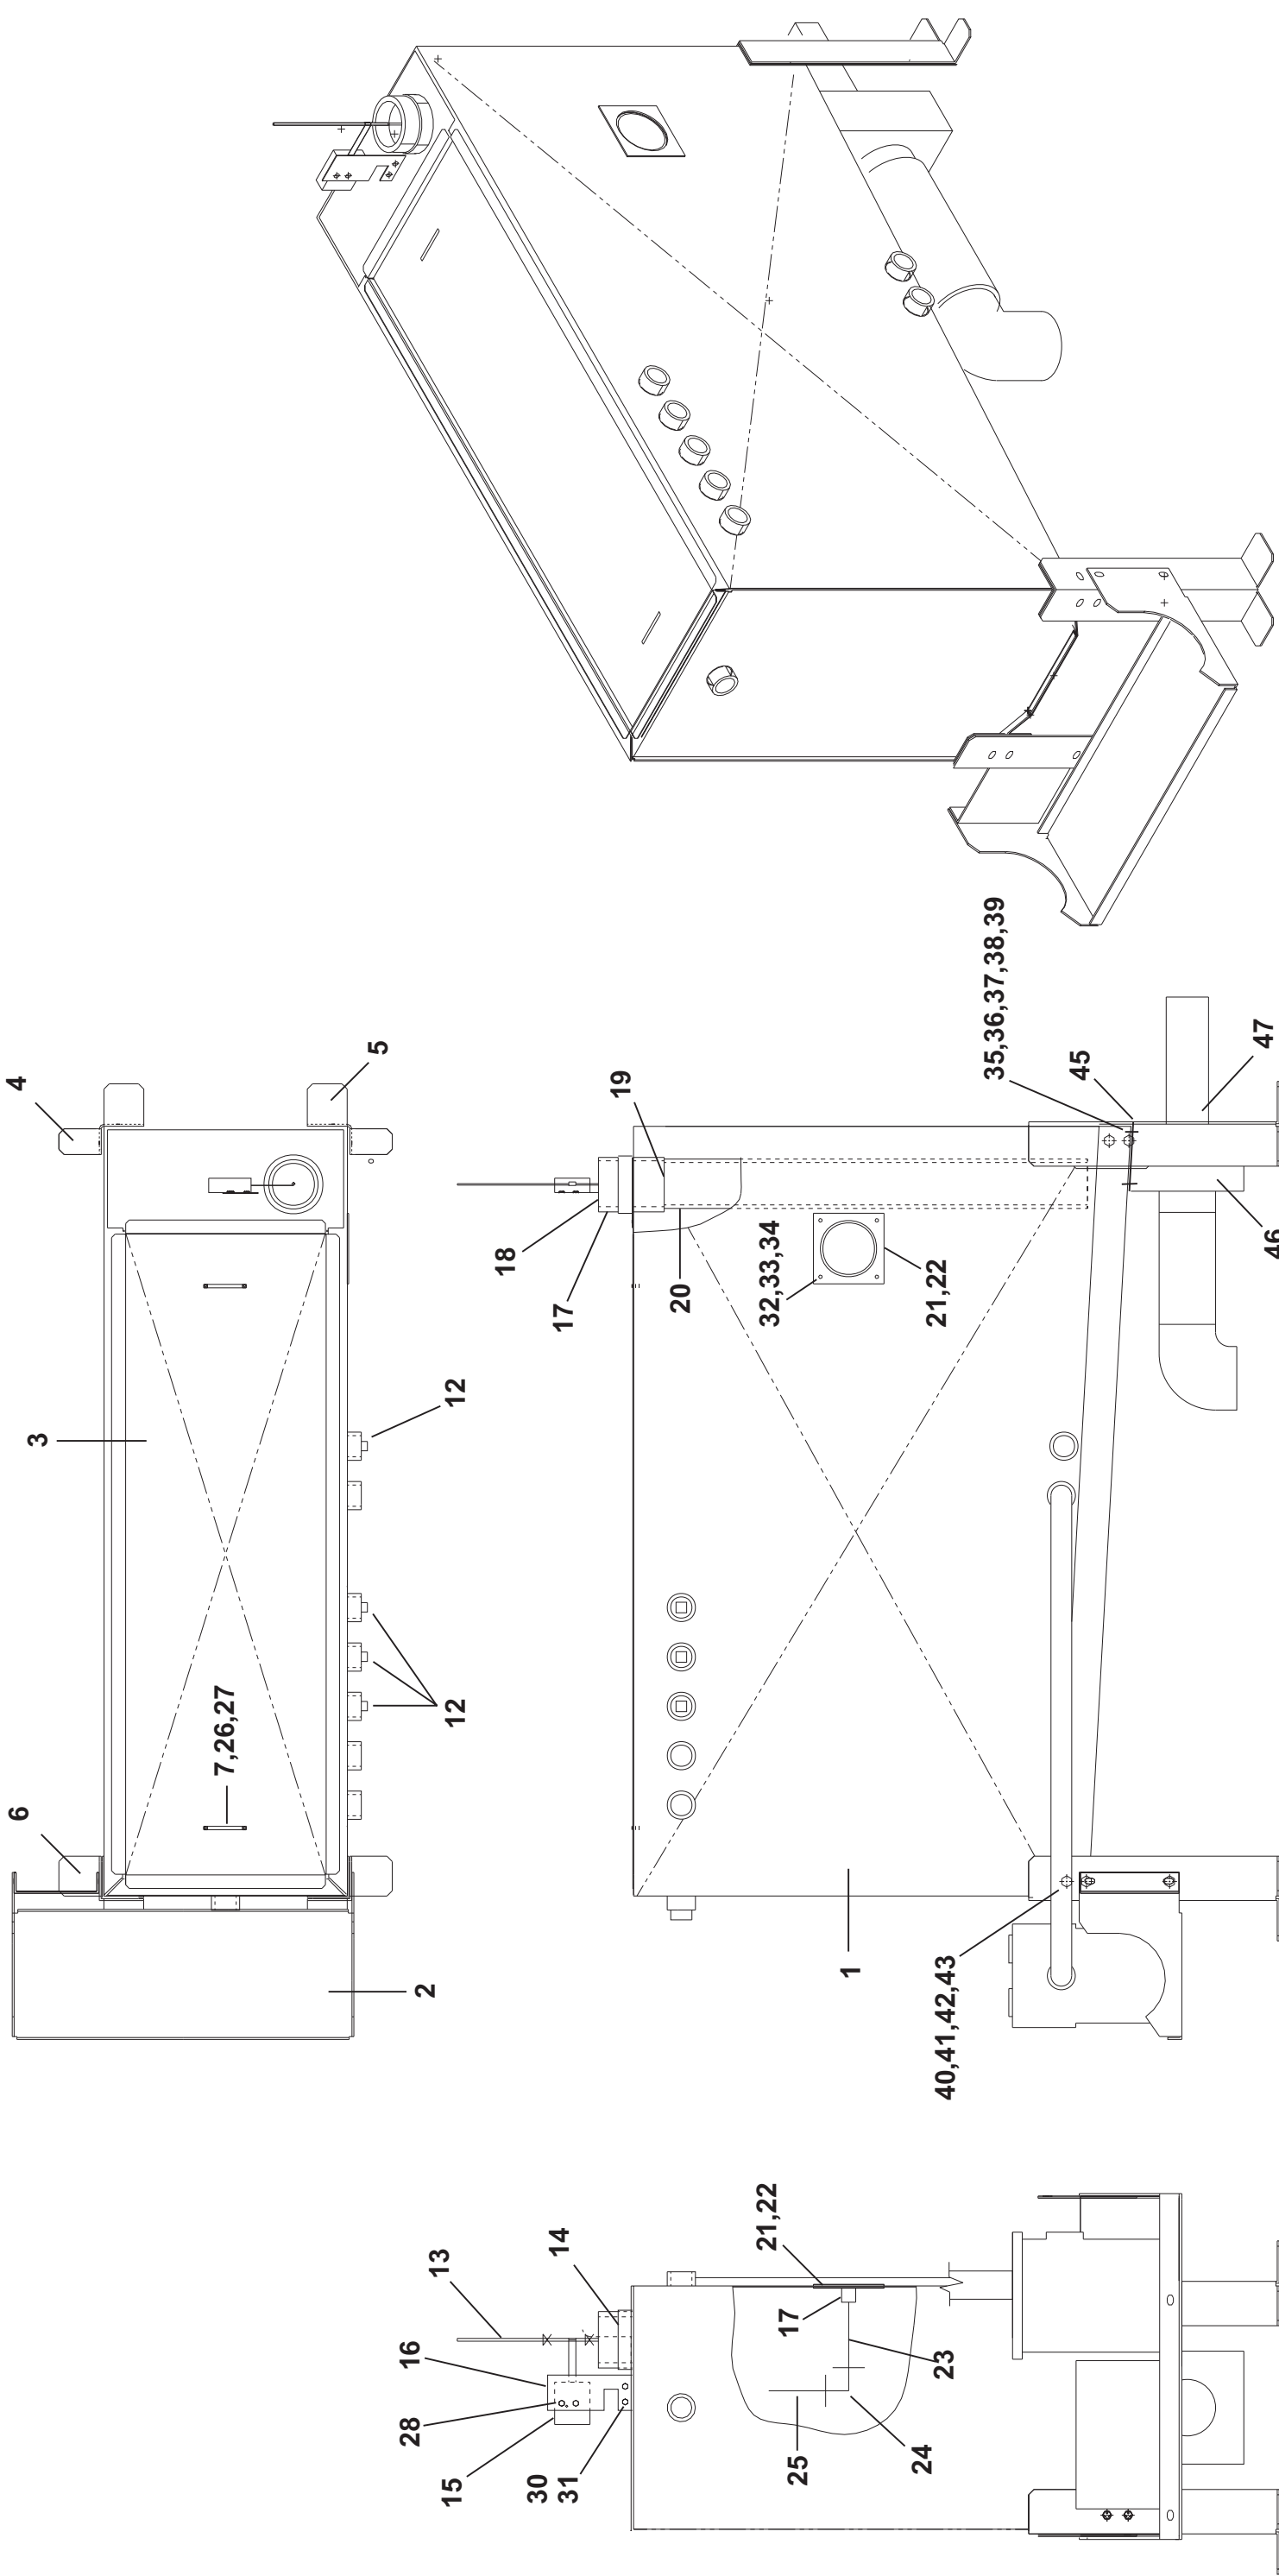

Reuse Tank



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400


Litho in U.S.A.



Parts List, cont.—Reuse Tank					Parts List, cont.—Reuse Tank				
Used In	Item	Part Number	Description	Comments	Used In	Item	Part Number	Description	Comments
-----			-----ASSEMBLIES-----	-----					
	A	ARF62001G	S/S REUSETANK W/SL BOT 115GAL						
-----			-----COMPONENTS-----						
all	1	W6 70040	S/S REUSETANK W/SLANT 115GAL		all	36	15U245	FLTWASH 3/8 STD COMM 18-8 SS	
all	2	06 20536A	REUSE TANK STAND RT MTR-MT		all	38	15U260	LOCKWASHER MEDIUM 3/8 SS18-8	
all	3	06 70040D	S/S REUSETANK TOP 115GAL		all	38	15G206	HEXNUT 3/8-16 UNC2 SS 18-8	
all	4	06 20553A	S/S REUSE TK W/SL LEG LEFT		all	39	24G030N	ROLLED WASH.379ID NYLTITE 37W	
all	5	06 20553B	S/S REUSE TK W/SL LEG RT		all	40	15U240	FLATWASHER(USS STD) 3/8" ZNC P	
all	6	06 20553	S/S REUSE TK W/SL LEG LONG		all	41	15U255	LOCKWASHER MEDIUM 3/8 ZINCPL	
all	7	27A010	DRWPULL W/O SCRS #P62000-CHR-A		all	42	15G205	HXNUT 3/8-16UNC2B ZINC GR2	
all	12	51P055	NPTPLUG 1.5 SQCORED GALCI 125#		all	43	15K088	HEXCAPSCR 3/8-16NCX7/8 GR 5 ZI	
all	13	SA 02 011B	*FLOAT ASSY L=66" 42DA+52DYA		all	44	15P175	TRDCUT-F HXHD 1/4-20UNC2AX1/2	
all	14	02 15642C	CLAMP=4"FLOAT CHAMBER		all	45	02 15026	GASKET-7"SQ=4"FLGDUMP VALVE	
all	15	ELL000MK4	*WATER LEV SW ASSY:1 UP +2 LO		all	46	W2 15997	* BODY=4"DUMPVALVE=4231WE+SG	
all	16	02 15097C	BRACKET LEVCONT PER PRINT		all	47	A14 06400	* BONNET+CYL=4"SS DIVCYL DUMP	
all	17	51AB3AN3AM	ADAPTER MALE 3" SXM PVC SCH40						
All	19	08 01068	NUT=FLOAT CHAMB ADAPTER						
all	20	06 20420	TUBE = REUSE TANK						
all	21	02 10354A	FLANGE-DRAWN 3"NPT BOLT ON						
all	22	06 20452C	GASKET 3 DRAWN W.W.LINT TANK						
all	23	5P3AP4EN	3" SCH 40 PVC PIPE BE *						
all	24	5KL3AP4A	SOK ELBOW 90DEG 3" PVC SCH40						
all	25	5P3AP4EN	3" SCH 40 PVC PIPE BE *						
all	26	15N087	RDMACSCR 8-32UNC2X3/8 SS18-8						
all	27	15U120B	LOCKWASHER MEDIUM #8 SS18-8						
all	28	15P175	TRDCUT-F HXHD 1/4-20UNC2AX1/2						
all	29	15K039	HXCAPSCR 1/4-20UNC2AX3/4 GR5 Z						
all	30	15G165	HXNUT 1/4-20UNC2BSAE ZC GR2						
all	31	15U180	LOCKWASHER MEDIUM 1/4 ZINCPL						
all	32	15K042L	HXCAPSCR 1/4-20X1+1/4 SS						
all	33	15U181	LOCKWASHER MEDIUM 1/4 SS18-8						
all	34	15G170	HEXNUT 1/4-20UNC2 SS18-8						
all	35	15K112	HXCAPSCR 3/8-16X1+1/2 SS18-8						



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.


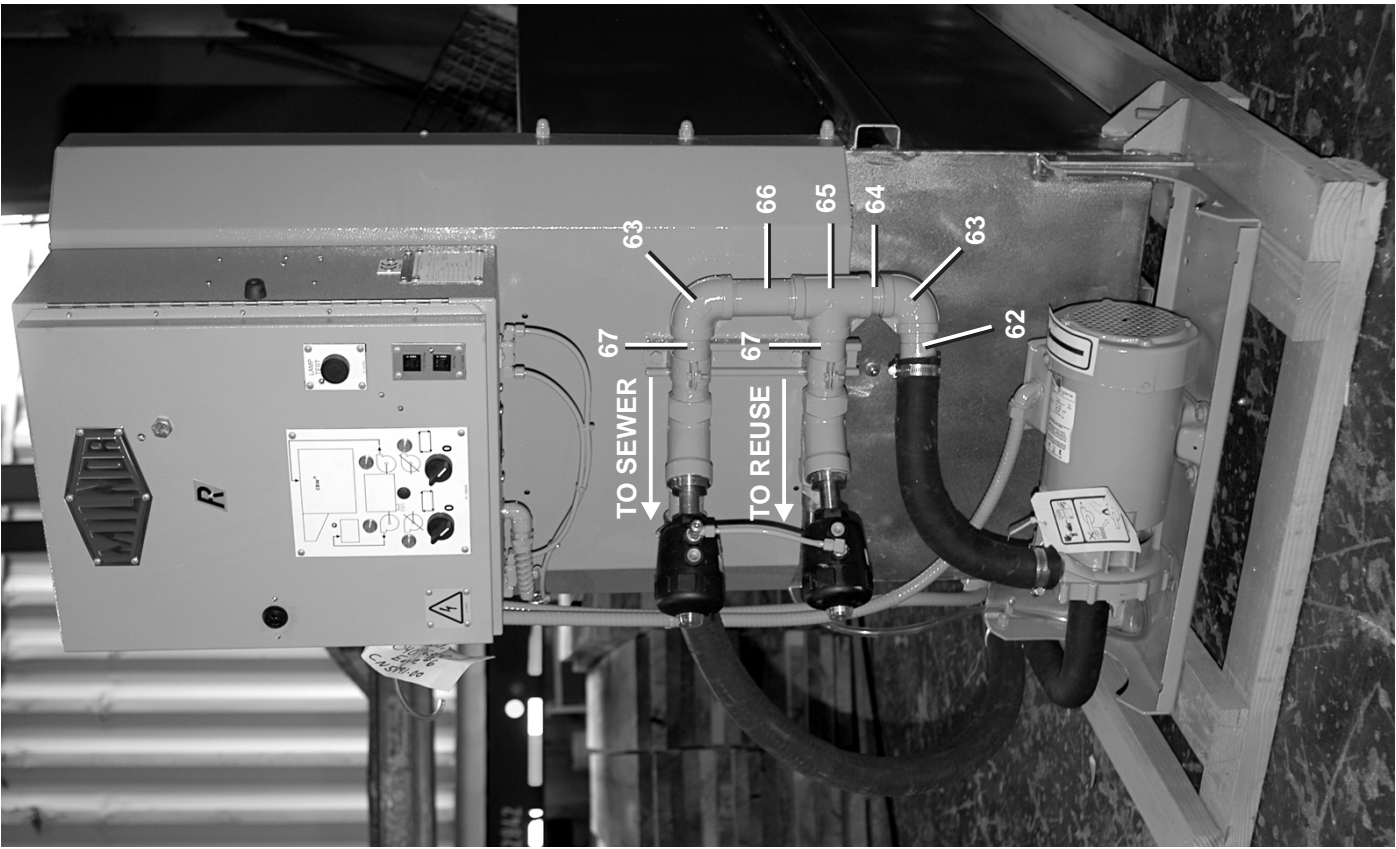


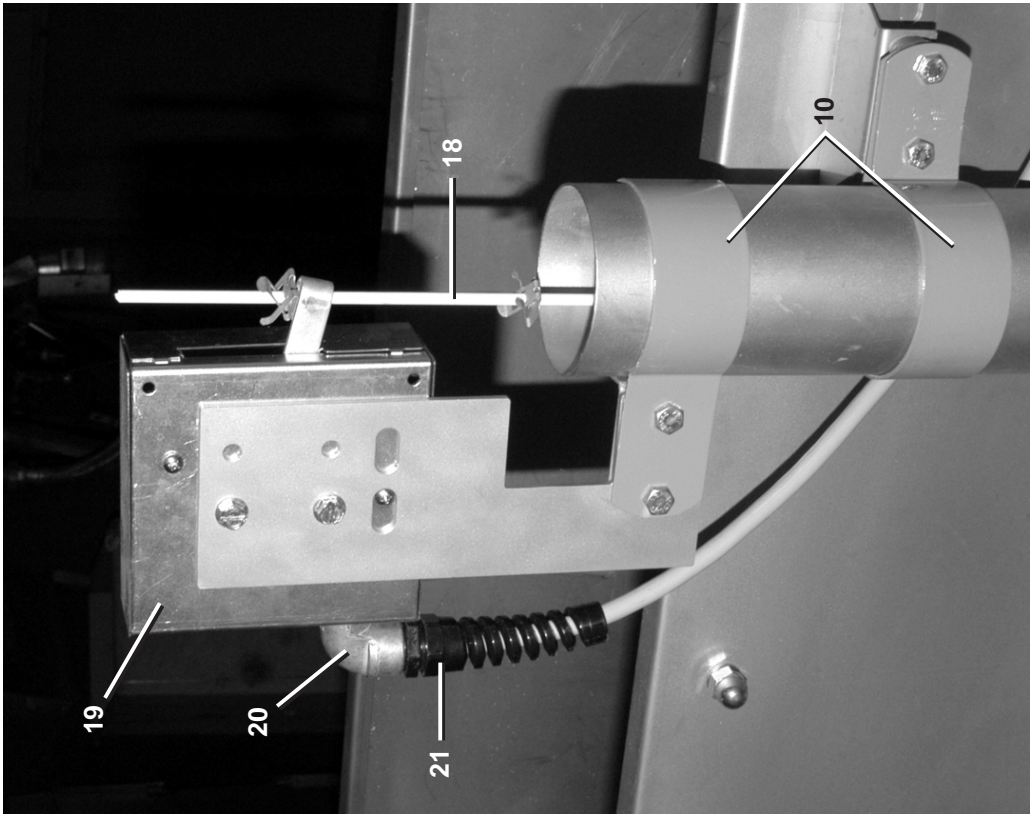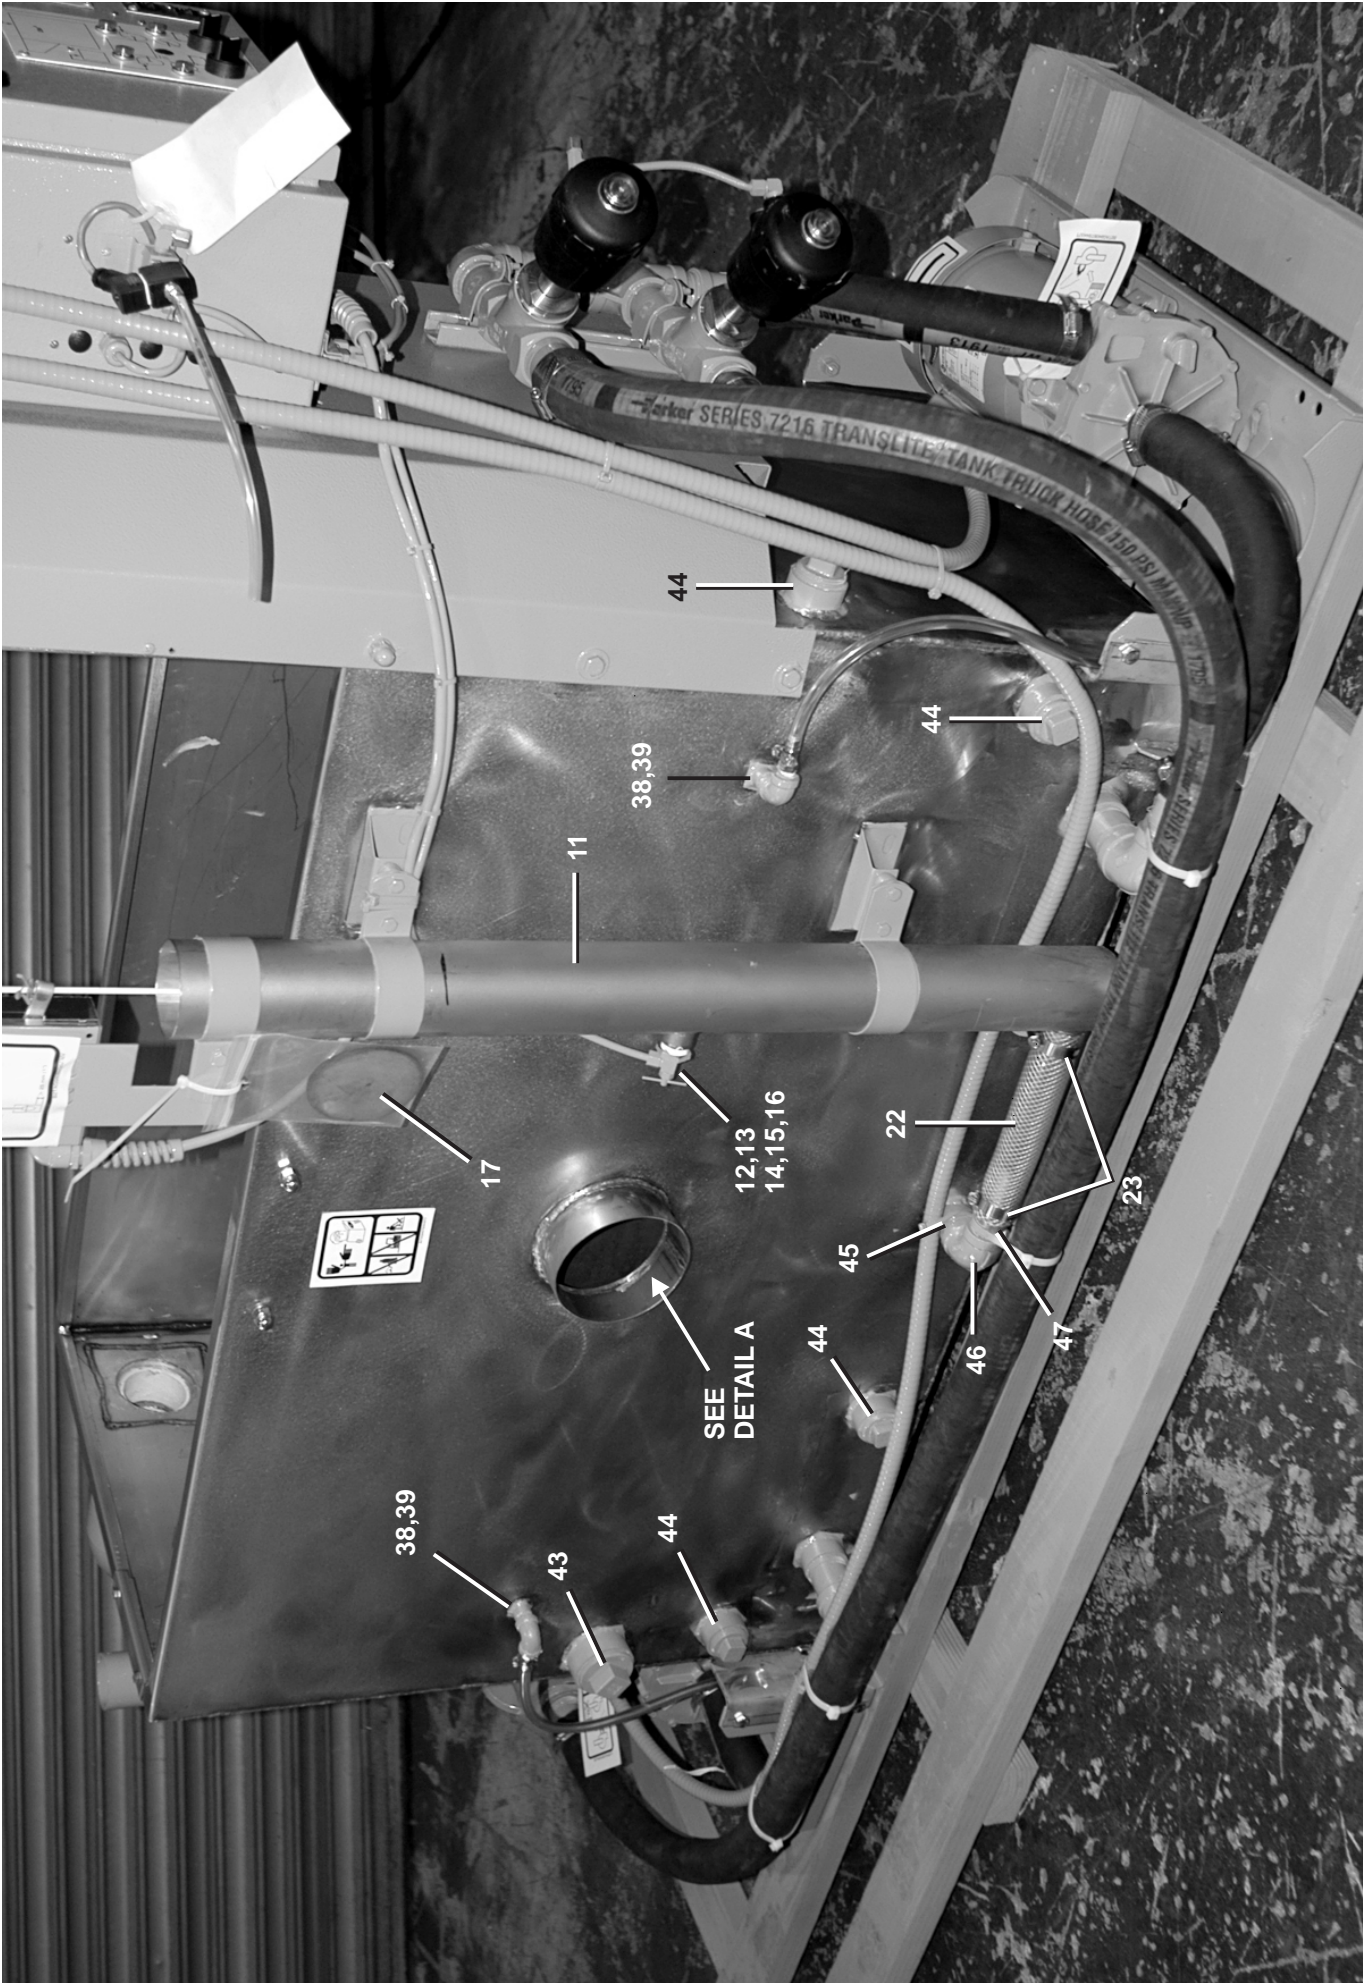



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

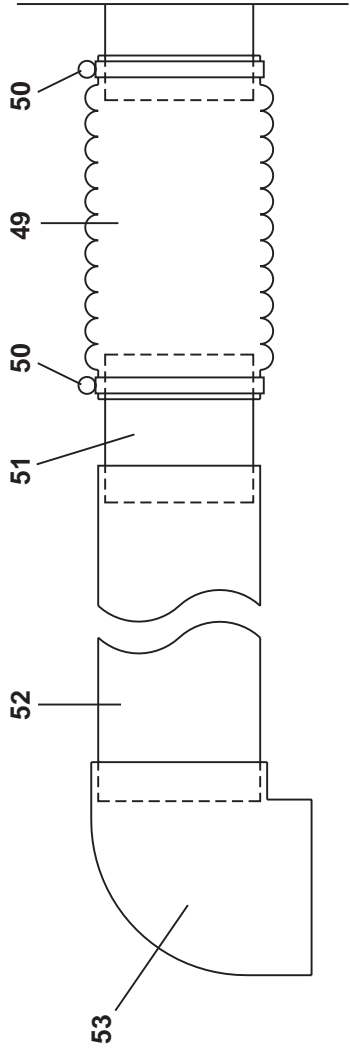
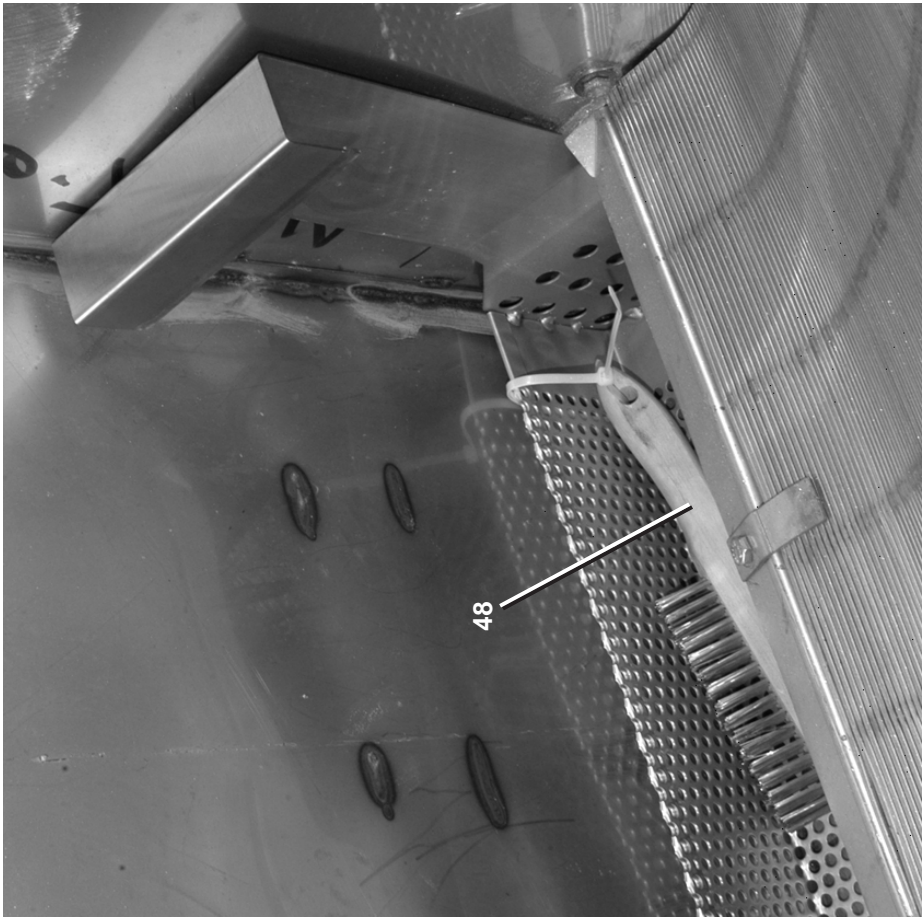


**DETAIL A: FLOWSPLITTER 5" INLET PIPING
PROVIDED**



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

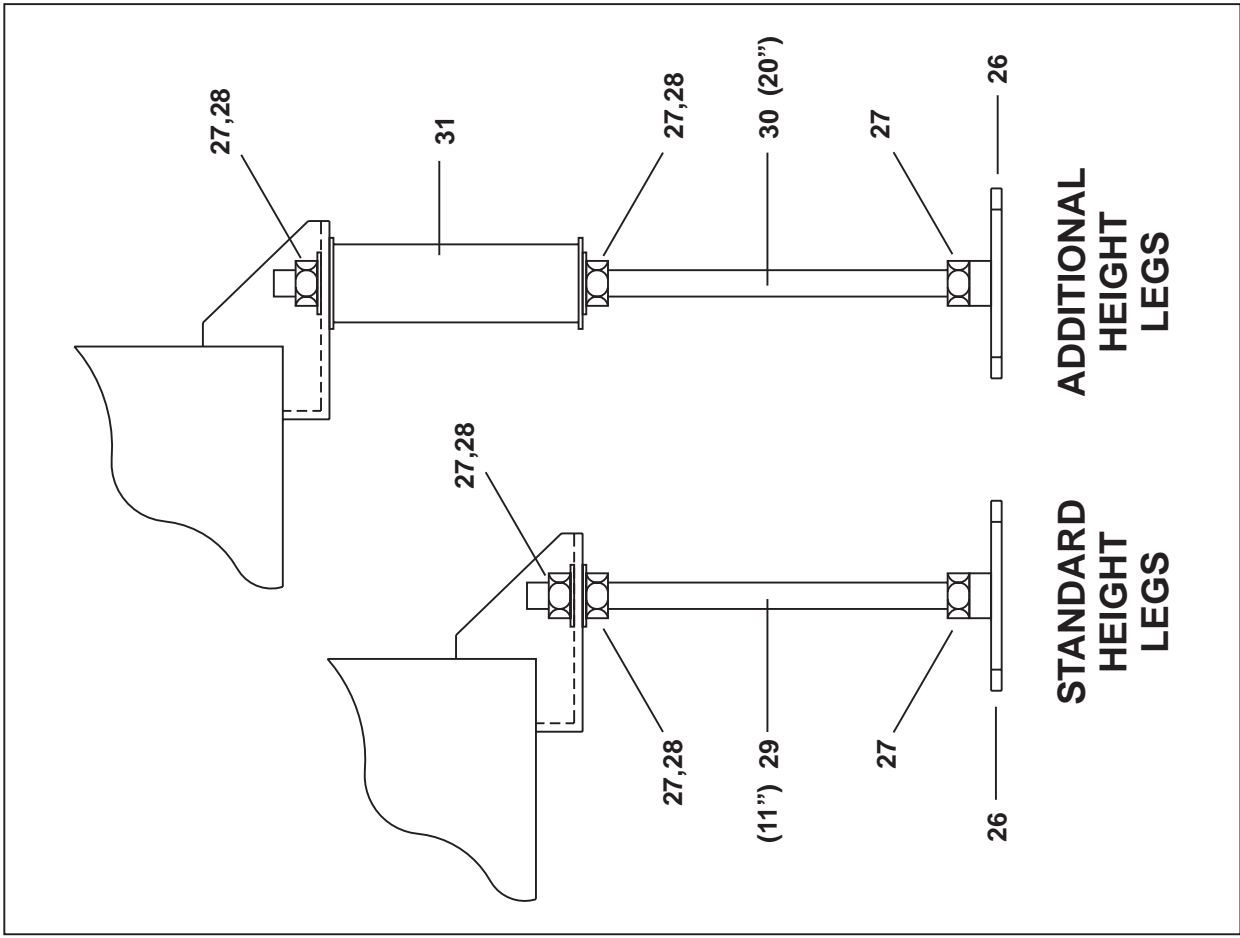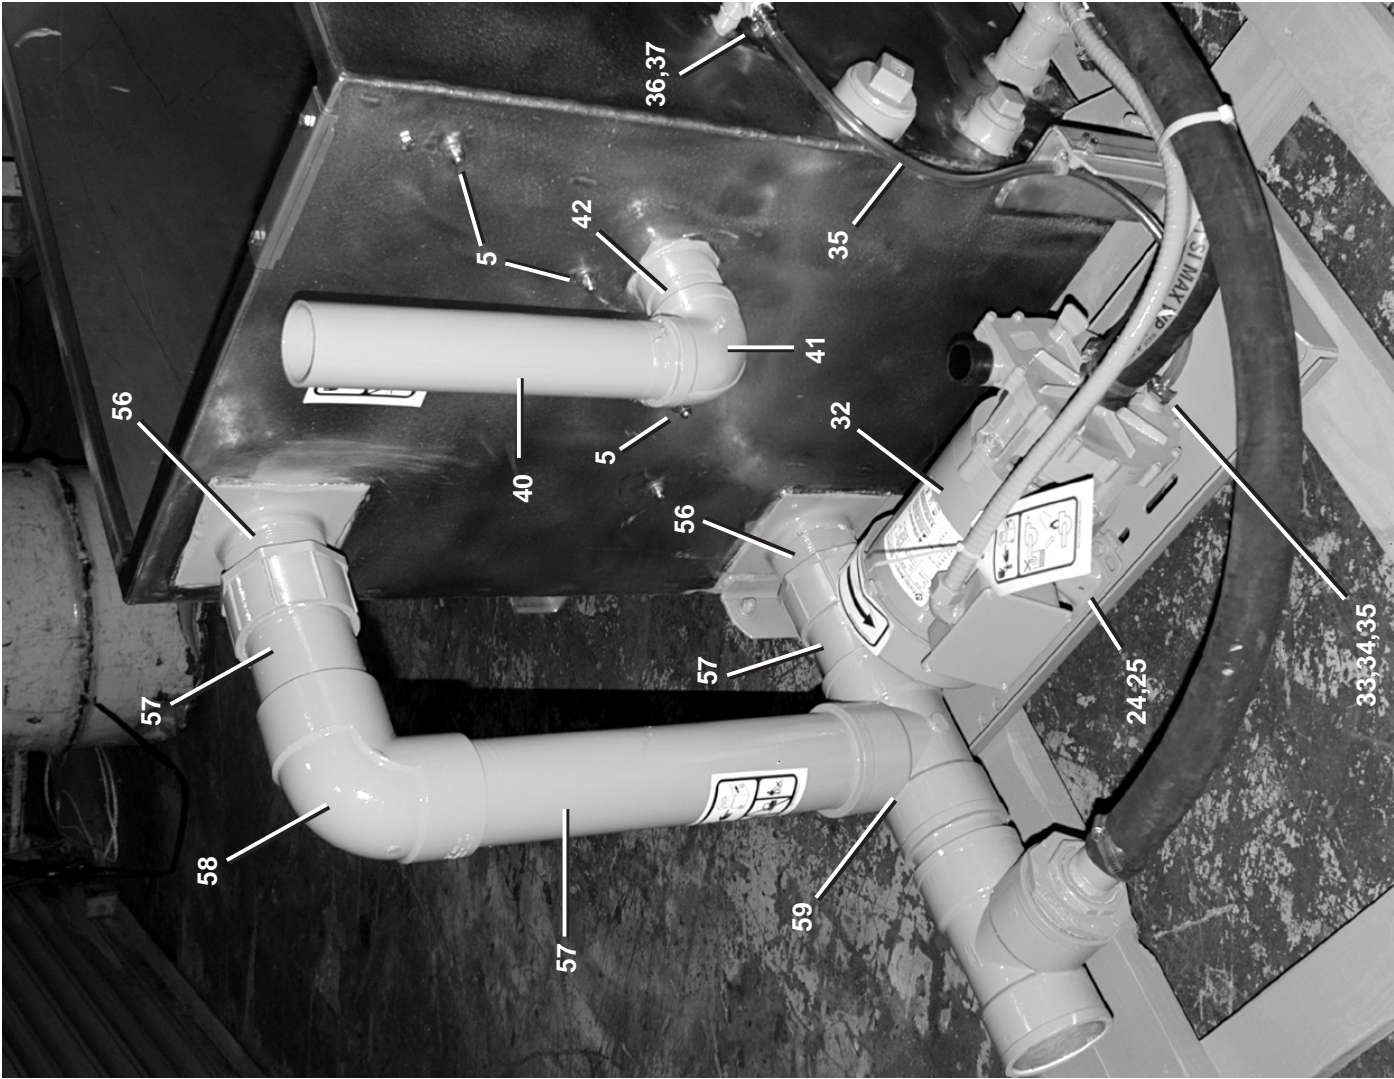



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Flow Splitter					Parts List, cont.—Flow Splitter				
Used In	Item	Part Number	Description	Comments	Used In	Item	Part Number	Description	Comments
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.					all	23	27A090S	HOSECLAMP 13/16-1.5"SS#64016B	
			-----ASSEMBLIES-----		all	24	06 20402L	PUMP MOUNTING BRACKET LNT TK	
A	G62 03900L		WDGE WIRE INST D WIDE LNT TK		all	25	06 20730	SPACER = MOTOR TO BRKT	
B	A62 03900L		WDGE WIRE ASSY D WIDE LNT TK		all	26	W6 20401T	FOOT=FLAT FLO SPLITTER	
C	A67LS003		33.25" LEVEL SWITCH ASSY		all	27	15G238	HXNUT 5/8-11UNC2B SAE ZINC GR2	
D	G67OF001		FLOWPLIT/LIFTER OVERFLOW PIPE		all	28	15U314	FLATWASHER(USS STD) 5/8" ZNC P	
E	G67SW004		ITEMS SHIP W/ G3 FLOWSPLITTER		all	29	17R024A	THREADED ROD 5/8-11X11" ZINC P	
F	A67FP001A		G3 FLWSPLT/LIFT PUMP INST S/S		all	30	17R024AB	THREADED ROD 5/8-11X20" ZINCPL	
G	A64CP004		1.5HP BURKS/LOW VOLT PIPE ASSY		all	31	W6 20401N	*WLMT=LEG SUPT FLOW SPLITTER	
H	G64FT002		INST=CBW FLOWSPLT ADJ LEG		all	32	27E956M96	1.5HP 3P PMP 240/420/480 5/6C	STANDARD PUMP
J	G67WV020C		LDI INLET G3 CRANE PUMP G3		all	32	27E933A96	1.5X2-6 PUMP W/3HP 3P TEFC MTR	HIGH PRESSURE PUMP
K	G67WV020S		LD1 INLET VALVE G3 ALL S/S		all	33	06 20395	1/4 HOSBARB X 1/4 TURN FITTING	
			-----COMPONENTS-----		all	34	60C121A	ORING 1/2 ID X 1/8CS BUNA #206	
1	06 20402E		+LINT TANK ELEC BOX MNTNG BRT		all	35	60E005D	TUBING 1/4"IDX7/16"OD EXCELLON	
2	06 20402G		LINT TNK ELEC BOX BRKT COVER		all	36	27A042	HOSECLAMP 7/32-5/8SS+305 SCR.	
3	W6 70101		WELDED 48" LINT TANK		all	37	51E506S	HOSESTEM 316SS 1/4"HBXMP #RN22	
4	06 20404L		48" LINT TANK FILTER HOLDER		all	40	5N2A12AS41	NPT NIPPLE 2X12 TOE 304SS SK40	STAINLESS STEEL
5	06 20403H		ROD=DBL WIDTH LINT TANK SUPT		all	40	5N2A12AP82	NPT NIPPLE 2X12 TBE PVC SK80	PVC
6	06 20404B		SCREEN=48" LINT WEDGE WIRE		all	41	5SL2ASFA	NPT ELBOW 90DEG 2" 304SS 150#	STAINLESS STEEL
7	W6 20452A		*WLNT=DOUBLE WIDTH LINT TRAY		all	41	5SL2AP8A	NPTELB90DEG 2"PVC SH80 FPTXFPT	PVC
8	06 20404M		BUBBLE BREAKER LINT TANK		all	42	5N2A03AS42	NPT NIPPLE 2X3 TBE 304SS SK40	STAINLESS STEEL
9	06 20503		48"WEDGE WIRE SUPORT GUSSET		all	42	5N2A03AP82	NPT NIPPLE 2X3 TBE PVC SK80	PVC
10	02 15642S		CLAMP=3"FLOAT CHAMBER DAS		all	43	5SP2ASFSC	NPT PLUG 2" SQ CORED 304SS	
11	W2 14432A		* FLOAT-TUBE L=33.25"		all	44	5SP1ESFSS	NPT PLUG 1.25 SQ SOLID 304SS	
12	5SB0K0CBEO		NPTHEXBUSH 1/2X1/8 BRASS 125#		all	45	5N1ACLSS42	NPT NIP 1XCLS TBE 304SS SK 40	
13	96H018		ANGLE NEEDLE VLV 1/4" T X 1/8MP		all	46	5SL1ASFA	NPT ELBOW 90DEG 1" 304SS 150#	
14	53A059A		NIUT 1/4"BR.HOLYOKE AND #61A-4		all	47	5N1A03KS41	NPT NIP 1X3.5 TOE 304SS SK40	
15	53A501		TUBE INSERT .163"OD #63PT-4-40		all	48	98L115T	BRUSH SCRATCHSHOEHDLE S/S WIRE	
16	53A500		SLEEVE DELRIN 1/4"OD#60PT-4		all	49	60E312A18A	5" I.D. X 18" LONG GATES 75W 41	
17	02 14432		FLOAT CHAMBR BLOW DWN TOP		all	50	27A086	HOSECLAMP 3+1/8-6"CADSCR#HS-88	
18	SA 02 011		*FLOAT ASSY L=25"-STD LEVEL		all	51	5KC3AP4	SOK COUP 3" PVC SK40	
19	ELL000MK2		*WATER LEV SW ASSY: 1 UP+ 1LO		all	52	51LB3AN36A	NIPPLE PIPE 3"X36" NO THD PVC	
20	12M036L		1/2" 90-DEG SHORT ELLS		all	53	5KL3AP4A	SOK ELBOW 90DEG 3" PVC SCH40	
21	12M043A		FLX STRAIN PIGTAIL .197-.348						
22	60E013		TYGON TUBING 1"IDX1.25"OD						



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

Parts List—Flow Splitter

Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.

Used In	Item	Part Number	Description	Comments
all	54	60E099	HOSE 1.5" WIRE INSERT #7216-TRANS	STANDARD PUMP
all	54	60E255	HOSE 2" WATER CORRUGATED (V50)	HIGH PRESSURE PUMP
all	55	27A065S	HOSE CLAMP 1.56"-2.5" SSSCR #32	STANDARD PUMP
all	55	27A074S	HOSE CLAMP 2+1/16-3" SSSCR #64040	HIGH PRESSURE PUMP
all	56	51AB3AN3AM	ADAPTER MALE 3" SXM PVC SCH40	
all	57	5P3AP4EN	3" SCH 40 PVC PIPE BE *	
all	58	5KL3AP4A	SOK ELBOW 90DEG 3" PVC SCH40	
all	59	5K3AP4A	SOK TEE 3" PVC SCH40	
all	60	96D086WE	ANGBODVLV 1.25" NC H2O BRZ	STANDARD PUMP
all	60	96D086WESS	ANGBODVLV 1.25" N/C H2O BURK SS	HIGH PRESSURE PUMP
all	61	96D086WEA	ANGBODVLV 1.25" NO H2O BRZ	STANDARD PUMP
all	61	96D086WEST	ANGBODVLV 1.25" N/O H2O BURK SS	HIGH PRESSURE PUMP
all	62	51E098ASS	KINGREDNIP 1.5ID X 1.25MP #RST2015	
all	63	5SL1ESFA	NPT ELB 90DEG 1.25 304SS 150#	
all	64	5N1ECLSS42	NPT NIP 1.25 XCLS TBE 304SS S40	
all	65	5S1ESFA	NPT TEE 1.25" 304SS 150#	
all	66	5N1E04AS42	NPT NIP 1.25 X4 TBE 304SS SK40	
all	67	5N1E03AS42	NPT NIP 1.25 X3 TBE 304SS SK40	
all	68	60E099	HOSE 1.5" WIRE INSERT #7216-TRANS	STANDARD PUMP
all	68	60E255	HOSE 2" WATER CORRUGATED (V50)	HIGH PRESSURE PUMP
all	69	02 16306	CLAMP=1+1/2" PIPE	STANDARD PUMP
all	69	27A074S	HOSE CLAMP 2+1/16-3" SSSCR #64040	HIGH PRESSURE PUMP




Press Water Return Tank
G3 Tunnels

BMP070006/2007062B
(Sheet 1 of 4)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

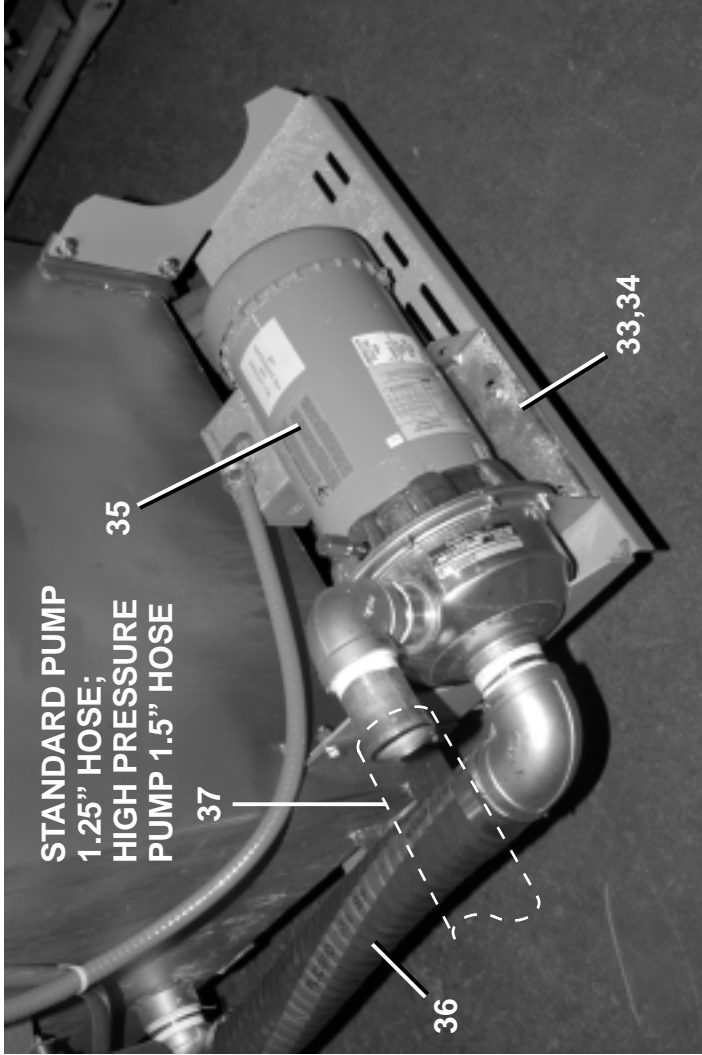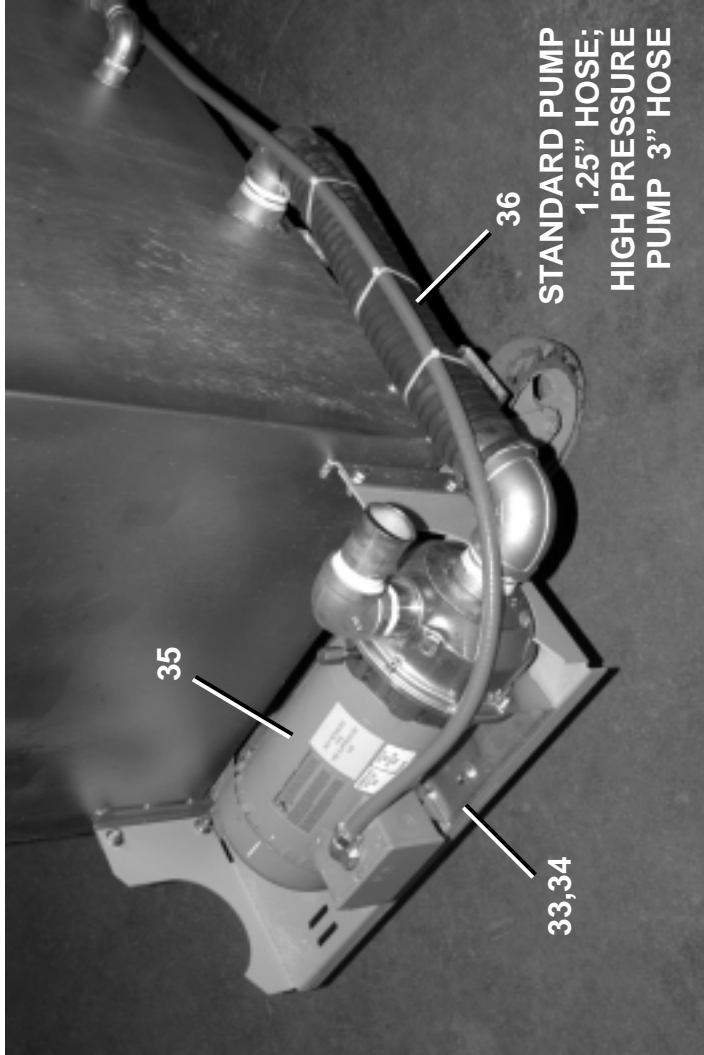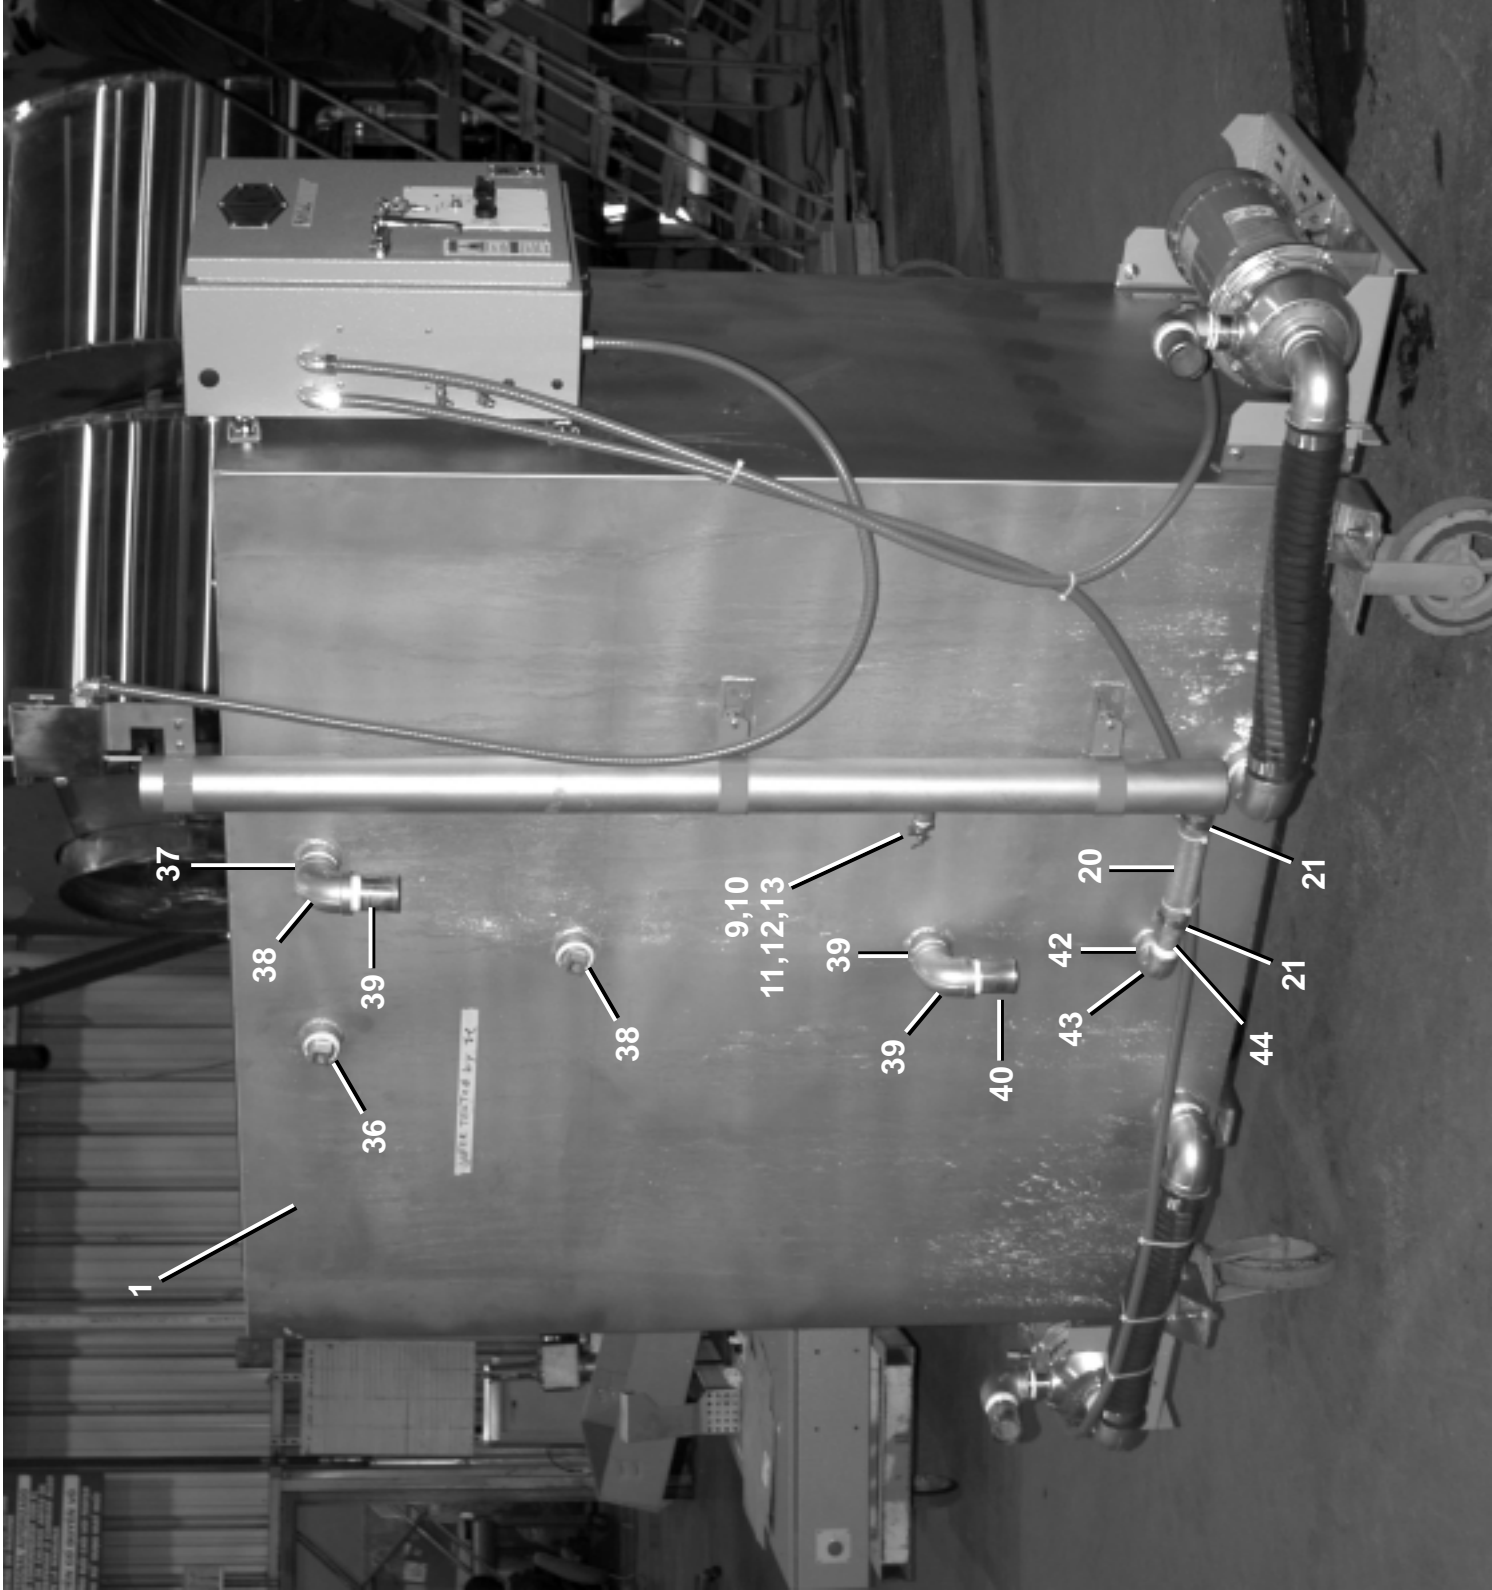



Press Water Return Tank
G3 Tunnels

BMP070006/2007062B
(Sheet 2 of 4)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

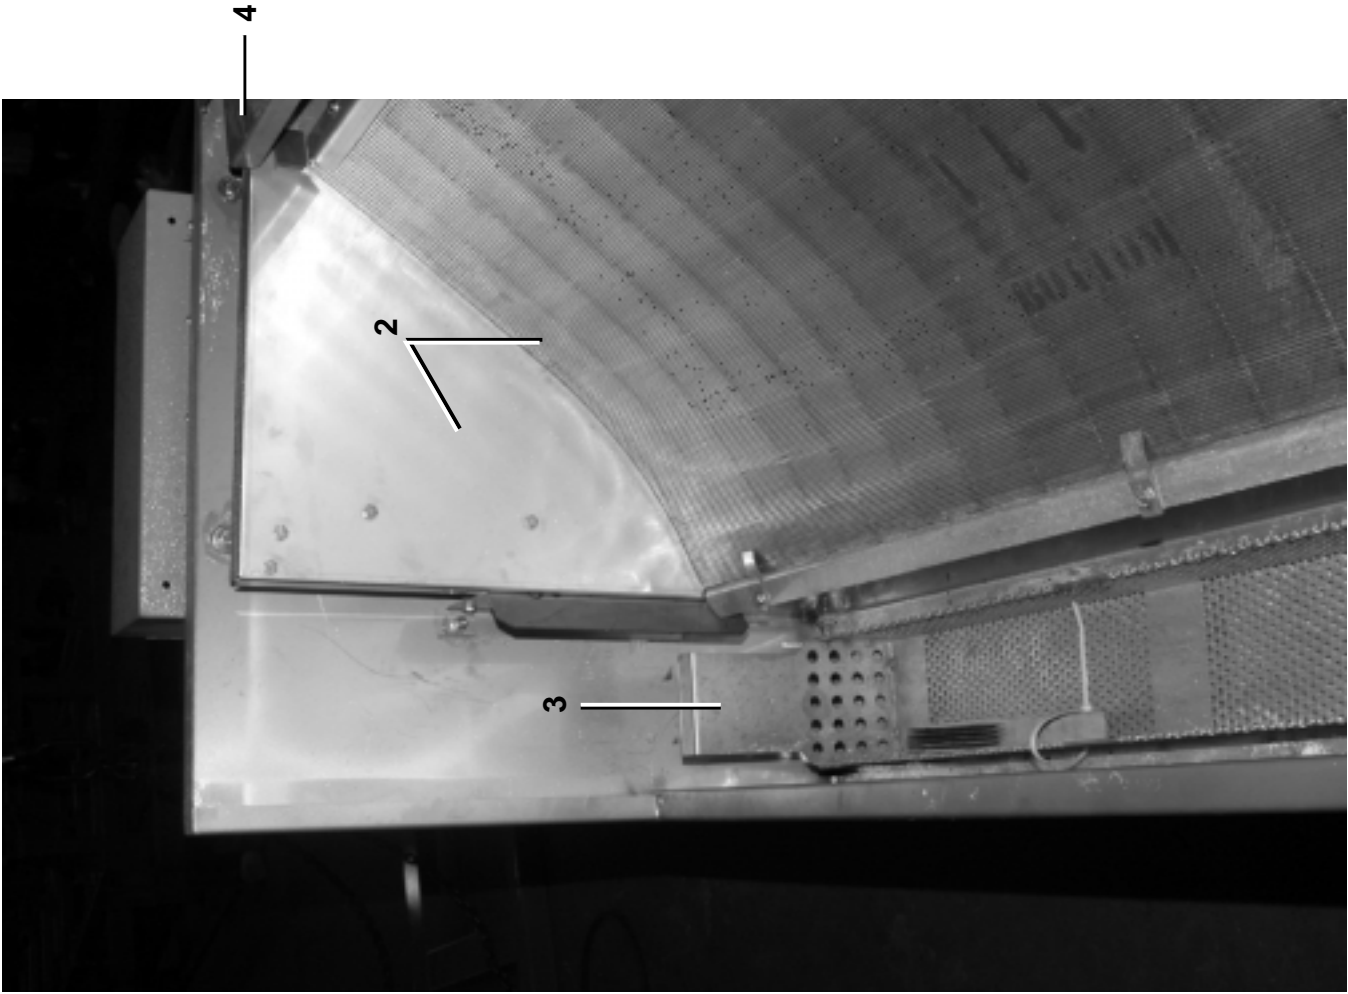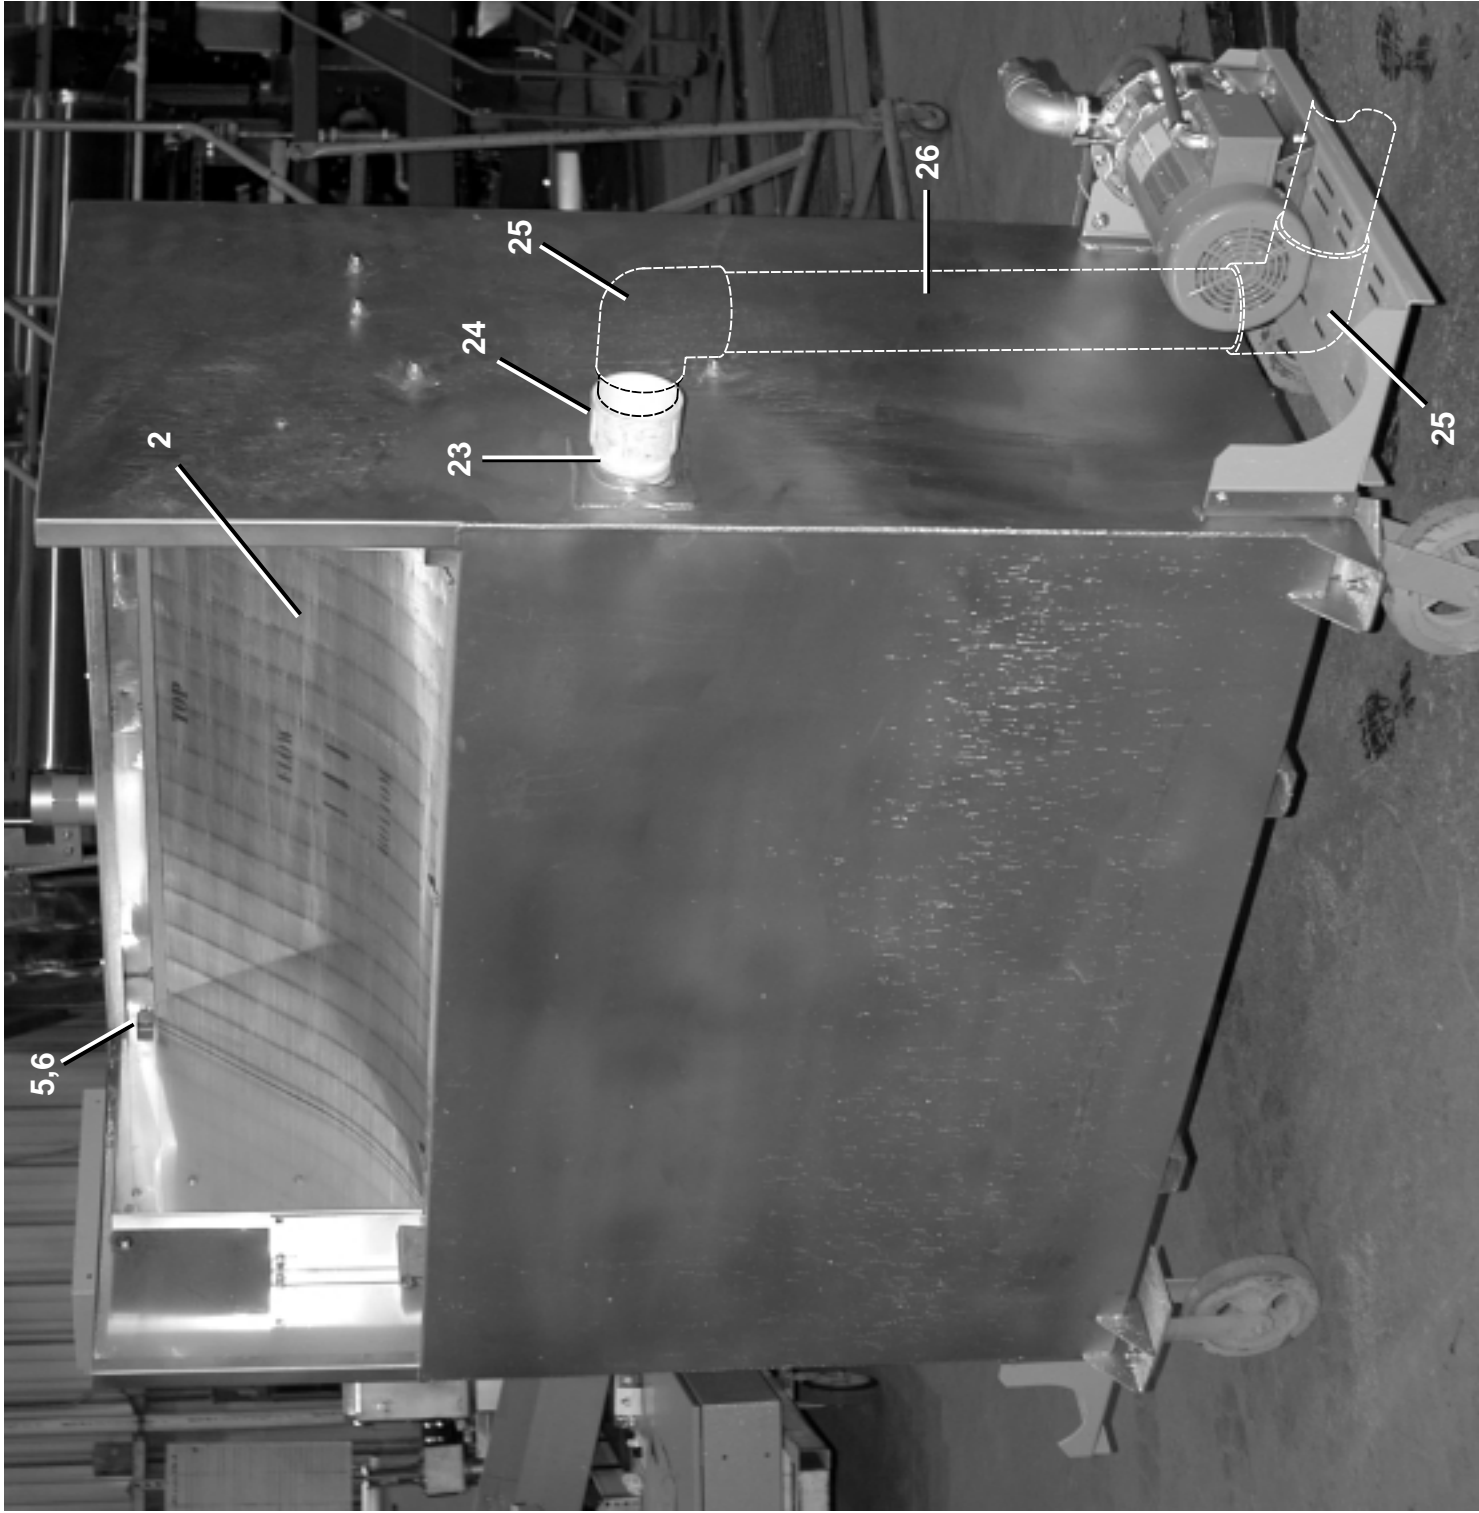




Press Water Return Tank
G3 Tunnels

BMP070006/2007062B
(Sheet 3 of 4)



Pellerin Milnor Corporation
P. O. Box 400, Kenner, LA 70063-0400

Litho in U.S.A.

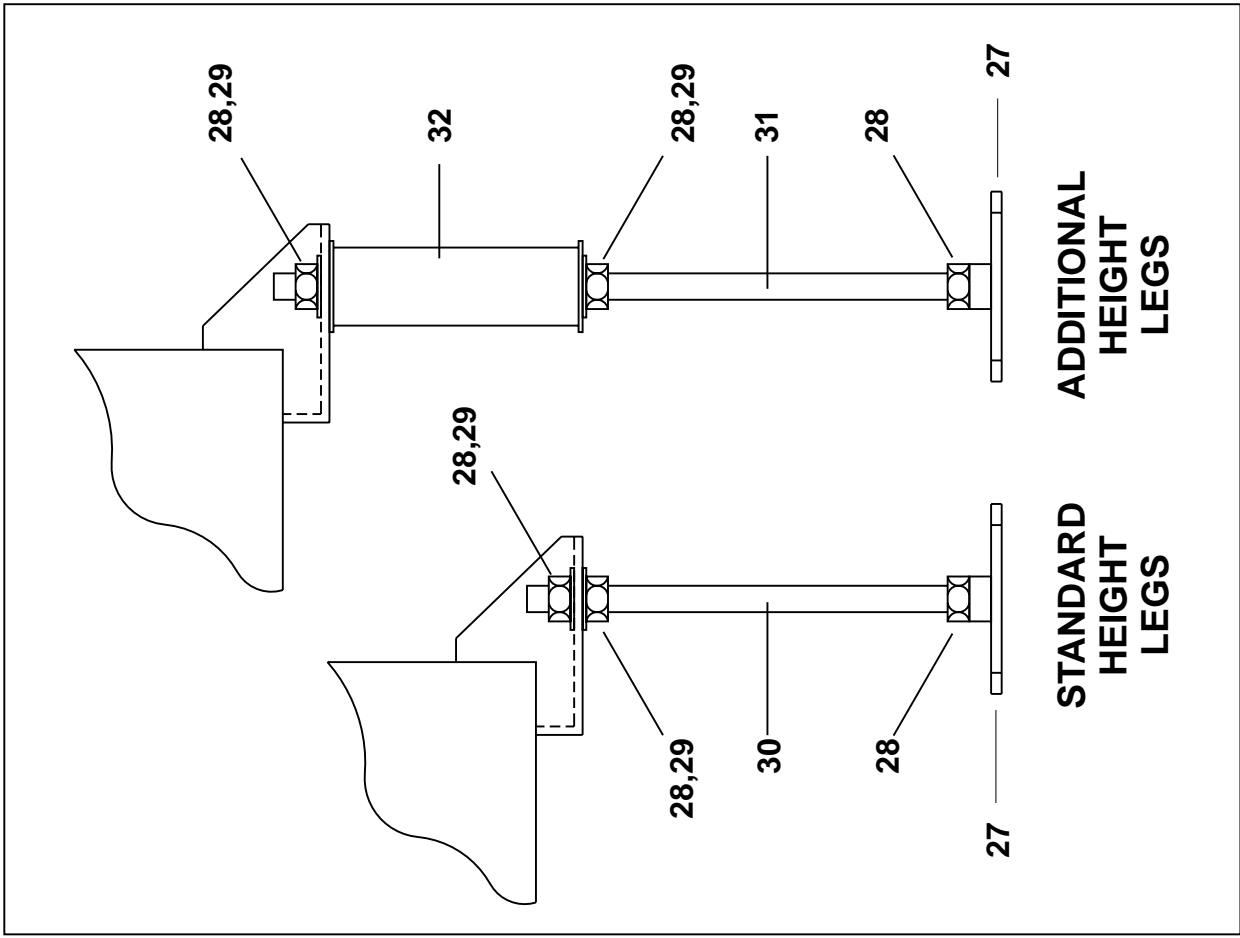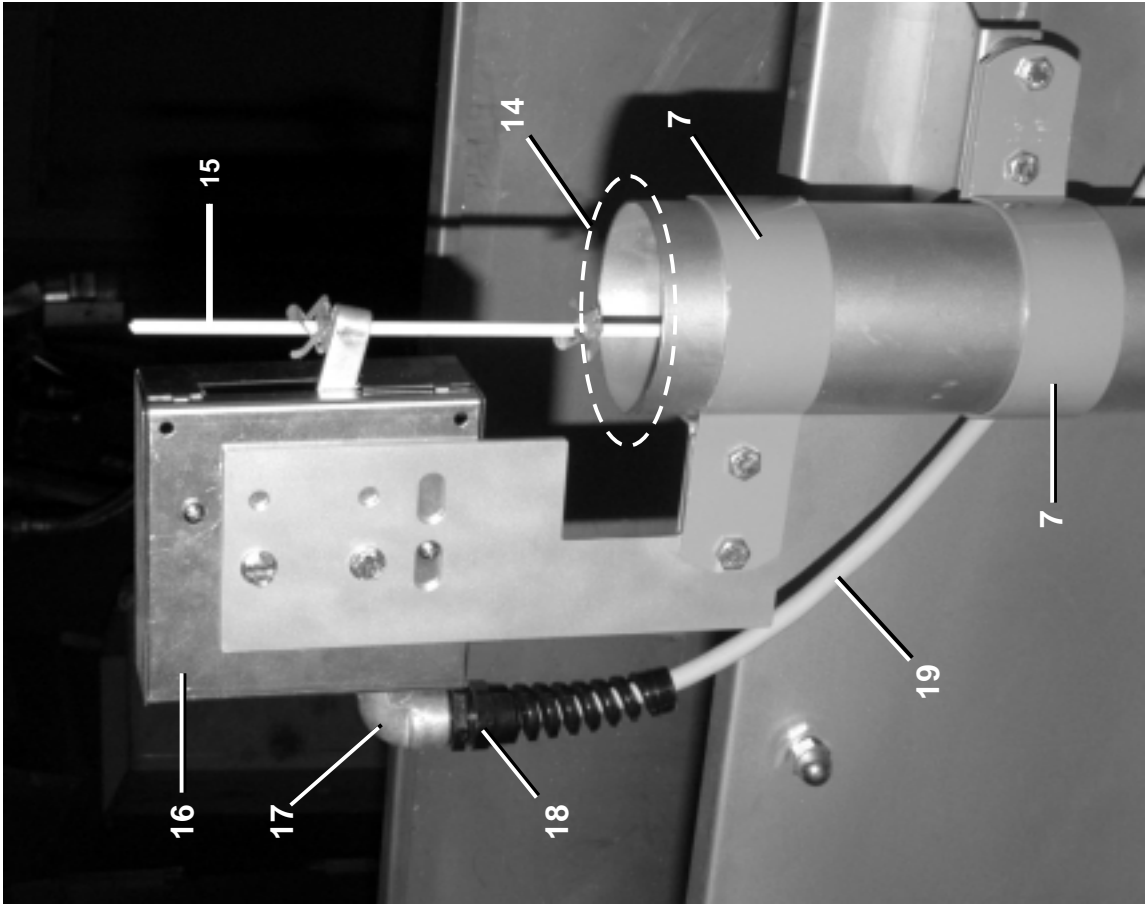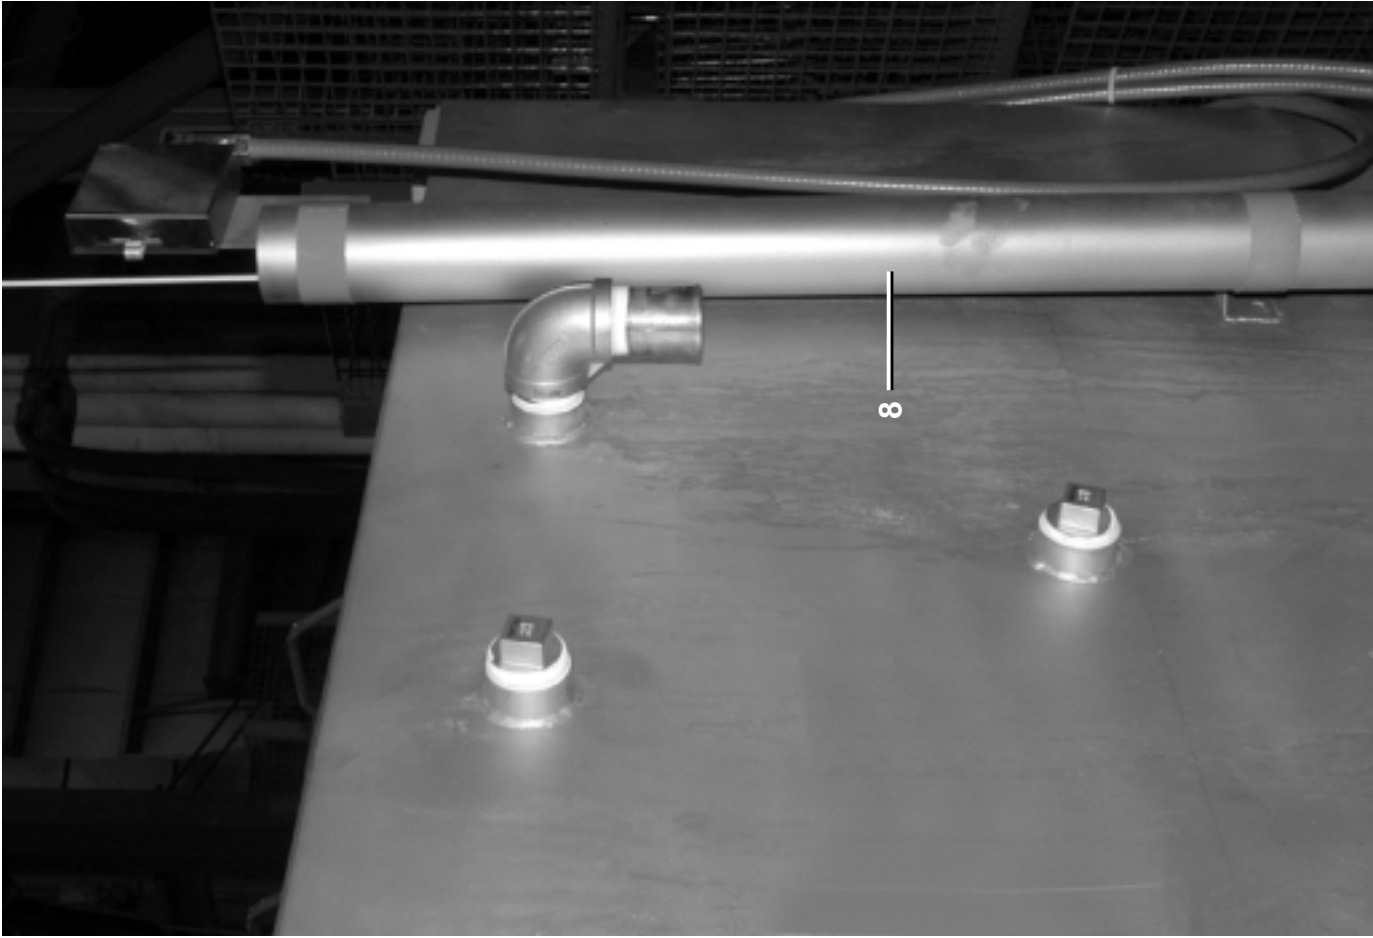



Parts List—Press Water Return Tank				Parts List, cont.—Press Water Return Tank			
Used In	Item	Part Number	Description	Used In	Item	Part Number	Description
Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.							
			ASSEMBLIES-----				
A	G62 03900V		SURGE TANK 250GAL WDGWRE INST		27	W6 20401T	FOOT=FLAT FLO SPLITTER
B	A62 03900V		SURGE TANK 250GAL WDGWIRE	all	28	15G238	HXNUT 5/8-11UNC2B SAE ZINC GR2
C	A67LS004		52" LEVEL SWITCH ASY SURGE TANK	all	29	15U314	FLATWASHER(USS STD) 5/8" ZNC P
D	A64CP004		1.5HP BURKS/LOW VOLT PIPE ASSY	all	30	17R024A	THREADED ROD 5/8-11X11" ZINC P
			COMPONENTS-----	all	31	17R024AB	THREADED ROD 5/8-11X20" ZINCPL
				all	32	W6 20401N	*WLMT=LEG SUPT FLOW SPLITTER
				all	33	06 20402L	PUMP MOUNTING BRACKET LNT TK
all	1	W6 70200	SURGE TANK WLMT 250GAL	all	34	06 20730	SPACER = MOTOR TO BRKT
all	2	A62 03901V	48" WEDGEWIRE SUBASSEMBLY	all	35	27E956M96	1.5HP 3P PMP 240/420/480 5/6C
all	3	W6 20579	LINT TRAY WMT-250G SURGE TNK	all	35	27E933A96	1.5X2-6 PUMP W/3HP 3P TEFC MTR
all	4	06 70216	SURGE TANK SPLASH GUARD	all	36	60E099	HOSE1.5"WIREINSERT#7216-TRANS
all	5	W6 20414	*WLDMT=DEFLECTOR WW LF HAND	all	36	60E303D	3"ID VITON BLEND TUBE
all	6	W6 20415	*WLDMT=DEFLECTOR WW RT HAND	all	37	60E097	HOSE 1.25"WIRE INSERT 4684C
all	7	02 15642S	CLAMP=3"FLOAT CHAMBER DAS	all	37	60E303D	3"ID VITON BLEND TUBE
all	8	W2 14432T	* FLOAT-TUBE L=57"	all	38	5SP1KUFSS	PLUG PIPE SQHD 1+1/2 316SS
all	9	5SB0K0CBEO	NPTHEXBUSH 1/2X1/8 BRASS 125#	all	39	5N1KCLSS42	NPT NIP 1.5XCLS TBE 304SS SK40
all	10	96H018	ANGLE NEEDLE VLV 1/4" T X 1/8MP	all	40	5SL1KSFA	NPT ELB 90DEG 1.5 304SS 150#
all	11	53A059A	NUT 1/4"BR.HOLYOKE AND #61A-4	all	41	5N1K01ES41	NPT NIP 1.5X1.25 TOE 304SSSK40
all	12	53A501	TUBE INSERT .163"OD #63PT-4-40	all	42	5N1ACLSS42	NPT NIP 1XCLS TBE 304SS SK 40
all	13	53A500	SLEEVE DELRIN 1/4"OD#60PT-4	all	43	5SL1ASFA	NPT ELBOW 90DEG 1" 304SS 150#
all	14	02 14432	FLOAT CHAMBR BLOW DWN TOP	all	44	5N1A03KS41	NPT NIP 1X3.5 TOE 304SS SK40
all	15	SA 02 011B	*FLOAT ASSY L=66" 42DA+52DYA				
all	16	ELL000MK2	*WATER LEV SW ASSY: 1 UP+ 1LO				
all	17	12M036L	1/2" 90-DEG SHORT ELLS				
all	18	12M043A	FLX STRAIN PIGTAIL .197-.348				
all	19	09V290A	CABLE #18/4 SJTO 7/16"OD 250'				
all	20	60E013	TYGON TUBING 1"IDX1.25"OD				
all	21	27A090S	HOSECLAMP 13/16-1.5"SS#64016B				
all	22	5N0P02GS41	NPT NIP 3/4X2.375TOE 304SS SK4				
all	23	51AB3AN3AM	ADAPTER MALE 3" SXM PVC SCH40				
all	24	5KC3AP4	SOK COUP 3" PVC SK40				
all	25	5KL3AP4A	SOK ELBOW 90DEG 3" PVC SCH40				
all	26	51LB3AN36A	NIPPLE PIPE 3"X36" NO THD PVC				

2

Pneumatics

2.4


<div></div>						<div>Parts List—Pneumatic Shuttle Valve Find the correct assembly first, then find the needed components. The item letters (A, B, C, etc.) assigned to assemblies are referred to in the "Used In" column to identify which components belong to an assembly. The item numbers (1, 2, 3, etc.) assigned to components relate the parts list to the illustration.</div>					
Used In		Item	Part Number	Description		Comments					
all		1	96N0011H	SHUTLVLV 1/4" 4WAY MECHSPRING							

5 Port, 4 Way, 2 Position, Spring Return Valve

Installation

3

ATTENTION INSTALLERS!

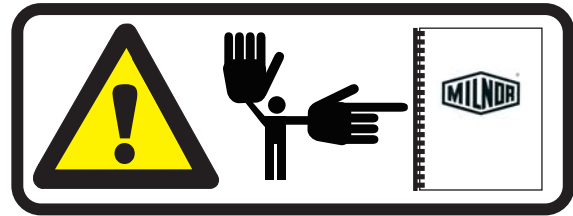


PRESS MUST BE HIGH ENOUGH

If you set the press at a low area of the floor, you may not have sufficient clearance for the tunnel. It will be necessary to reinstall the press higher.


- Establish the System Zero Line or Z.
- Refer to the dimensional drawings of the various machines for required heights.

FLOOR IS UNEVEN

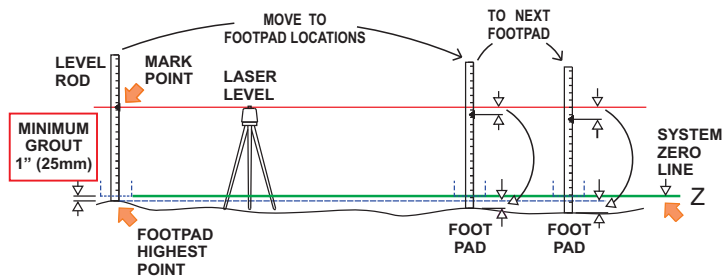


- Establish System Zero Line or Z.
- Find highest point in factory floor where footpads will be located.
- System Zero Line or Z is 1" above highest point.

INSTALL PRESS FIRST

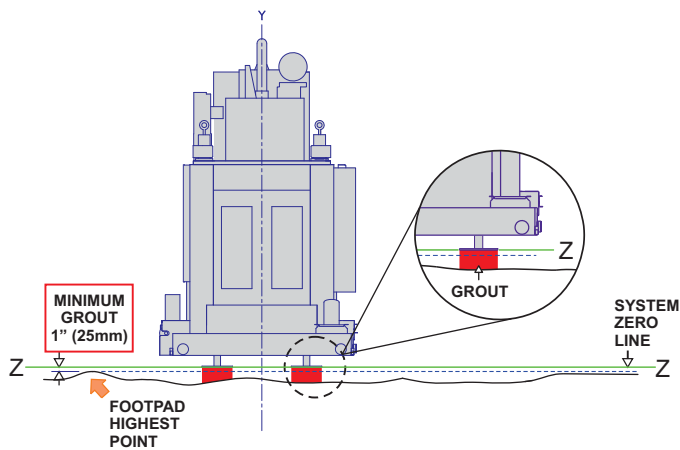

- Shim & level to System Zero Line or Z.
- Grout & anchor all footpads.

INSTALL TUNNEL

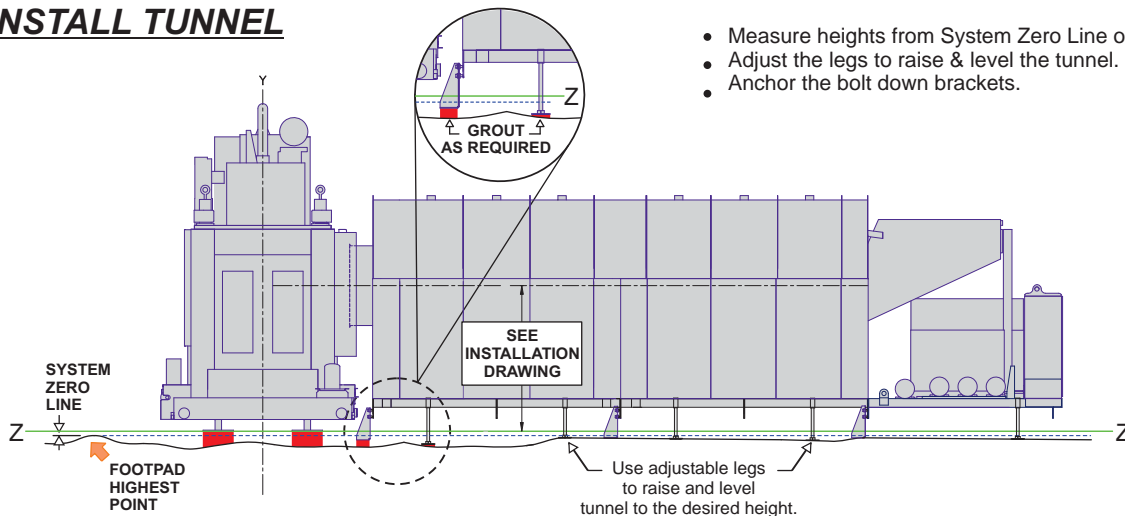

- Measure heights from System Zero Line or Z.
- Adjust the legs to raise & level the tunnel.
- Anchor the bolt down brackets.

BIPCLI02 (Published) Book specs- Dates: 20140226 / 20140226 / 20140226 Lang: ENG01 Applic: PCL

Tips for Connecting Tunnel Units on Site

In most installations, the tunnel is composed of two or more units that you must connect together on site. Use this instruction to help prevent damage.

1. Protect the inter-unit seal.


When you connect units, the correct procedure is to establish the final position of the press or extractor, then move the tunnel units into position, from discharge end to load end. Before you move units together, apply petroleum jelly to the outer surface of the discharge chute on the load-end unit and to the surface of the inter-unit seal on the discharge-end unit. Without lubrication, the seal can tear or get pulled so that it is pointing in the wrong direction.

2. Align the units.

Use leveling instruments to make sure that the two units remain level horizontally when you bring the them together. When you start to insert the discharge chute, keep them aligned vertically and horizontally plus or minus 1/4" (6 mm), otherwise you can damage the inter-unit seal. When the adjacent connection flanges on the two units are close together, use the corresponding bolt holes as a guide to align the units precisely. When the flanges are touching and you can put the bolts through both holes with the units level, the units are aligned.

3. Check for correct seal orientation.

Figure 1: Inter-unit Connection

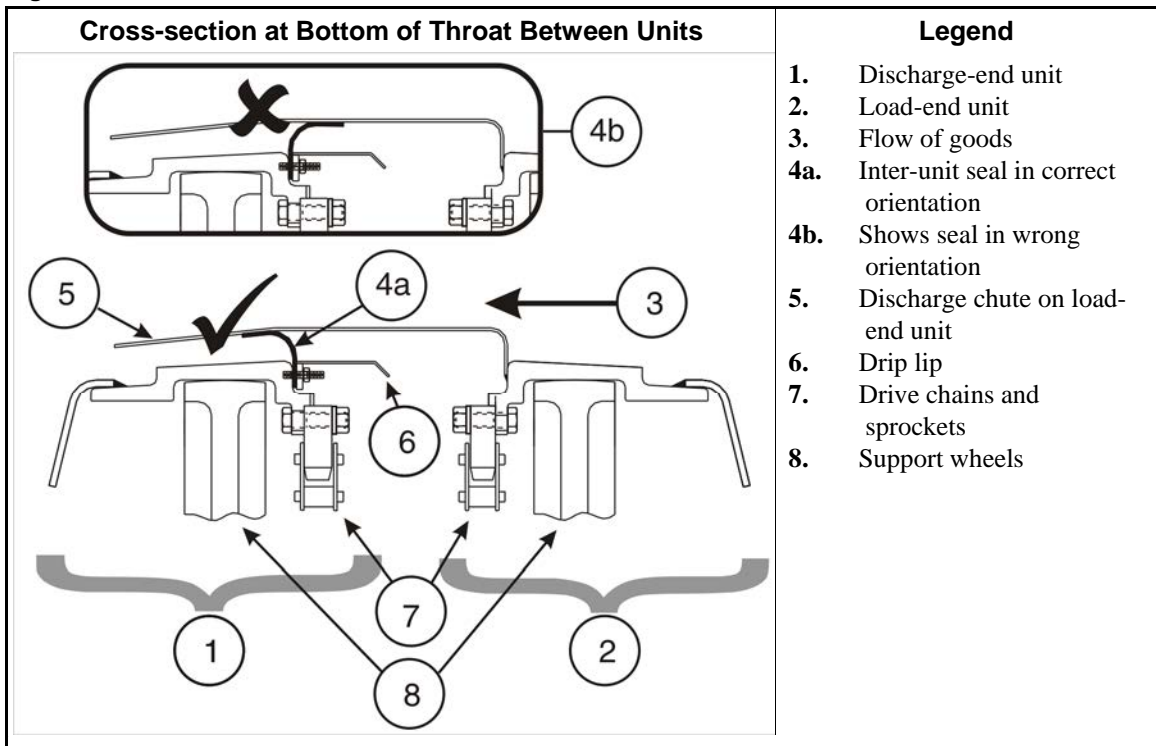

See [Figure 1](#). If you had to move the load-end unit out and back in during connection, this can pull the seal to the wrong orientation. Reach into the gap where the discharge chute enters the throat of the other unit. If you feel the seal pointing outward, use a wooden stick with a smooth end to push the seal back to the correct orientation.

4. If water leaks from the inter-unit connection...

It is normal for a small quantity of water to drip from between units. If a large quantity of water comes out from between units, this indicates that the inter-unit seal is damaged. If this occurs after the machine has been in operation for a length of time, the seal may have sustained chemical damage.

It is possible to replace the inter-module seal. However, an easier alternative is to install a 6-rib seal available from the Milnor® Parts department as kit KTWDRIPR04. This seal can usually be installed in about 45 minutes. The 6-rib seal is less effective than the factory seal, but usually provides an acceptable reduction in leaking.

— End of BIPCLI02 —

Proximity Safeguarding for Automatic Shuttle Conveyors

Proximity safeguarding—a means of preventing personnel from entering the path of a machine, such as an industrial robot, that moves within a large area.

1. Applicability

This document—

applies to Milnor® automated laundering systems with shuttle conveyors that move without operator intervention (automatic operation),

does not apply to shuttles that require operator input continually, such as directing all shuttle movements (manual operation).

2. References for Proximity Safeguarding

ANSI Z8.1-2016 “American National Standard for Commercial Laundry and Drycleaning Equipment and Operations - Safety Requirements”

OSHA Standard 29 CFR § 1910.212 “General Requirements for All Machines”

OSHA Directive STD 01-12-002 - Pub 8-1.3 “Guidelines for Robotic Safety”

ANSI/RIA R15.06-2012 “American National Standard for Industrial Robots and Robot Systems- Safety Requirements”

ANSI/ASME B15.1-2000 “Safety Standard for Mechanical Power Transmission Apparatus”

OSHA Publication 3067 “Concepts and Techniques of Machine Safeguarding”

ISO 10472-1 “Safety Requirements for Industrial Laundry Machinery”

3. Hazards To Personnel in Proximity to Shuttle Conveyors

Milnor automated laundering systems use automatic shuttle conveyors to transport goods among the processing machines in the system. Depending on model, an automatic shuttle conveyor may move in any of the following ways, in addition to running its conveyor belt(s):

- It may travel along (traverse) a line of machines (typically dryers).
- Its conveyor bed(s) may ascend and descend (elevate) within the machine frame.
- Its conveyor bed(s) may extend and retract within the machine frame.
- The conveyor bed and frame may pivot.
- Wet goods shuttles have a bucket that elevates and tilts.

These motions pose strike, crush, sever, and entrapment hazards to personnel in proximity to the shuttle. **For the safety of personnel, owner/users must provide proximity safeguarding that protects personnel from the moving shuttle.**

A common method of proximity safeguarding is safety fencing with interlocked gates that disable the shuttle when a gate is opened. When a shuttle is disabled, this will eventually cause other machines in the system to hold (wait for action from another machine), but it will not necessarily cause them to immediately stop moving. In the case of a tunnel system, the press or centrifugal extractor can pose additional hazards to personnel in proximity to the equipment. **Hence, the safeguards must also disable any presses or extractors.** Tunnels and dryers do not pose a significant hazard to personnel merely because they are in proximity to the equipment, and need not be automatically disabled.



WARNING [1]: Multiple Hazards—Proximity safeguarding provides only partial protection and only against injury resulting from entering the shuttle path. It is not a substitute for proper

lockout/tagout procedures and good safety practices.

- Always lockout/tagout any individual machine (or follow the published maintenance procedures) when performing maintenance or clearing a fault on that machine.
- Ensure that all personnel understand the safeguards and do not attempt to defeat them.
- Inspect safeguards weekly to ensure that they are not mechanically or electrically circumvented.

4. How Milnor Accommodates Proximity Safeguarding

Milnor provides connection points on shuttles, presses and centrifugal extractors for interfacing with devices such as gate interlock switches. These connection points are tagged for easy identification. When Milnor provides equipment layout drawings for an automated laundering system, it indicates on the drawing, the perimeter of the shuttle movement area that must be guarded. The following hazard statement is displayed on connection point tags as well as equipment layout drawings prepared by Milnor:



WARNING [2]: Strike, Crush, Sever, and Entrapment Hazards—Serious bodily injury or death can result to personnel in proximity to machinery/systems that traverse, elevate, extend, pivot, and/or tilt. The following mandatory minimum safety requirements must be installed with the machinery system (local codes may require additional precautions):

- Safety fence enclosing machine movement areas,
- Lockable electrical interlocks on all gates, properly interfaced as shown on machine schematics, to disable machine movement when any gate is opened,
- Signs to alert personnel to these hazards, placed prominently around the fenced area.

Although the objectives of proximity safeguarding are the same anywhere, design requirements vary with local codes (which occasionally change) and with the plant layout. For this reason, Milnor does not provide detailed designs or materials for proximity safeguarding. If the necessary expertise does not exist within the owner/user's organization, consult appropriate sources such as local engineers or architects specializing in industrial facility design.

5. Examples of Safety Fencing With Interlocked Gates

Fencing with interlocked gates like that depicted in [Figure 1](#) and [Figure 2](#), may be used to meet the proximity safeguarding requirement. Should the owner/user choose this method, the following information may be useful. However, **this information may not satisfy current or local code requirements. The owner/user must determine its suitability for his particular facility.**

Figure 1: Example Fence Layout for Automated Laundering System Where One Tunnel Serves a Bank of Dryers


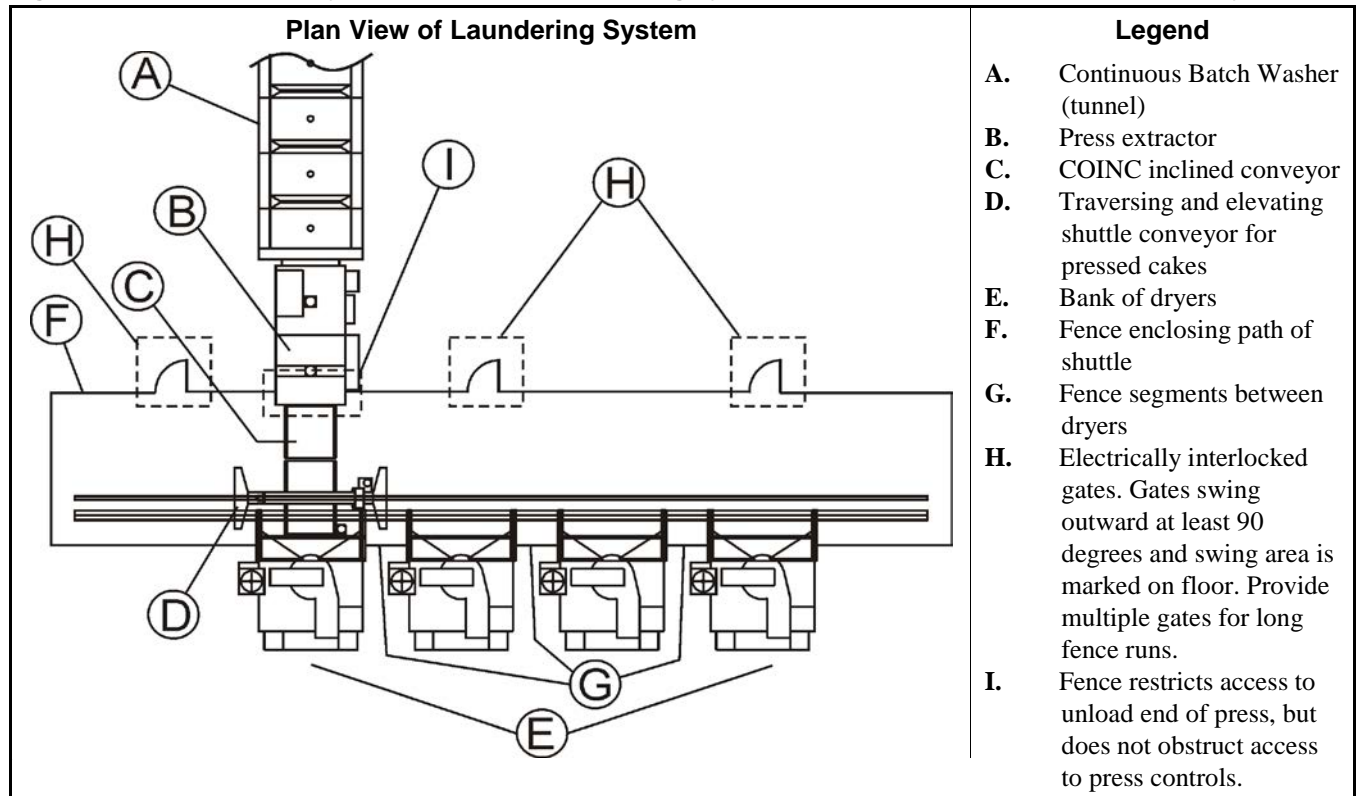


Figure 2: Example Fence Layout for Automated Laundering System Where Two Tunnels Serve a Bank of Dryers

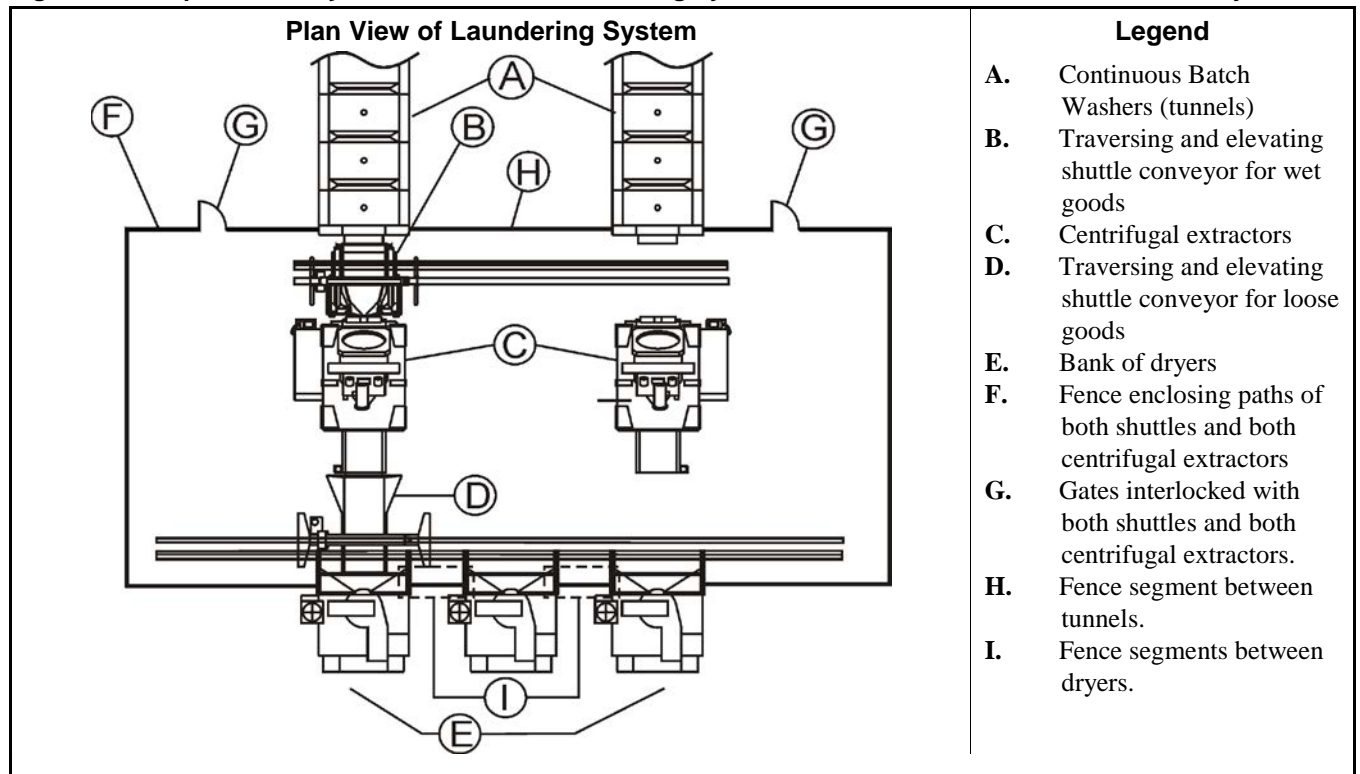

- 5.1. Fence Dimensions**—The fence must discourage climbing over and prevent crawling under.
- 5.2. Fence Materials and Setback**—The fence must be constructed of materials and located so as to prevent personnel from reaching through gaps in the fence and contacting the enclosed machinery.
- 5.3. Gates**—Personnel gates must be held firmly closed but permit personnel to easily pass through when necessary. Gates must be equipped with a positive latching arrangement to prevent accidental opening. Adequate floor space must be provided to allow the gate to swing at least 90 degrees when fully open. Gates must open outward; that is, away from the fenced perimeter. The floor must be permanently marked to show the gate's swing area, to discourage obstructing its movement.
- 5.4. Control Circuitry**—All gates must be electrically interlocked with any shuttle conveyors within the fenced area and with any presses or centrifugal extractors that the fence either encloses or intersects. Opening any gate must have the following effects:
1. Shuttle(s), press(es), and/or centrifugal extractor(s) stop moving immediately.
 2. An audible alarm sounds.
 3. Shuttle(s), press(es), and/or centrifugal extractor(s) cannot be restarted merely by closing the gate(s), but must be restarted at the machine control panel once the gate(s) are closed.
- Milnor shuttles, presses and centrifugal extractors provide such functionality when properly interfaced with gate interlock switches.
- 5.5. System Emergency Stop Switches**—The laundry must establish rules and procedures that prohibit personnel from remaining within the fenced area with machine(s) enabled, except in accordance with published maintenance procedures. System emergency stop switches (panic buttons) should be provided inside and outside the fenced perimeter. Emergency stop switches should be located so that personnel anywhere inside the fenced perimeter are only a short distance from a switch, and they should be clearly marked as to their locations and function. Connect switches in series with the gate interlocks so that pressing an emergency stop switch performs the same control function as opening a gate.
- 5.6. Isolating Individual Machine Controls**—The interlock circuitry for each machine must be electrically isolated from that of the other machines. Hence, each gate interlock switch must provide as many pairs of dry contacts as there are machines to interface to. A pair of switch contacts must never be shared by two or more machines.
- 5.7. Recommended Signage**—Safety placards should be posted along the fence and at each gate, alerting personnel to the hazards within. At minimum, the size of lettering and distance between placards should be such that anyone contemplating entering the fenced area will likely see and read the placard first. Wording should be provided in each native language spoken by laundry personnel.

— End of BISUII01 —

Connecting Ancillary Equipment and Services

1. Placement of Ancillary Components

Ancillary components not mounted to the tunnel must be installed close to the tunnel washer. The locations for your system should be shown on the system layout drawings. Recommended locations are also shown on the standard dimensional drawings for the tunnel and related equipment.

Set the Mentor console on a flat surface. Bolt the console to the floor if desired. The following ancillary components apply to conventional tunnels only, not PulseFlow tunnels: Install the reuse, flow-splitter, and flow lifter tanks on grout so that they are level, cannot move, and sealed against dirt and grime where the tank meets the floor. The top edge of the dam for the wire filter must be level so that water is evenly distributed over the surface of the wire filter. Additionally the flow-splitter and flow-lifter tanks must be low enough that the tank inlet is at or below the level of the weir box outlet. Set all pumps flat on the slab so that they are as low as possible.

2. Plumbing Connections

The sizes and locations of utility connections vary with machine configuration. Those for your system should be shown on the system layout drawings. The following general instructions apply to all systems.


- 2.1. **Fresh Water**—Incoming fresh water connects to the fresh water header which connects to each fresh water inlet. The following applies to 76032_ (G1) tunnels only: Although the ball valve actuators are fitted with needle valves to adjust the rate at which the valves close, there is some possibility that water hammer will be experienced if the incoming water pressure is above 50 PSI (345 Kpa) - especially if the water piping is small and/or not fastened securely. For severe conditions it may be necessary to install pressure regulators and/or shock absorbers on the water lines.
- 2.2. **Reuse Water**—On-site connections are necessary for some reuse water (example: water returned to the reuse or pulse flow tank from the extraction system). This piping is shown on the layout drawings for your system.
- 2.3. **Steam**—Connect main steam (at the steam strainer) to the tunnel washer steam header. Install a manual steam shutoff valve so the steam valves can be repaired. Discharge condensate into the tunnel drain trough. Do not return condensate to the boiler.
- 2.4. **Compressed Air**—Estimated compressed air consumption is approximately 5 SCFM per minute at a minimum of 85 PSI.
- 2.5. **Drains for Discharged Water**—Consult local codes for equipment that can be necessary (example: traps) when you connect to a sanitary sewer. In addition to the module outlets to the sewer, the machine also has drain-off connections for water that drips between modules or units.
- 2.6. **Vents for Discharged Vapors**—Vapors generated in the oxidation zone and the finish zone of the tunnel can mix together, produce noxious gasses, and corrode equipment. Without adequate ventilation, these vapors will exit the tunnel discharge ring or concentrate in the discharge end of the tunnel and adjacent press enclosure. The severity varies with chemical composition and usage, but corrosion can be rapid and severe.

Each tunnel module is provided with a vent at the top of the shell. These vents are capped at the factory for shipping. **Uncap all vents at installation.** The best practice is to provide two separate, powered ventilation units that meet the following conditions:


- The two units are isolated from each other to avoid harmful chemical reactions.
- Ventilation fans have sufficient power to draw vapors away from the equipment. Milnor recommends 600 to 750 SCFM for the oxidation zone (300 to 375 per connection point, if two modules) and 600 to 750 SCFM for the finish zone plus the press enclosure (200 to 250 SCFM per connection point, if two modules plus the press). The SCFM values are based on an ambient air temperature of 68°F (20°C) and a minimal relative humidity.
- Fan motors are equipped with an alarm (example: indicator light) to alert personnel if a motor fails.

Figure 1 shows the recommended configuration for a tunnel with more than seven modules. Smaller tunnels are similar, but consult the Milnor factory.

Figure 1: Recommended Vent System for the CBW® Tunnel Washer and an Adjacent Press

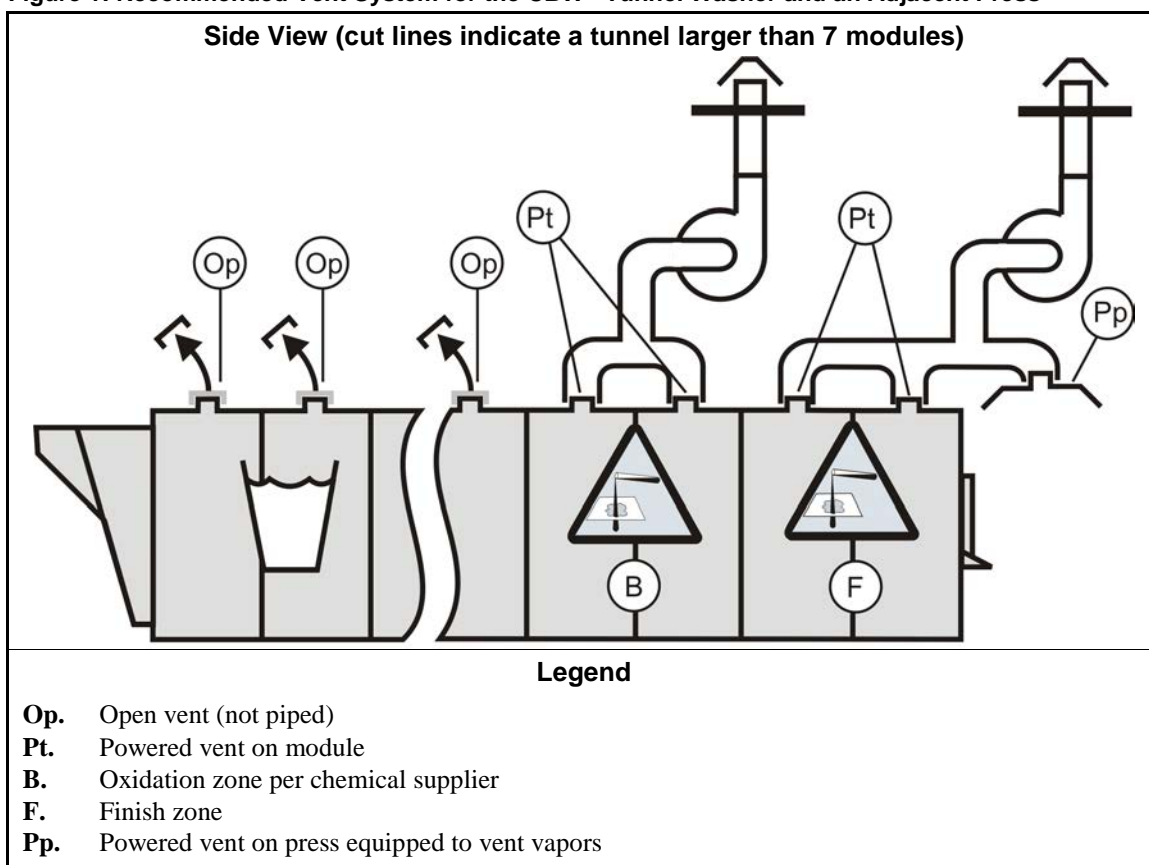

It is not recommended to connect modules ahead of the oxidation zone to a powered vent system. However, if conditions warrant this, Milnor recommends the configuration shown in Figure 2. If this configuration is needed, add 200 to 250 SCFM of powered ventilation per additional module vented.

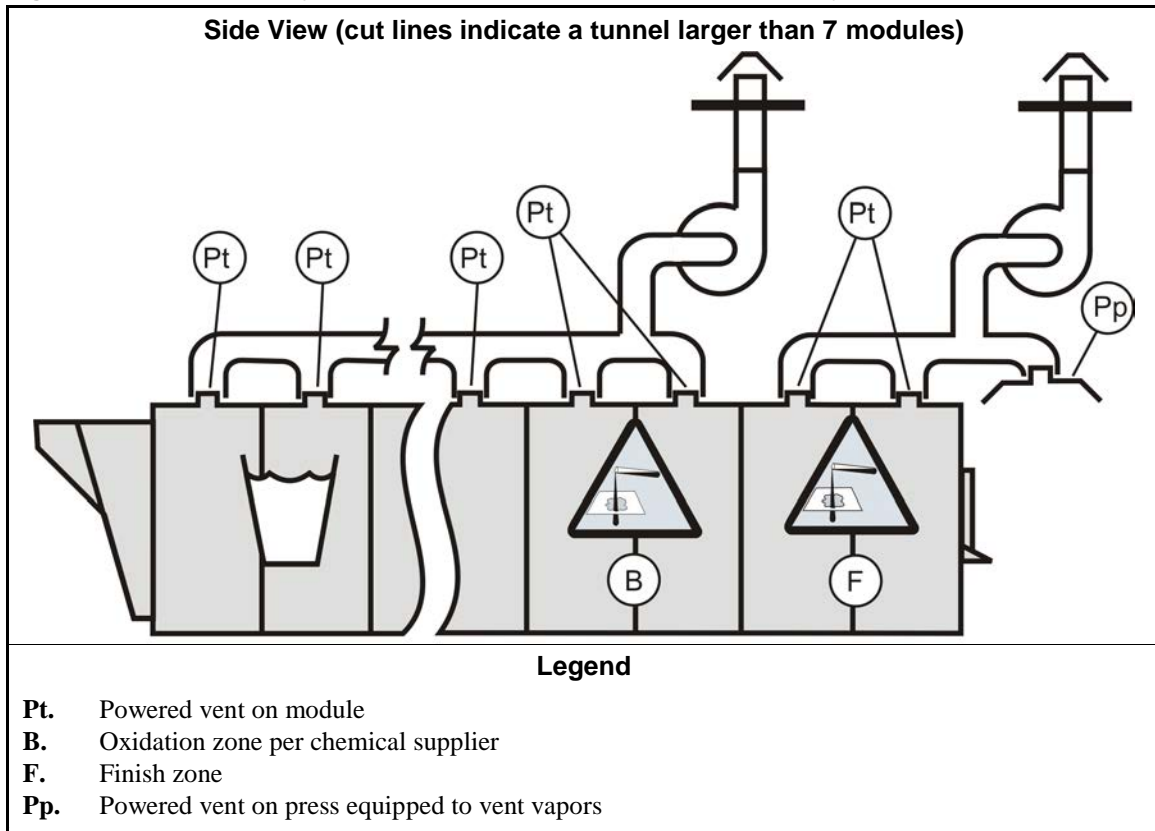Figure 2: Alternate Vent System for the CBW® Tunnel Washer and an Adjacent Press

- 2.7. Connections For Chemical Injection**—Make sure that the piping or tubing used to deliver the chemicals to chemical injection points has correct characteristics (working pressure, burst pressure, temperature resistance, chemical resistance, etc.) for the purpose intended. Remember that momentary pressures two or three times the normal chemical pressure can occur as a chemical valve closes.

Be sure the chemical lines are routed such that they are not subject to damage from external heat sources, or abrasion, or any other source of mechanical damage. Inspect all chemical delivery piping daily for leaks, loose connections, frayed or abraded areas, soft or weak places.



CAUTION 1: Machine Damage Hazards—Pumped chemical systems, if not properly installed, can cause corrosion damage.

- See the installation manual for precautions and additional information before making any chemical connections.

3. Power Connections

A junction box is available at either end of the tunnel washer to supply power to the entire tunnel washer, each of the pumps (up to 5 pumps), the motor for the Conlo (or Conwa) and the power for the Mentor.

A single terminal in the inverter enclosure supplies power to the entire tunnel washer, each of the pumps (up to 5 pumps), the motor for the Conlo (or Conwa) and the power for the Mentor.

The Mentor power cable connects to terminals within the standard output box on the first module. Connect one side of the ground wire (in the Mentor power cable) to the ground terminal inside

the standard output box. Connect the other side of the ground wire to the ground terminal inside the mentor enclosure.

4. Ground (earth) Connections

A very reliable, secure, and substantial ground (earth) connection is necessary for the proper functioning of any solid state controller. If practical, the ground connection should be via means of a metal rod driven securely at least 3 feet into the earth, and connected to the MENTOR by a copper wire no less than No. 10 AWG (.05 square Millimeter cross section area). The run of copper should not be longer than 10 feet (3 meters).



When it is impossible to provide such a ground connection, the next best is a firm connection to a metal water pipe which is known to be continuous and known to go into the earth a substantial distance.

— End of BIPCUI02 —

3



Dimensional Drawings





3.1

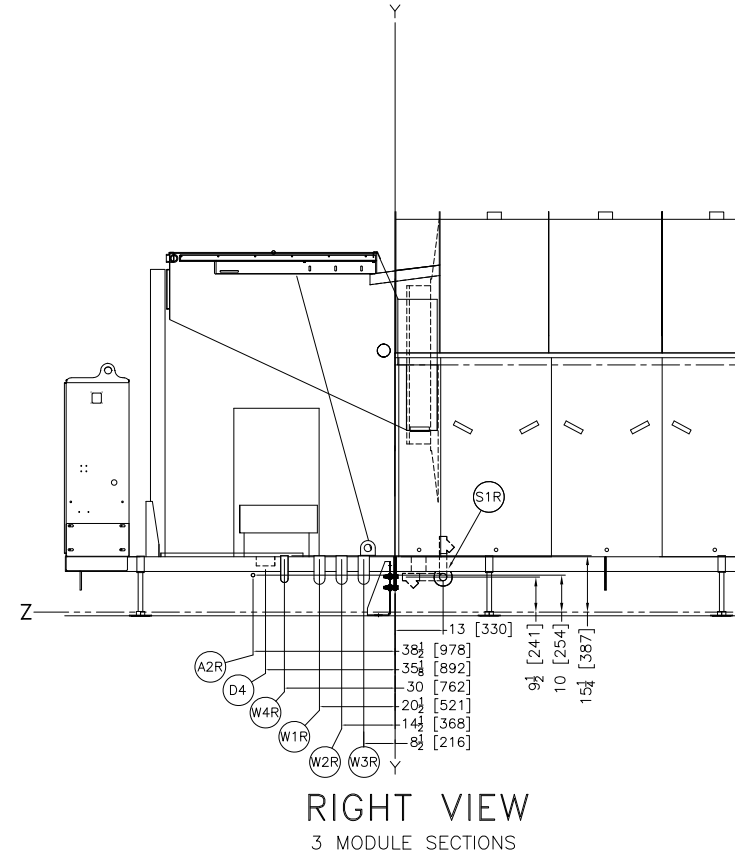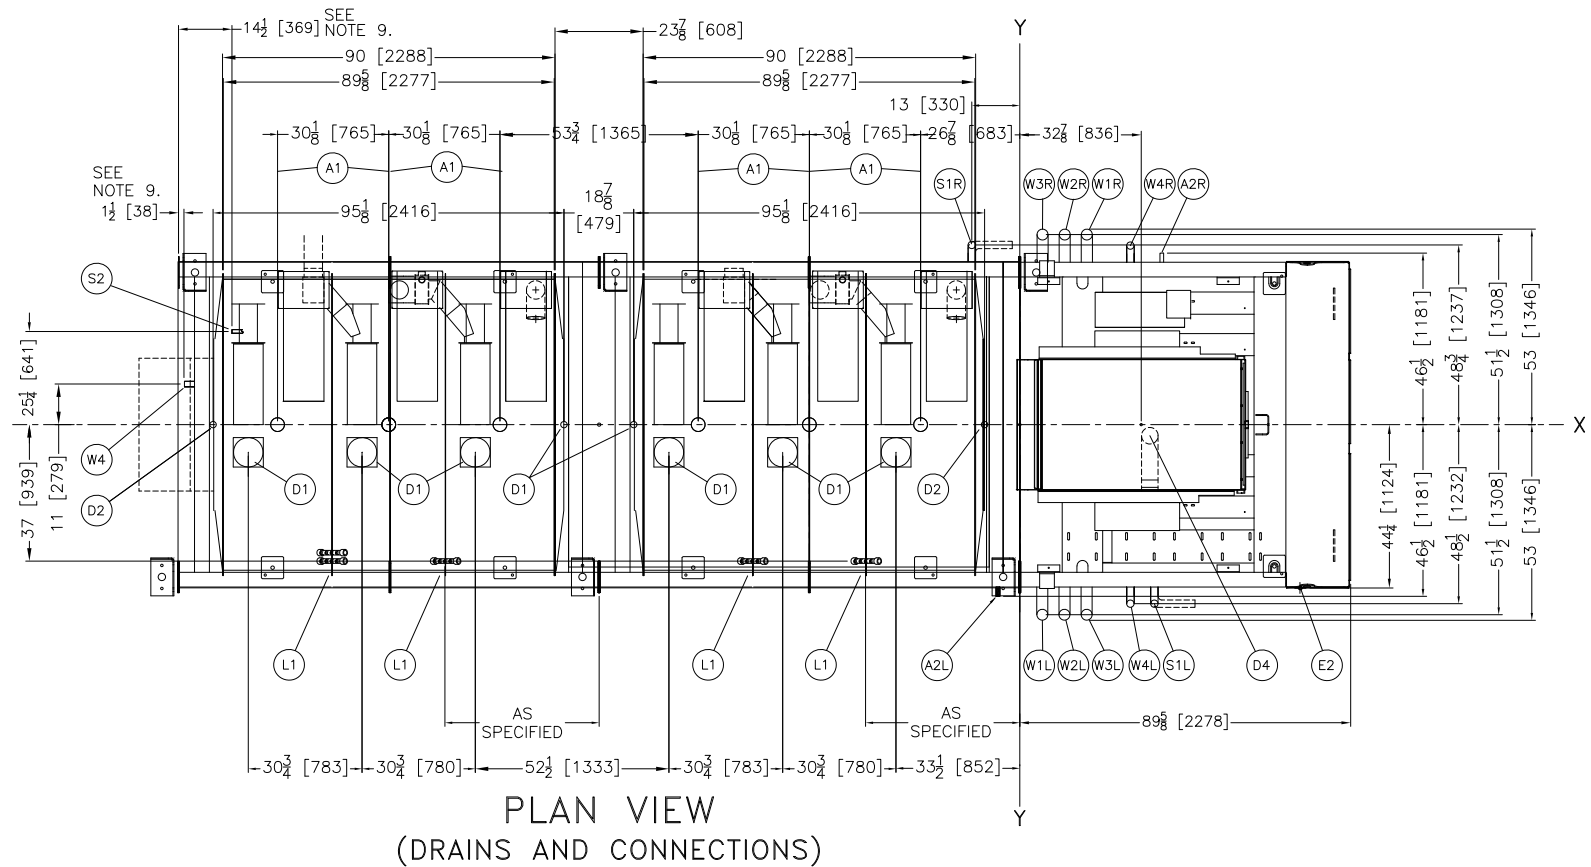

ITEM	LEGEND
W4R	REUSE TANK HEADER, 2"NPT, UTILITIES RIGHT, SEE NOTE 16.
W3R	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W2R	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W1R	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES RIGHT
W4L	REUSE TANK HEADER, 2"NPT, UTILITIES LEFT, SEE NOTE 16.
W3L	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W2L	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W1L	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES LEFT
T1	REUSE TANK
S2	STEAM TRAP, STEAM CONDENSATE OUTLET, 1/2" NPT
S1R	STEAM INLET 2" NPT, UTILITIES RIGHT
S1L	STEAM INLET 2" NPT, UTILITIES LEFT
L1	LIQUID SUPPLY INLETS, SEE NOTE 13.
E2	MAIN ELECTRICAL CONNECTION
E1	ELECTRICAL CONTROL BOX
D4	REUSE TANK DRAIN, 4-1/2" HOSE CONNECTION
D3	5" FLOW TO FLOW SPLITTER, FOR OTHER WEIR DRAIN OPTIONS, SEE BDST28G30PAE.
D2	DRIP DRAIN 1-3/4" ID TUBING SUPPLIED. SEE NOTE 11.
D1	8" DIAMETER DRAIN VALVE, ON SPECIFIED MODULES
A2R	RIGHT MAIN AIR CONNECTION 1/2" NPT
A2L	LEFT MAIN AIR CONNECTION 1/2" NPT
A1	TYPICAL EXHAUST VENT 4[102] DIAMETER.

- NOTES**
- REUSE TANK HEADER INLET, W4_, IS NOT ALWAYS USED. IT MAY CONNECT DIRECTLY TO W1_, W2_, OR W3_.
 - DIRECT THE STEAM CONDENSATE TO THE DRAIN TROUGH. DO NOT RETURN STEAM CONDENSATE TO THE BOILER BECAUSE OF POSSIBLE CONTAMINATION FROM CHEMICALS IN THE WASH WATER.
 - UTILITY INLETS (WATER, STEAM, AIR) WILL ALWAYS BE OPPOSITE THE LOAD CONVEYOR. IF NOT SPECIFIED, THE INLETS WILL BE ON THE LEFT (W1L, W2L, W3L, W4L, A1L, S1L). IF LOAD CONVEYOR IS ON THE LEFT, USE RIGHT INLETS (W1R, W2R, W3R, W4R, A1R, S1R).
 - LIQUID SUPPLY INLETS COME WITH THREE SETS OF SIX FITTINGS. ONE SET OF 3/8" FITTINGS, ONE SET OF 1/2" FITTINGS, AND ONE SET OF PLUGS WHICH ARE SHIPPED ON MACHINE.
 - BACK FLOW PREVENTERS MUST BE INSTALLED IF LOCAL PLUMBING CODES REQUIRE. RECOMMENDED MODELS ARE WATTS SERIES 009. THEY CAN BE PURCHASED LOCALLY OR THROUGH MILNOR. CONTACT MILNOR FACTORY.
 - LEAK OFF FROM DRIP DRAINS MUST BE ROUTED TO DRAIN SUMP. THESE CONNECTIONS ARE SUPPLIED WITH TUBING, MAKING THIS A FLEXIBLE CONNECTION POINT.
 - THIS DRAWING SHOWS THE G3 TUNNEL AT 67" [1702] CENTERLINE. SEE ADDITIONAL TUNNEL DRAWINGS FOR THE INTERFACE DIMENSIONS OF THE TUNNEL WHEN USED WITH SPECIFIC EXTRACTING EQUIPMENT.
 - STEAM CONDENSATE OUTLET AND PRESS WATER TO REUSE TANK ARE MEASURED OFF THE LAST SUPPORT FRAME, REGARDLESS OF HOW LONG THE TUNNEL IS.
 - FOR SIZE AND LOCATION OF ADJUSTABLE FEET AND BOLT DOWN BRACKETS, SIZE OF 4 AND 5 MODULE SUPPORT FRAMES, SEE BDPF28G3FBDDE.
 - FOR 5" WEIR DRAIN OPTIONS AND DIMENSIONS, SEE BDPF28G3OPDDE.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.)
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS. FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.
- ATTENTION**
- THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

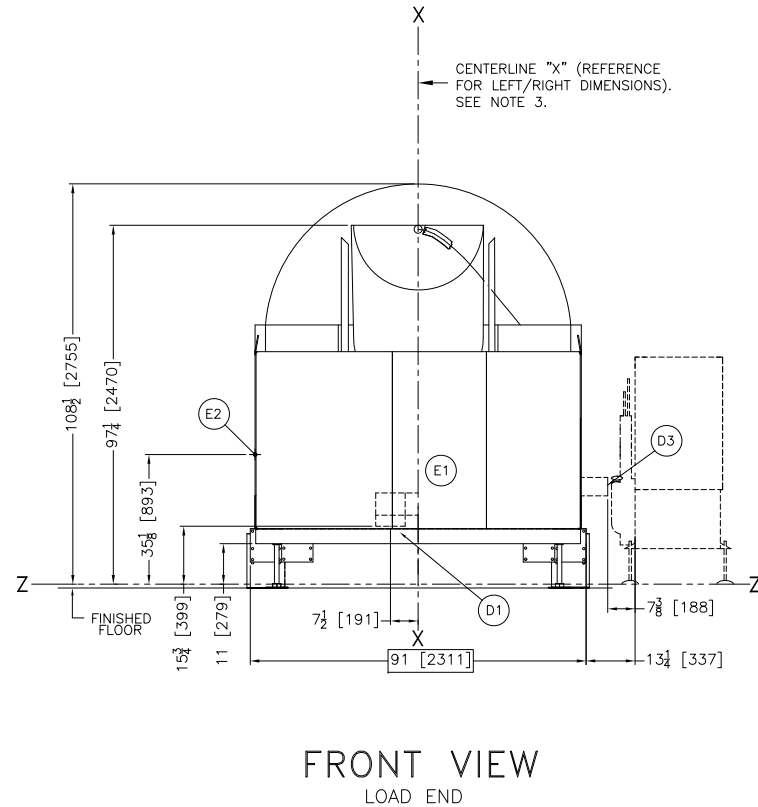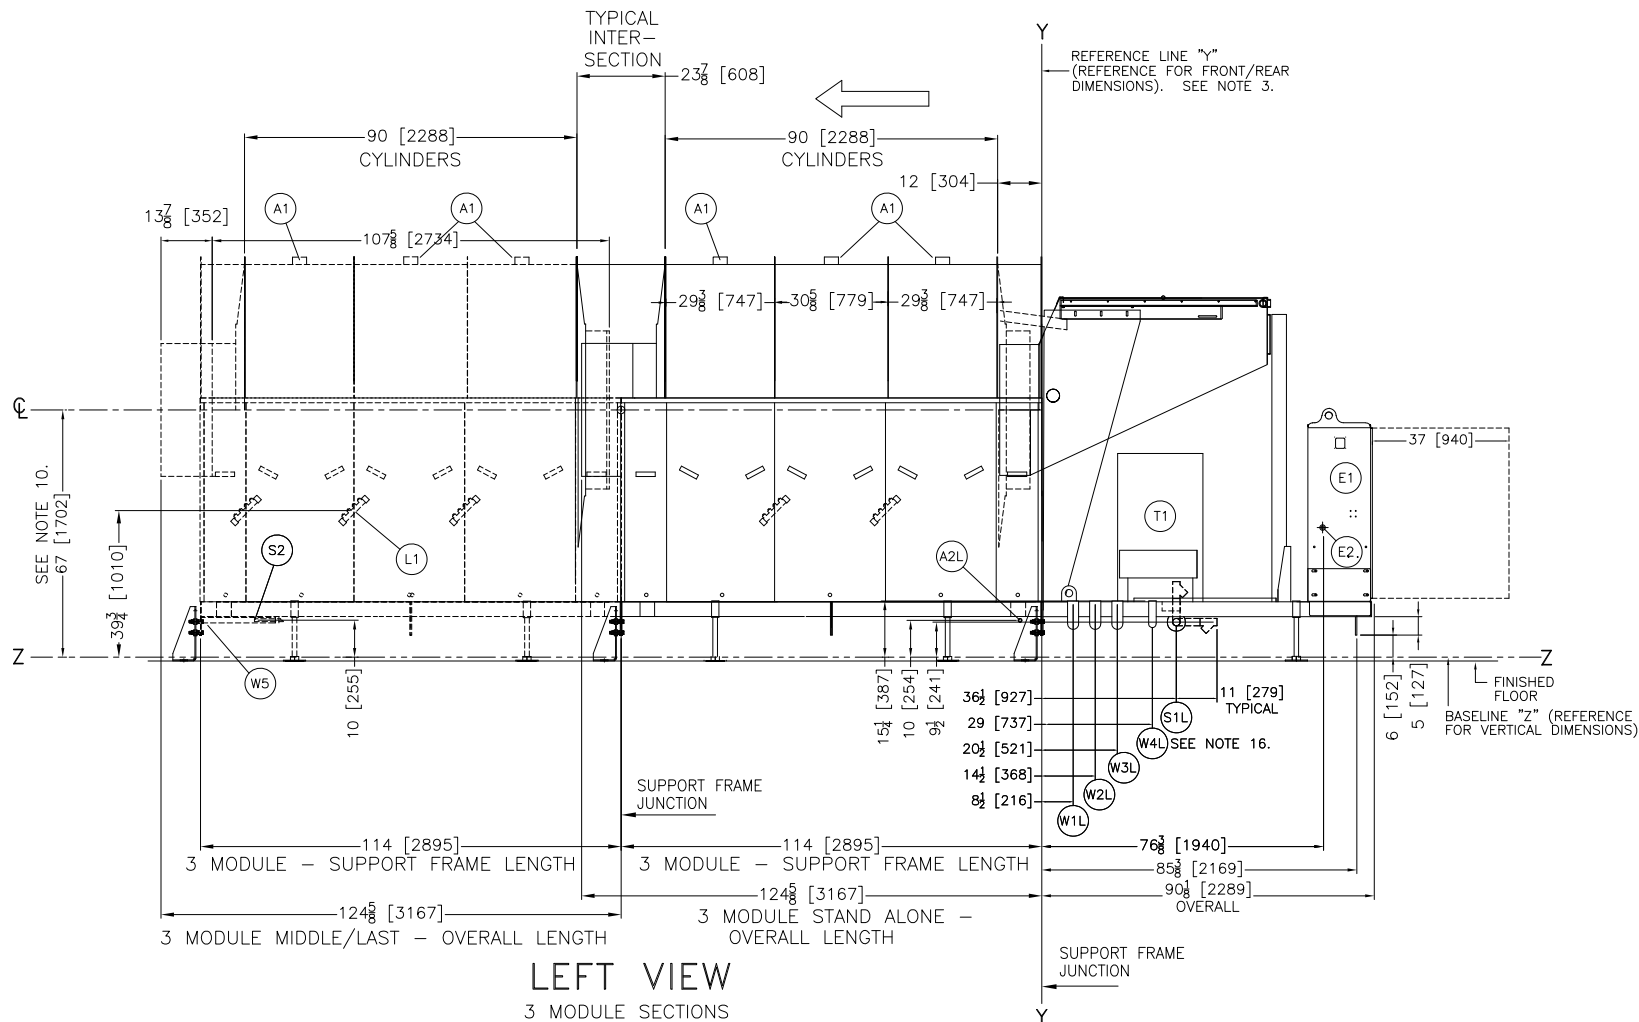

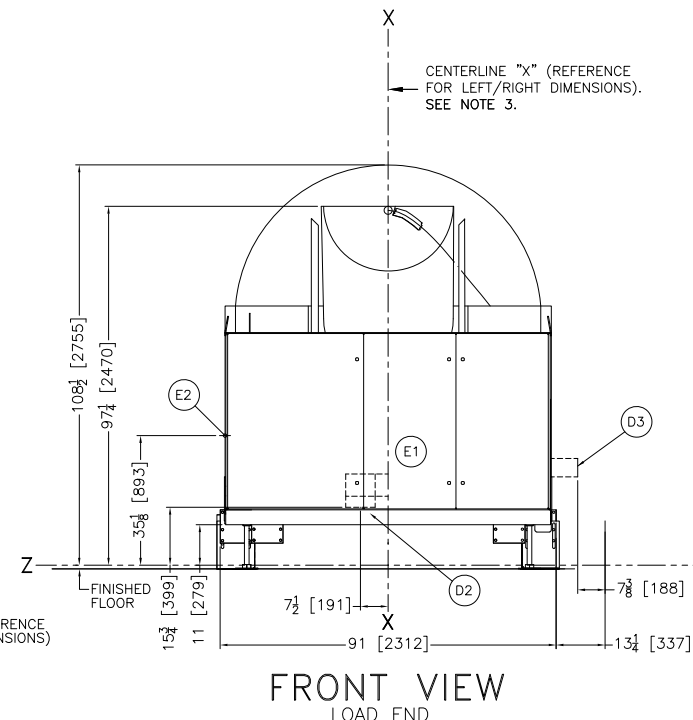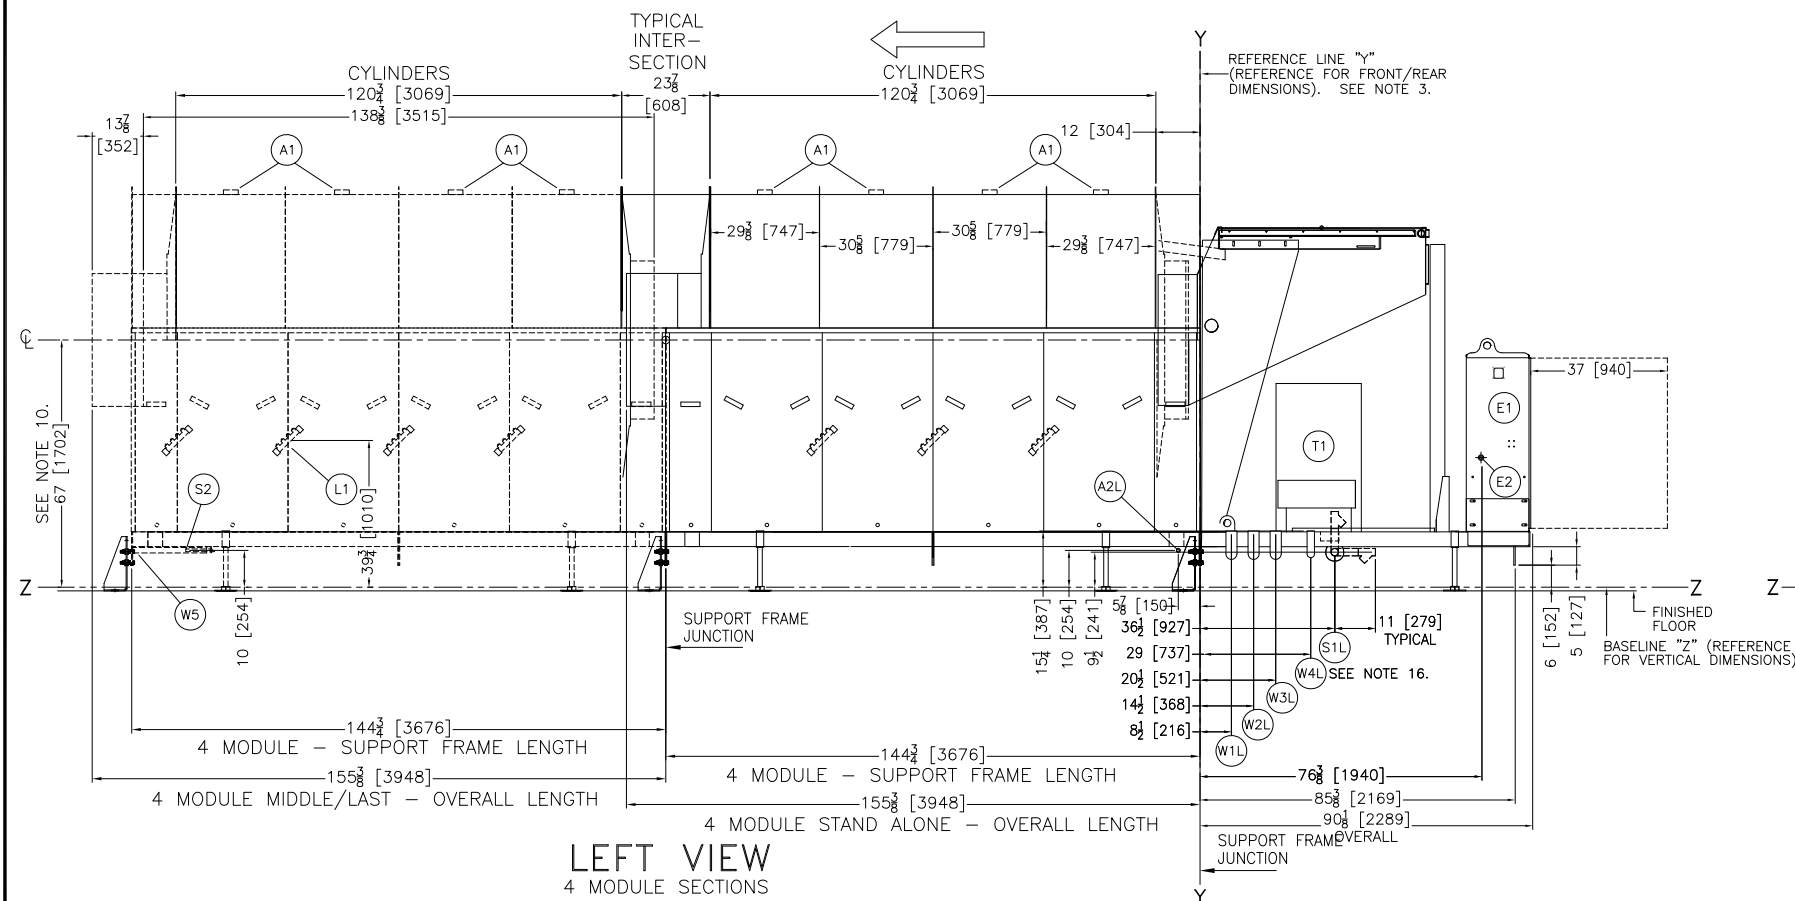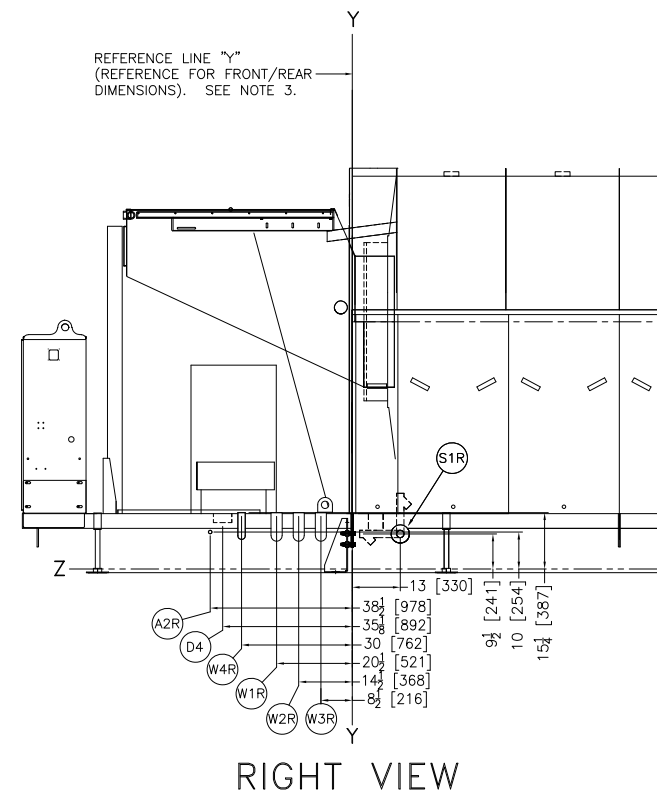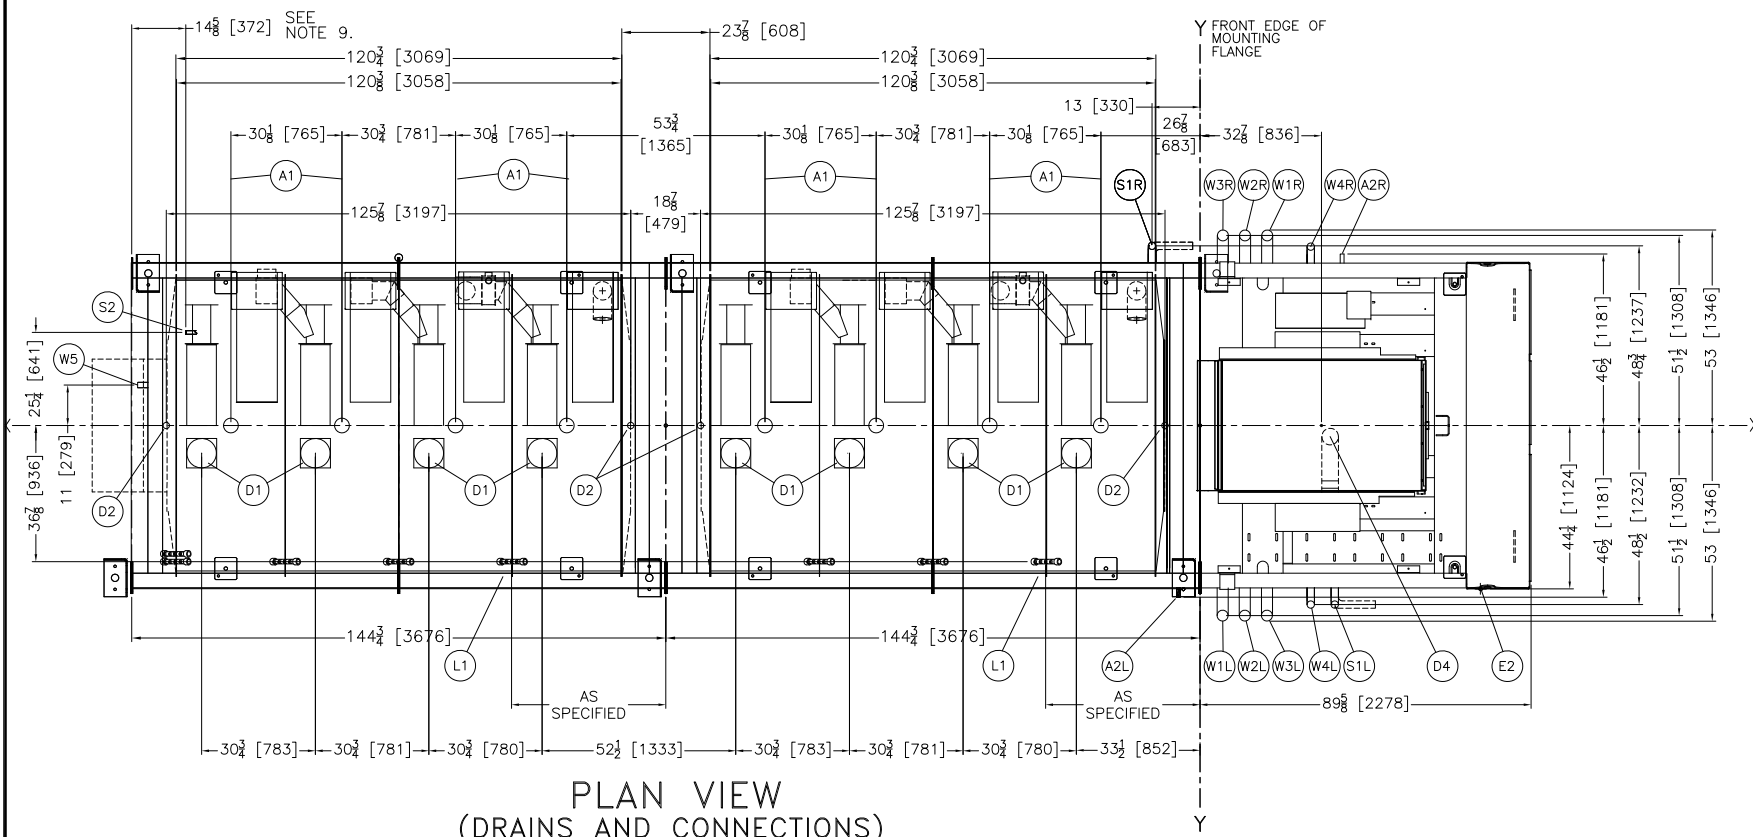

W4R	REUSE TANK HEADER, 2"NPT, UTILITIES RIGHT, SEE NOTE 16.
W3R	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W2R	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W1R	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES RIGHT
W4L	REUSE TANK HEADER, 2"NPT, UTILITIES LEFT, SEE NOTE 16.
W3L	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W2L	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W1L	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES LEFT
T1	REUSE TANK
S2	STEAM TRAP, STEAM CONDENSATE OUTLET, 1/2" NPT
S1R	STEAM INLET 2" NPT, UTILITIES RIGHT
S1L	STEAM INLET 2" NPT, UTILITIES LEFT
L1	LIQUID SUPPLY INLETS, SEE NOTE 13.
E2	MAIN ELECTRICAL CONNECTION
E1	ELECTRICAL CONTROL BOX
D4	REUSE TANK DRAIN, 4-1/2" HOSE CONNECTION
D3	5" FLOW TO FLOW SPLITTER, FOR OTHER WEIR DRAIN OPTIONS, SEE BDST28G30PAE.
D2	DRIP DRAIN 1-3/4" ID TUBING SUPPLIED. SEE NOTE 11.
D1	8" DIAMETER DRAIN VALVE, ON SPECIFIED MODULES
A2R	RIGHT MAIN AIR CONNECTION 1/2" NPT
A2L	LEFT MAIN AIR CONNECTION 1/2" NPT
A1	TYPICAL EXHAUST VENT 4[102] DIAMETER.

ITEM	LEGEND
------	--------

NOTES	
16	REUSE TANK HEADER INLET, W4_, IS NOT ALWAYS USED. IT MAY CONNECT DIRECTLY TO W1_, W2_, OR W3_.
15	DIRECT THE STEAM CONDENSATE TO THE DRAIN TROUGH. DO NOT RETURN STEAM CONDENSATE TO THE BOILER BECAUSE OF POSSIBLE CONTAMINATION FROM CHEMICALS IN THE WASH WATER.
14	UTILITY INLETS (WATER, STEAM, AIR) WILL ALWAYS BE OPPOSITE THE LOAD CONVEYOR. IF NOT SPECIFIED, THE INLETS WILL BE ON THE LEFT (W1L, W2L, W3L, W4L, A1L, S1L). IF LOAD CONVEYOR IS ON THE LEFT, USE RIGHT INLETS (W1R, W2R, W3R, W4R, A1R, S1R).
13	LIQUID SUPPLY INLETS, THE PVDF MANIFOLDS HAVE (4) 3/8" PORTS WITH (4) PVDF THREADED 3/8" PLUGS PER MANIFOLD, SHIPPED WITH THE MACHINE.
12	BACK FLOW PREVENTERS MUST BE INSTALLED IF LOCAL PLUMBING CODES REQUIRE. RECOMMENDED MODELS ARE WATTS SERIES 009. THEY CAN BE PURCHASED LOCALLY OR THROUGH MILNOR. CONTACT MILNOR FACTORY.
11	LEAK OFF FROM DRIP DRAINS MUST BE ROUTED TO DRAIN SUMP. THESE CONNECTIONS ARE SUPPLIED WITH TUBING, MAKING THIS A FLEXIBLE CONNECTION POINT.
10	THIS DRAWING SHOWS THE G3 TUNNEL AT 67"[1702] CENTERLINE. SEE ADDITIONAL TUNNEL DRAWINGS FOR THE INTERFACE DIMENSIONS OF THE TUNNEL WHEN USED WITH SPECIFIC EXTRACTING EQUIPMENT.
9	STEAM CONDENSATE OUTLET AND PRESS WATER TO REUSE TANK ARE MEASURED OFF THE LAST SUPPORT FRAME, REGARDLESS OF HOW LONG THE TUNNEL IS.
8	FOR SIZE AND LOCATION OF ADJUSTABLE FEET AND BOLT DOWN BRACKETS, SIZE OF 4 AND 5 MODULE SUPPORT FRAMES, SEE BDPF28G3FBDE.
7	FOR 5" WEIR DRAIN OPTIONS AND DIMENSIONS, SEE BDPF28G30PDDE.
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELIEF OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRECISE DIMENSIONS GREATER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION


THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

76028G3 TUNNEL - 4 MODULE


DWG# BDST28G3M4CE
202412SD

MILNOR PELLERIN MILNOR CORPORATION

P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591, FAX 504/468-3094, Email: milnorinfo@milnor.com

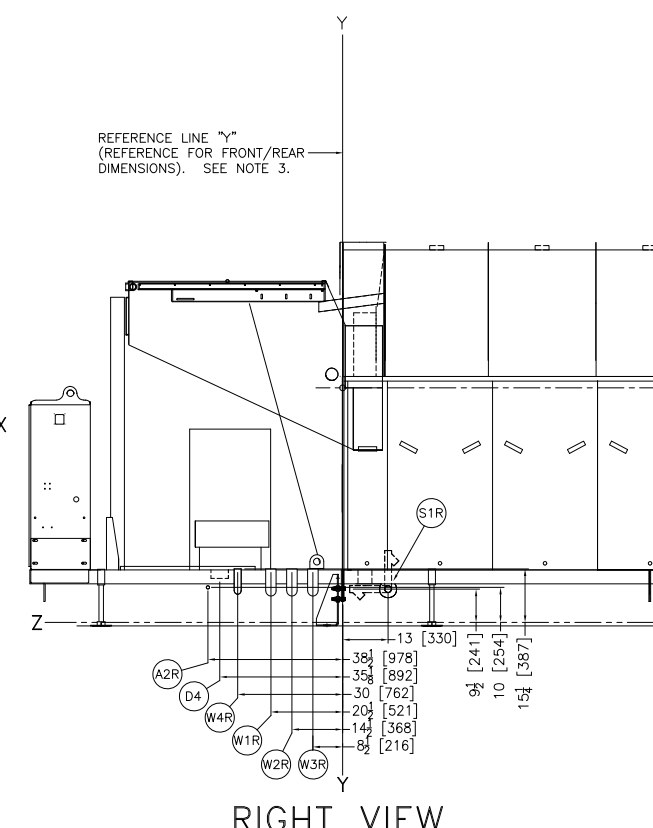

W4R	REUSE TANK HEADER, 2"NPT, UTILITIES RIGHT, SEE NOTE 16.
W3R	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W2R	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W1R	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES RIGHT
W4L	REUSE TANK HEADER, 2"NPT, UTILITIES LEFT, SEE NOTE 16
W3L	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W2L	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W1L	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES LEFT
T1	REUSE TANK
S2	STEAM TRAP, STEAM CONDENSATE OUTLET, 1/2" NPT
S1R	STEAM INLET 2" NPT, UTILITIES RIGHT
S1L	STEAM INLET 2" NPT, UTILITIES LEFT
L1	LIQUID SUPPLY INLETS, SEE NOTE 13.
E2	MAIN ELECTRICAL CONNECTION
E1	ELECTRICAL CONTROL BOX
D4	REUSE TANK DRAIN, 4-1/2" HOSE CONNECTION
D3	5" FLOW TO FLOW SPLITTER, FOR OTHER WEIR DRAIN OPTIONS, SEE BDST28G30PAE.
D2	DRIP DRAIN 1-3/4" ID TUBING SUPPLIED. SEE NOTE 11.
D1	8" DIAMETER DRAIN VALVE, ON SPECIFIED MODULES
A2R	RIGHT MAIN AIR CONNECTION 1/2" NPT
A2L	LEFT MAIN AIR CONNECTION 1/2" NPT
A1	TYPICAL EXHAUST VENT 4[102] DIAMETER.

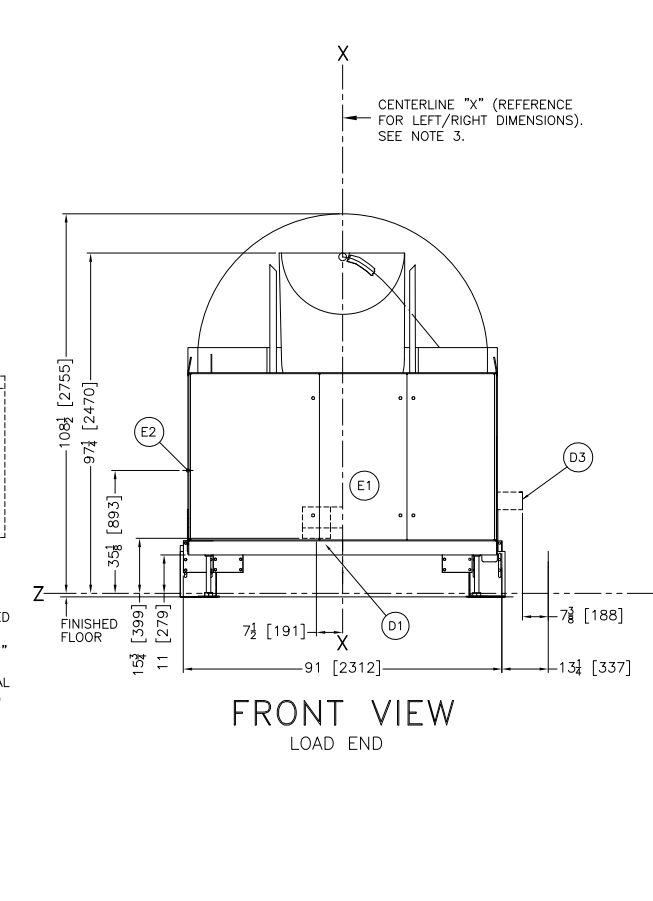

NOTES








- 16 REUSE TANK OR HEAD INLET, W4... IS NOT ALWAYS USED. IT MAY CONNECT DIRECTLY TO W1... W2... OR W3...
- 15 DIRECT THE STEAM CONDENSATE TO THE DRAIN TROUGH. DO NOT RETURN STEAM CONDENSATE TO THE BOILER BECAUSE OF POSSIBLE CONTAMINATION FROM CHEMICALS IN THE WASH WATER.
- 14 UTILITY INLETS (WATER, STEAM, AIR) WILL ALWAYS BE OPPOSITE THE LOAD CONVEYOR. IF NOT SPECIFIED THE INLETS WILL BE ON THE LEFT (W1L,W2L,W3L,W4L,A1L,S1L). IF LOAD CONVEYOR IS ON THE LEFT, USE RIGHT INLETS (W1R,W2R,W3R,W4R,A1R,S1R).
- 13 LIQUID SUPPLY INLETS, THE PVDF MANIFOLDS HAVE (4) 3/8" PORTS WITH (4) PVDF THREADED 3/8" PLUGS PER MANIFOLD, SHIPPED WITH THE MACHINE.
- 12 BACK FLOW PREVENTERS MUST BE INSTALLED IF LOCAL PLUMBING CODES REQUIRE. RECOMMENDED MODELS ARE WATTS SERIES 009. THEY CAN BE PURCHASED LOCALLY OR THROUGH MILNOR. CONTACT MILNOR FACTORY.
- 11 LEAK OFF FROM DRIP DRAINS MUST BE ROUTED TO DRAIN PUMP. THESE CONNECTIONS ARE SUPPLIED WITH TUBING, MAKING THIS A FLEXIBLE CONNECTION POINT.
- 10 THIS DRAWING SHOWS THE G3 TUNNEL AT 67°11'702" CENTERLINE. SEE ADDITIONAL TUNNEL DRAWINGS FOR THE INTERFACE DIMENSIONS OF THE TUNNEL WHEN USED WITH SPRING RAIL DISTANCE BETWEEN TUNNELS.
- 9 STEAM CONDENSATE OUTLET AND PRESS WATER TO REUSE TANK ARE MEASURED OFF THE LAST SUPPORT FRAME, REGARDLESS OF HOW LONG THE TUNNEL IS.
- 8 FOR SIZE AND LOCATION OF ADJUSTABLE FEET AND BOLT DOWN BRACKETS, SIZE OF 4 AND 5 MODULE SUPPORT FRAMES, SEE BDPF28G3FBDE.
- 7 FOR 5" WEIR DRAIN OPTIONS AND DIMENSIONS, SEE BDPF28G3OPFDE.
- 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRICAL CODES FROM ELECTRIC BOX TO ANY OBJECT IS:
 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
 42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.)
 48 [1219] IF OBJECT IS ANY LIVE PART.
 CHECK LOCAL ELECTRICAL CODES FOR FURTHER RESTRICTIONS.
- 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BADE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION. ALWAYS CERTIFY THE MACHINE IN NO WAY CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST KNOW ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCIES THEREIN) TO WITHSTAND THE FULL LOADS OF EACH MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

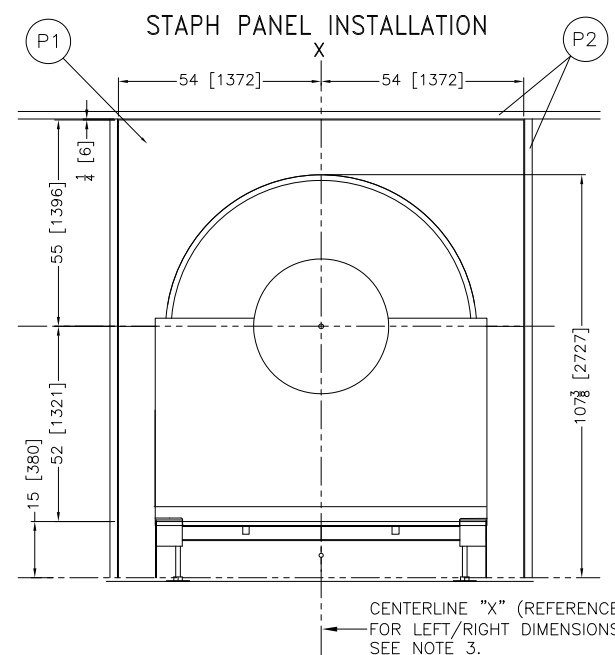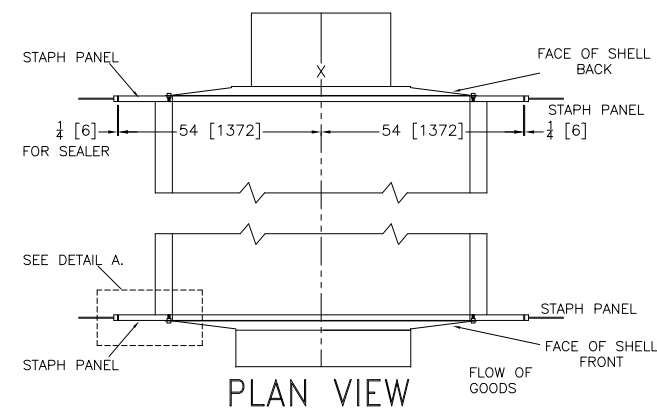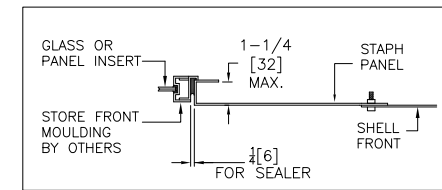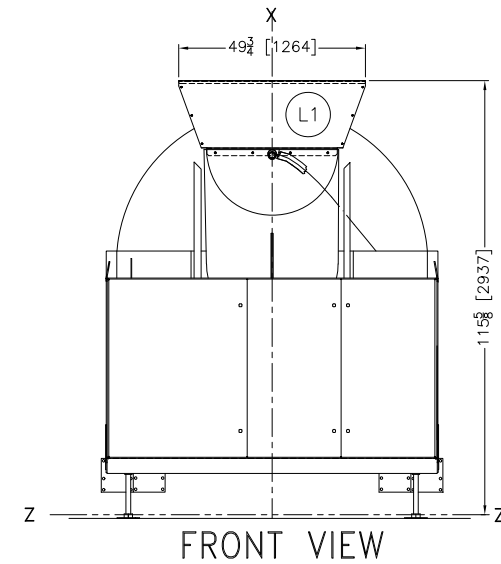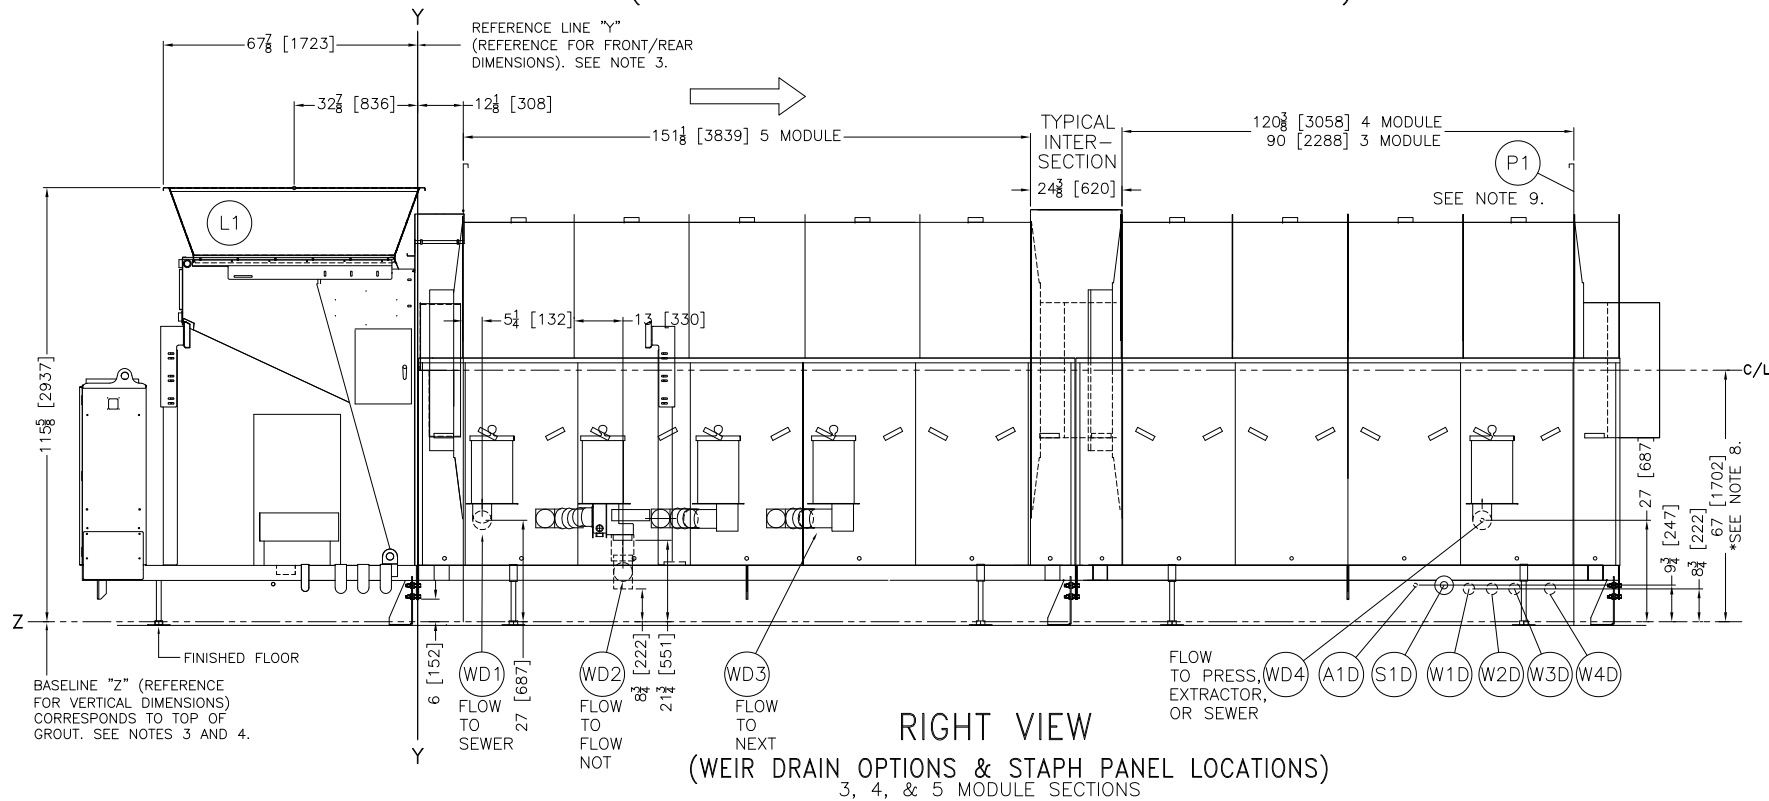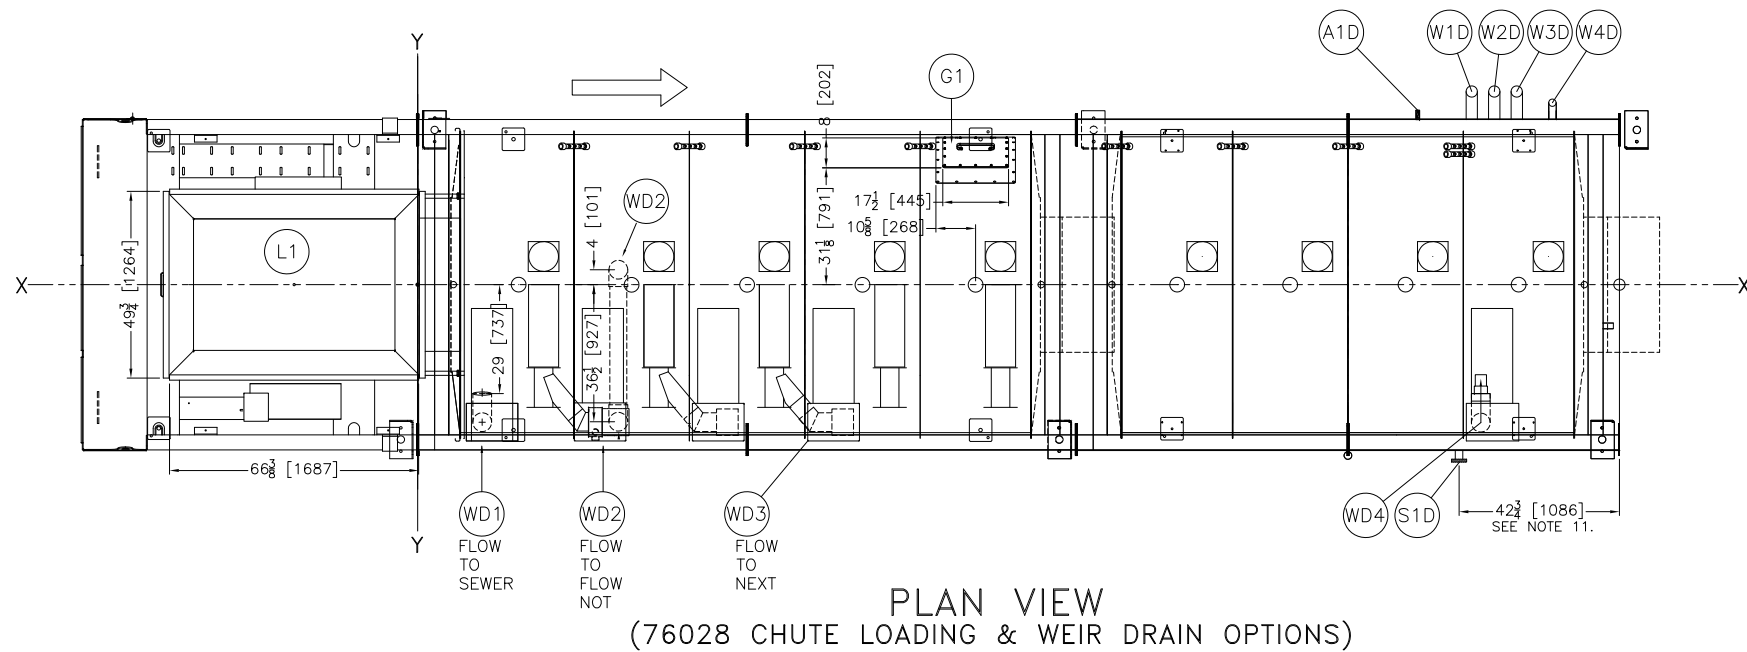
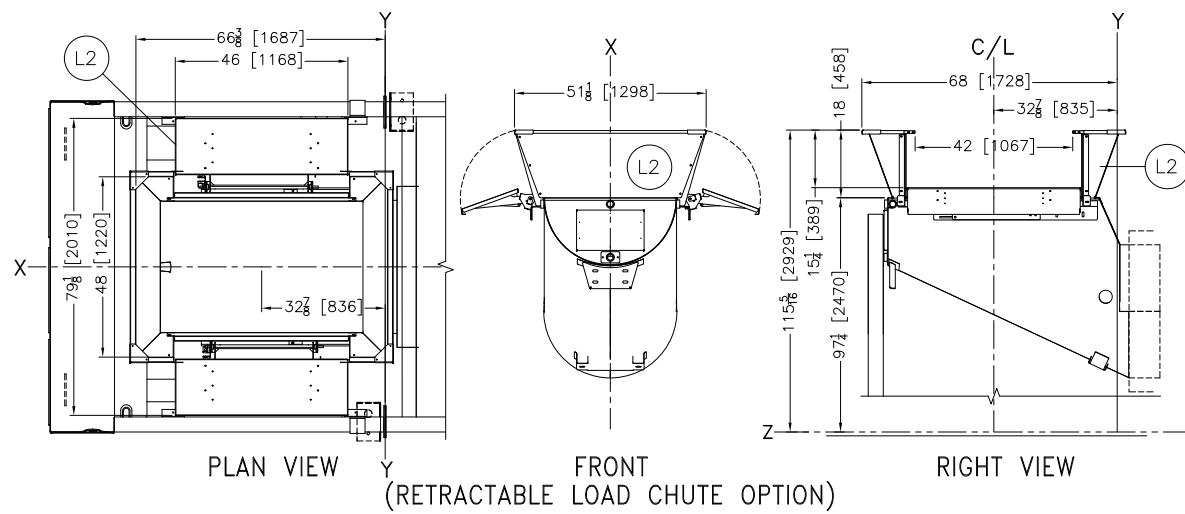


W4D	UTILITIES DISCHARGE END, MODULE WATER HEADER #4 (IF SPECIFIED) 2"NPT, SEE NOTE 11.
W3D	UTILITIES DISCHARGE END, MODULE WATER HEADER #3 (IF SPECIFIED) 3"NPT, SEE NOTE 11.
W2D	UTILITIES DISCHARGE END, MODULE WATER HEADER #2 (IF SPECIFIED) 3"NPT, SEE NOTE 11.
W1D	UTILITIES DISCHARGE END, MODULE WATER HEADER #1, 2" OR 3"NPT, SEE NOTE 11.
S1D	UTILITIES DISCHARGE END, STEAM INLET RIGHT, 2" NPT 4 BOLT, FLANGED. SEE NOTE 11.
P2	STORE FRONT MOLDINGS BY OTHERS, SEE DETAIL.
P1	OPTIONAL STAPH GUARD PANEL, SEE NOTE 9.
L2	OPTIONAL RETRACTABLE LOAD CHUTE FOR SLING LOADING
L1	OPTIONAL LARGER LOAD CHUTE FOR SLING/BAG LOADING WITH FLAIRSIDES
G1	OPTIONAL VIEWPORT ON SPECIFIED MODULES. DIMENSIONED FROM CENTER OF MODULE.
WD4	WEIR FLOW TO PRESS OR EXTRACTOR, TYPICAL OF THE LAST TUNNEL MODULE, 3" TOE CONNECTION, FOR 3-1/2" HOSE SUPPLIED BY PMC.
WD3	WEIR FLOW TO NEXT MODULE, SEE NOTE 10.
WD2	WEIR 5" NPT FLOW TO FLOWNOT, 4" PVC SUPPLIED TO SEWER CAN BE MODIFIED AT INSTALLATION, SEE NOTE 10.
WD1	WEIR 5" NPT FLOW TO SEWER, SEE NOTE 10.
A1D	UTILITIES DISCHARGE END, MAIN AIR CONNECTION, 1/2" NPT, SEE NOTE 11.

ITEM	LEGEND
<p>NOTES</p> <p>11 OPTIONAL DISCHARGE END UTILITIES ARE ON THE LAST MODULE. WATER AND AIR MUST BE ON THE LEFT. STEAM MUST BE ON THE RIGHT. DIMENSIONS ARE APPROXIMATE.</p> <p>10 WEIR DRAIN OPTIONS ARE SHOWN DIMENSIONED OFF THE FRONT EDGE OF EACH MODULE. THESE MEASUREMENTS ARE GOOD FOR EITHER 3, 4 OR 5 MODULE UNITS.</p> <p>9 STAPH GUARD PANELS MAY ONLY BE INSTALLED ON ENTRY SHELLFRONT OR EXIT SHELLBACK. STAPH PANELS MAY NOT BE LOCATED IN THE MIDDLE OF THE TUNNEL. THE DIMENSIONS AND LOCATIONS SHOWN ARE SUBJECT TO NORMAL MANUFACTURING TOLERANCE AND MAY VARY BETWEEN MACHINES.</p> <p>8 THIS DRAWING SHOWS THE TUNNEL AT 67" [1702] CENTERLINE. SEE ADDITIONAL TUNNEL DRAWINGS FOR THE INTERFACE DIMENSIONS OF THE TUNNEL WHEN USED WITH SPECIFIC EXTRACTING EQUIPMENT. THE TUNNEL MAY REQUIRE A VERTICAL ADJUSTMENT TO INTERFACE WITH ADJACENT MACHINES.</p> <p>7 FOR OVERALL DIMENSIONS AND STANDARD CONNECTIONS, SEE BDST28G3M3CE, BDST28G3M4CE, & BDST28G3M5CE.</p> <p>6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.</p> <p>5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.</p> <p>4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS, ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.</p> <p>3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.</p> <p>2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.</p> <p>1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.</p> <p>ATTENTION</p> <p>MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.</p> <p>ATTENTION</p> <p>THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.</p>	

76028G3 TUNNEL OPTIONS

	DWG# BDST28G3OPCE 2024125D
	PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591, FAX 504/469-1849, Email: milnorinfo@milnor.com	

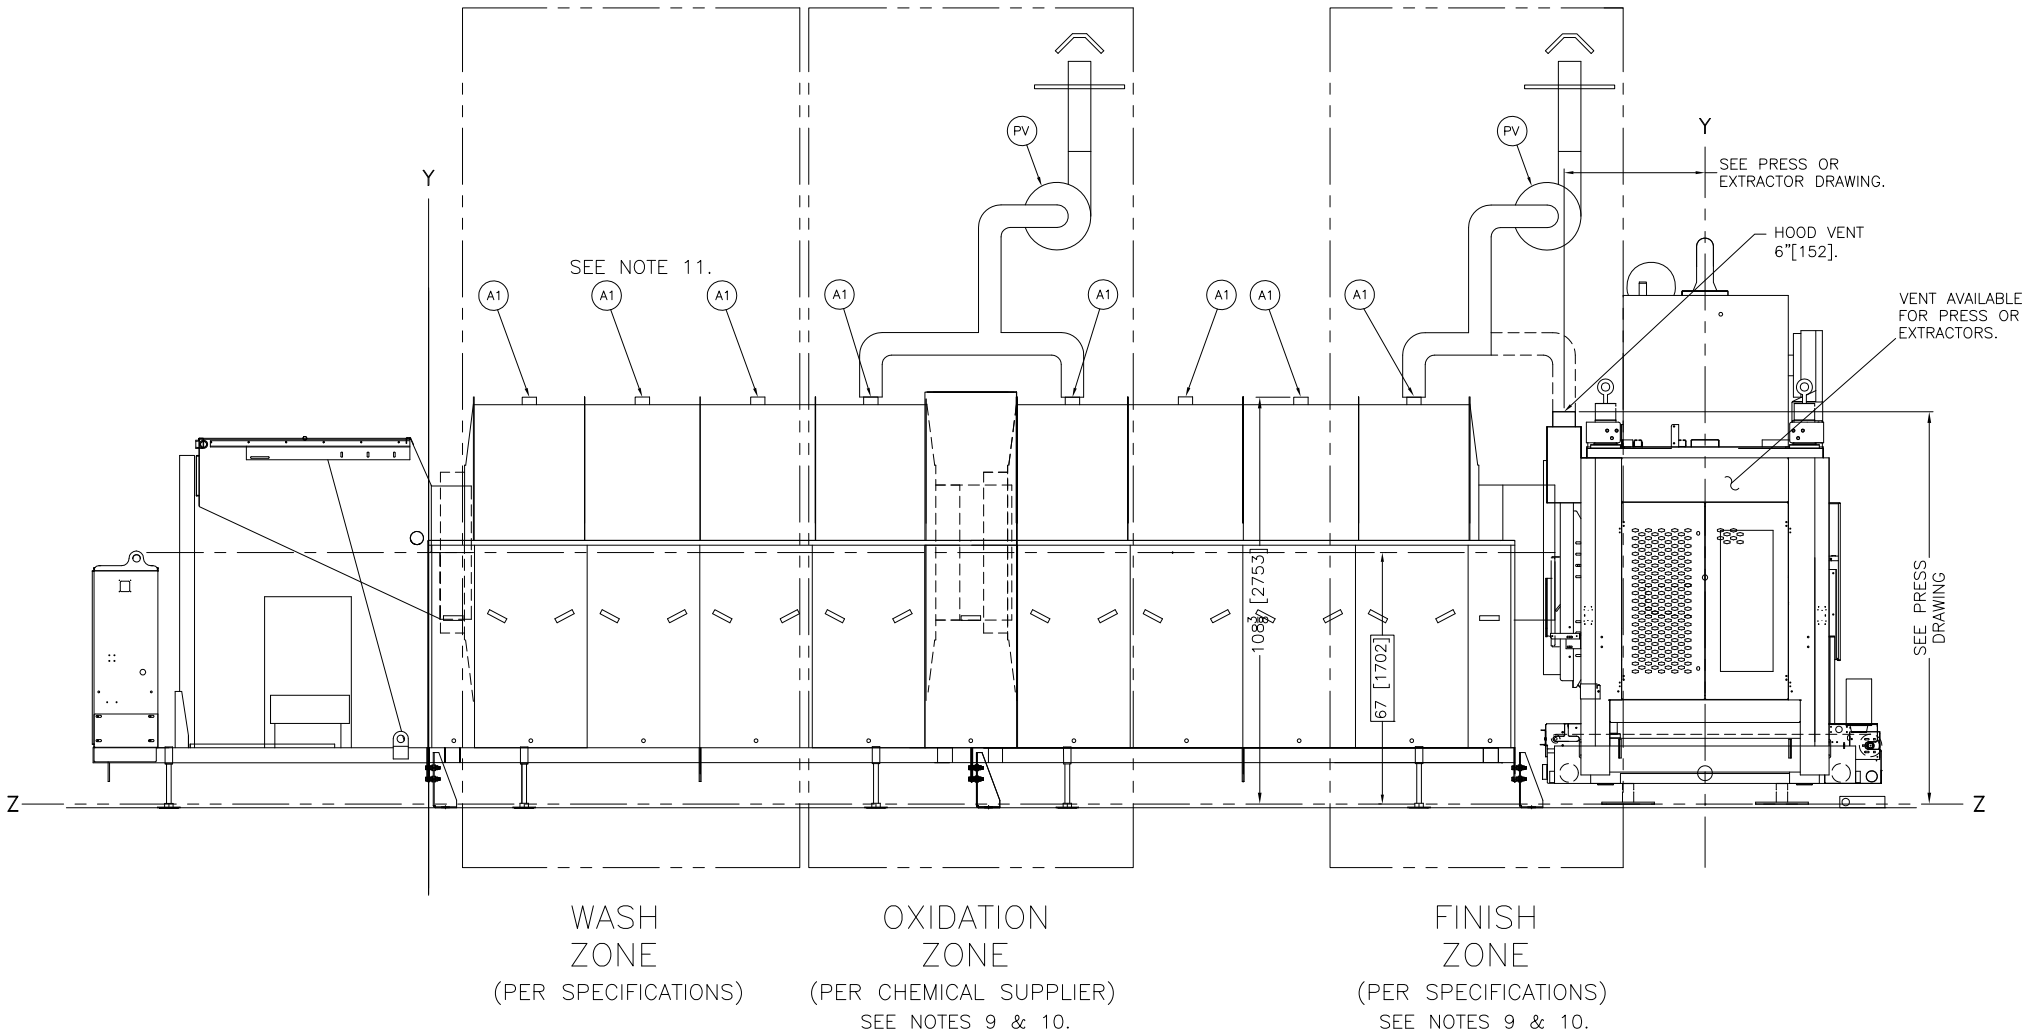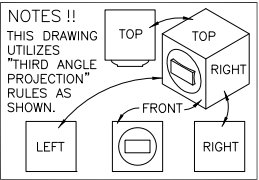

RECOMMENDED VENT SYSTEM FOR THE TUNNEL WASHER AND ADJACENT PRESS

PV	POWERED VENTILATOR & PIPING BY OTHERS, SEE NOTE 10.
A1	VENT, 4[102] DIAMETER. SEE NOTES 8, 9 & 10.

ITEM	LEGEND
------	--------

- NOTES**
- 11 IT IS NOT RECOMMENDED TO CONNECT MODULE VENTS AHEAD OF THE OXIDATION ZONE TO THE POWER VENT SYSTEM. IF THIS IS NEEDED, ADD 200 TO 250 SCFM OF POWERED VENTILATION PER ADDITIONAL MODULE VENTED.
- 10 THE BEST PRACTICE IS TO PROVIDE TWO SEPARATE, POWERED VENTILATION UNITS THAT MEET THE FOLLOWING CONDITIONS:
A) THE TWO UNITS ARE ISOLATED FROM EACH OTHER TO AVOID HARMFUL CHEMICAL REACTIONS.
B) VENTILATION FANS HAVE SUFFICIENT POWER TO DRAW VAPORS AWAY FROM THE EQUIPMENT. MILNOR RECOMMENDS:
OXIDATION ZONE: 600-750 SCFM
(300 TO 375 PER CONNECTION POINT, IF TWO MODULES)
FINISH ZONE PLUS THE PRESS ENCLOSURE: 600-750 SCFM
(200 TO 250 SCFM PER CONNECTION POINT, IF TWO MODULES PLUS THE PRESS).
- THE SCFM VALUES ARE BASED ON AMBIENT AIR TEMPERATURE OF 68°F(20°C) AND A MINIMAL RELATIVE HUMIDITY.
- C) FAN MOTORS ARE EQUIPPED WITH AN ALARM (EXAMPLE: INDICATOR LIGHT) TO ALERT PERSONNEL IF A MOTOR FAILS.
- D) FOR TUNNELS WITH LESS THAN SEVEN MODULES, CONSULT MILNOR FACTORY.
- 9 VAPORS GENERATED IN THE OXIDATION ZONE AND THE FINISH ZONE OF THE TUNNEL CAN MIX TOGETHER, PRODUCE NOXIOUS GASES, AND CORRODE EQUIPMENT. WITHOUT ADEQUATE VENTILATION, THESE VAPORS WILL EXIT THE TUNNEL DISCHARGE RING OR CONCENTRATE IN THE DISCHARGE END OF THE TUNNEL AND ADJACENT PRESS ENCLOSURE. THE SEVERITY VARIES WITH CHEMICAL COMPOSITION AND USAGE, BUT CORROSION CAN BE RAPID AND SEVERE.
- 8 ALL VENTS ARE CAPPED FOR SHIPMENT. UNCAP ALL VENTS AT INSTALLATION.
- 7 SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".
- 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

76028G3 ST - VENTING

DM

0

0.5M

1M

DWG#

INCHES

0


12

24

36

BDST28G3VTCE
2016034D

MILNOR
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1849, Email: milnorinfo@milnor.com

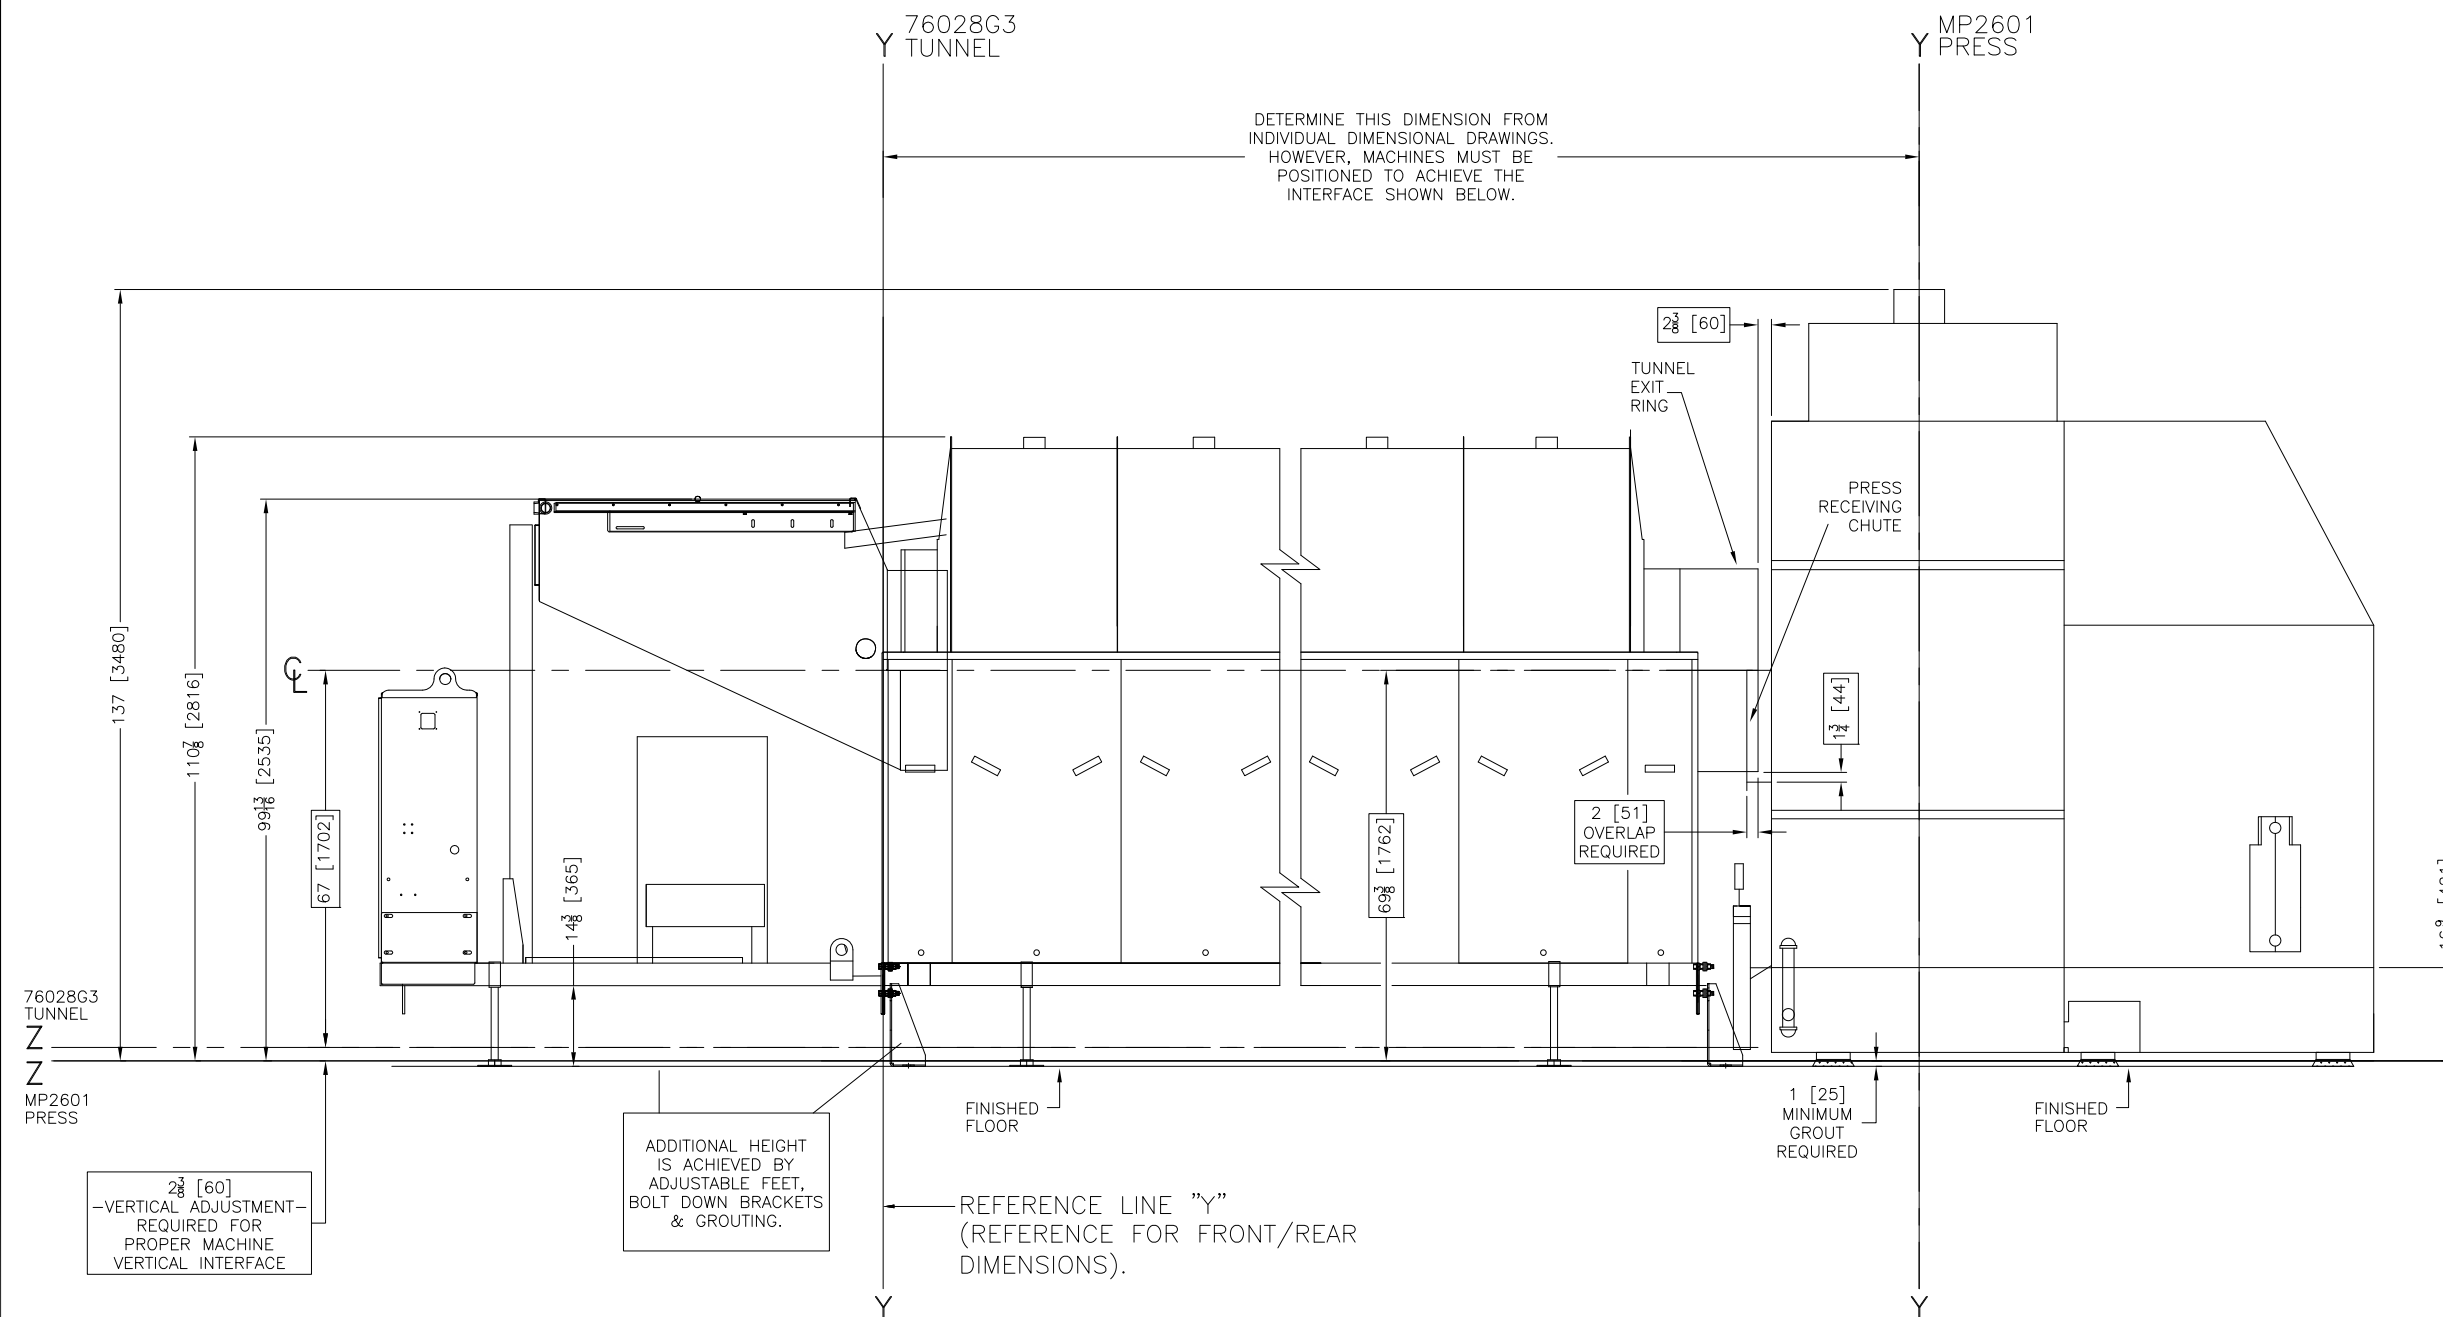

7628G3/MP2601


DM 0 0.5M 1M DWG#

BOST28G3INDB
2010406D

INCHES 0 12 24 36

MILNOR PELLERIN MILNOR CORPORATION

P.O. Box 400 Kerner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1489, E-mail: mkt@milnor.com

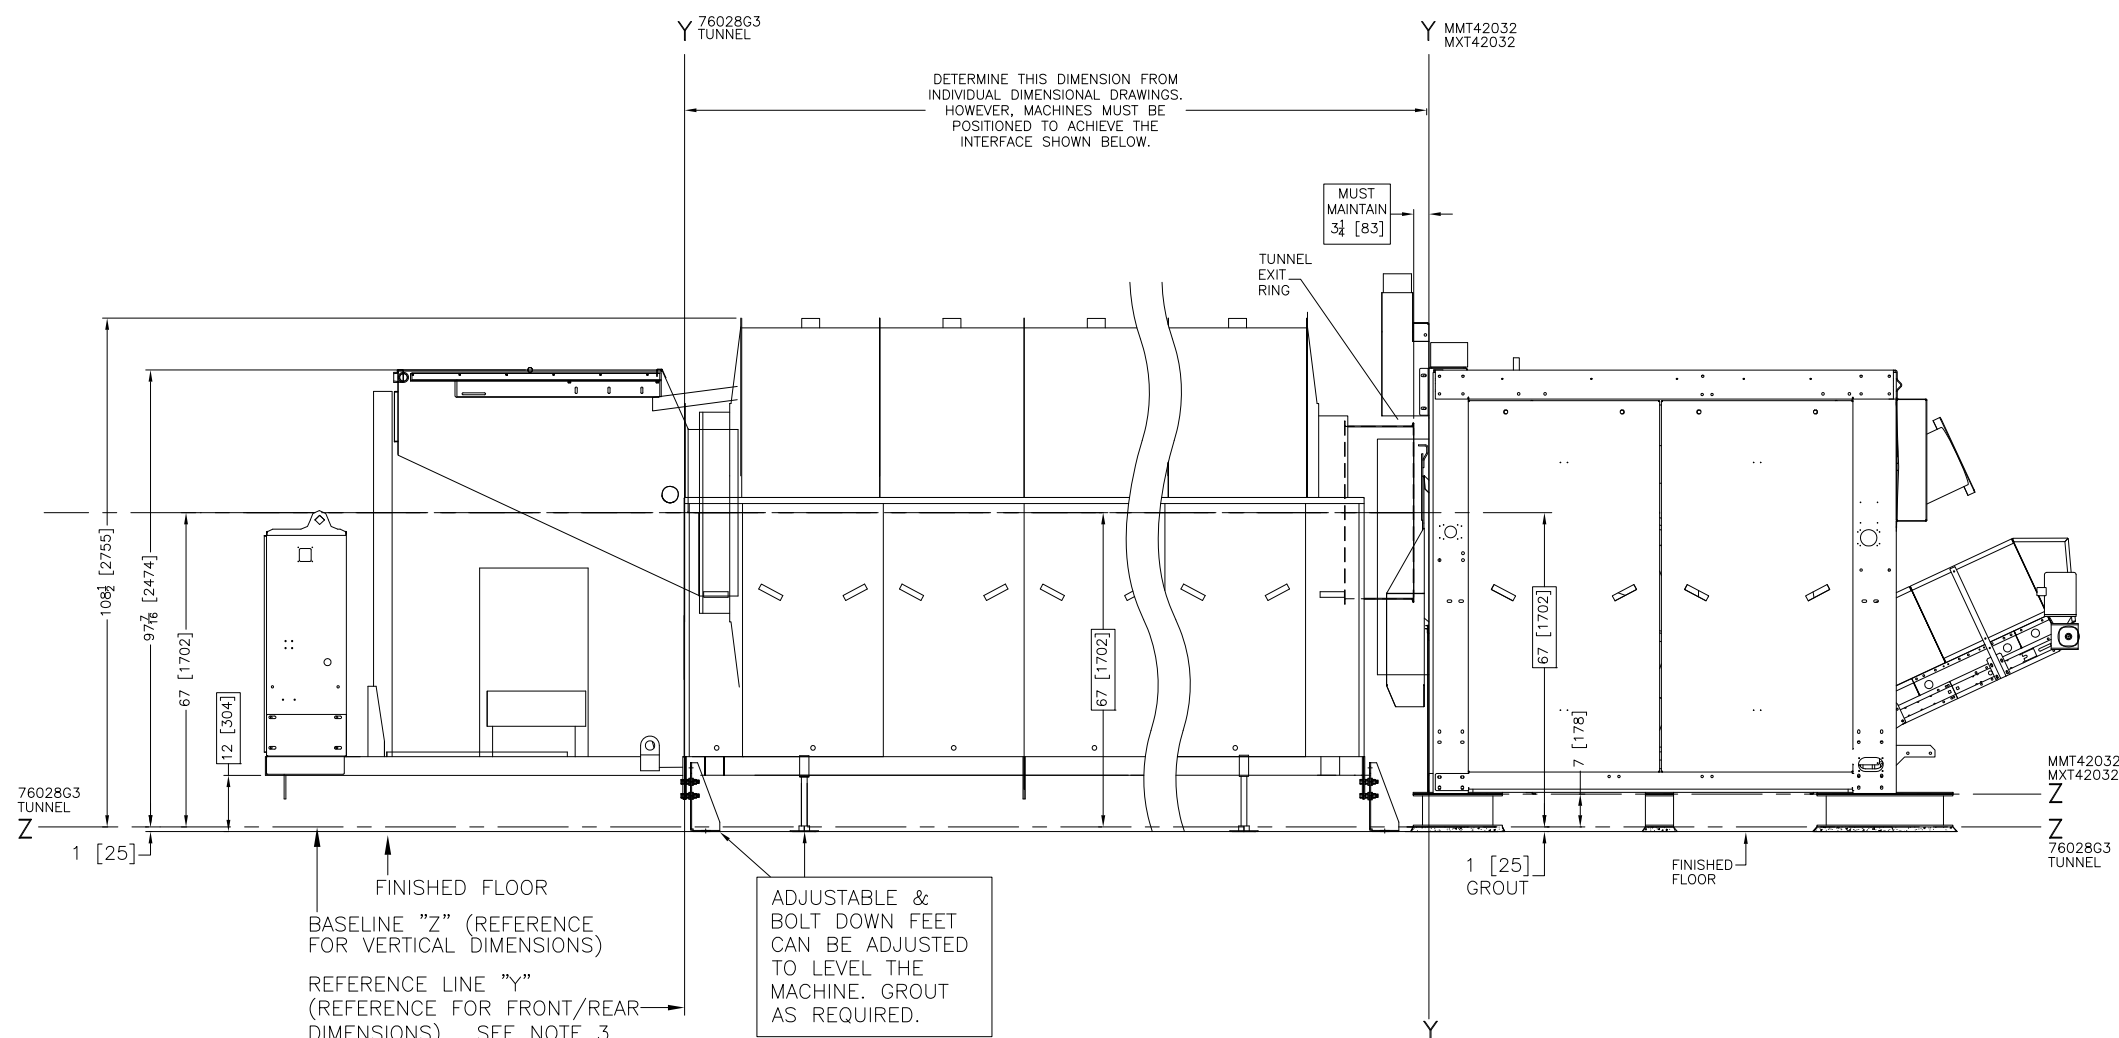

7	SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.) 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAMP TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BARE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BARE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PER PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.


ATTENTION


MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. FURTHER, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, ACCORDING TO SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE CHASSIS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

76028G3/MMT,MXT42032







DWG#

BDS28G3INDE


2017044D

PELLERIN MILNOR CORPORATION

P.O. Box 400 Kerner, LA 70063, USA Phone 504/467-9591,
 F.A.X. 504/468-3904, Email: milnorinfo@milnor.com

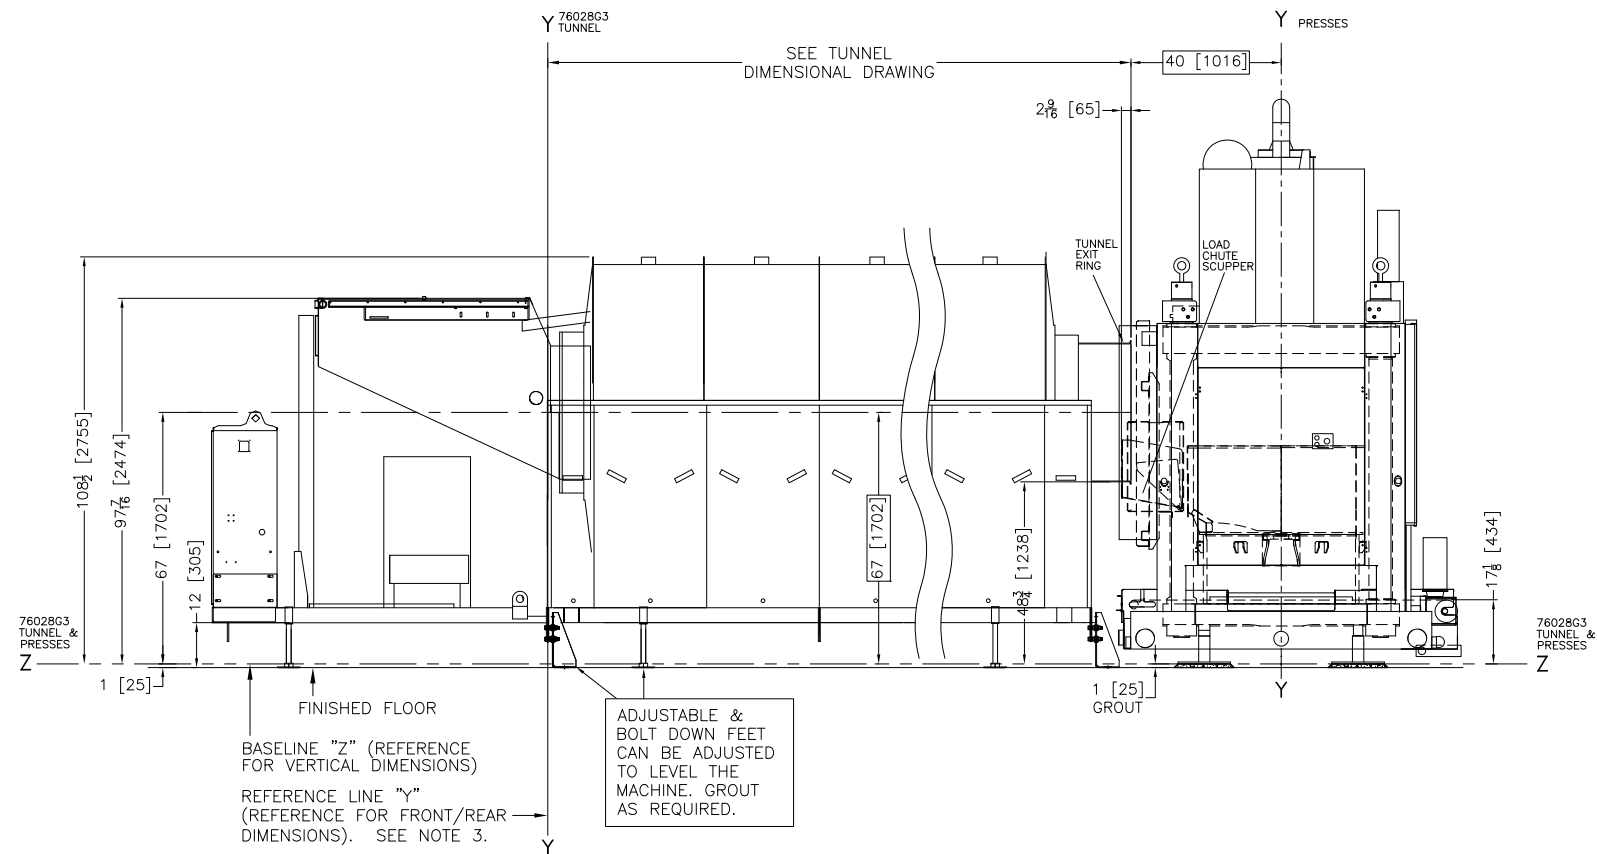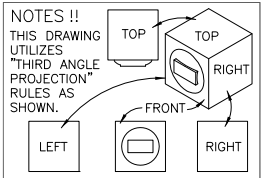

76028G3 TUNNEL/MP1540 SINGLE STAGE PRESSES

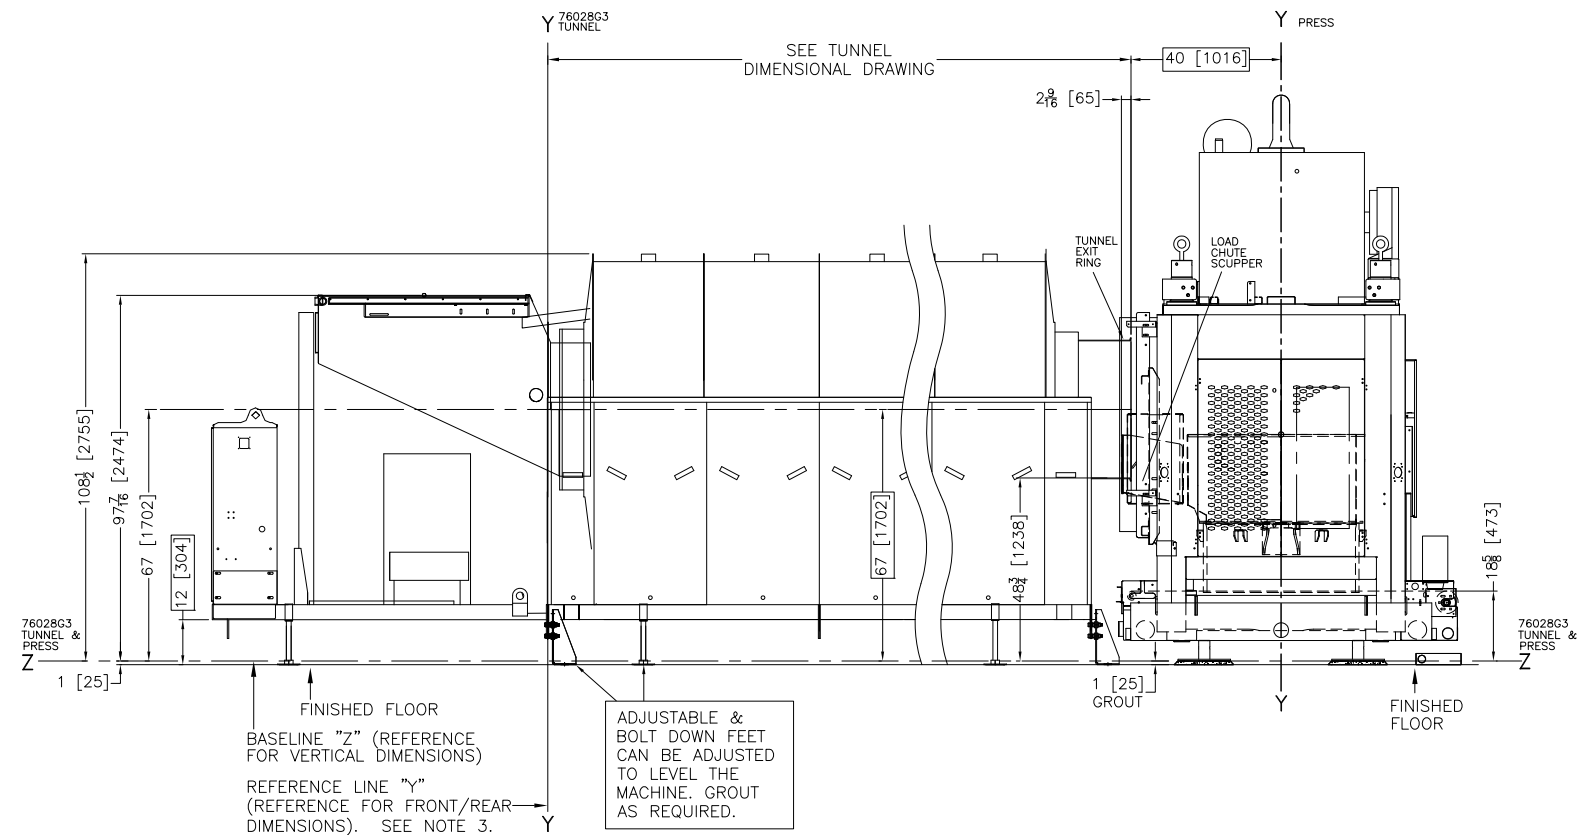

76028G3 TUNNEL/MP1556, MP1640, MP1656 SINGLE STAGE PRESSES

NOTES

- 7 SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".
- 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.


ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

76028G3/MP1540/MP1556/MP1640/MP1656


DM 0 0.5M 1M DWG# BDST28G3INGC 2010495D
INCHES 0 12 24 36

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1849, Email: mktg@milnor.com

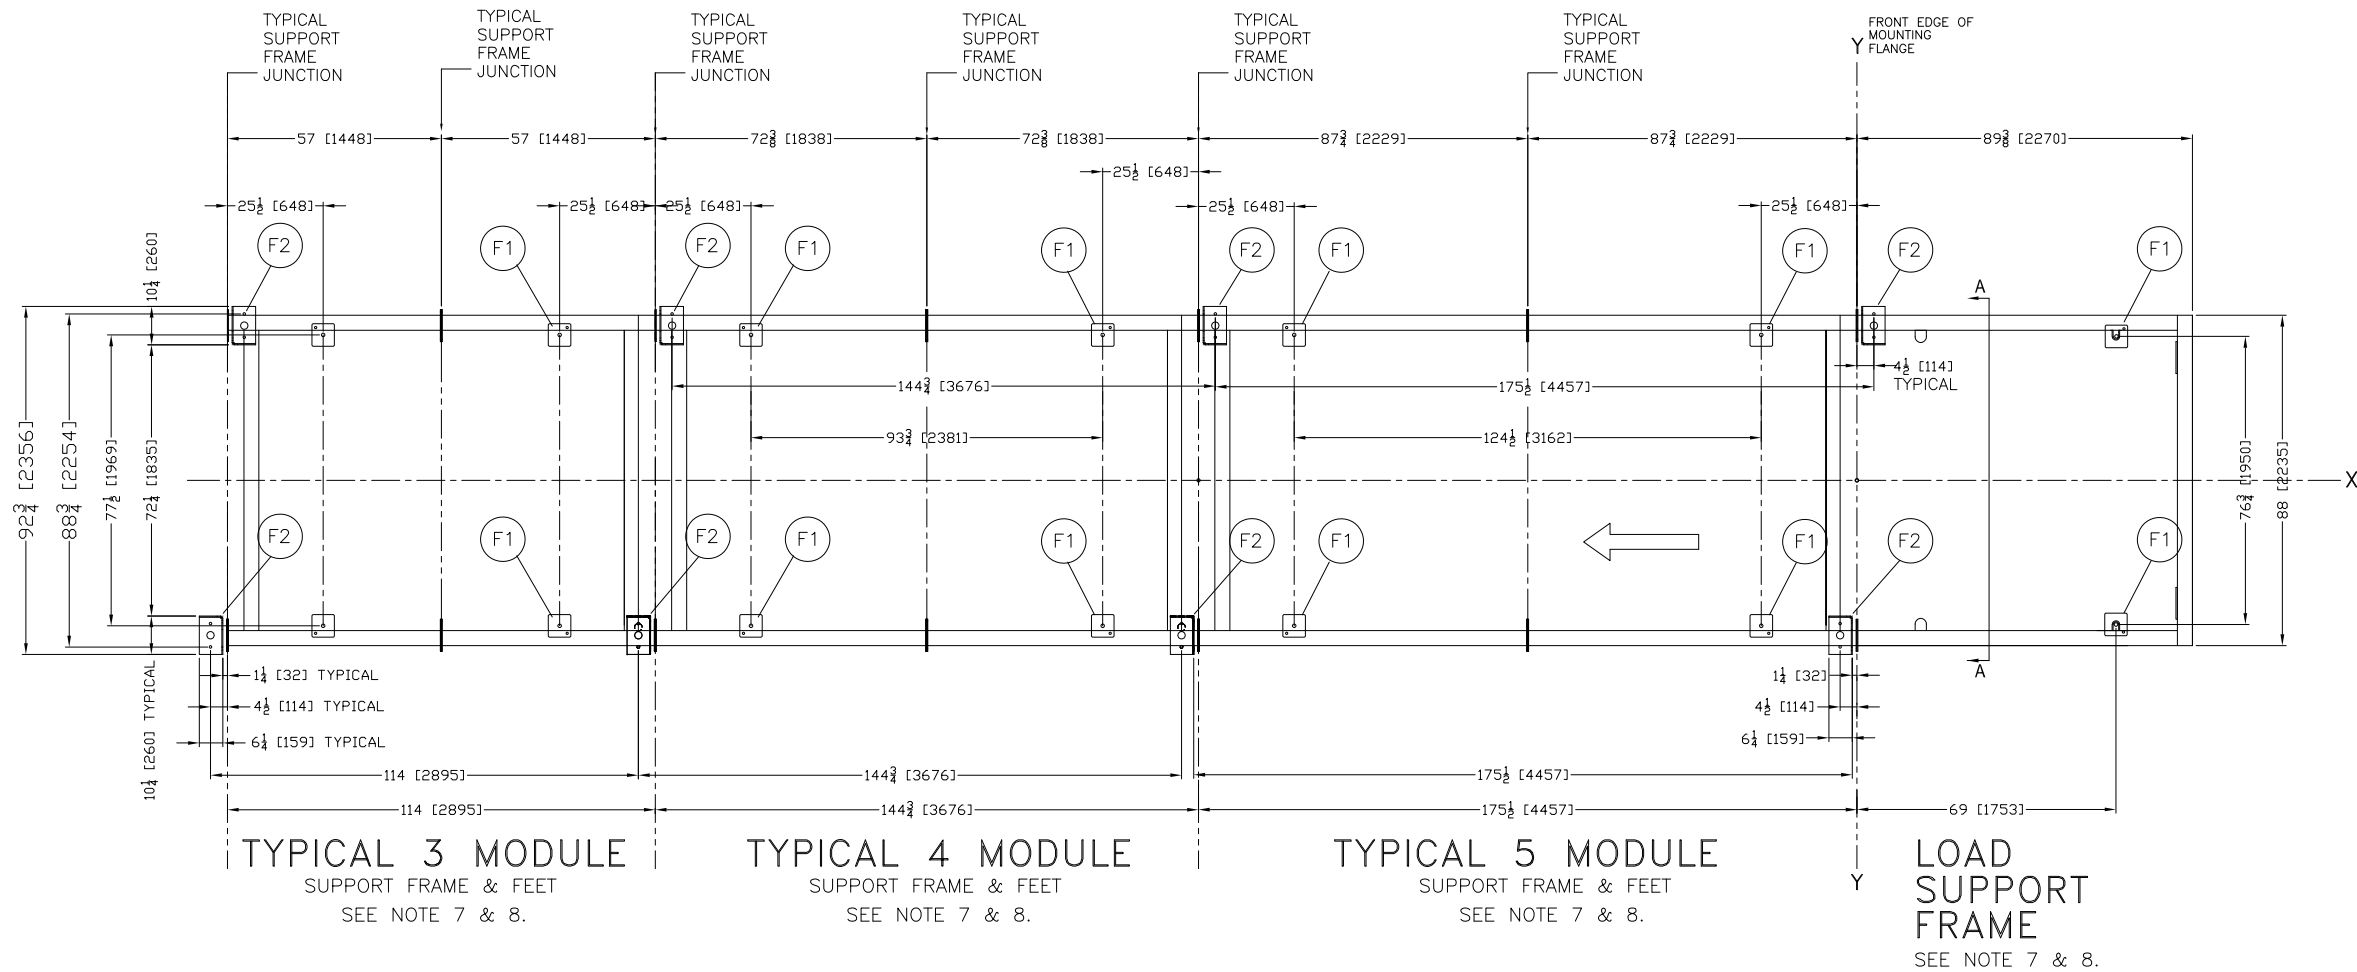

S1	LIFTING BRACKET MOUNTING PLATE, SEE BDST28G3SBCE.
H4	25" TALLEST BOLT DOWN BRACKET, CONSULT FACTORY
H3	21" TALL BOLT DOWN BRACKET, TYPICALLY FOR USE WITH M9V4840
H2	STANDARD BOLT DOWN BRACKET, TYPICALLY FOR USE WITH MP2601, MP1550, MP1603, MP1604 & MP1656.
H1	SHORTEST BOLT DOWN BRACKET, TYPICALLY FOR USE WITH MP2501 AND M7V4232.
F4	GROUT HOLES, 2" DIAMETER
F3	ANCHOR BOLT HOLES, 3/4" DIAMETER
F2	PLAN VIEW OF ALL BOLT DOWN FEET. SEE DETAIL & NOTE 8.
F1	ADJUSTABLE FLAT FEET 6"[152] SQUARE, MUST BE SUPPORTED, ANCHORING NOT REQUIRED FOR G3 TUNNEL
F0	TYPICAL SUPPORT FRAME JUNCTION
E1	CONTROL BOX MOUNTED TO FRONT LOAD SUPPORT FRAME
LEGEND	
ITEM	

- NOTES**
- THE RIGHT FRONT ADJUSTABLE FLAT FOOT, LOCATED UNDER THE PULSE FLOW TANK, MAY REQUIRE THE TOP OF THE THREADED ROD CUT OFF AT INSTALLATION TO CLEAR THE BOTTOM OF THE TANK.
 - BOLT DOWN FEET ARE USED TO PREVENT THE TUNNEL FROM "WALKING" AND MUST BE INSTALLED IN ADDITION TO ADJUSTABLE FLAT FEET WHICH SUPPORT THE MACHINE. A PAIR OF BOLT DOWN FEET MUST BE INSTALLED ON THE END OF EACH SECTION, AND ONE PAIR OF BOLT DOWN FEET USED AT THE JUNCTION OF TWO SECTIONS, SEE PLAN VIEW.
 - 7628 G3 TUNNELS CAN BE ORDERED IN VARIOUS COMBINATIONS OF 3, 4 & 5 MODULE SECTIONS, SEE BDST28G3CPCE. THIS DRAWING SHOWS 3, 4 & 5 MODULE SUPPORT FRAMES AND THE LOAD SUPPORT FRAME. CONSULT THE SPECIFICATIONS OF YOUR MACHINE BEFORE DETERMINING THE LOCATION OF ADJUSTABLE FEET AND BOLT DOWN BRACKETS.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
- ATTENTION**
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.
- ATTENTION**
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

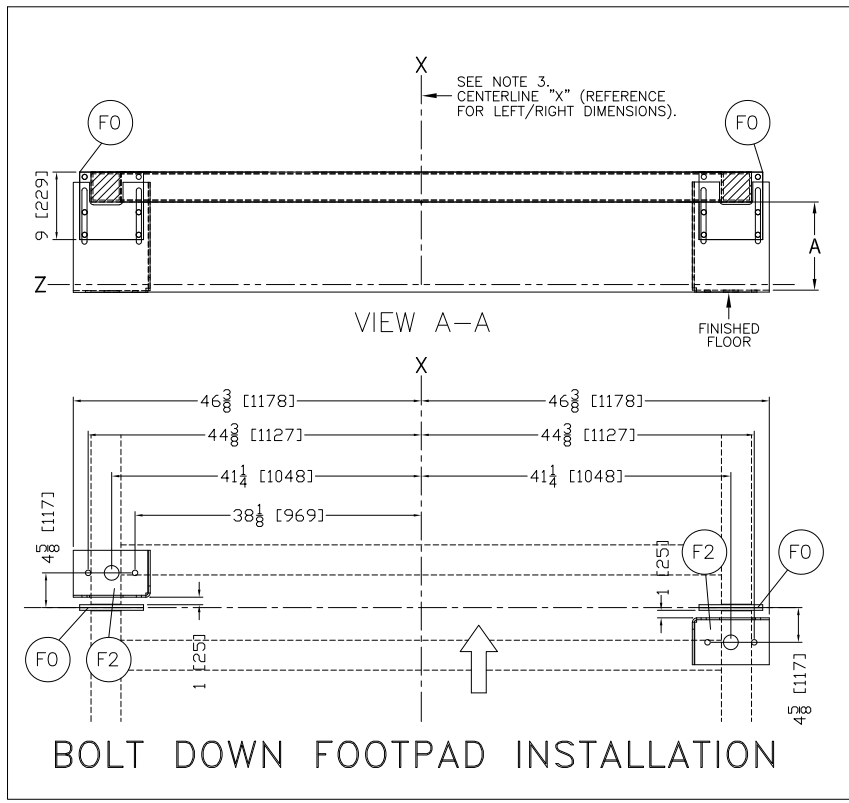

DETAIL: BOLT DOWN BRACKETS & TYPICAL FOOTPAD DETAIL.

TUNNEL CENTERLINE	BOLT DOWN BRACKETS	DIMENSION "A"
61" [1549]	H1	5 1/2" [139] MINIMUM— 8 3/4" [223] MAXIMUM
67" [1702]	H2 (STANDARD BRACKET)	10 1/4" [259] MINIMUM— 13 1/2" [343] MAXIMUM
>74 1/4" [1885]— 77 1/2" [1969]	H3	18 1/4" [462] MINIMUM— 21 1/2" [547] MAXIMUM
>78 1/4" [1986]— 81 1/2" [2070]	H4	21 1/2" [564] MINIMUM— 25 1/2" [648] MAXIMUM


FOUNDATION 76028G3 TUNNELS

DM 0 0.5M
INCHES 0 12 24

DWG# BDST28G3FBDE
2024125D


MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1849, Email: milnorinfo@milnor.com

DIMENSIONS THAT VARY WITH NUMBER OF MODULES		
76028G3 TUNNELS	DIMENSION "A"	
	INCHES	mm
3 MODULE	114	2896
4 MODULE	144 3/4	3676
5 MODULE	175 1/2	4457

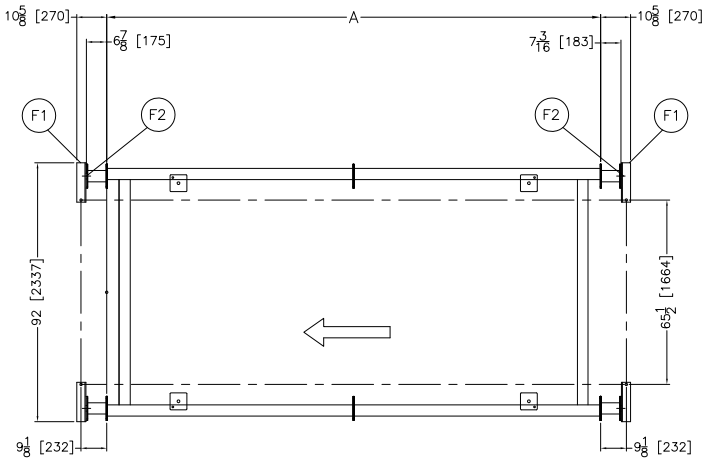


INDIVIDUAL TUNNEL SECTIONS

SUPPORT FRAME SHOWING
LIFTING EYES & SHIPPING BRACKETS

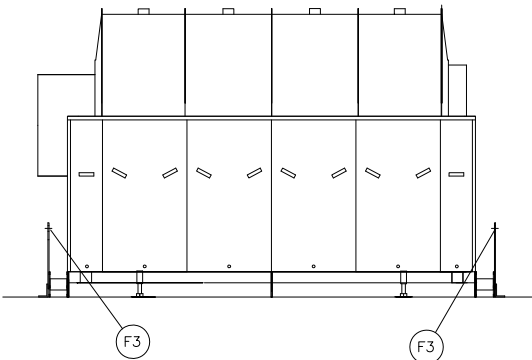

USE 4 POINT LIFTING
FOR INDIVIDUAL SECTIONS

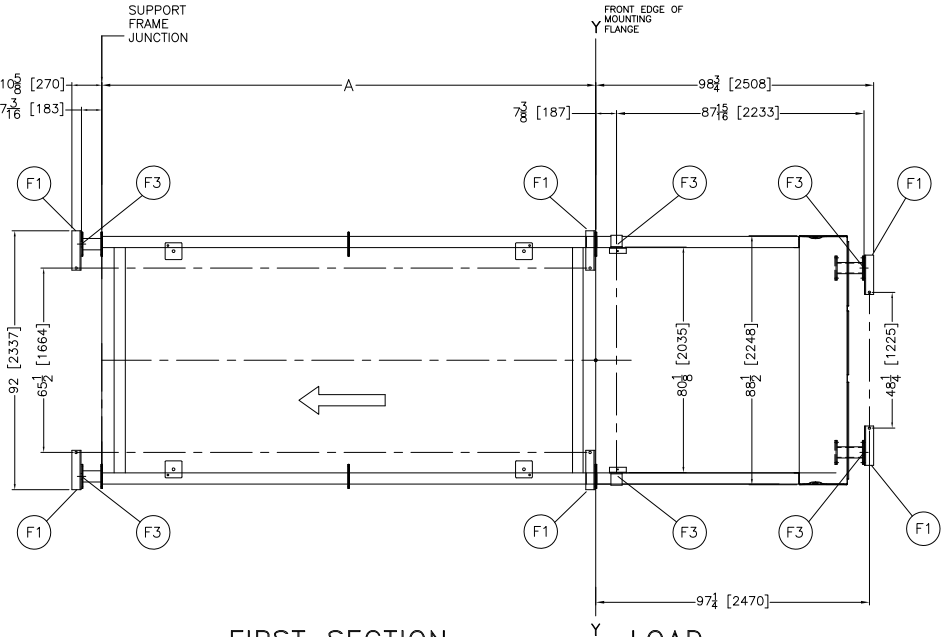


FIRST SECTION




SUPPORT FRAME SHOWING
LIFTING EYES & SHIPPING BRACKETS

LOAD

SHIPPED ATTACHED
TO FIRST SECTION
SEE NOTE 7.

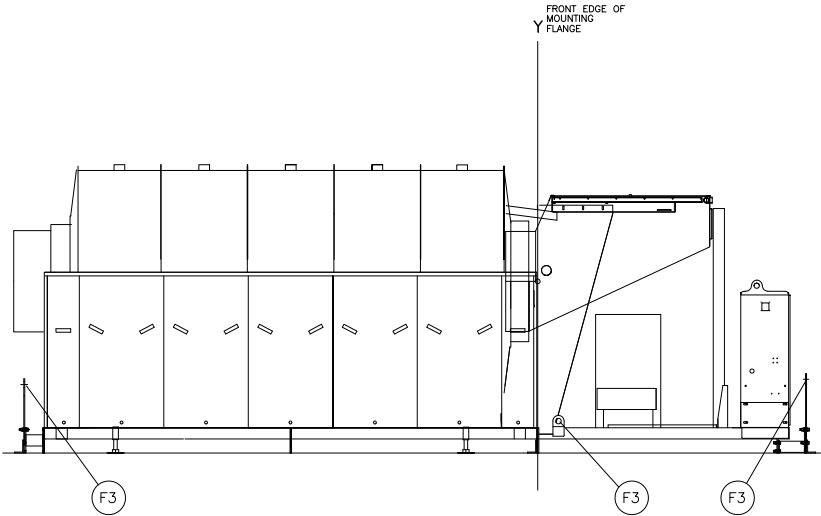

USE 6 POINT LIFTING FOR LOAD AND 1ST SECTION

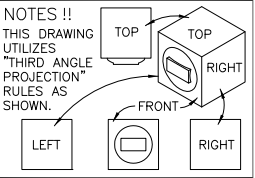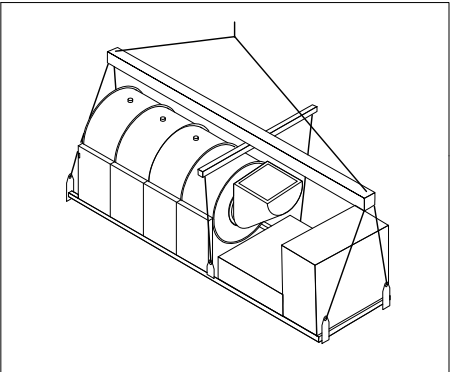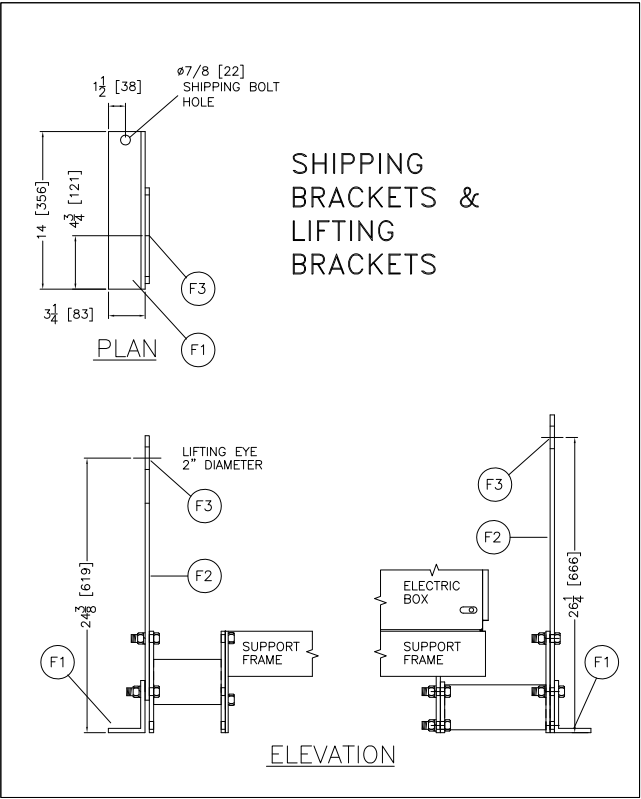


F3	LIFTING EYE, 2" [51] DIAMETER
F2	LIFTING BRACKET
F1	SHIPPING BRACKET FOR EXPORT, 7/8" [22] DIAMETER BOLT HOLE
ITEM	LEGEND

NOTES	
8	THIS DRAWING SHOWS 3, 4 & 5 MODULE SUPPORT FRAMES, AND THE LOAD SUPPORT FRAME. G3 TUNNELS CAN BE ORDERED IN VARIOUS COMBINATIONS OF 3, 4 & 5 MODULE SECTIONS. CONSULT THE SPECIFICATIONS FOR YOUR MACHINE BEFORE LOCATING THE SHIPPING BRACKETS.
7	MID AND END TUNNEL SECTIONS ARE SEPARATED BEFORE SHIPMENT. FIRST SECTIONS ARE SHIPPED WITH THE LOAD SUPPORT FRAME, TANK, & CONTROL BOX ATTACHED.
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.



SHIPPING BRACKETS 28G3	
	DWG# BDST28G3SBCE 2010406D
PPELLERIN MILNOR CORPORATION P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591, FAX 504/469-1849, Email: mktg@milnor.com	

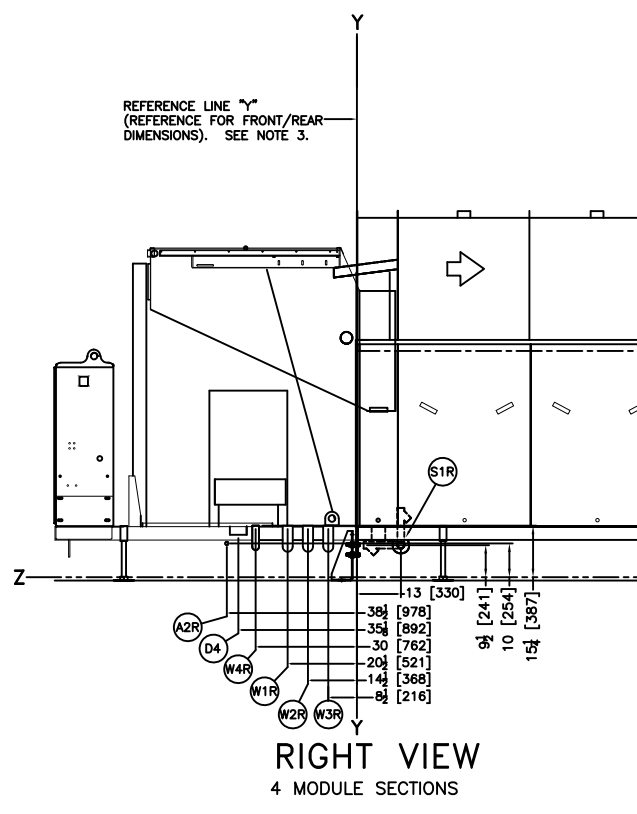

W4R	REUSE TANK HEADER, 2"NPT, UTILITIES RIGHT, SEE NOTE 16.
W3R	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W2R	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES RIGHT
W1R	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES RIGHT
W4L	REUSE TANK HEADER, 2"NPT, UTILITIES LEFT, SEE NOTE 16.
W3L	MODULE WATER HEADER #3, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W2L	MODULE WATER HEADER #2, 3"NPT, IF SPECIFIED, UTILITIES LEFT
W1L	MODULE WATER HEADER #1, 2" OR 3"NPT, UTILITIES LEFT
T1	REUSE TANK
S2	STEAM TRAP, STEAM CONDENSATE OUTLET, 1/2" NPT
S1R	STEAM INLET 2" NPT, UTILITIES RIGHT
S1L	STEAM INLET 2" NPT, UTILITIES LEFT
L1	LIQUID SUPPLY INLETS, SEE NOTE 13.
E2	MAIN ELECTRICAL CONNECTION
E1	ELECTRICAL CONTROL BOX
D4	REUSE TANK DRAIN, 4-1/2" HOSE CONNECTION
D3	5" FLOW TO FLOW SPLITTER, FOR OTHER WEIR DRAIN OPTIONS, SEE BDST28G30PAE.
D2	DRIP DRAIN 1-3/4" ID TUBING SUPPLIED. SEE NOTE 11.
D1	8" DIAMETER DRAIN VALVE, ON SPECIFIED MODULES
A2R	RIGHT MAIN AIR CONNECTION 1/2" NPT
A2L	LEFT MAIN AIR CONNECTION 1/2" NPT
A1	TYPICAL EXHAUST VENT 4[102] DIAMETER.
ITEM	LEGEND

NOTES

- 16 REUSE TUNNEL HEADER INLET, W4___, IS NOT ALWAYS USED. IT MAY CONNECT DIRECTLY TO W1___, W2___ OR W3___.
- 15 DIRECT THE STEAM CONDENSATE TO THE DRAIN TROUGH. DO NOT RETURN STEAM CONDENSATE TO THE BOILER BECAUSE OF POSSIBLE CONTAMINATION FROM CHEMICALS IN THE WASH WATER.
- 14 UTILITY INLETS (WATER-STEAM/AR) WILL ALWAYS BE OPPOSITE THE LOAD CONVEYOR. IF NOT SPECIFIED, THE INLETS WILL BE ON THE LEFT (W1L,W2L,W3L,W4L,A1L,S1L). IF LOAD CONVEYOR IS ON THE LEFT, USE RIGHT INLETS(W1R,W2R,W3R,W4R,A1R,S1R).
- 13 LIQUID SUPPLY INLETS, THE PVDF MANIFOLDS HAVE (4) 3/8" PORTS WITH (4) PVDF THREADED 3/8" PLUGS PER MANIFOLD, SHIPPED WITH THE MACHINE.
- 12 BACK FLOW PREVENTERS MUST BE INSTALLED IF LOCAL PLUMBING CODES REQUIRE. RECOMMENDED MODELS ARE WATTS SERIES 009. THEY CAN BE PURCHASED LOCALLY OR THROUGH MILNOR. CONTACT MILNOR FACTORY.
- 11 LEAK OFF FROM DRIP DRAINS MUST BE ROUTED TO DRAIN PUMP. THESE CONNECTIONS ARE SUPPLIED WITH TUBING, MAKING THIS A FLEXIBLE CONNECTION POINT.
- 10 THIS DRAWING SHOWS THE G3 TUNNEL AT 67'11702) CENTERLINE. SEE ADDITIONAL TUNNEL DRAWINGS FOR THE INTERFACE DIMENSIONS OF THE TUNNEL WHEN USED WITH SPECIFIC EXTRACTING EQUIPMENT.
- 9 STEAM CONDENSATE OUTLET AND PRESS WATER TO REUSE TANK ARE MEASURED OFF THE LAST SUPPORT FRAME, REGARDLESS OF HOW LONG THE TUNNEL IS.
- 8 FOR SIZE AND LOCATION OF ADJUSTABLE FEET AND BOLT DOWN BRACKETS, SIZE OF 4 AND 5 MODULE SUPPORT FRAMES, SEE BDPF28G3FBDD.
- 7 FOR 6" WEIR DRAIN OPTIONS AND DIMENSIONS, SEE BDPF28G3CPDDE.
- 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
 48 [1067] IF OBJECT IS GROUNDED WALL (e.g. BARE CONCRETE, BRICK, ETC.)
 48 [1219] IF OBJECT IS ANY LIVE PART.
 CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET. ON MACHINES ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT, ON TRAVERSING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH RESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

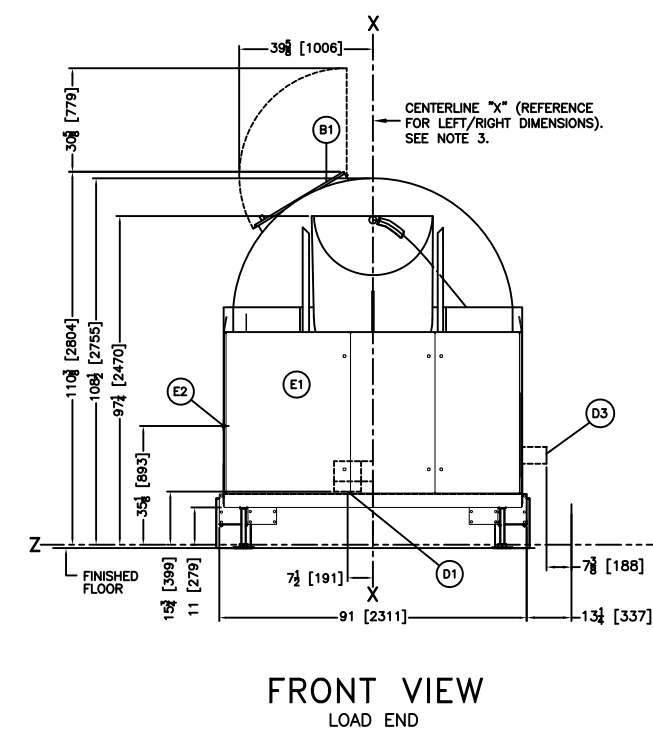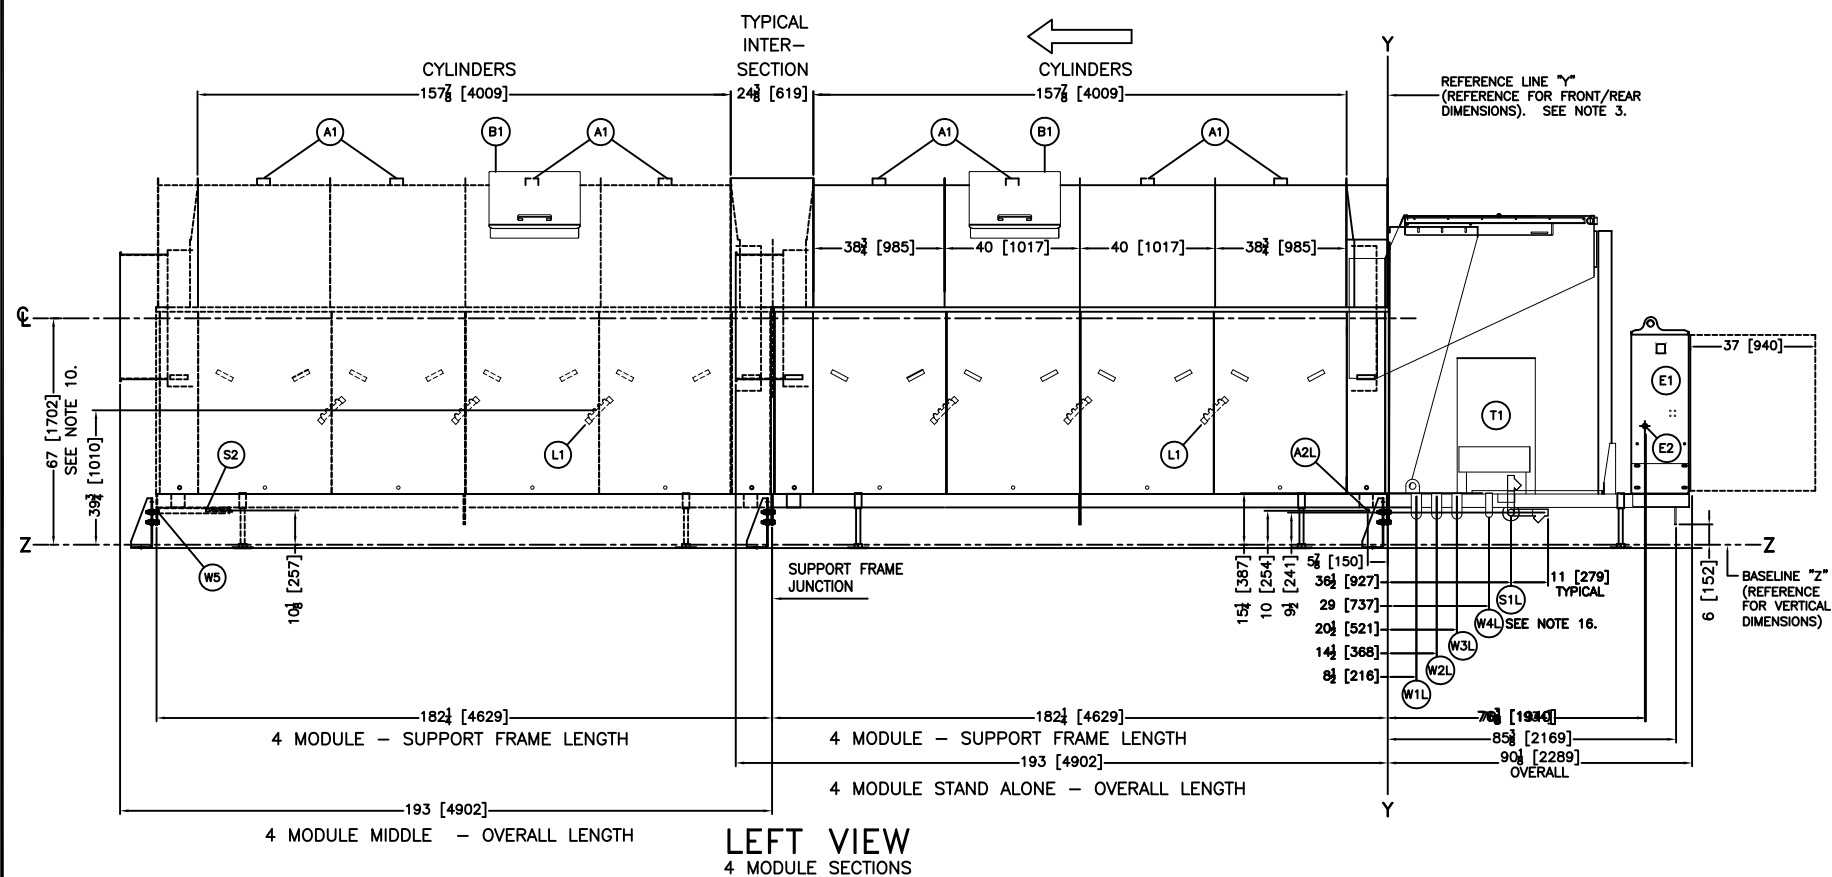








MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE WINNER/USER ULTIMATELY RESPONSIBLE FOR A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION


THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING OPERATION, WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

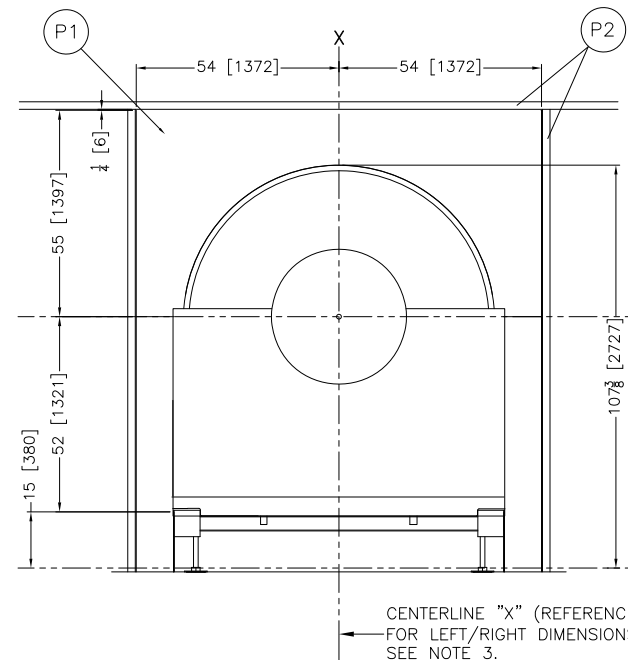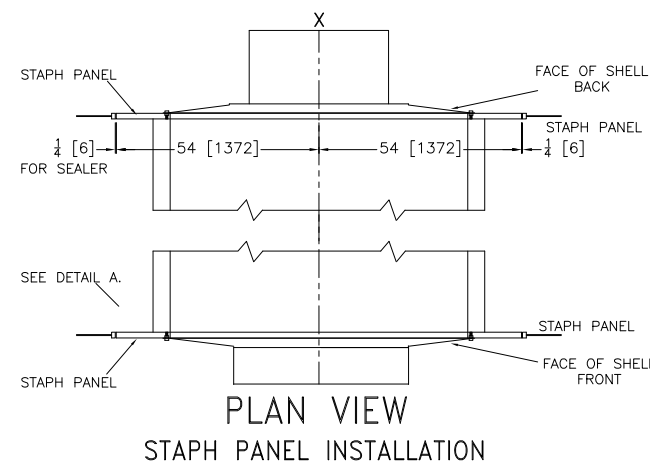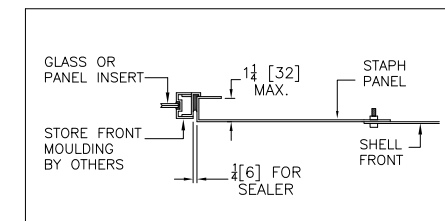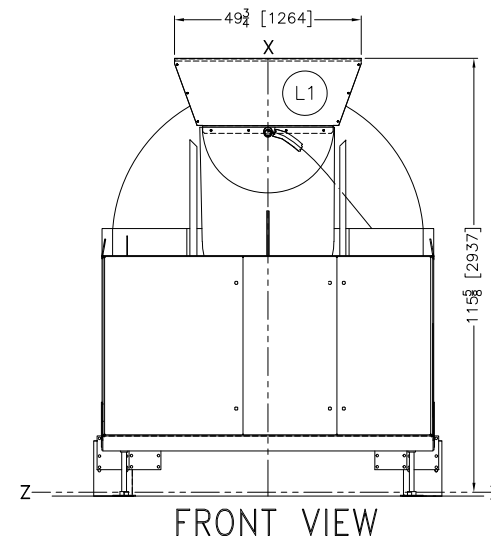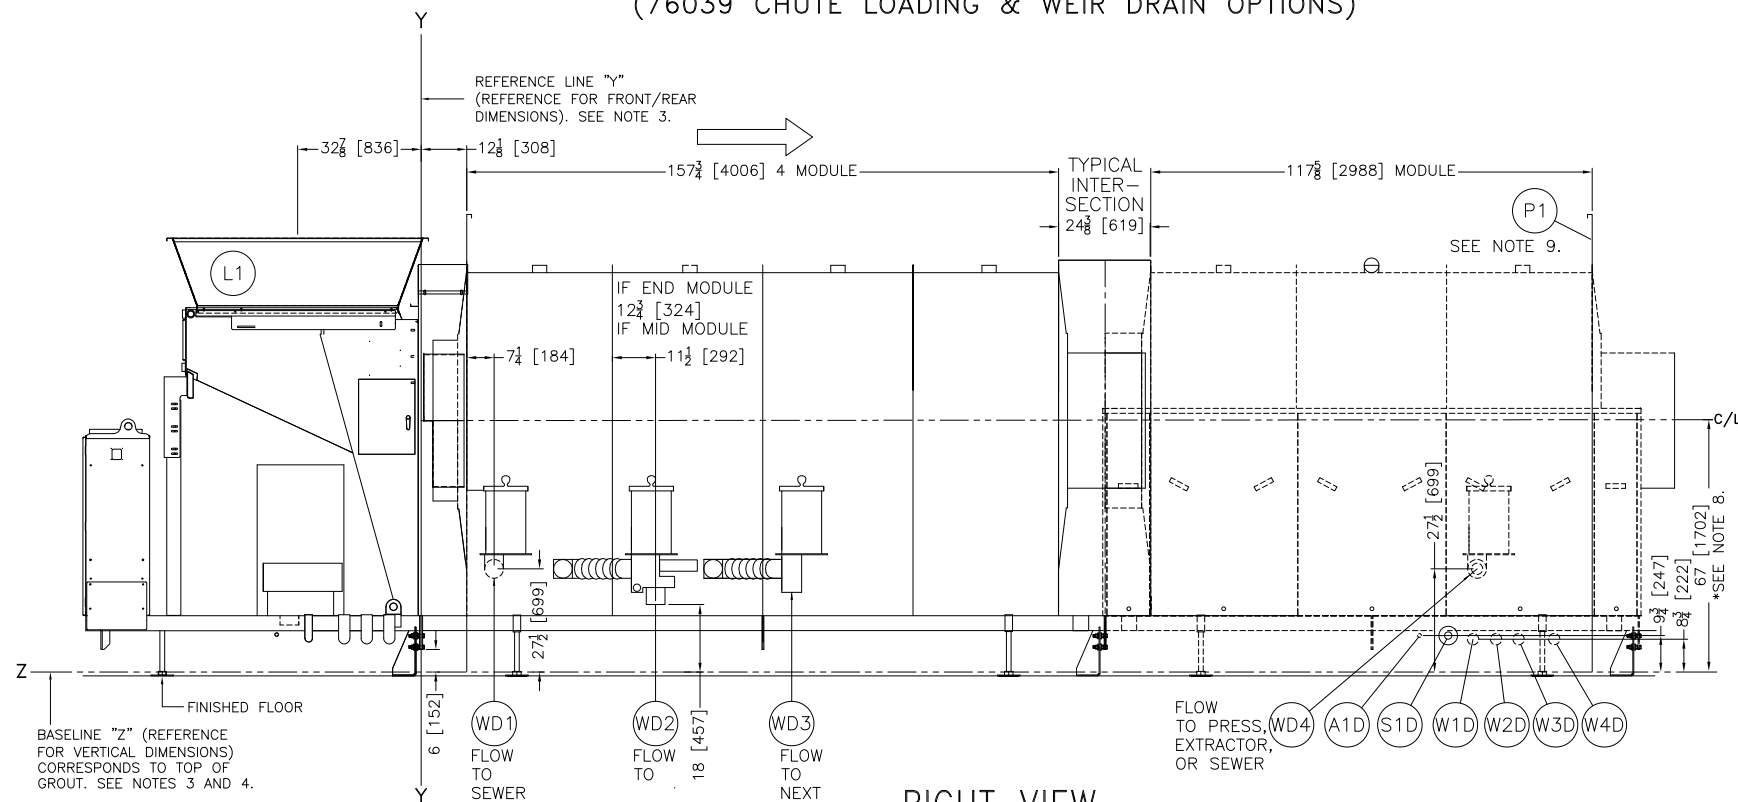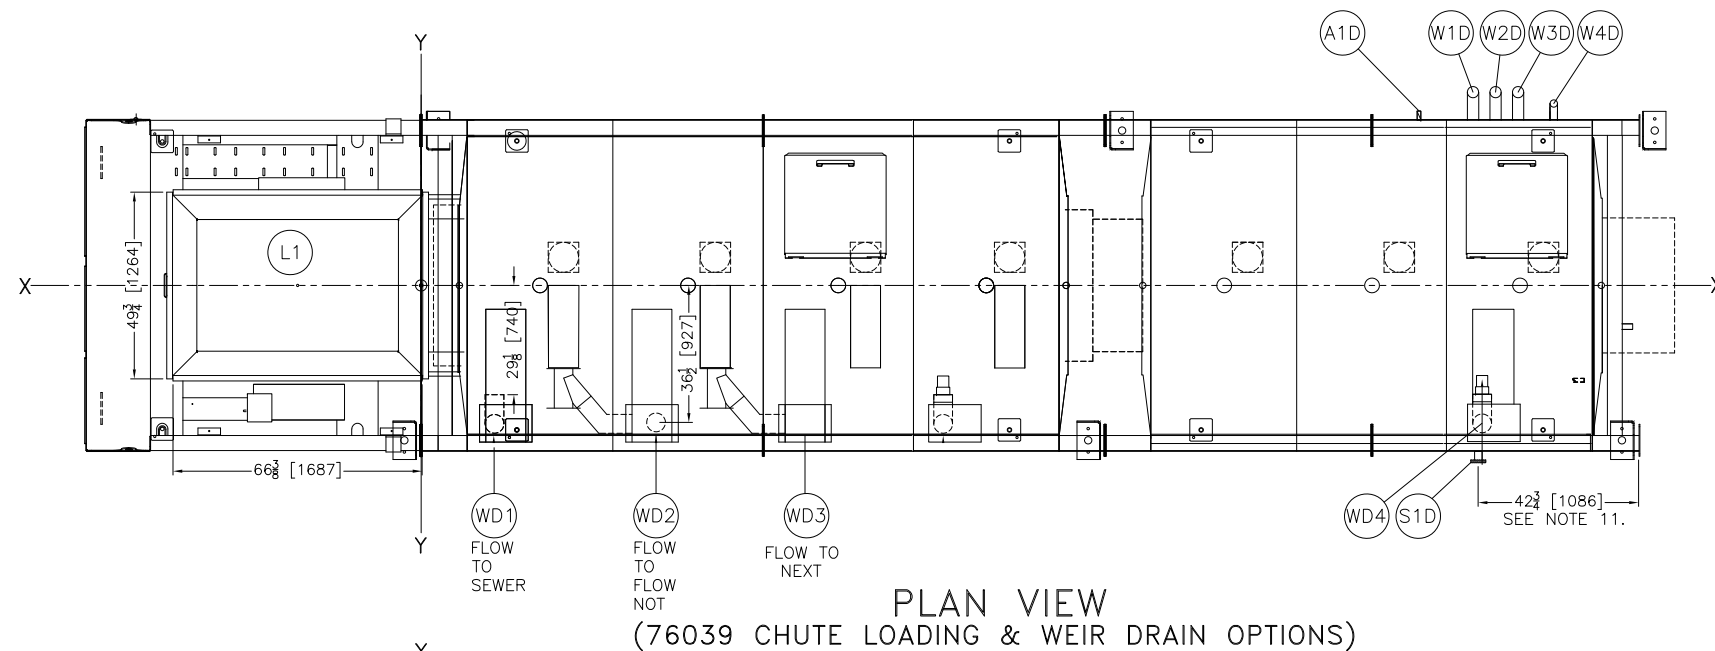
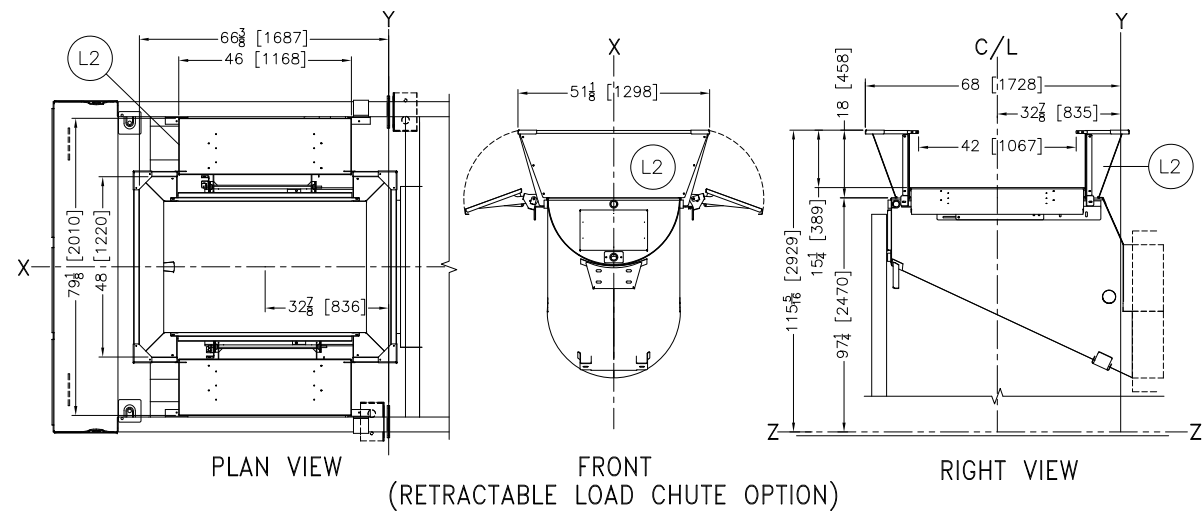


W4D	UTILITIES DISCHARGE END, MODULE WATER HEADER #4 (IF SPECIFIED) 2"NPT, SEE NOTE 11.
W3D	UTILITIES DISCHARGE END, MODULE WATER HEADER #3 (IF SPECIFIED) 3"NPT, SEE NOTE 11.
W2D	UTILITIES DISCHARGE END, MODULE WATER HEADER #2 (IF SPECIFIED) 3"NPT, SEE NOTE 11.
W1D	UTILITIES DISCHARGE END, MODULE WATER HEADER #1, 2" OR 3"NPT, SEE NOTE 11.
S1D	UTILITIES DISCHARGE END, STEAM INLET RIGHT, 2" NPT, 4 BOLT, FLANGED. SEE NOTE 11.
P2	STORE FRONT MOLDINGS BY OTHERS, SEE DETAIL.
P1	OPTIONAL STAPH GUARD PANEL, SEE NOTE 9.
L2	OPTIONAL RETRACTABLE LOAD CHUTE FOR SLING LOADING
L1	OPTIONAL LARGER LOAD CHUTE FOR SLING/BAG LOADING WITH FLAIRSIDES
G1	OPTIONAL VIEWPORT ON SPECIFIED MODULES. DIMENSIONED FROM CENTER OF MODULE.
D6	OPTIONAL PF TANK REUSE AUTO-DRAIN, 4-1/2"OD (5" HOSE NOT SUPPLIED).
D4	FLOW TO PRESS OR EXTRACTOR, TYPICAL OF THE LAST TUNNEL MODULE, 3" TOE CONNECTION, FOR 3-1/2" HOSE SUPPLIED BY PMC.
D3	FLOW TO NEXT MODULE, SEE NOTE 10.
D2	5" NPT FLOW TO FLOWNOT, 4" PVC SUPPLIED TO SEWER, CAN BE MODIFIED AT INSTALLATION, SEE NOTE 10.
D1	5" NPT FLOW TO SEWER, SEE NOTE 10.
A1D	UTILITIES DISCHARGE END, MAIN AIR CONNECTION, 1/2" NPT, SEE NOTE 11.
ITEM	LEGEND

NOTES	
11	OPTIONAL DISCHARGE END UTILITIES ARE ON THE LAST MODULE. WATER AND AIR MUST BE ON THE LEFT. STEAM MUST BE ON THE RIGHT. DIMENSIONS ARE APPROXIMATE.
10	WEIR DRAIN OPTIONS ARE SHOWN DIMENSIONED OFF THE FRONT EDGE OF EACH MODULE. THESE MEASUREMENTS ARE GOOD FOR EITHER 3 OR 4 MODULE UNITS.
9	STAPH GUARD PANELS MAY ONLY BE INSTALLED ON ENTRY SHELLFRONT OR EXIT SHELLBACK. STAPH PANELS MAY NOT BE LOCATED IN THE MIDDLE OF THE TUNNEL. THE DIMENSIONS AND LOCATIONS SHOWN ARE SUBJECT TO NORMAL MANUFACTURING TOLERANCE AND MAY VARY BETWEEN MACHINES.
8	THIS DRAWING SHOWS THE G3 TUNNEL AT 67" [1702] CENTERLINE. SEE ADDITIONAL TUNNEL DRAWINGS FOR THE INTERFACE DIMENSIONS OF THE TUNNEL WHEN USED WITH SPECIFIC EXTRACTING EQUIPMENT. THE TUNNEL MAY REQUIRE A VERTICAL ADJUSTMENT TO INTERFACE WITH ADJACENT MACHINES.
7	FOR OVERALL DIMENSIONS AND STANDARD CONNECTIONS, SEE BDST39G3M3CE, BDST39G3M4CE.
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASLINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
ATTENTION	
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.	
ATTENTION	
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.	

76039 G3 PF TUNNEL OPTIONS



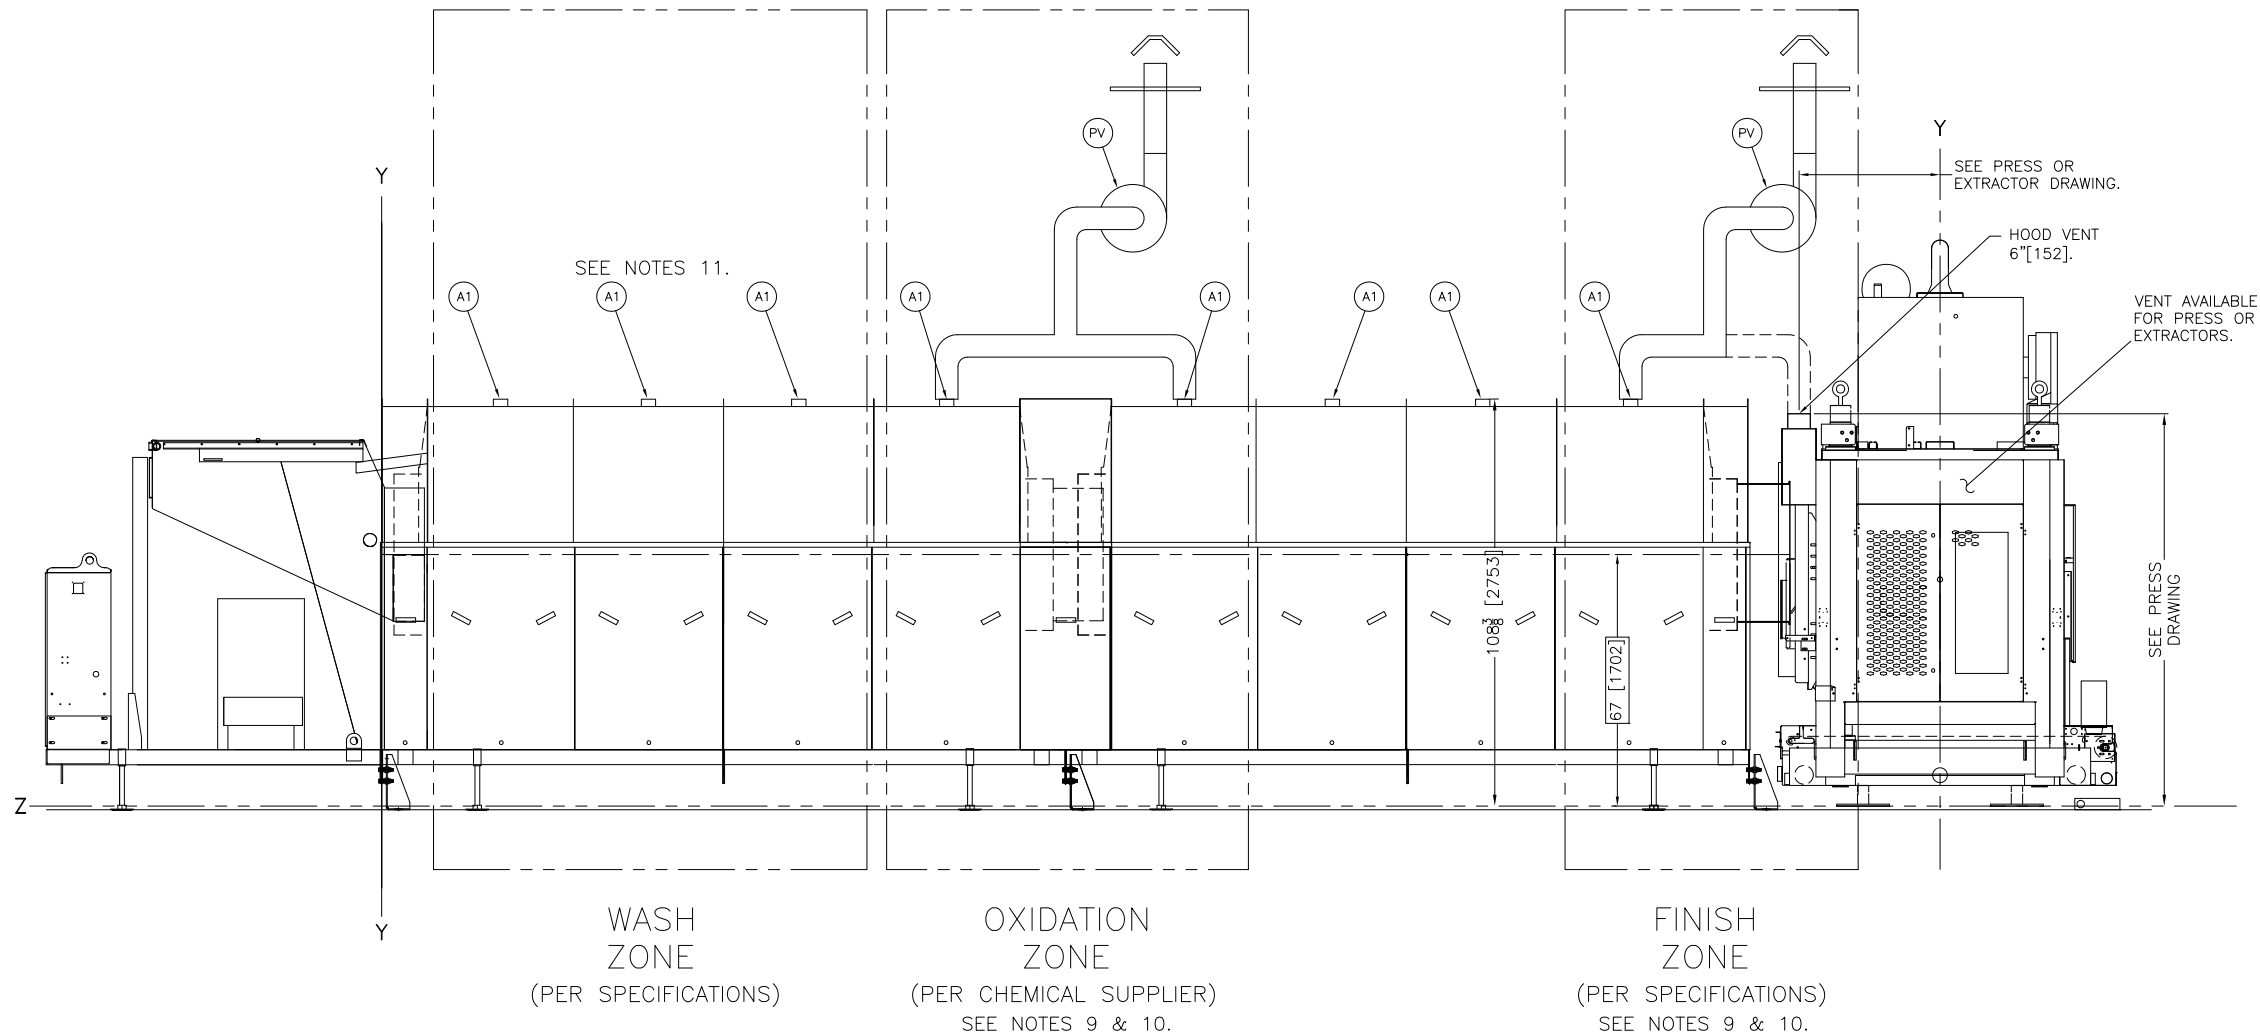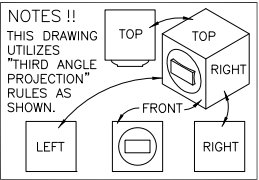

RECOMMENDED VENT SYSTEM FOR THE TUNNEL WASHER AND ADJACENT PRESS

PV	POWERED VENTILATOR & PIPING BY OTHERS, SEE NOTE 10.
A1	VENT, 4[102] DIAMETER. SEE NOTES 8, 9 & 10.


ITEM	LEGEND
------	--------

- NOTES**
- 11 IT IS NOT RECOMMENDED TO CONNECT MODULE VENTS AHEAD OF THE OXIDATION ZONE TO THE POWER VENT SYSTEM. IF THIS IS NEEDED, ADD 200 TO 250 SCFM OF POWERED VENTILATION PER ADDITIONAL MODULE VENTED.
- 10 THE BEST PRACTICE IS TO PROVIDE TWO SEPARATE, POWERED VENTILATION UNITS THAT MEET THE FOLLOWING CONDITIONS:
A) THE TWO UNITS ARE ISOLATED FROM EACH OTHER TO AVOID HARMFUL CHEMICAL REACTIONS.
B) VENTILATION FANS HAVE SUFFICIENT POWER TO DRAW VAPORS AWAY FROM THE EQUIPMENT. MILNOR RECOMMENDS:
OXIDATION ZONE: 600-750 SCFM
(300 TO 375 PER CONNECTION POINT, IF TWO MODULES)
FINISH ZONE PLUS THE PRESS ENCLOSURE: 600-750 SCFM
(200 TO 250 SCFM PER CONNECTION POINT, IF TWO MODULES PLUS THE PRESS).
THE SCFM VALUES ARE BASED ON AMBIENT AIR TEMPERATURE OF 68°F(20°C) AND A MINIMAL RELATIVE HUMIDITY.
C) FAN MOTORS ARE EQUIPPED WITH AN ALARM (EXAMPLE: INDICATOR LIGHT) TO ALERT PERSONNEL IF A MOTOR FAILS.
D) FOR TUNNELS WITH LESS THAN SEVEN MODULES, CONSULT MILNOR FACTORY.
- 9 VAPORS GENERATED IN THE OXIDATION ZONE AND THE FINISH ZONE OF THE TUNNEL CAN MIX TOGETHER, PRODUCE NOXIOUS GASES, AND CORRODE EQUIPMENT. WITHOUT ADEQUATE VENTILATION, THESE VAPORS WILL EXIT THE TUNNEL DISCHARGE RING OR CONCENTRATE IN THE DISCHARGE END OF THE TUNNEL AND ADJACENT PRESS ENCLOSURE. THE SEVERITY VARIES WITH CHEMICAL COMPOSITION AND USAGE, BUT CORROSION CAN BE RAPID AND SEVERE.
- 8 ALL VENTS ARE CAPPED FOR SHIPMENT. UNCAP ALL VENTS AT INSTALLATION.
- 7 SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".
- 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
- 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

76039G3 ST - VENTING



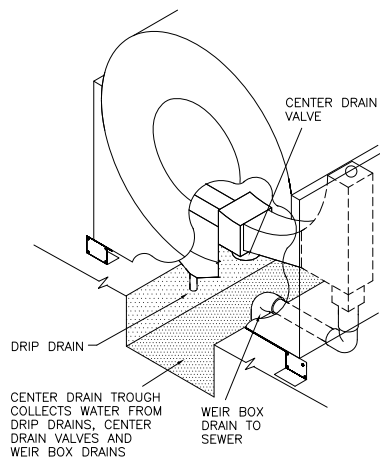


FIGURE 1: CENTER DRAIN TROUGH TUNNELS WITH DRAIN VALVES
SEE NOTES 9 & 10.

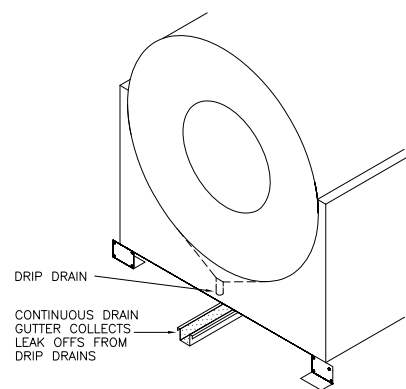


FIGURE 2: CENTER DRAIN TROUGH TUNNELS WITH NO DRAIN VALVES
SEE NOTE 8.




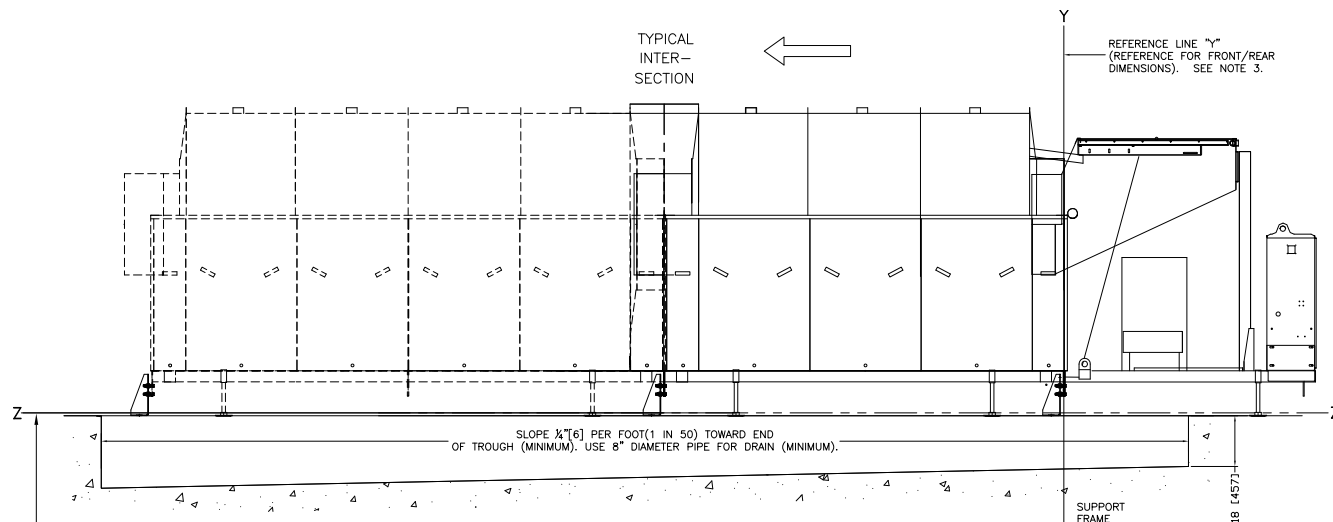


FIGURE 3
LEFT VIEW OF CENTER TROUGH
(3 & 4 MODULES SHOWN)

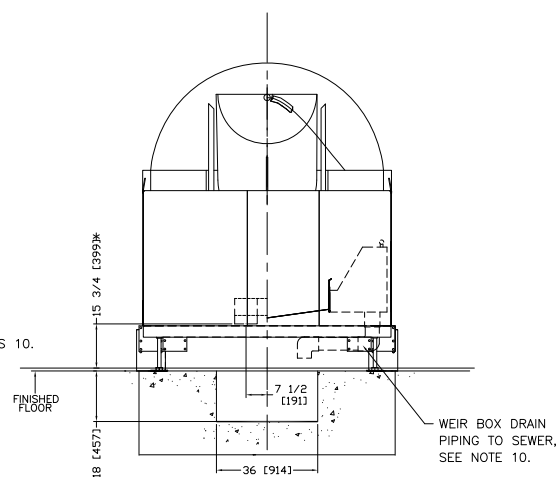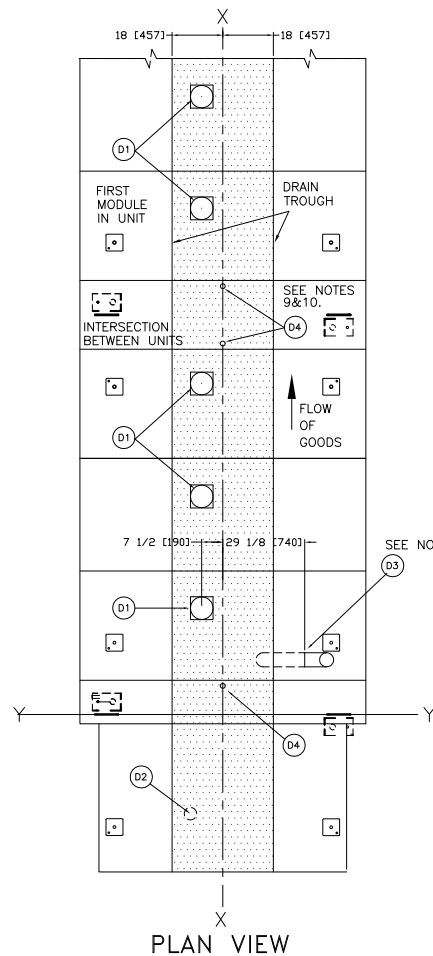

CENTER DRAIN TROUGH
(SEE NOTES 9 & 10. SEE FIGURE 1.)

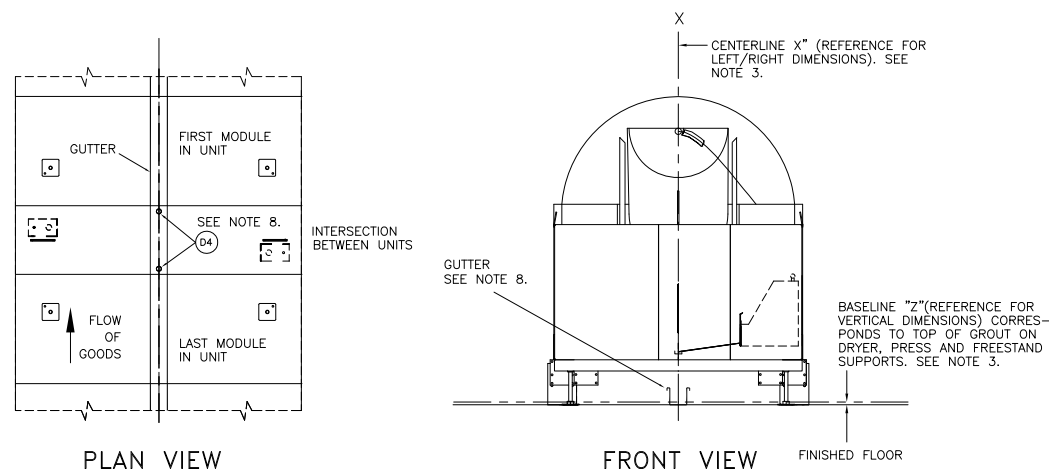

GUTTER FOR DRIP DRAINS
(SEE NOTE 8. SEE FIGURE 2.)

* SLOPE 1/4 [6] PER FOOT (1 IN 50) TOWARD END OF TROUGH (MINIMUM). USE 8" DIAMETER PIPE FOR DRAIN (MINIMUM).

TUNNEL DRAINS WHICH MUST BE ACCOMMODATED:

- DRIP DRAINS – (TWO PER MODULE UNIT, 1-3/4" TUBING)
- CENTER DRAIN VALVES – (OPTIONAL 1-2 DRAIN VALVES PER MODULE)
- WEIR BOX DRAINS TO SEWER – (OPTIONAL)
- TANK DRAIN (5" HOSE CONNECTION)

D4	DRIP DRAINS, 1-3/4" ID TUBING SUPPLIED
D3	WEIR BOX , FLOW TO SEWER, 5" NPT
D2	TANK DRAIN, 5" HOSE CONNECTION
D1	CENTER DRAIN VALVES, 8"DIAMETER, ON SPECIFIED MODULES
ITEM	LEGEND

NOTES

- WEIR BOX DRAIN PIPING TO SEWER SUPPLIED BY PMC.
- A CENTER DRAIN TROUGH OR ITS EQUIVALENT IS NECESSARY TO COLLECT THE LEAK OFFS FROM THE DRIP DRAINS AND THE WATER FROM UNITS WITH A CENTER DRAIN VALVE.
- WHEN THERE ARE NO CENTER DRAIN VALVES OR WEIR BOX DRAINS, A CONTINUOUS OPEN DRAIN GUTTER FABRICATED OF STAINLESS STEEL, COPPER OR PLASTIC IS REQUIRED TO COLLECT THE LEAK OFFS FROM THE DRIP DRAINS. THESE DRIP DRAINS ABSOLUTELY MUST NOT BE PIPED WITH CLOSED PIPING WHICH WILL COLLECT LINT AND BLOCK.
- NOTE THIS DRAWING SHOWS THE RECOMMENDED DRAIN TROUGH DESIGN FOR THE 76039 G3 (STANDARD) AND 76039 G3 (WORKWEAR) MACHINES. DRAIN TROUGH CONSTRUCTION IS THE RESPONSIBILITY OF OTHERS. THIS DRAWING CONVEYS NO EXPRESS OR IMPLIED WARRANTY WITH REGARD TO THE CONSTRUCTION AND/OR SUITABILITY OF THESE DESIGNS FOR YOUR SPECIFIC INSTALLATION.
- AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVERSING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
- USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.


ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION



THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

DRAIN TROUGH 7628/39G3 TUNNEL



DWG# BDST39G3DTCE
2012026D

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1849, Email: mktg@milnor.com

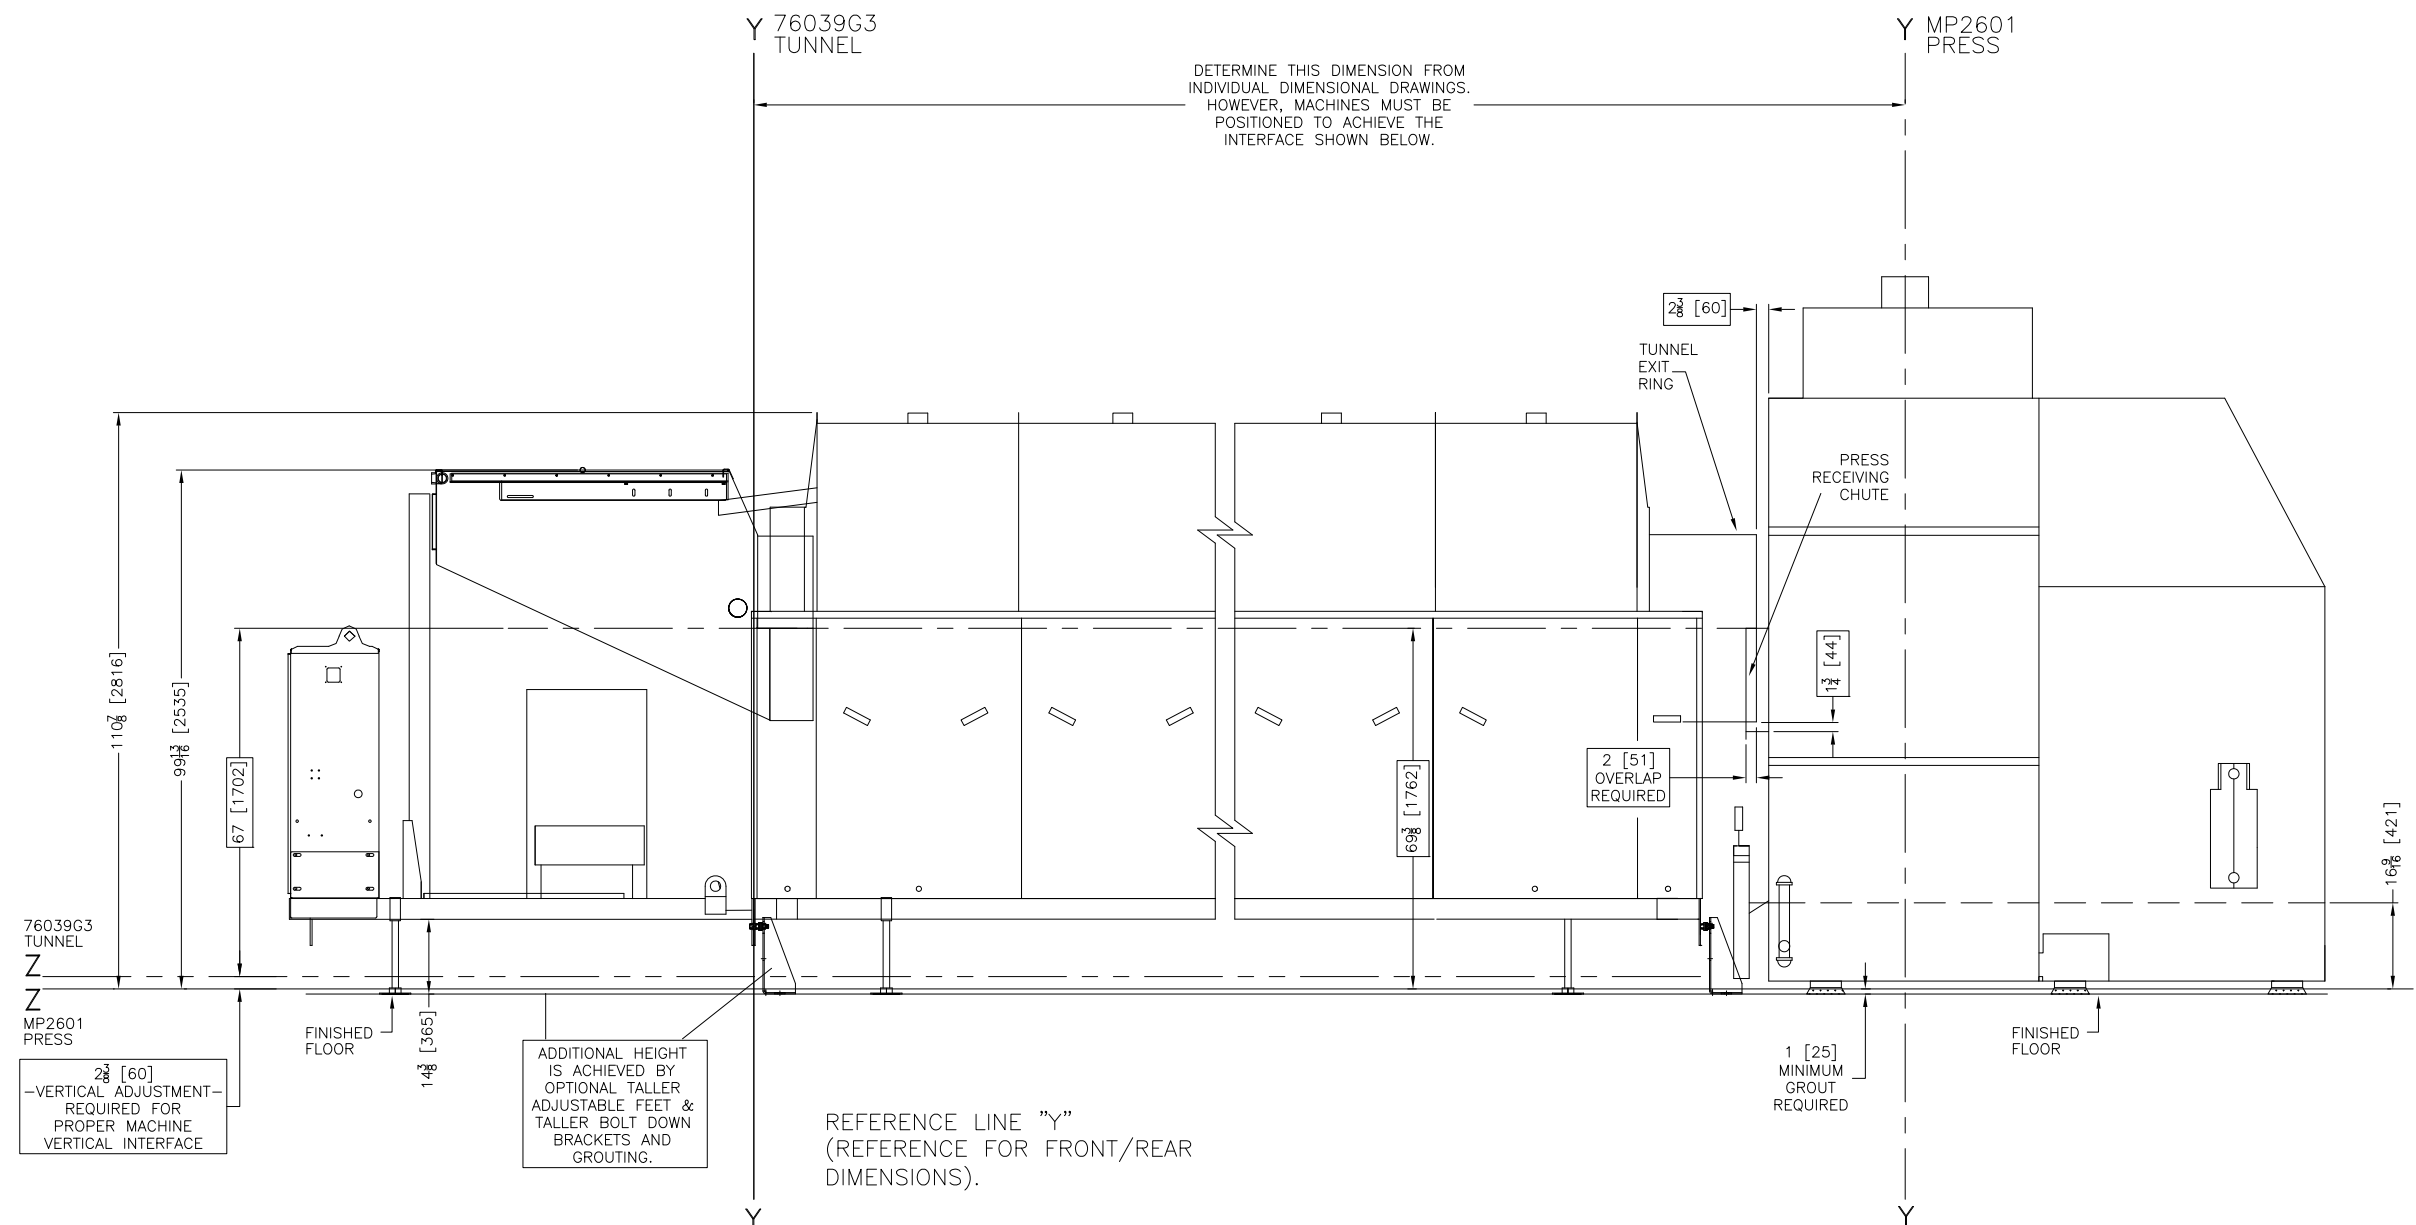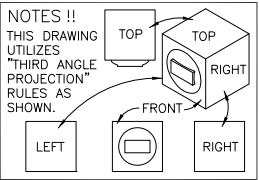



76039G3 TUNNEL/MP2601(60KG) 2 STAGE PRESS

- NOTES**
- SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
- ATTENTION**
- MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.
- ATTENTION**
- THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

7639G3/MP2601

DM 0 0.5M 1M DWG# BDST39G3INDB 2010406D

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1849, Email: mktg@milnor.com

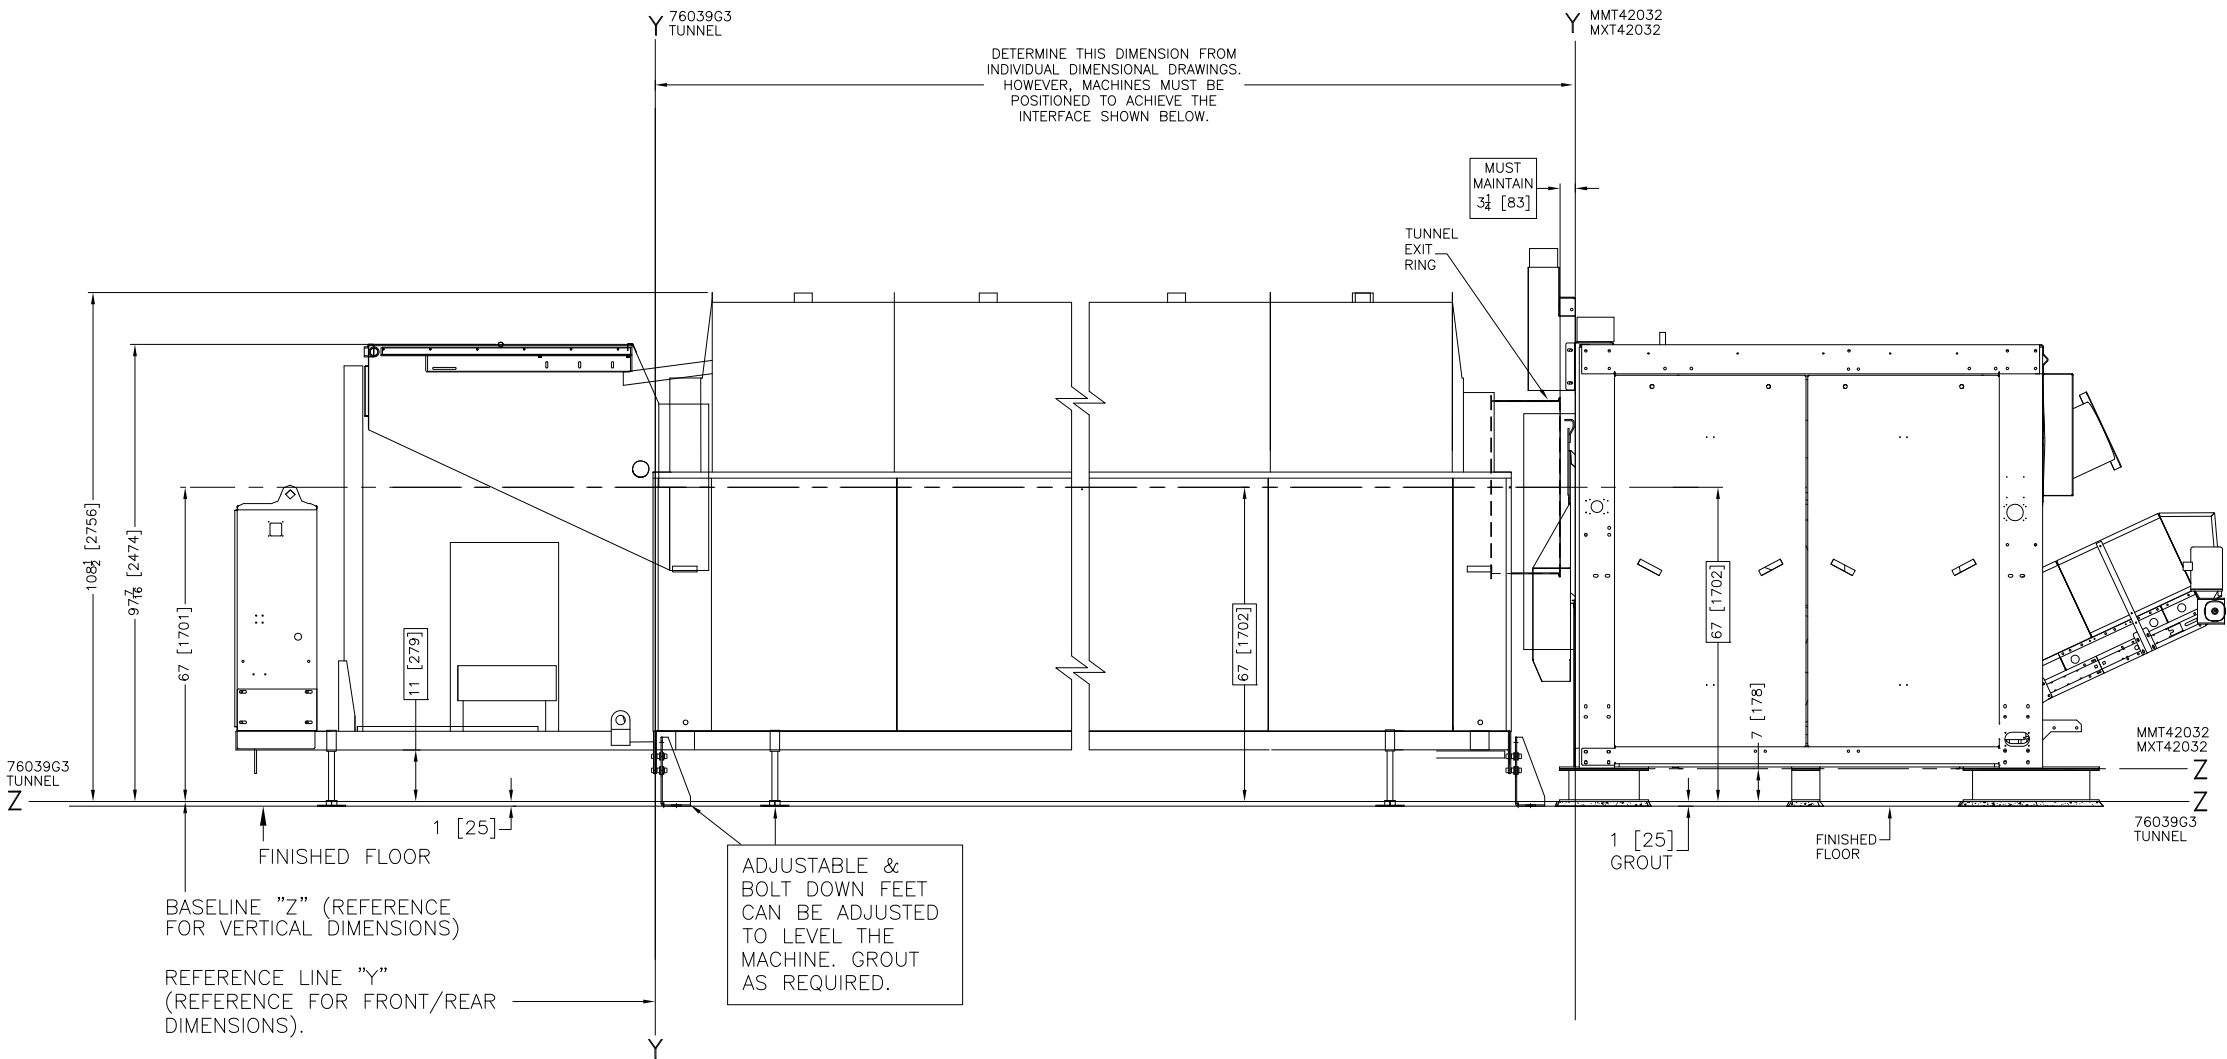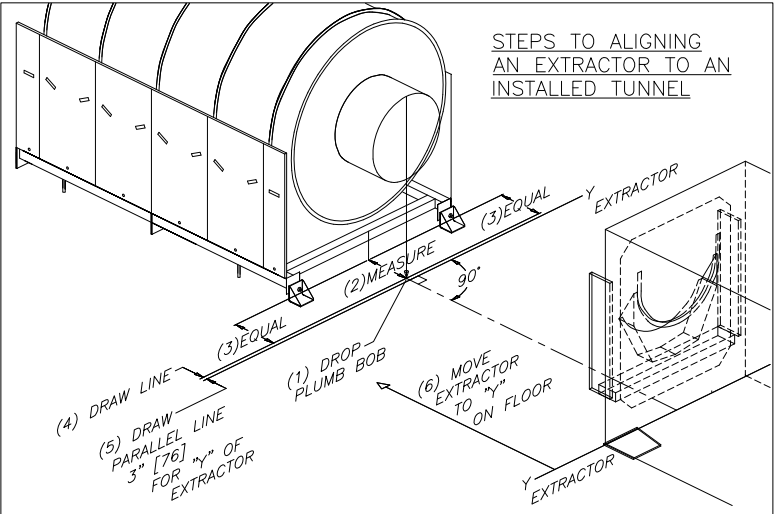

76039G3 TUNNEL/MMT,MXT42032

NOTES

7 SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".

6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.

5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.

4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.

3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.

2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.

1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION


THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

76039G3/MMT,MXT42032

DM 0 0.5M
INCHES 0 12 24

DWG# BDST39G3INDE 2017044D

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/468-3094, Email: milnorinfo@milnor.com

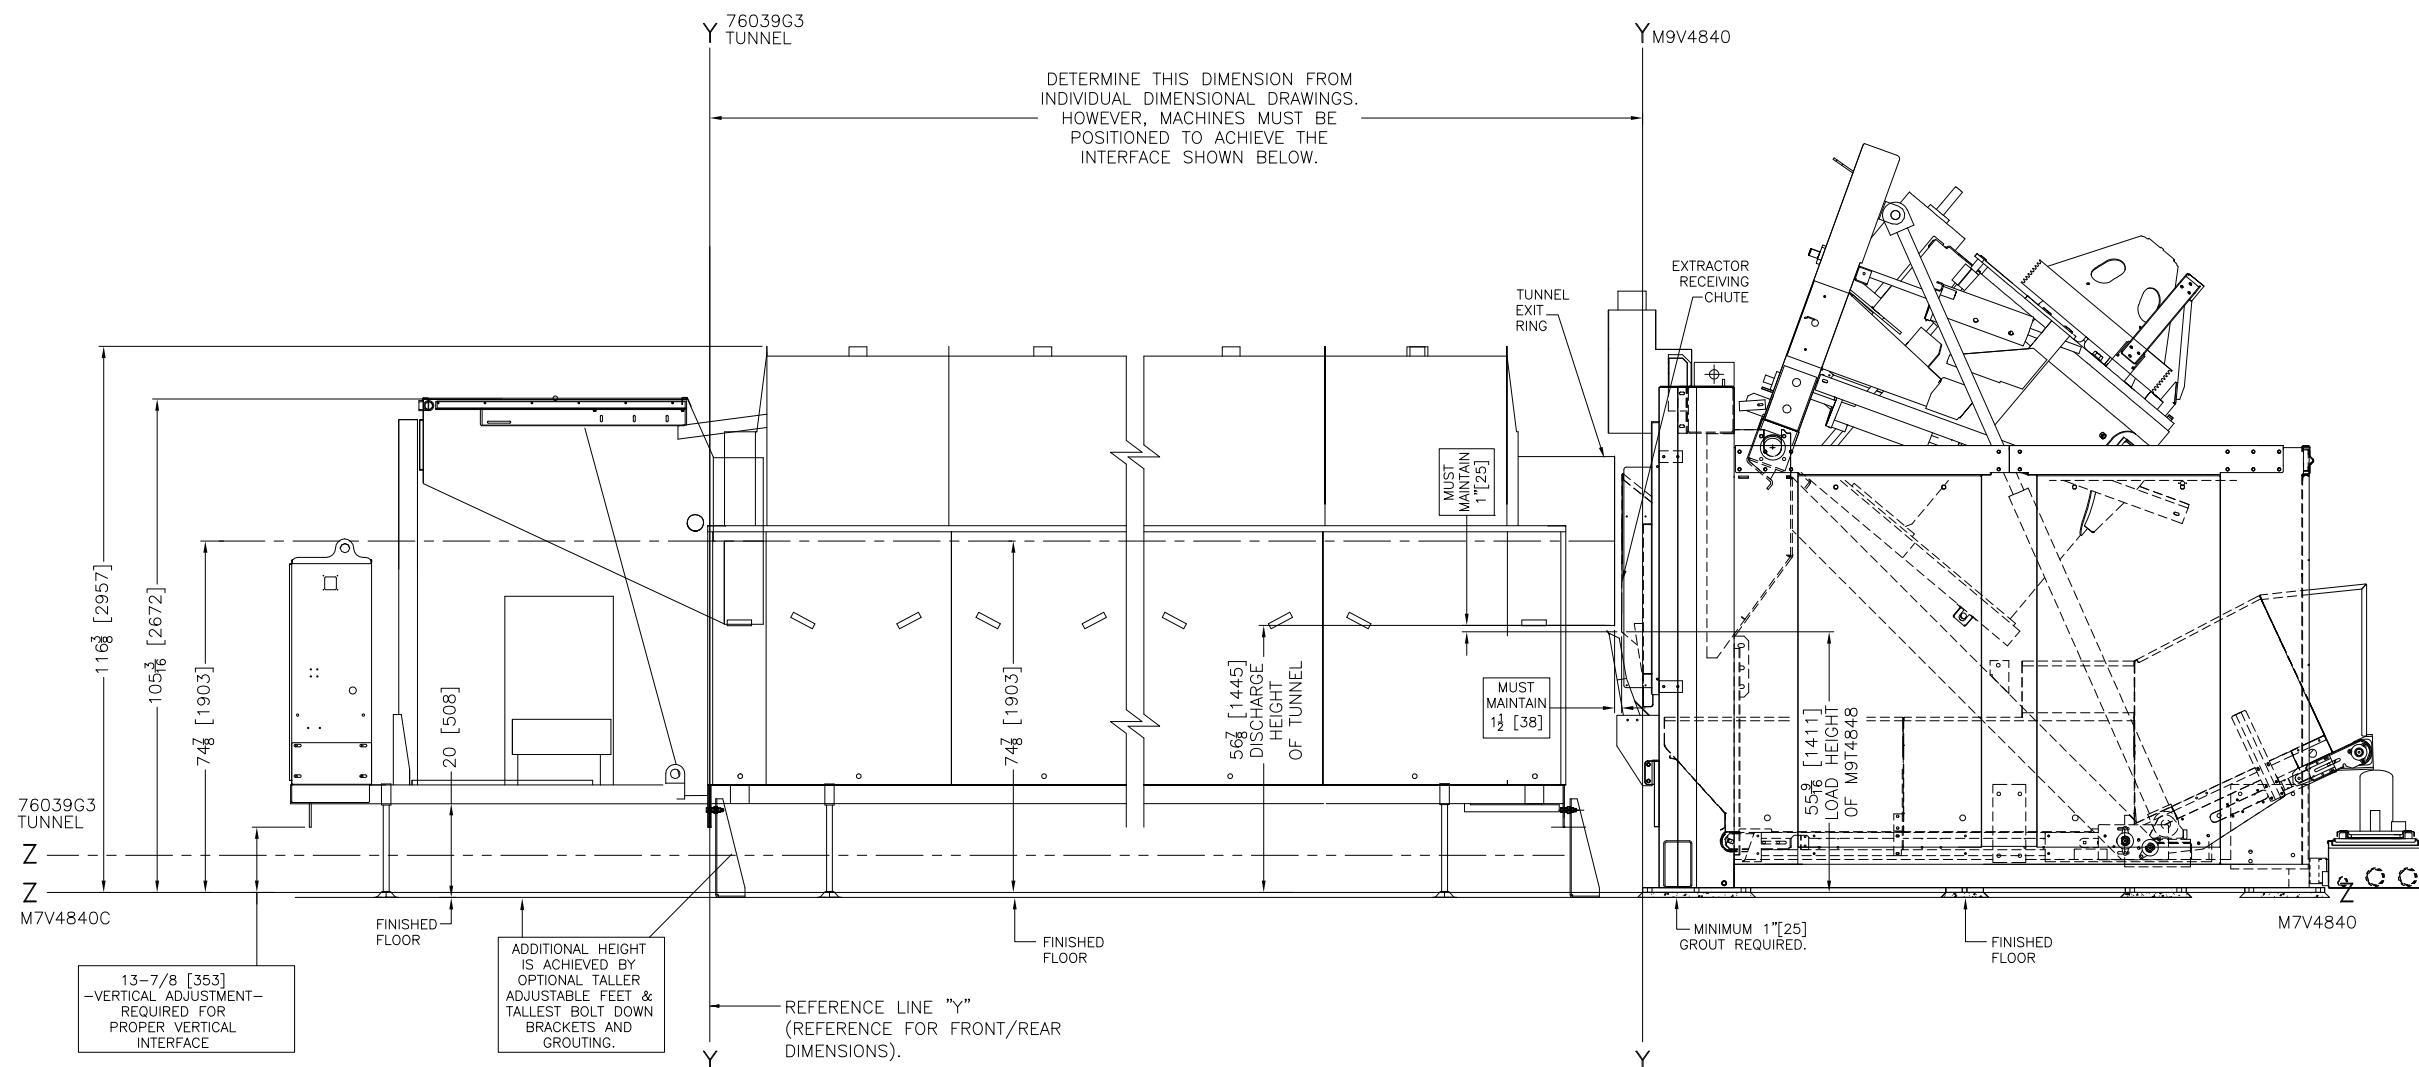

76039G3 TUNNEL/M9V4840 EXTRACTOR

NOTES

- SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".
- AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
- CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
- BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
- USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
- NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
- ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.


ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.



ATTENTION

THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.


76039G3 /M7T,M9T4840



MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/468-3094, Email: milnorinfo@milnor.com

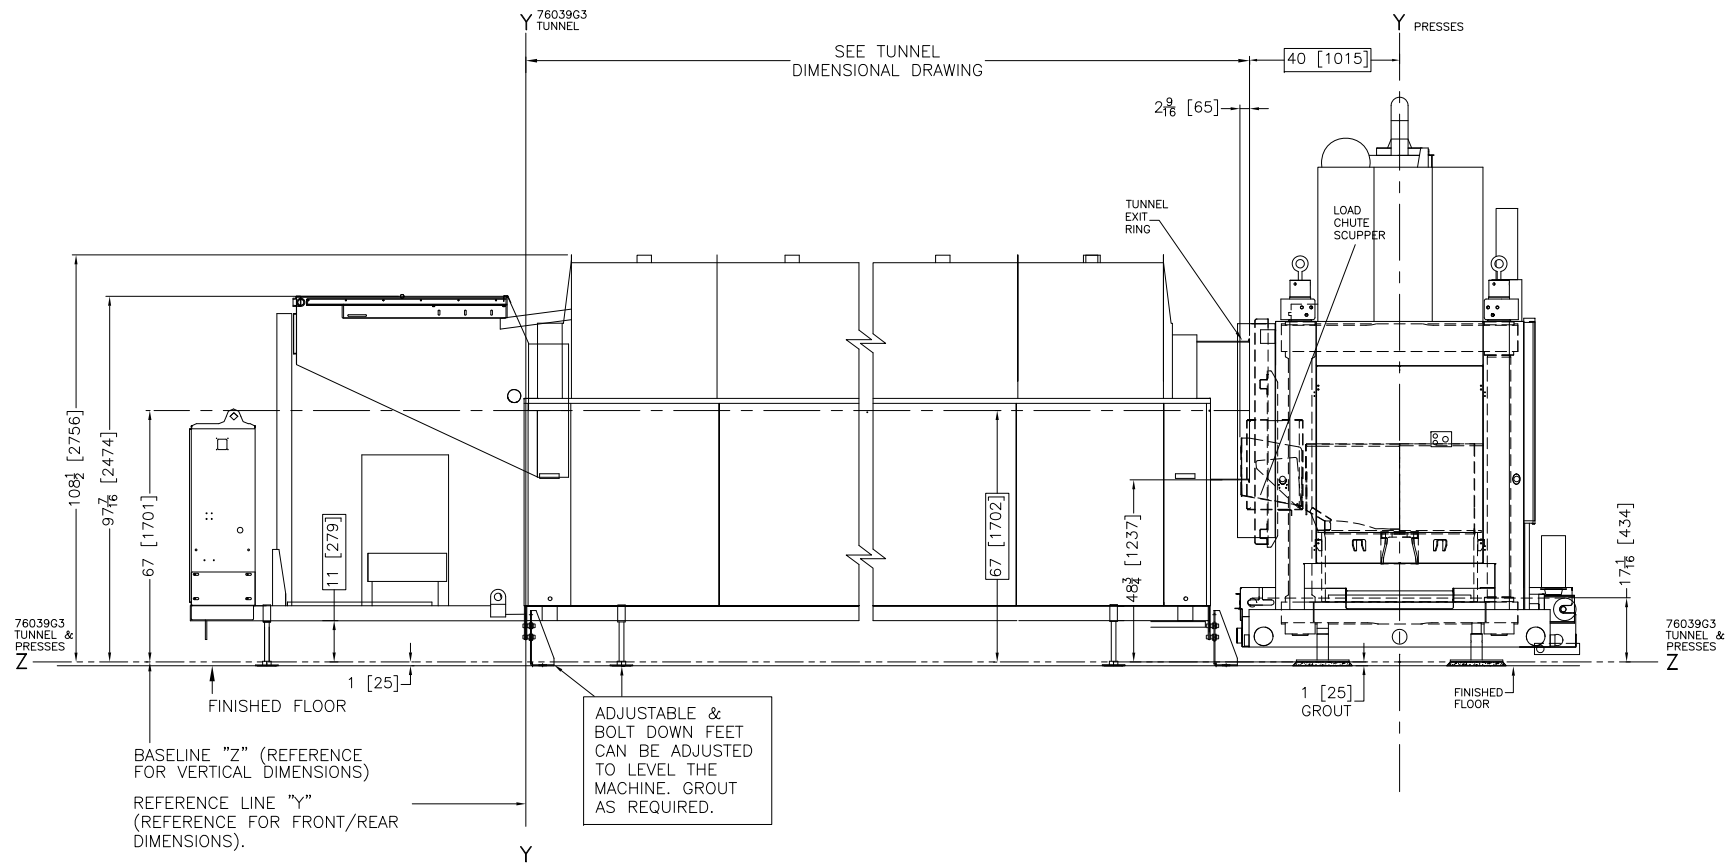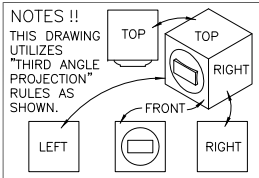

76039G3 TUNNEL/MP1540 SINGLE STAGE PRESSES

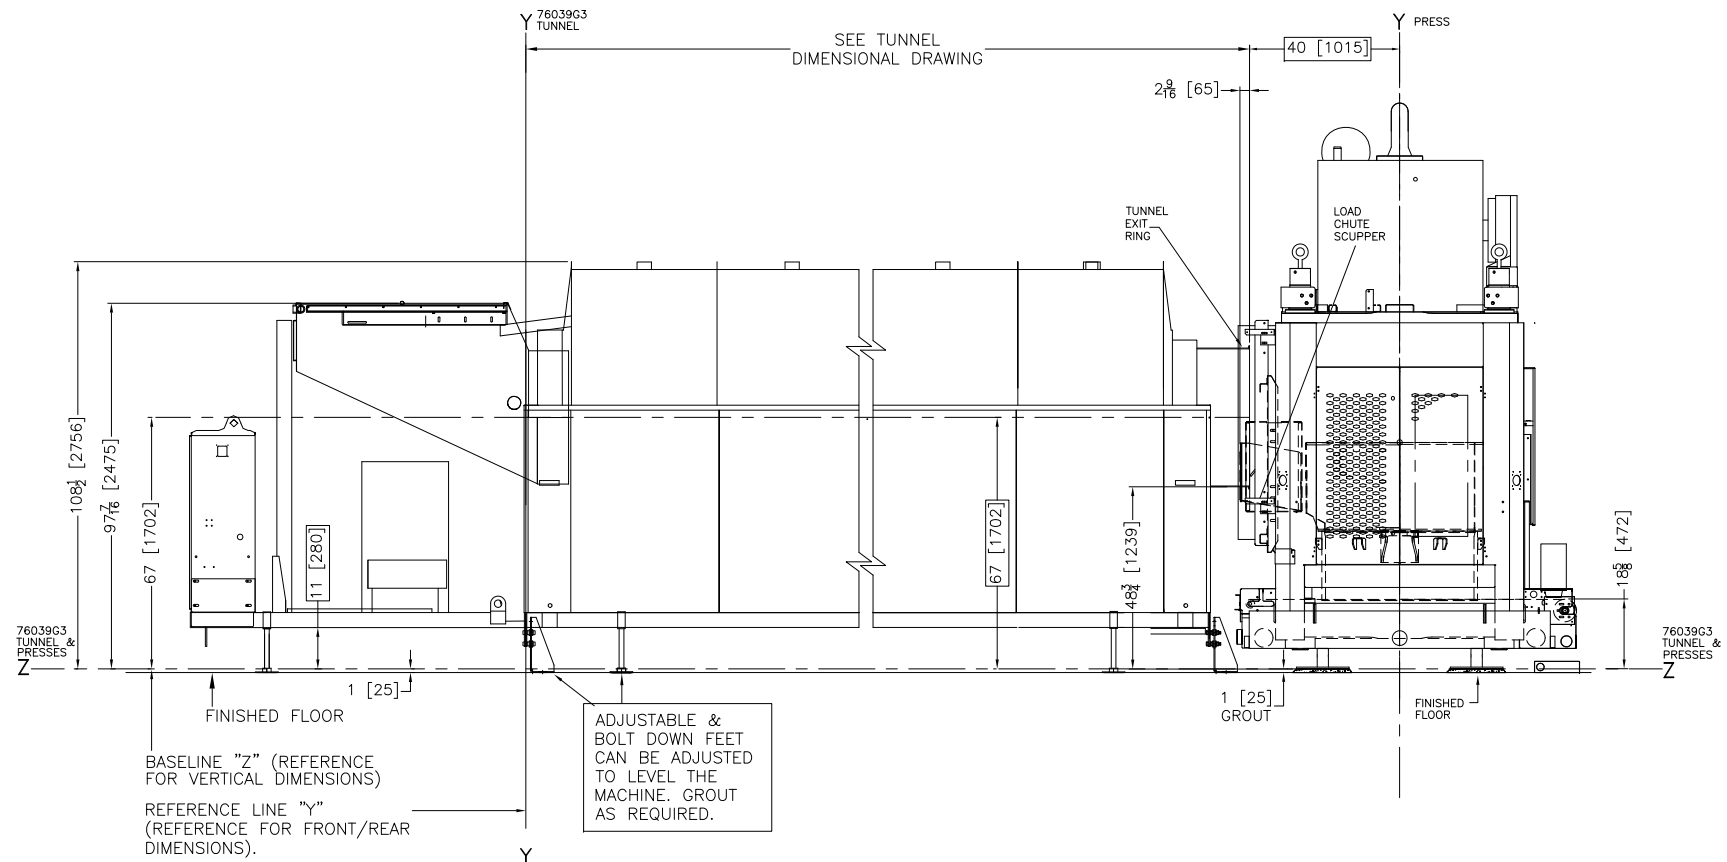

76039G3 TUNNEL/MP1556, MP1640, MP1656 SINGLE STAGE PRESSES


- NOTES**
- 7 SEE INDIVIDUAL DIMENSIONAL DRAWINGS FOR ADDITIONAL DIMENSIONS FOR ALL MACHINES, INCLUDING HEIGHT. MATCH THIS DRAWING WITH THE INDIVIDUAL MACHINE DIMENSIONAL DRAWINGS USING REFERENCE LINE "Y" AND BASELINE "Z".
 - 6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - 5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - 4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - 3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - 2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - 1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
- ATTENTION**
- MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.
- ATTENTION**
- THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

76039G3/MP1540/MP1556/MP1640/MP1656



DM 0 0.5M 1M DWG# BDST39G3INGC 2010495D

INCHES 0 12 24 36

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1849, Email: mktg@milnor.com

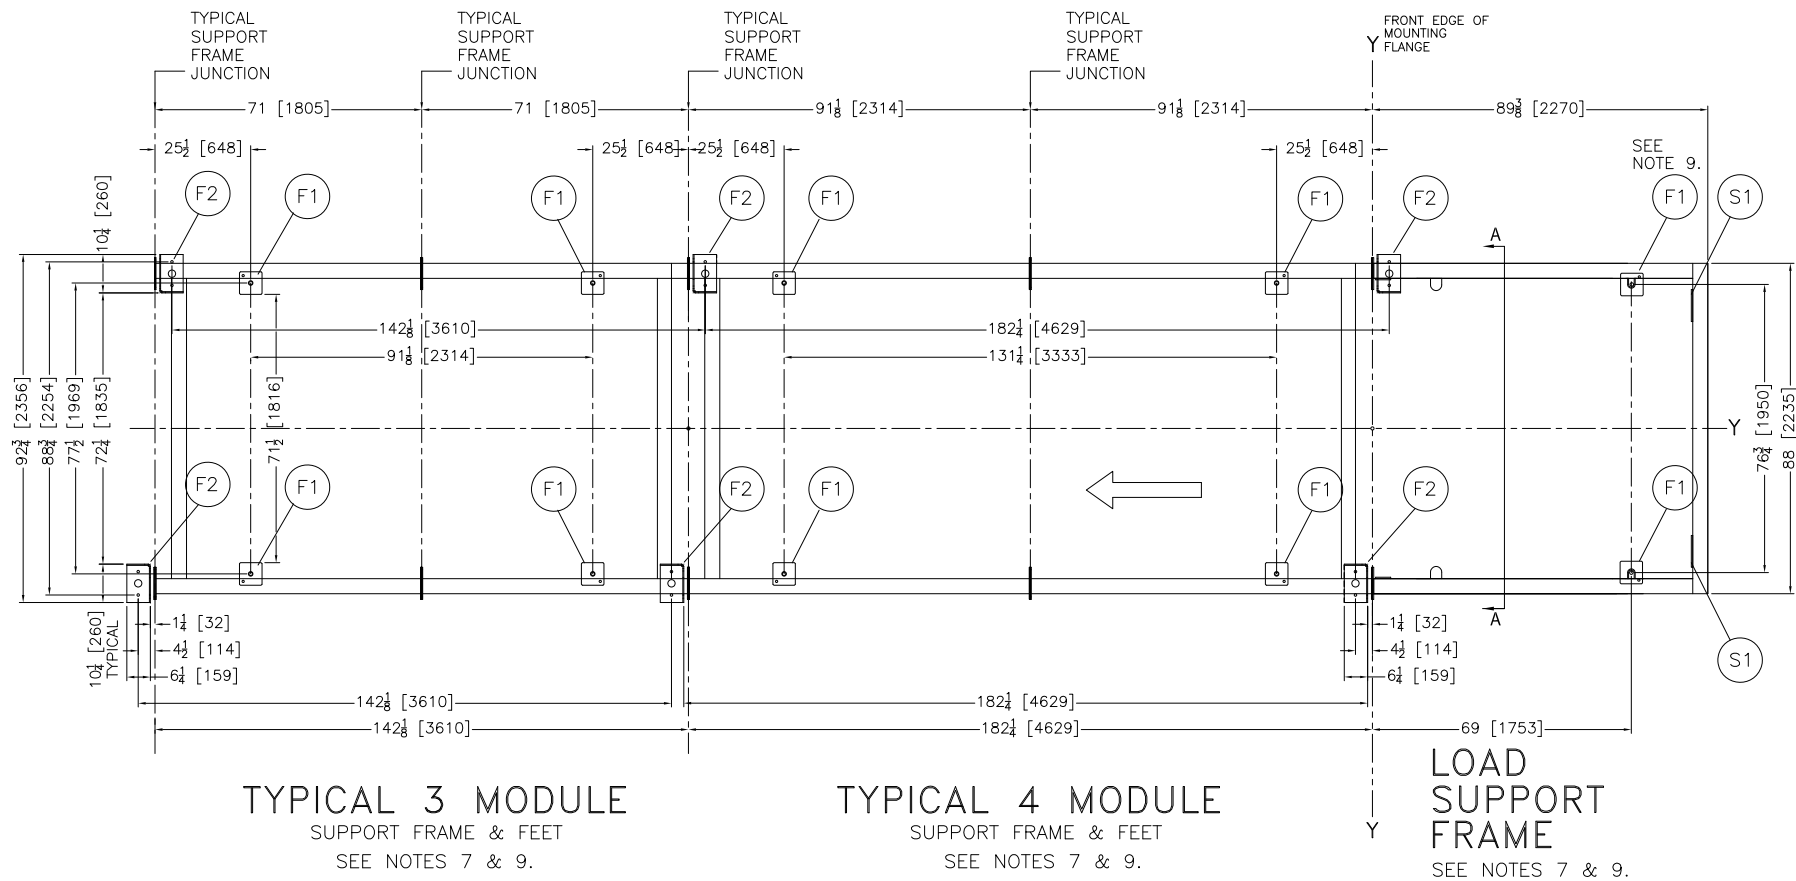


S1	LIFTING BRACKET MOUNTING PLATE, SEE BDPF39G3SBDDDE.
H4	25" TALLEST BOLT DOWN BRACKET, CONSULT FACTORY
H3	21" TALL BOLT DOWN BRACKET, TYPICALLY FOR USE WITH M9V4840
H2	STANDARD BOLT DOWN BRACKET, TYPICALLY FOR USE WITH MP2601, MP1550, MP1603, MP1604 & MP1656.
H1	SHORTEST BOLT DOWN BRACKET, TYPICALLY FOR USE WITH MP2501 AND M7V4232.
F4	GROUT HOLES, 2" DIAMETER
F3	ANCHOR BOLT HOLES, 3/4" DIAMETER
F2	PLAN VIEW OF ALL BOLT DOWN FEET. SEE DETAIL & NOTE 9.
F1	ADJUSTABLE FLAT FEET 6"[152] SQUARE, MUST BE SUPPORTED, ANCHORING NOT REQUIRED FOR G3 TUNNEL
F0	TYPICAL SUPPORT FRAME JUNCTION
E1	CONTROL BOX MOUNTED TO FRONT LOAD SUPPORT FRAME
ITEM	LEGEND

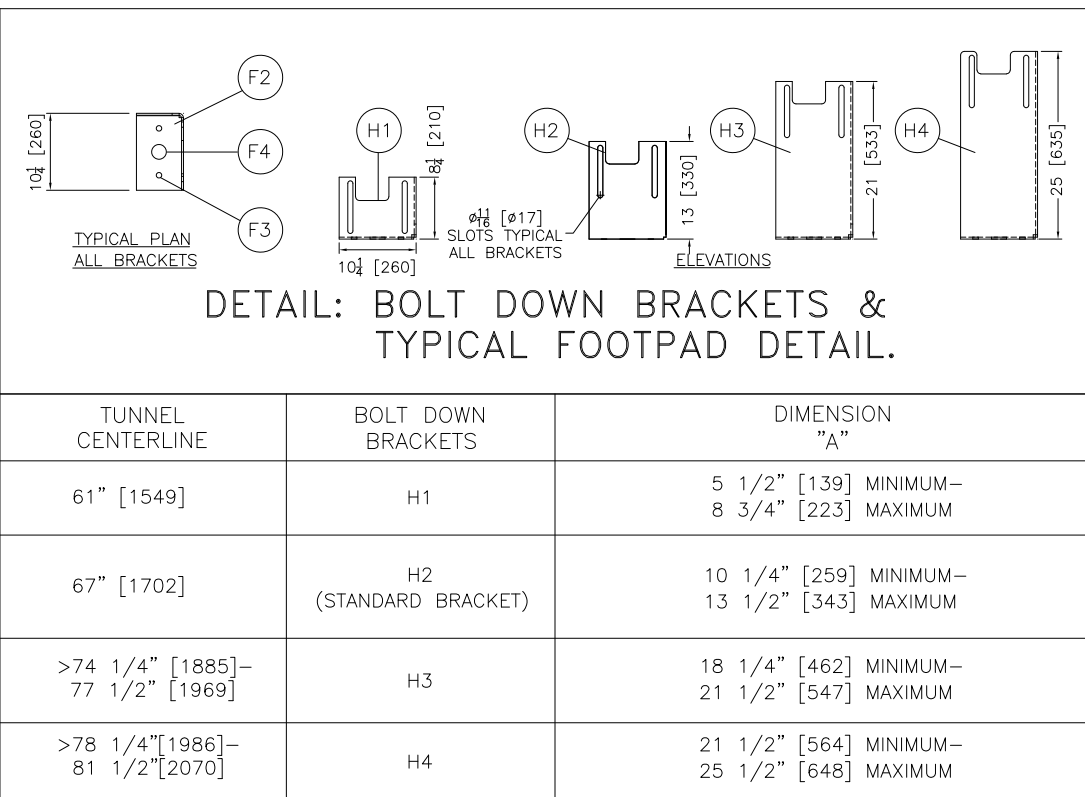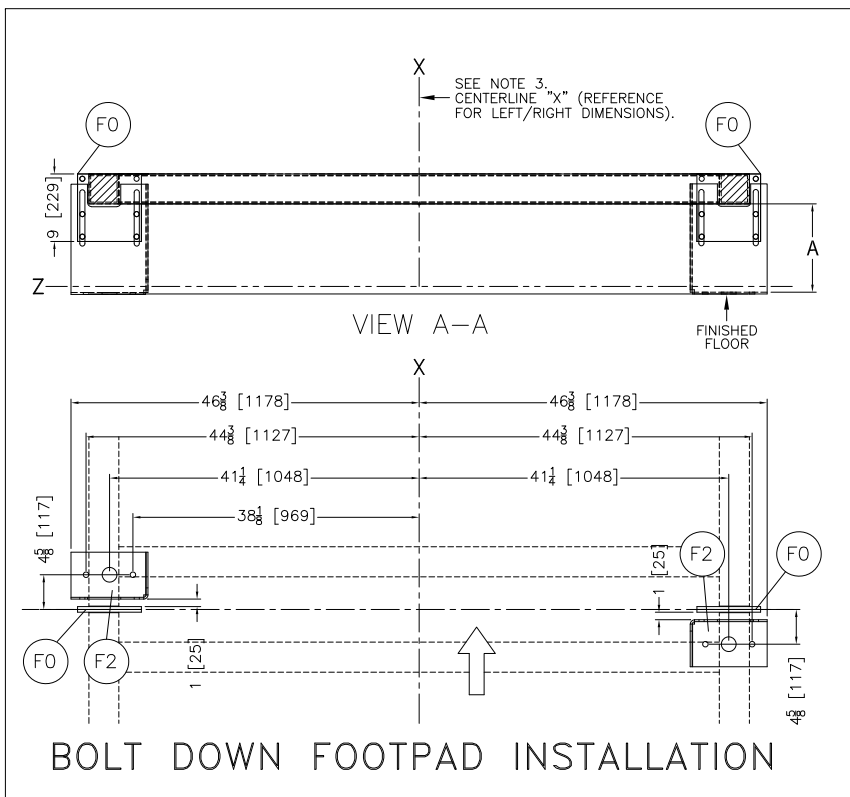


NOTES	
8	BOLT DOWN FEET ARE USED TO PREVENT THE TUNNEL FROM "WALKING" AND MUST BE INSTALLED IN ADDITION TO ADJUSTABLE FLAT FEET WHICH SUPPORT THE MACHINE. A PAIR OF BOLT DOWN FEET MUST BE INSTALLED ON THE END OF EACH SECTION, AND ONE PAIR OF BOLT DOWN FEET USED AT THE JUNCTION OF TWO SECTIONS, SEE PLAN VIEW.
7	G3 TUNNELS CAN BE ORDERED IN VARIOUS COMBINATIONS OF 3 & 4 MODULE SECTIONS; SEE BDST39G3CFCE. THIS DRAWING SHOWS 3 & 4 MODULE SUPPORT FRAMES AND THE LOAD SUPPORT FRAME. CONSULT THE SPECIFICATIONS FOR YOUR MACHINE BEFORE DETERMINING THE LOCATION OF ADJUSTABLE FEET AND BOLT DOWN BRACKETS.
6	AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS: 36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL. 42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.). 48 [1219] IF OBJECT IS ANY LIVE PART. CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
5	CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
4	BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.
3	USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
2	NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
1	ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
ATTENTION	
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.	
ATTENTION	
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.	


DIMENSIONS THAT VARY WITH NUMBER OF MODULES		
76039G3 TUNNELS	DIMENSION "A" INCHES mm	
3 MODULE	142 1/8	3610
4 MODULE	182 1/4	4629

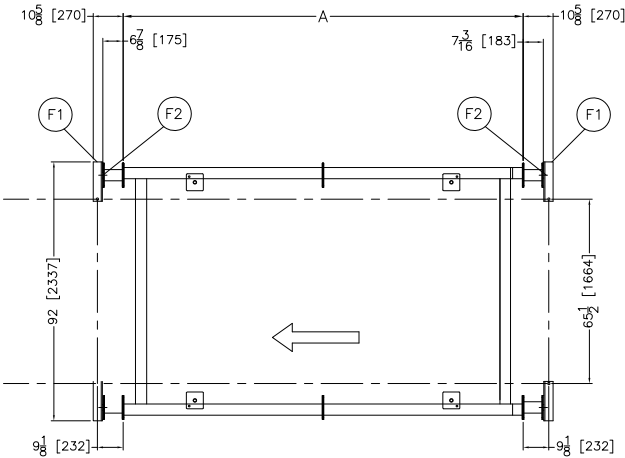


INDIVIDUAL TUNNEL SECTIONS
SUPPORT FRAME SHOWING
LIFTING EYES & SHIPPING BRACKETS

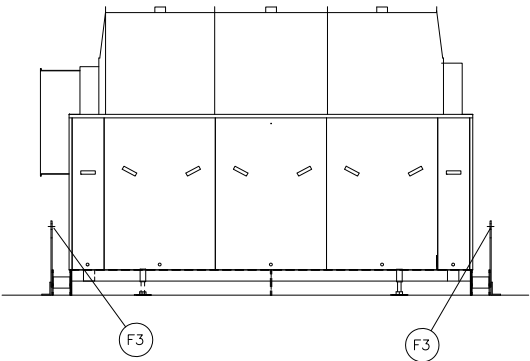




USE 4 POINT LIFTING
FOR INDIVIDUAL SECTIONS

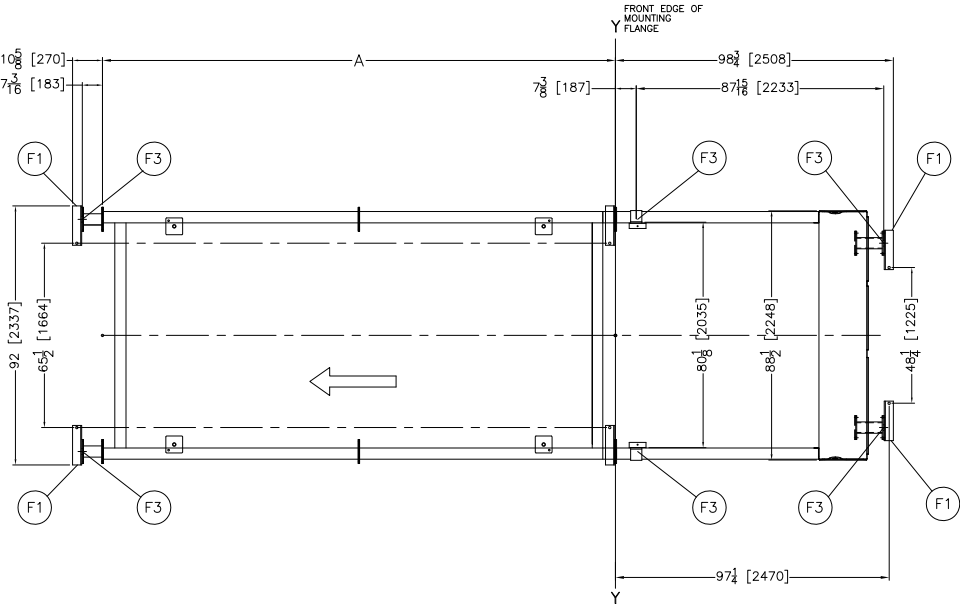

FIRST SECTION
SUPPORT FRAME SHOWING
LIFTING EYES & SHIPPING BRACKETS

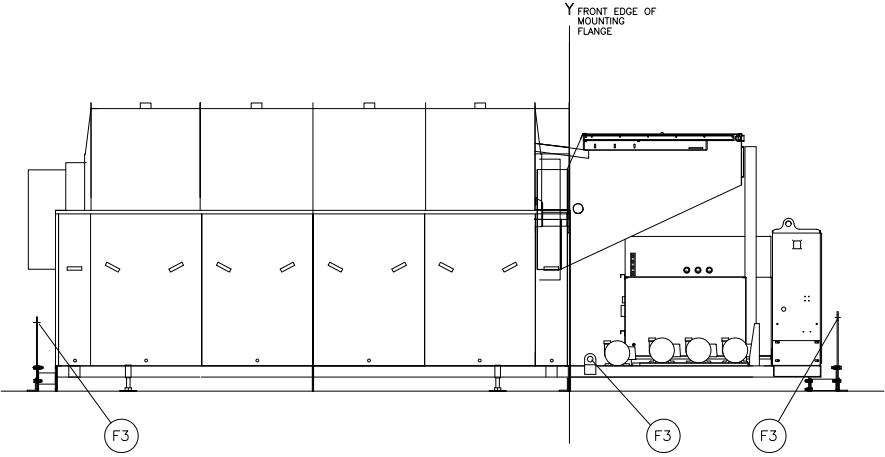

USE 6 POINT LIFTING FOR LOAD AND 1ST SECTION

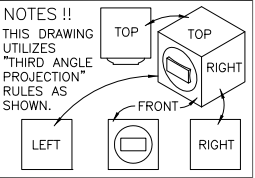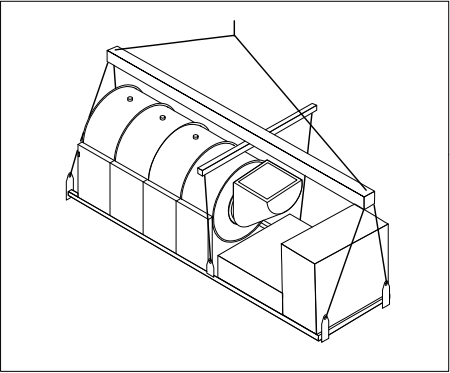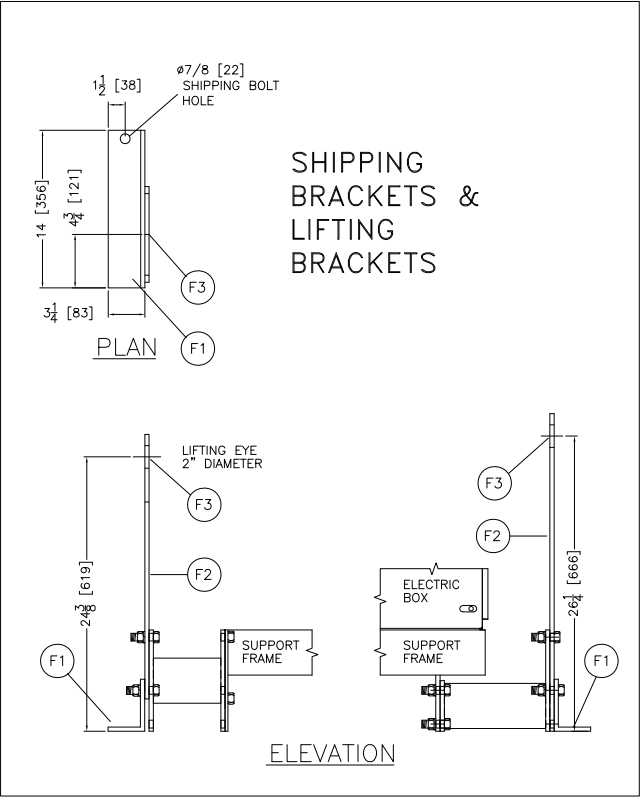

F3	LIFTING EYE, 2" [51] DIAMETER
F2	LIFTING BRACKET
F1	SHIPPING BRACKET FOR EXPORT, 7/8" [22] DIAMETER BOLT HOLE
ITEM	LEGEND

- NOTES**
- THIS DRAWING SHOWS 3, 4 & 5 MODULE SUPPORT FRAMES, AND THE LOAD SUPPORT FRAME. 63 TUNNELS CAN BE ORDERED IN VARIOUS COMBINATIONS OF 3, 4 & 5 MODULE SECTIONS. CONSULT THE SPECIFICATIONS FOR YOUR MACHINE BEFORE LOCATING THE SHIPPING BRACKETS.
 - MID AND END TUNNEL SECTIONS ARE SEPARATED BEFORE SHIPMENT. FIRST SECTIONS ARE SHIPPED WITH THE LOAD SUPPORT FRAME, TANK, & CONTROL BOX ATTACHED.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1" [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
- ATTENTION**
MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.
- ATTENTION**
THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

SHIPPING BRACKETS 39G3 ST


DM
0
0.5M
1M
INCHES
0
12
24
36

DWG# BDST39G3SBCE 2010406D


MILNOR

P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591, FAX 504/469-1849, Email: mktg@milnor.com


REUSE TANK G1 & G2 TUNNELS

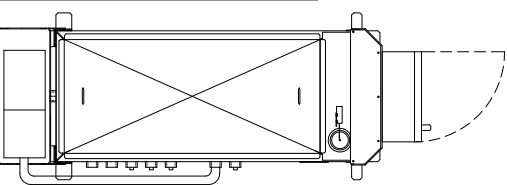


PLAN VIEW

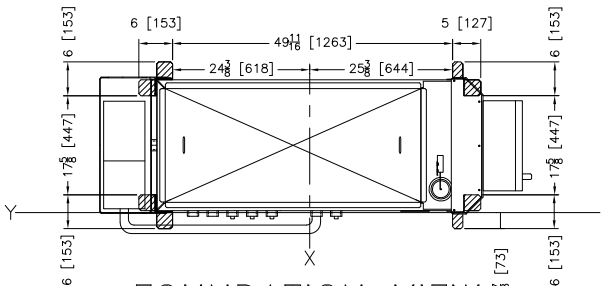


FOUNDATION VIEW

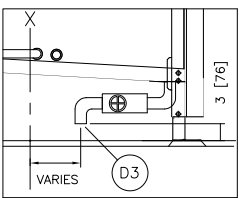


DETAIL

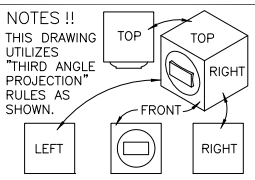


TUNNEL INTERFACE DIMENSION		
TUNNEL MODEL NO.	DIMENSION "A" INCHES	mm
76028	18 9/16	471
76032	18 5/16	465
76039 - M7E42C	18 1/8	460
76039 - 60K PRESS	27 1/2	699

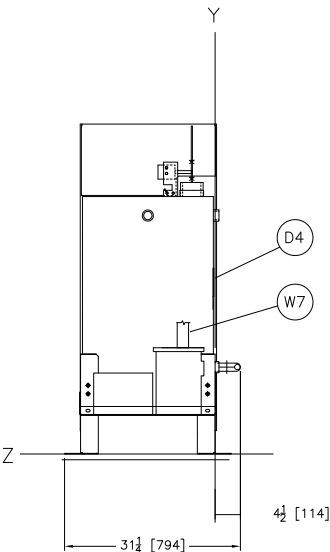

LEFT VIEW

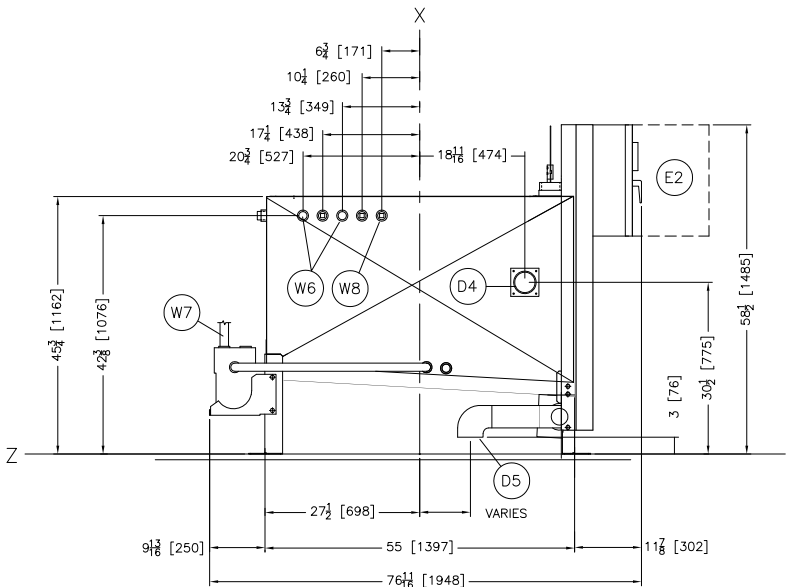

FRONT VIEW

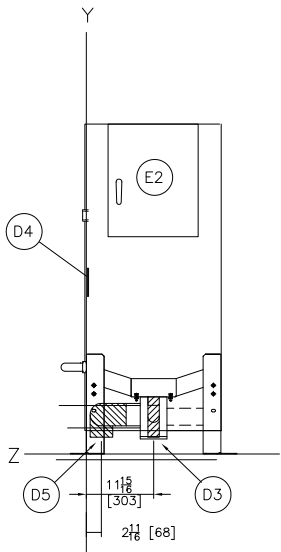


RIGHT VIEW


2-WIDE LINT FILTER TANK

WASH ZONE FLOW LIFTER & RINSE ZONE FLOW SPLITTER


STANDARD OR WORKWEAR

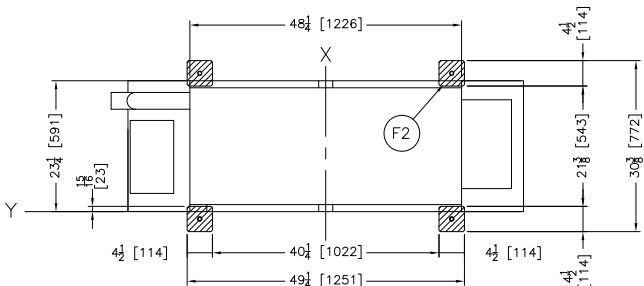


FOUNDATION VIEW

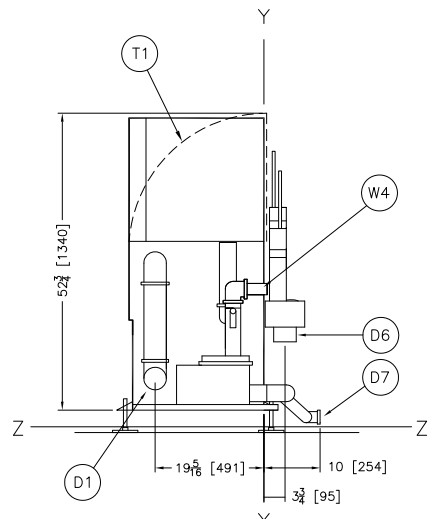


LEFT VIEW

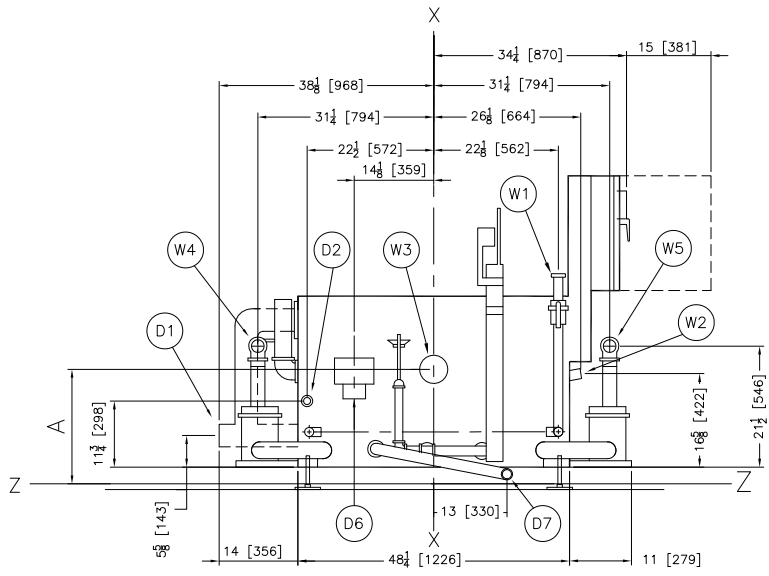

FRONT VIEW

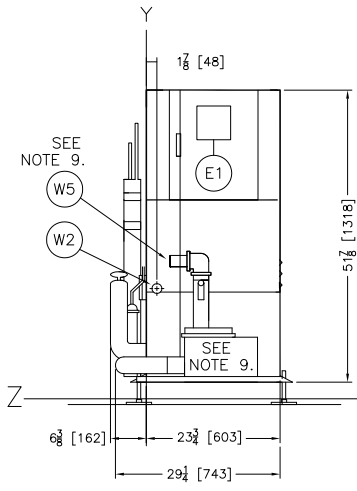

RIGHT VIEW

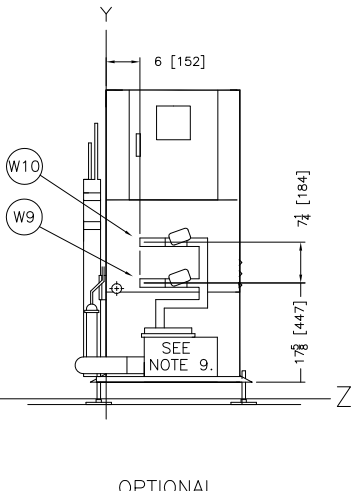

OPTIONAL
LONG DISTANCE
INCOMPATIBILITY

W10	OPTIONAL LDI VALVES, TO REUSE TANK, 1-1/2" HOSE CONNECTION
W9	OPTIONAL LDI VALVES, TO SEWER, 1-1/2"HOSE CONNECTION
W8	FRESH WATER MAKE-UP INLET, 2" HOSE CONNECTION. PIPING SUPPLIED BY PMC.
W7	REUSE WATER TO LOAD CHUTE, 2" HOSE CONNECTION SUPPLIED BY PMC.
W6	REUSE WATER INLET, 2" HOSE CONNECTION SUPPLIED BY PMC.
W5	WATER TO REUSE MANIFOLD, 1 1/2" HOSE CONNECTION
W4	WATER TO CBW MODULE, 1 1/2" HOSE CONNECTION
W3	WATER FROM MODULE, 5" HOSE CONNECTION SUPPLIED BY PMC.
W2	WORKWEAR UPPER FLUSHING INLET, 1 1/4" NPT. FRESH WATER CONNECTION FROM FLUSHING MANIFOLD, PIPING SUPPLIED BY PMC.
W1	WORKWEAR BOTTOM FLUSHING INLET, 1 1/4" NPT. PIPING SUPPLIED BY PMC.
T1	DOOR SWING FOR LINT FILTER COVER
F2	TYPICAL, ADJUSTABLE FEET SUPPORT, FOUR PER FILTER.
E2	LOAD INTERFACE BOX
E1	WASH ZONE INTERFACE BOX (CONTROL BOX FOR WASH ZONE PUMP, SURPLUS WATER PUMP, WASH ZONE FILTER).
D7	OPTIONAL, DRAIN TO SEWER, 2" DIAMETER. HOSE TO SEWER SUPPLIED BY PMC.
D6	OPTIONAL, DRAIN TO SEWER, 4" OD. HOSE TO SEWER SUPPLIED BY PMC.
D5	OPTIONAL, AUTOMATIC 4" DRAIN TO SEWER, PIPING TO SEWER SUPPLIED BY PMC.
D4	OVERFLOW TO SEWER, 3" HOSE CONNECTION. PIPING SUPPLIED BY PMC.
D3	MANUAL DRAIN TO SEWER, 2-1/2" HOSE TO SEWER SUPPLIED BY PMC.
D2	WORKWEAR UPPER FLUSH OUTLET TO SEWER, 2" NPT. PIPING TO SEWER SUPPLIED BY PMC.
D1	DRAIN TO SEWER, 3" NPT.
ITEM	LEGEND

NOTES

10 DO NOT PRE-PIPE ANY CLOSER THAN 60 [1524].

9 REUSE PUMP NOT USED ON WASH ZONE FLOW LIFTER.

8 ALL COMPONENTS SHOWN RECEIVE ELECTRICAL POWER FROM THE CBW. NO EXTERNAL POWER IS REQUIRED FOR ANCILLARY COMPONENTS.

7 SEE INSTALLATION DRAWING ON REVERSE FOR RELATIVE POSITION OF MACHINES, GROUT THICKNESS AND HEIGHT OFF FLOOR.

6 AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (ie. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.

5 CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.

4 BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1"[25] THICK GROUT BED.

3 USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.

2 NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.

1 ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.

ATTENTION

MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.

ATTENTION


THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

CBW ANCILLARY COMPONENTS

DM 0 0.5M 1M DWG# BDCBWAC1CE 2006514D

MILNOR PELLERIN MILNOR CORPORATION

P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591, FAX 504/469-1849, Email: mktg@milnor.com

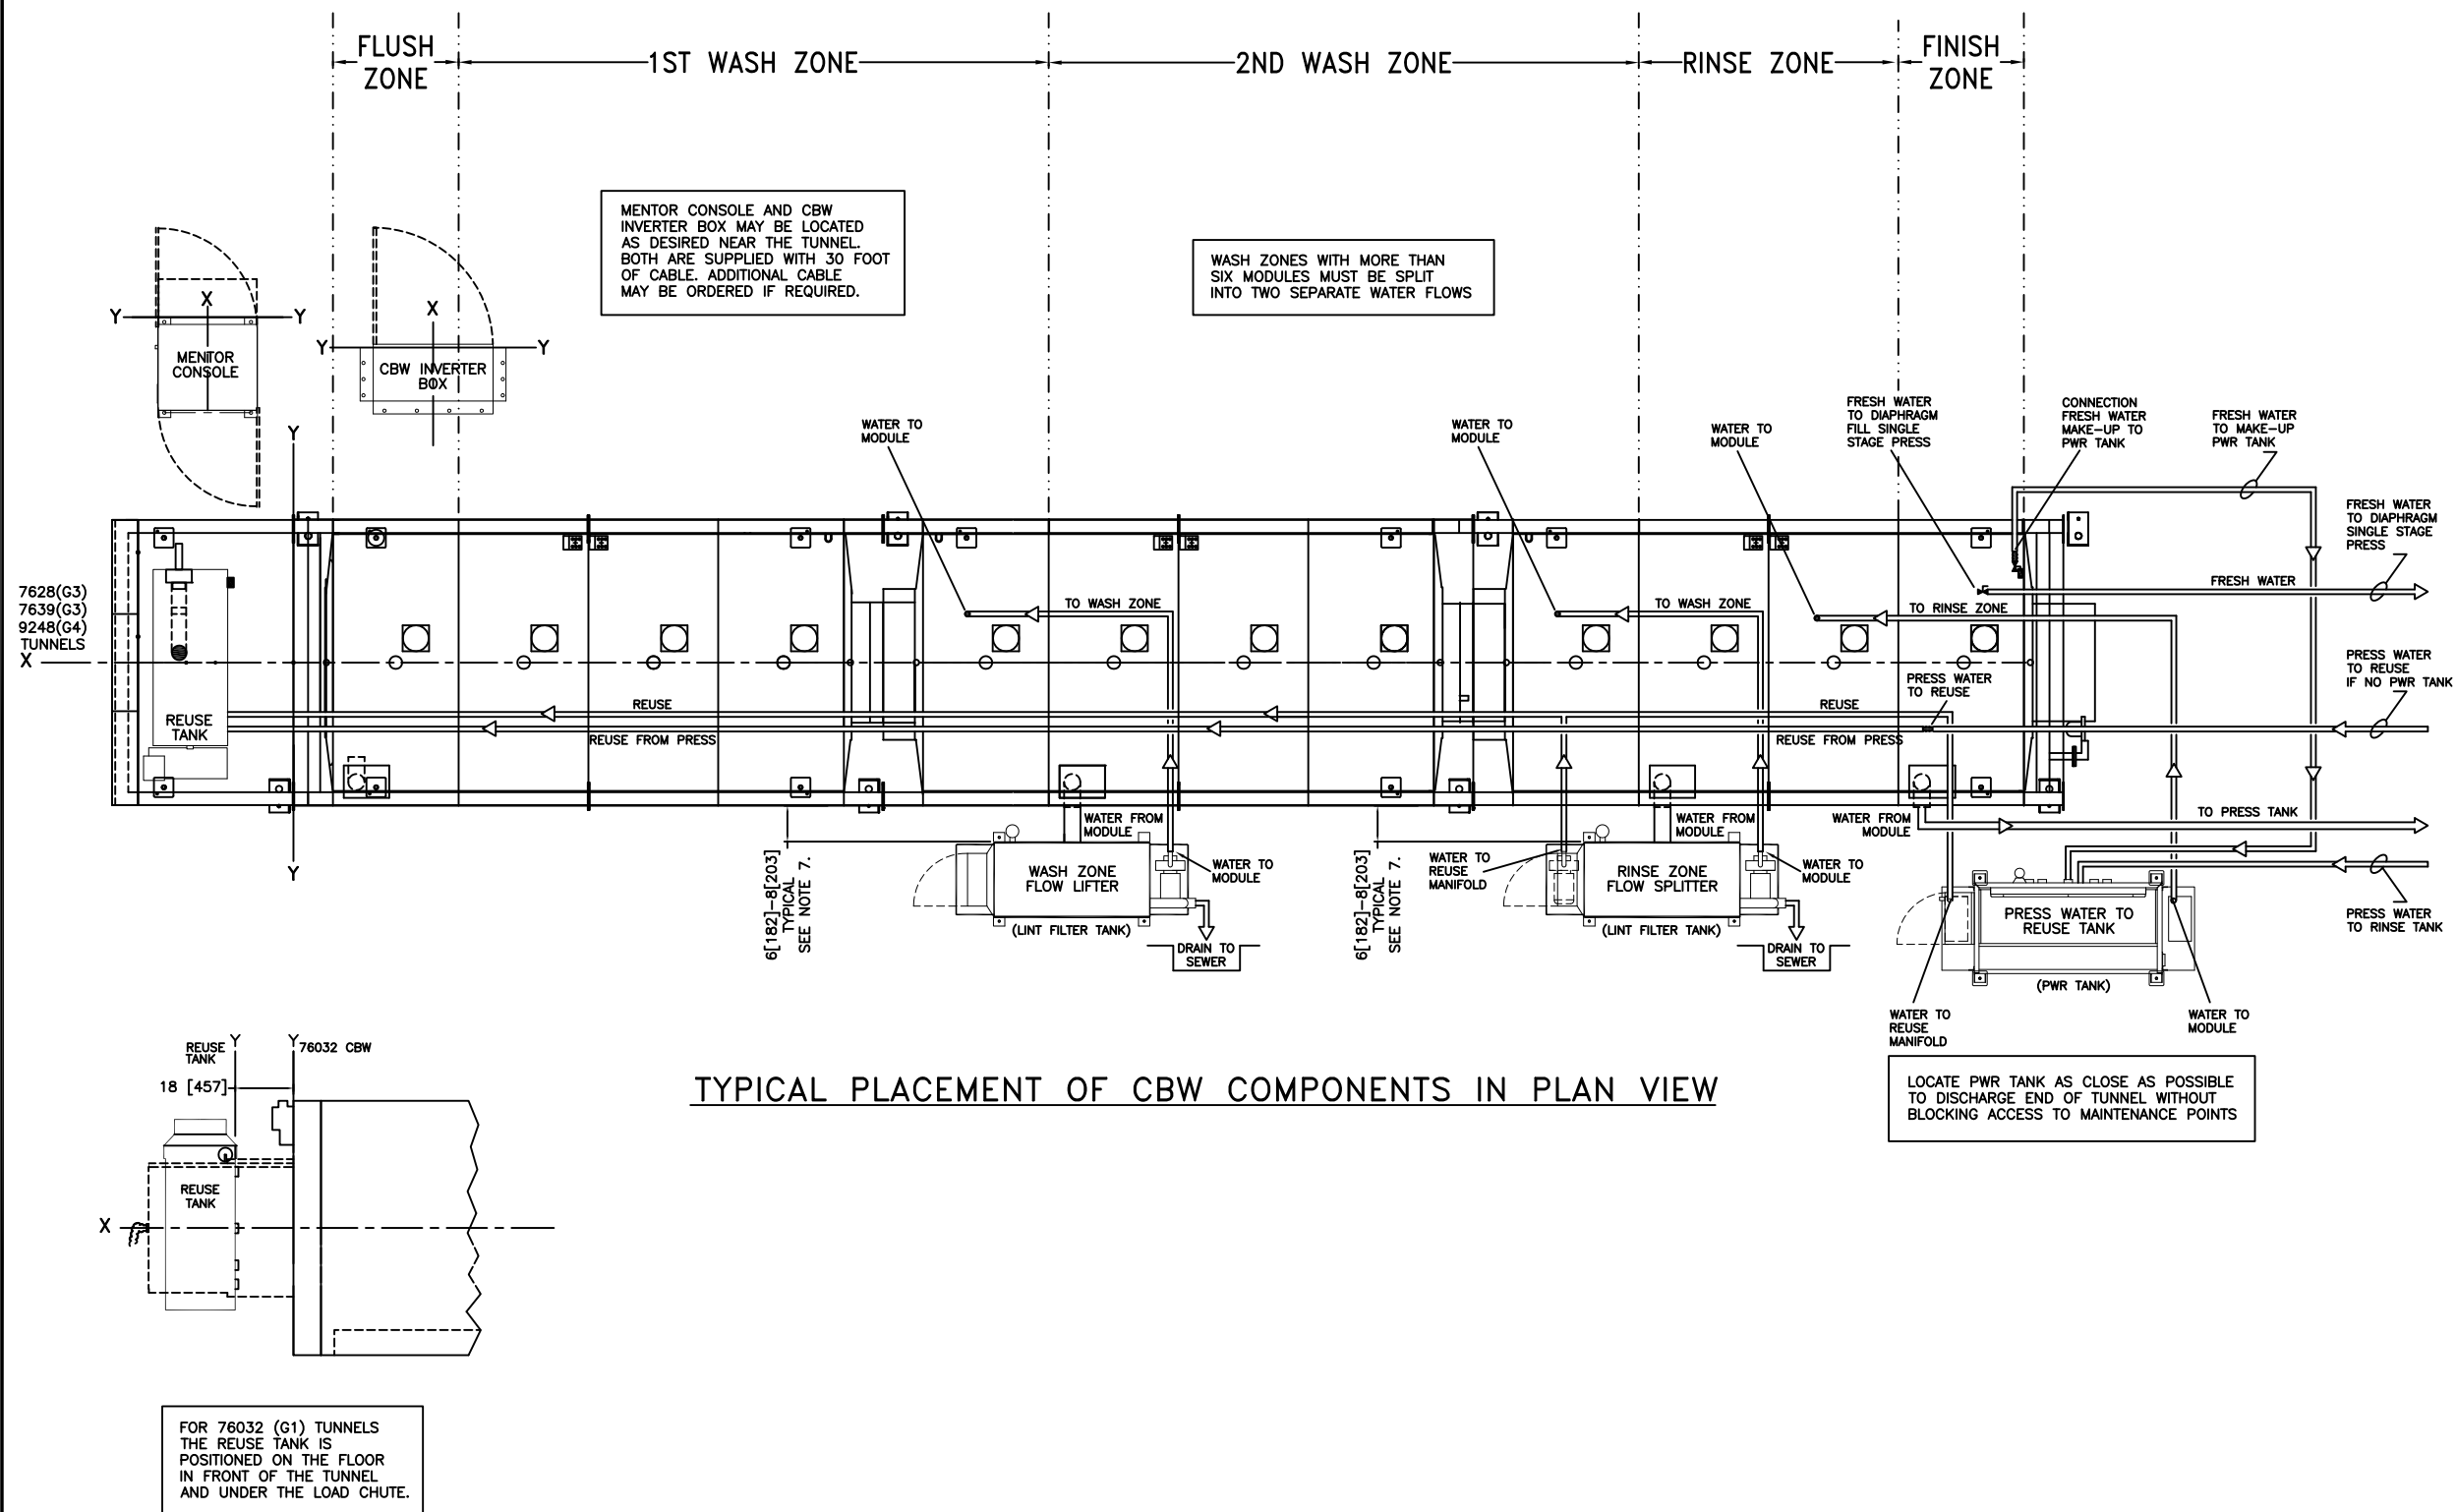

TYPICAL PLACEMENT OF CBW COMPONENTS IN PLAN VIEW

- NOTES**
- FOR SIZE AND LOCATION OF INLETS AND OUTLETS, SEE INDIVIDUAL DIMENSIONAL DRAWINGS OF TUNNEL, TANKS, AND ELECTRICAL CONTROL CABINETS.
 - DO NOT PRE-PIPE ANY CLOSER THAN 60 [1524].
 - THIS DRAWING GOOD FOR BOTH STANDARD LINEN AND WORKWEAR CBW MODELS.
 - WASH ZONES WITH SIX OR MORE MODULES MUST BE SPLIT INTO TWO SEPARATE WATER FLOWS.
 - RAISE THE FLOW SPLITTER/FLOW LIFTER IF REQUIRED TO AVOID CRIMPING OF THE MODULE TO TANK HOSE. HOWEVER, PROVIDE A MINIMUM 1 TO 12 SLOPE OF THE HOSE TO INSURE IT DRAINS TO THE TANK. ALSO, THE TANK WEIR HEIGHT MUST BE 1 [25] MINIMUM BELOW THE MODULE HEIGHTS.
 - THE MENTOR CONSOLE, INVERTER BOX, REUSE TANK, LINTER FILTER AND PWR TANKS MAY BE GROUDED AS SHOWN BUT THIS IS NOT REQUIRED, AS LONG AS THEY ARE INSTALLED ON A FLAT SURFACE. BASELINE "Z" OF THESE COMPONENTS NOT COINCIDE WITH BASELINE "Z" OF THE CBW.
 - ALL COMPONENTS SHOWN RECEIVE ELECTRICAL POWER FROM THE CBW. NO EXTERNAL POWER IS REQUIRED FOR THESE ANCILLARY COMPONENTS.
 - PIPING TO TUNNEL'S MAIN WATER, STEAM AND AIR CONNECTIONS IS NOT SUPPLIED. ALL PIPING UNDER THE TUNNEL, TO AND FROM THE LINT FILTER, PWR AND REUSE TANKS, TO AND FROM THE PRESS TO THE TUNNEL OR TANKS, IS SUPPLIED BY PMC.
 - DRAWING DEPICTS THE PREFERRED PLACEMENT OF EQUIPMENT. IF THE SITE DICTATES THAT THE EQUIPMENT PLACEMENT MUST VARY GREATLY FROM THAT SHOWN HERE, CONSULT THE MILNOR FACTORY.
 - AS OF THIS WRITING, THE MINIMUM CLEARANCE REQUIRED BY U.S. NATIONAL ELECTRIC CODES, FROM ELECTRIC BOX TO ANY OBJECT IS:
36 [914] IF OBJECT IS AN UNGROUNDED (INSULATED) WALL.
42 [1067] IF OBJECT IS A GROUNDED WALL (i.e. BARE CONCRETE, BRICK, ETC.).
48 [1219] IF OBJECT IS ANY LIVE PART.
CHECK LOCAL ELECTRIC CODES FOR FURTHER RESTRICTIONS.
 - CUSTOMER TO SUPPLY CIRCUIT BREAKER OR FUSED BRANCH CIRCUIT DISCONNECT (SAFETY) SWITCHES WITH LAG TYPE FUSES FROM POWER SOURCE TO MACHINE. A SEPARATE GROUND WIRE MUST BE CONNECTED FROM DISCONNECT TO EQUIPMENT.
 - BASELINE "Z" IS THE REFERENCE FOR ALL VERTICAL DIMENSIONS. ON MACHINES WITH FIXED BASE PADS, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BASE PAD. ON MACHINES WITH ADJUSTABLE FEET, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE FEET WHEN ADJUSTED SO THAT THE MACHINE IS AT ITS MINIMUM ACCEPTABLE HEIGHT. ON TRAVELING SHUTTLES, BASELINE "Z" CORRESPONDS TO THE BOTTOM OF THE BOTTOM RAIL. THE DISTANCE BETWEEN BASELINE "Z" AND THE FINISHED FLOOR WILL VARY AS REQUIRED TO ENSURE BASELINE "Z" IS HORIZONTAL AND ANY INTERFACING MACHINES REQUIRING GROUT ARE SET ON A MINIMUM 1 [25] THICK GROUT BED.
 - USE REFERENCE LINES "X", "Y", AND "Z" TO LOCATE ALL SERVICE CONNECTIONS.
 - NUMBERS IN BRACKETS [] DENOTE DIMENSIONS IN MILLIMETERS.
 - ALL DIMENSIONS SHOWN ARE APPROXIMATE, SUBJECT TO NORMAL MANUFACTURING TOLERANCES, AND TO OCCASIONAL CHANGES WITHOUT NOTICE THROUGH REDESIGN AND/OR RELOCATION OF COMPONENTS, ETC. DO NOT USE FOR CONSTRUCTION UNLESS CERTIFIED, AND IN NO EVENT PRE-PIPE CLOSER THAN FIVE FEET FROM MACHINE. FACTORY MUST BE CONSULTED FOR DIMENSIONS IF MACHINE IS TO BE MOVED THROUGH NARROW OR LOW CORRIDORS OR OPENINGS.
- ATTENTION**
- MOST REGULATORY AUTHORITIES (INCLUDING OSHA IN THE USA) HOLD THE OWNER/USER ULTIMATELY RESPONSIBLE TO MAINTAIN A SAFE WORKING ENVIRONMENT. ACCORDINGLY, THE OWNER/USER MUST RECOGNIZE ALL FORESEEABLE SAFETY HAZARDS, FURNISH SAFETY INSTRUCTIONS AND GUIDANCE TO ALL PERSONNEL WHO MAY COME IN CONTACT WITH THE INSTALLATION, AND PROVIDE ALL NECESSARY ADDITIONAL SAFETY GUARDS, FENCES, RESTRAINTS, DEVICES, ETC., NOT FURNISHED BY THE EQUIPMENT MANUFACTURER OR VENDOR.
- ATTENTION**
- THE FLOOR AND/OR OTHER SUPPORT COMPONENTS MUST HAVE SUFFICIENT STRENGTH (AND RIGIDITY WITH DUE CONSIDERATION FOR NATURAL OR RESONANT FREQUENCY THEREOF) TO WITHSTAND THE FULLY LOADED WEIGHT OF THE MACHINE INCLUDING THE GOODS, THE WATER, AND ANY REPEATED SINUSOIDAL (ROTATING) FORCES GENERATED DURING ITS OPERATION. WRITE THE FACTORY FOR ADDITIONAL MACHINE DATA FOR USE BY A COMPETENT SOIL AND/OR STRUCTURAL ENGINEER.

INSTALLATION CBW COMPONENTS

DM 0 0.5M 1M
INCHES 0 12 24 36

DWG# BDCBWAC1CB
2008132D

MILNOR PELLERIN MILNOR CORPORATION
P.O. Box 400 Kenner, LA 70063, USA, Phone 504/467-9591,
FAX 504/469-1849, Email: mktg@milnor.com